












1	General information	Supplier's name or trade mark	INSPIRE
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS00001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	BD05C-FL-21-G-ENK
4		Light sources maker model	BD05C-FL-21-G-ENK

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
Step 1	Use a cross screwdriver to remove the screws securing the cover.		Cross screwdriver
Step 2	Remove the glass plate and silicone ring by hand.		By hand
Step 3	Remove the reflector, then press down on the PC cover with both hands to make it fall off.		By hand
Step 4	Using a cross screwdriver to remove the connection between light source board and heat sink.		Cross screwdriver
Step 5	Pull the wire out of the terminal block, then use needle nose pliers to remove the drive box from the heat sink, and use a Phillips screwdriver to remove the connection between the heat sink and the drive box.		needle nose pliers, cross screwdriver
Step 6	Use a cross screwdriver to remove the cover of the drive box.		Cross screwdriver
Step 7	Use a tweezer to remove the silicone ring.		tweezer
Step 8	Use a cross screwdriver to remove the driver board		Cross screwdriver
Step 9	Using an adjustable wrench to remove the waterproof connector.		Adjustable wrench
Step 10	Using a soldering iron to separate the waterproof connector from driver board.		Soldering iron
Step 11	Using an Allen wrench to remove the bracket		Allen wrench