

LIGHT SOURCE REMOVING INSTRUCTION

Creation date (dd/mm/yyyy) :





24/9/2022

Last update date (dd/mm/yyyy) :

24/9/2022

1	General information	Supplier's name or trade mark	INSPIRE
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	5207101125
4		Light sources maker model	5207101125M

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
Step 1	Use a large Phillips screwdriver to remove the plastic tray		Screwdriver - Crosshead
Step 2	Use a large Phillips screwdriver to open the light transmission cover		Screwdriver - Crosshead
Step 3	Open the terminal and remove the module		
Step 4	LED module		Screwdriver - Crosshead
Step 5			
Step 6			
Step 7			
Step 8			