 
 
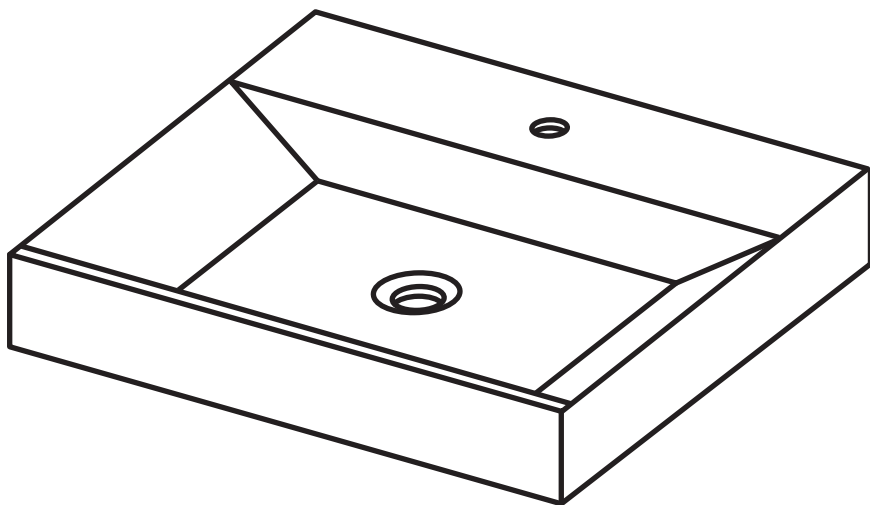 
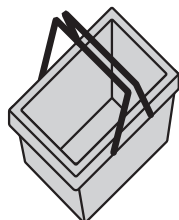 
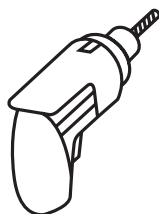 
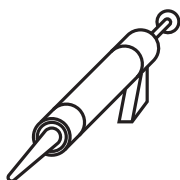 
 
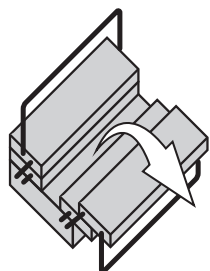 



SOLO

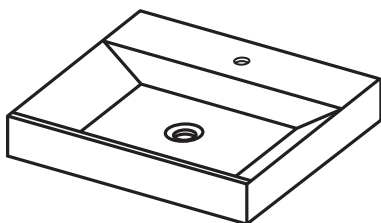


DE Montageanleitung EN Installation Instruction FR Instructions de montage
IT Istruzioni di montaggio ES Instrucciones de montaje PT Instruções de montagem
NL Montage-instructie SE Monteringsinstruktioner for installatören
NO Monteringsinstruktioner for installatøren FI Asennusohje CZ Navod na montaz
HU Szerelési utmutató RO Instrucțiuni de montare PL Instrukcja montażu

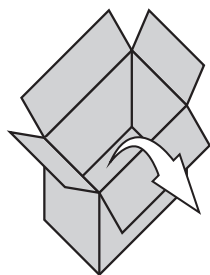



 
1

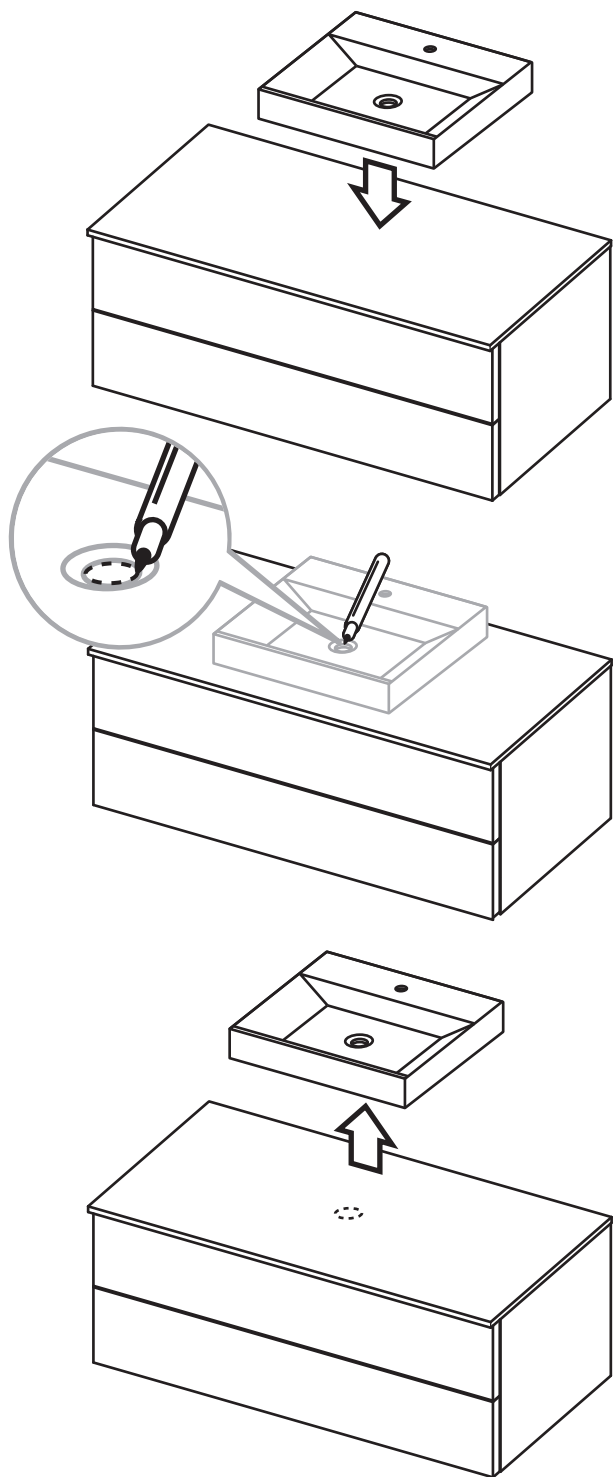




2

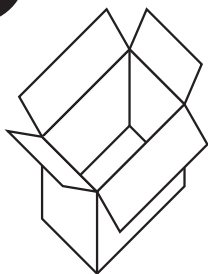 


SCALE 1:1
A2

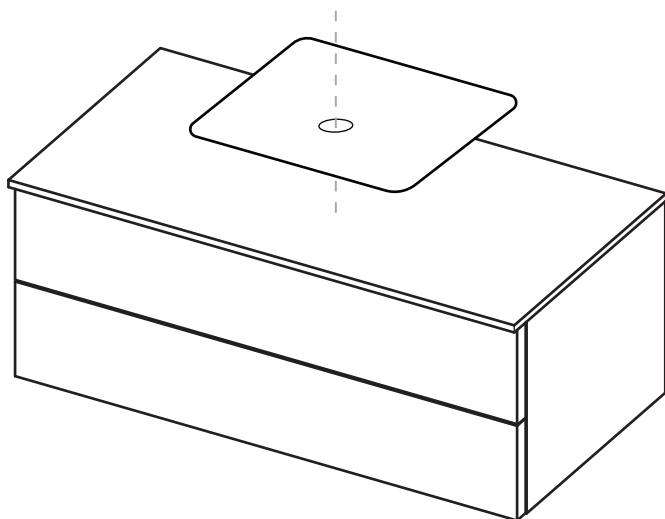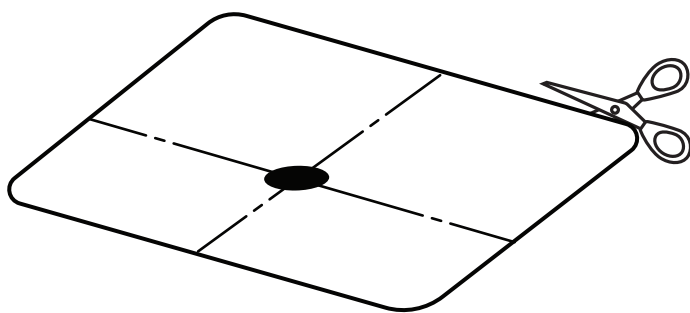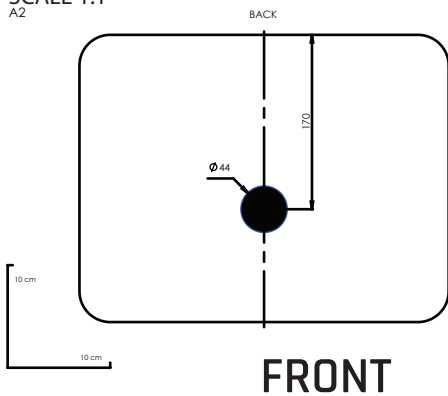   





3

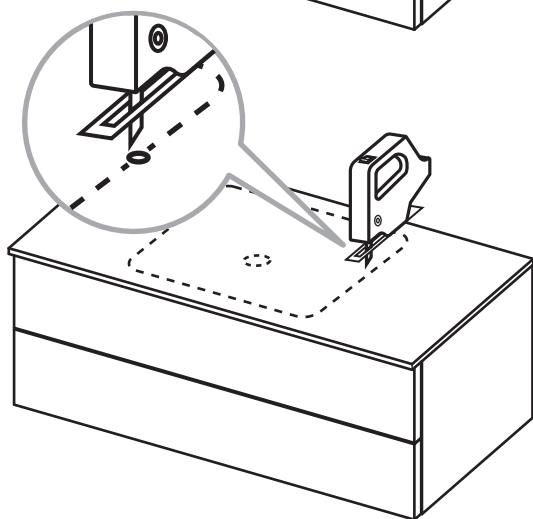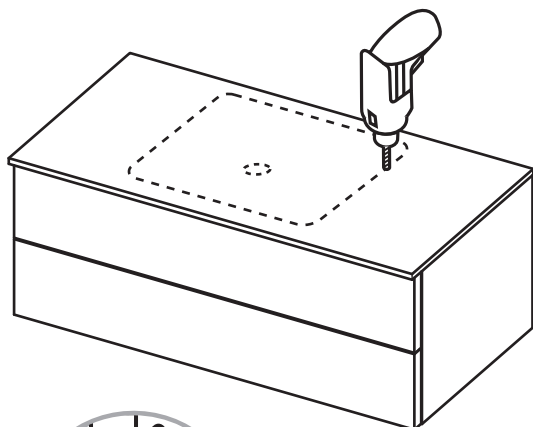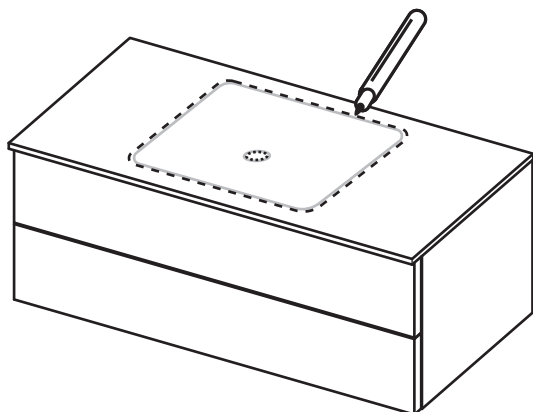   


4

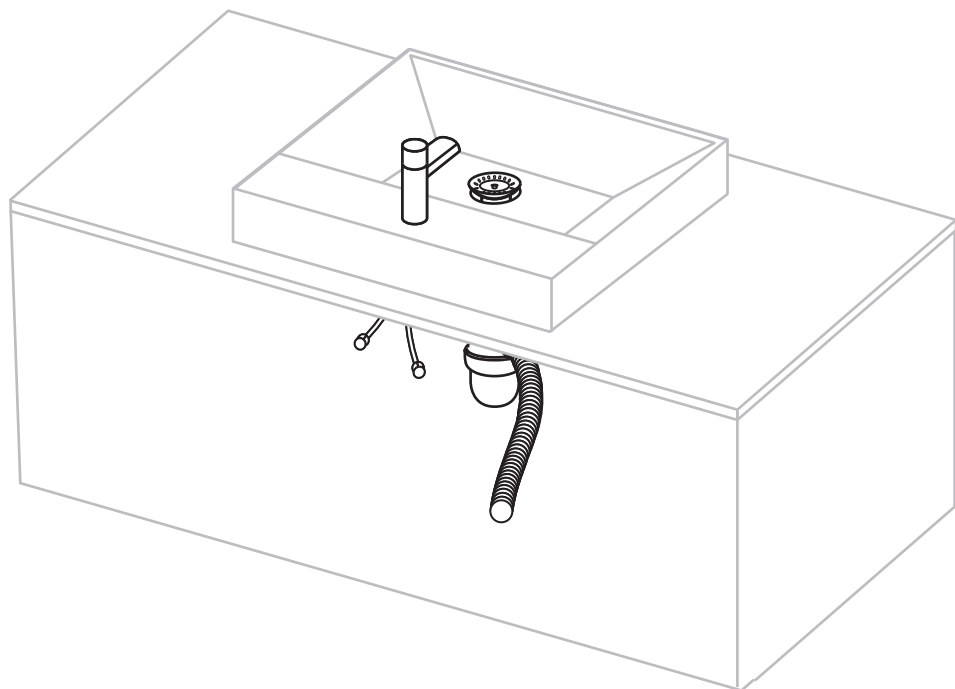 

5

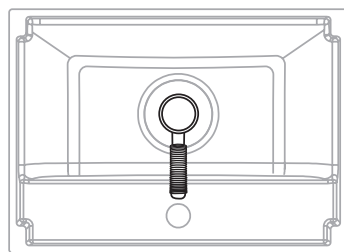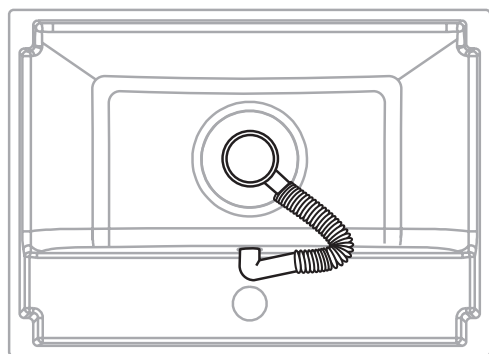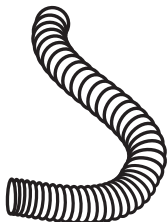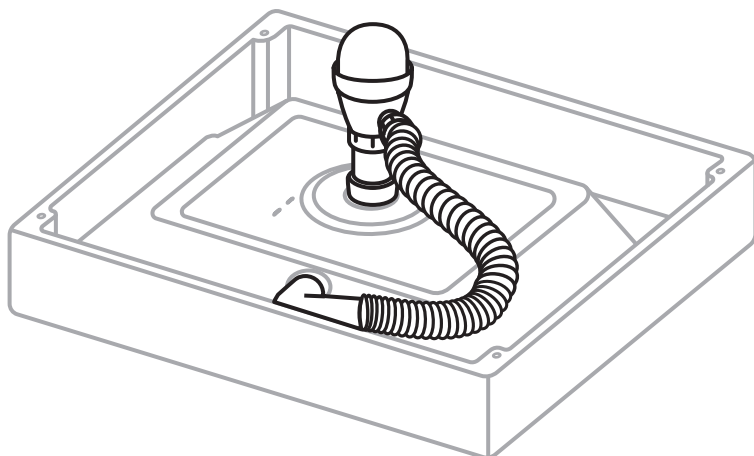    



6

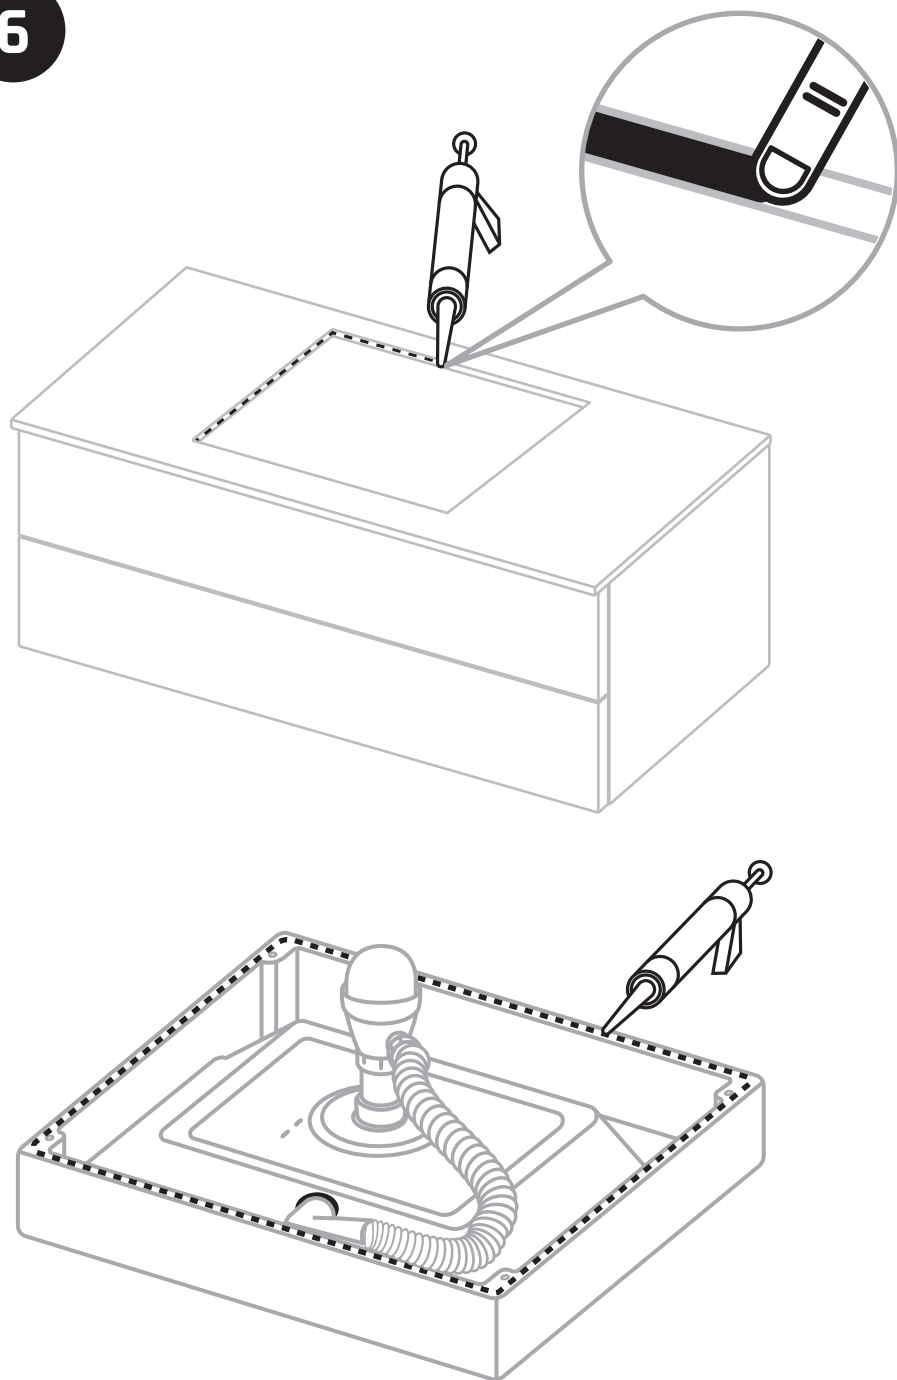 

7



  24h

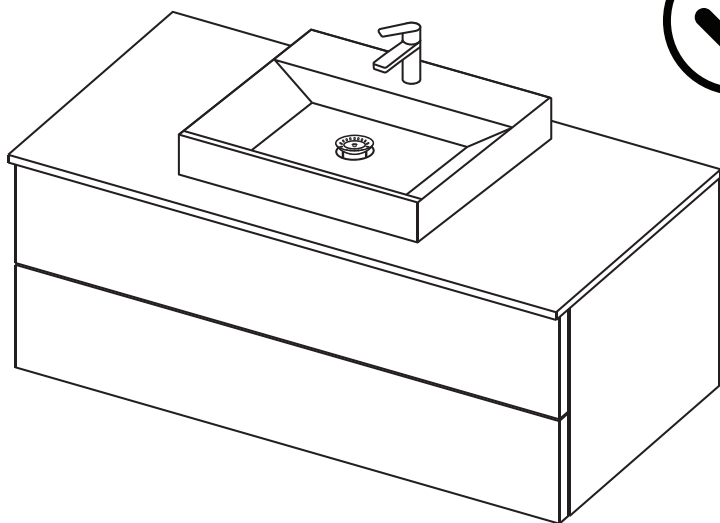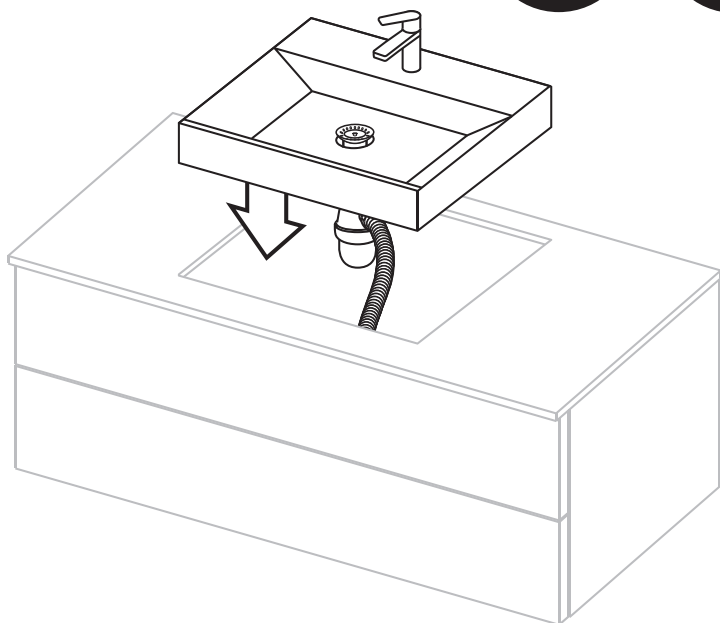




A series of 15 horizontal lines for writing, starting from the first line where the pencil is positioned and extending down to the bottom of the page.



 103500280018

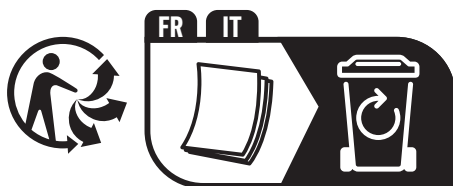

OK 260716