1 ad		LIGHT SOURCE REMOVING INSTRUCTION	Creation date (dd/mm/yyyy) :	15/09/2022	
	QUA	ALITY	Last update date (dd/mm/yyyy) :	15/09/2022	
1	tion	Supplier's name or trade mark	INSPIRE	INSPIRE	
2	formal	Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS00001, 59790 RONCHIN		
3	——————————————————————————————————————	Model Identifier - Luminaire Supplier reference	JA60A2000SQSN2740K - 1		
4		Light sources maker model	JA60A2000SQSN2740K - 1		

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explaination of the step	Pictures	Tools
Step 1	Remove the spring by hand.		By hand
Step 2	Turn the screw counterclockwise with a $\phi 5$ cross screwdriver,Take down the back.		φ5 cross screwdriver
Step 3	Remove the optical element.		By hand
Step 4	Use electric soldering iron to solder the output wire.		Electric soldering iron
Step 5	Remove the light source module from the ring.		By hand
Step 6	Weld the power cord to the light source board (S4+,S3-/B-),Then the light source module is flattened and leveled on the heat dissipation parts under the same heat dissipation conditions as the surface ring.		Electric soldering iron