

LIGHT SOURCE REMOVING INSTRUCTION

Creation date (dd/mm/yyyy) :

01/11/2022

Last update date (dd/mm/yyyy) :

01/11/2022

1	General information	Supplier's name or trade mark	INSPIRE
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	<i>2101F-BK; 2101F-WH</i>
4		Light sources maker model	<i>2101F</i>

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
Step 1	The whole product		
Step 2	Pry off the light cover with a slotted screwdriver		slotted screwdriver
Step 3	Remove the light cover, light guide plate and reflective paper		
Step 4	Weld down the light source module with an electric soldering iron		electric soldering iron
Step 5	The light source		
Step 6			
Step 7			
Step 8			
Step 9			
Step 10			