

# LIGHT SOURCE REMOVING INSTRUCTION

Creation date (dd/mm/yyyy) :

29/08/2022

Last update date (dd/mm/yyyy) :

29/08/2022

|   |                     |                                                 |                                                             |
|---|---------------------|-------------------------------------------------|-------------------------------------------------------------|
| 1 | General information | Supplier's name or trade mark                   | INSPIRE                                                     |
| 2 |                     | Supplier's address                              | ADEO Services, 135 rue Sadi Carnot - CS00001, 59790 RONCHIN |
| 3 |                     | Model Identifier - Luminaire Supplier reference | AS-KP3AGAAA004MWH-3                                         |
| 4 |                     | Light sources maker model                       | AS-KP3AGAAA004MWH-3                                         |

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

|        | Explanation of the step                           | Pictures                                                                             | Tools   |
|--------|---------------------------------------------------|--------------------------------------------------------------------------------------|---------|
| Step 1 | Turn the retainer counterclockwise and remove it. |    | By hand |
| Step 2 | Turn the bulb counterclockwise to remove it.      |    | By hand |
| Step 3 | light source                                      |  | By hand |