



HE60-CH

HE60-CH

| NR Z RYS. | OPIS | ILOŚĆ |
|-----------|--|-------|
| 1 | Auxiliary handle button | 1 |
| 2 | Pro-cyclical rod | 1 |
| 3 | Main button spring | 1 |
| 4 | Dial rod | 1 |
| 5 | Auxiliary handle button extension spring | 1 |
| 6 | Main button | 1 |
| 7 | Left house | 1 |
| 8 | Press board | 1 |
| 9 | Tapping screw ST4×14 | 17 |
| 10 | Right house | 1 |
| 11 | Positioning pin | 2 |
| 12 | Capacitor | 1 |
| 13 | Power cord | 1 |
| 14 | Cable set | 1 |
| 15 | Terminal block | 1 |
| 16 | Switch black | 1 |
| 17 | Switch red | 1 |
| 18 | Cylindrical inductor | 2 |
| 19 | Tapping screw ST4×14 | 17 |
| 20 | Safe cover | 1 |
| 21 | Tapping screw ST4×14 | 17 |
| 22 | Brush holder | 2 |
| 23 | Tapping screw ST3×8 | 2 |
| 24 | Carbon brush | 2 |
| 25 | Motor cover | 4 |
| 26 | Screw M4×16 | 4 |
| 27 | Stator | 1 |
| 28 | Tapping screw | 1 |
| 29 | Bearing 607 | 1 |
| 30 | Rotor | 1 |
| 31 | Bearing 608 | 1 |
| 32 | Retaining ring | 1 |
| 33 | Center support | 1 |
| 34 | Tapping screw ST5×18 | 2 |
| 35 | Spring gasket $\varnothing 5$ | 4 |
| 36 | Gasket $\varnothing 5$ | 2 |
| 37 | Nut M5 | 6 |
| 38 | Steel | 1 |
| 39 | Lining ring | 8 |
| 40 | Blade | 2 |
| 41 | Blade gasket | 8 |
| 42 | Screw M5×14 | 6 |
| 43 | Spring gasket $\varnothing 5$ | 4 |
| 44 | Hex screws M5×28 | 2 |
| 45 | Left tooth nut M6 | 1 |
| 46 | Gaskets | 3 |
| 47 | Hex screws M5×8 | 4 |
| 48 | Needle bearing 0808 | 2 |
| 49 | Big gear | 1 |
| 50 | Eccentric block cover | 2 |
| 51 | Steel pad | 1 |
| 52 | Blade cover | 1 |