


WR147E.1 Top Cover

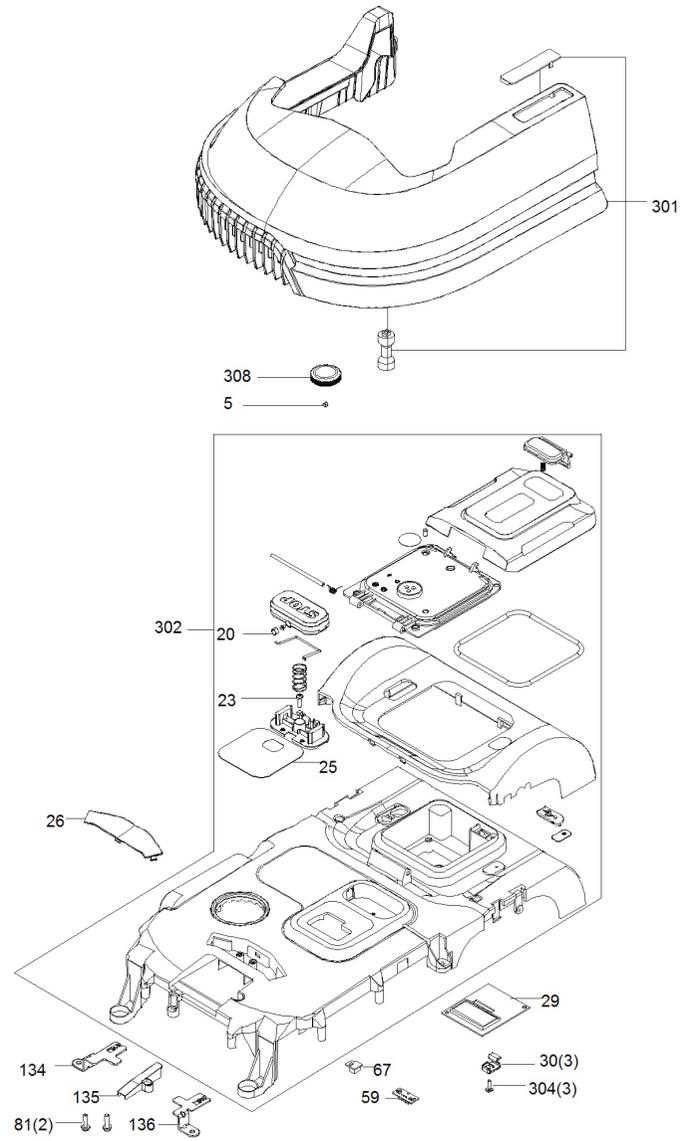

## WR147E.1 Top Cover

	Part No	Description	Qty
5	50020977	Magnet	1
20	50028034	Magnet	1
23	50031651	Self Tapping Screw	20
25	50044040	Keyboard film	1
26	50040734	Decorative Cover	1
29	50044047	Display Circuit Board	1
30	50036842	Press plate	3
59	50041134	Control Board	1
67	50040720	Detection Plate	1
81	50036851	Self tapping screw ST4.8*20	24
134	50041370	Bracket	1
135	50041367	Cover	1
136	50041372	Bracket	1
301	50040708	Cover	1
302	50044592	Top Cover Assembly	1
304	50002909	Screw	9
308	50044037	Adjusting knob	1