



Main products

Spare part list

5910305967

273313 - 0142 - PCS4-20ProS / PCS6-20ProS / CBS260-20Li - -

Spare	Description	additional	Item	Abb.	ConstructStatus
5910305001	Bar cover rotary knob		1	A	*
5910305002	Bar cover		2	A	*
7904201704	saw chain 4"		3	A	*
7904201706	saw chain 6"		3	A	*
7904201707	Sägekettenschwert 6"		4	A	*
7904201705	Sägekettenschwert 4"		4	A	*
7909205703	Battery BA4.0-20ProS scheppach		5	A	*
7909205701	Battery BA2.0-20ProS scheppach		5	A	*
7909209701	Battery BA3.0-20ProS scheppach		5	A	*



5910305967

cordless pruning saw
PCS4-20PROS
scheppach (DIY)

Main products

Spare part list

5910305967

273313 - 0142 - PCS4-20ProS / PCS6-20ProS / CBS260-20Li - -

Spare	Description	additional	Item	Abb.	ConstructStatus
7909209702	Battery BA5.0-20ProS scheppach		5	A	*
5910305003	Finger guard		8	A	*
5910305004	Sprocket		11	A	*
5910305005	Chain tensioner cpl.		13-15	A	*
5910305006	Chain plate		18	A	*
5910305007	Oil pump cpl.		20-23	A	*
5910305008	Brushless motor with switch & control unit		34-37	A	*
5910305009	Oil tank cpl.		38,39	A	*
5910305010	Oil cap cpl.		41-43	A	*
7909205702	Fast charger FC2.4-20ProS scheppach		46	A	*
7904201701	transport box CBS260-20Li scheppach (DIY)		o.Abb.	A	*

!!! Do you know: From now on you can view spare parts lists in our spare parts shop and order spare parts and accessories directly. More information can be found here: <https://www.scheppach.com/Shop.aspx>