


WX328

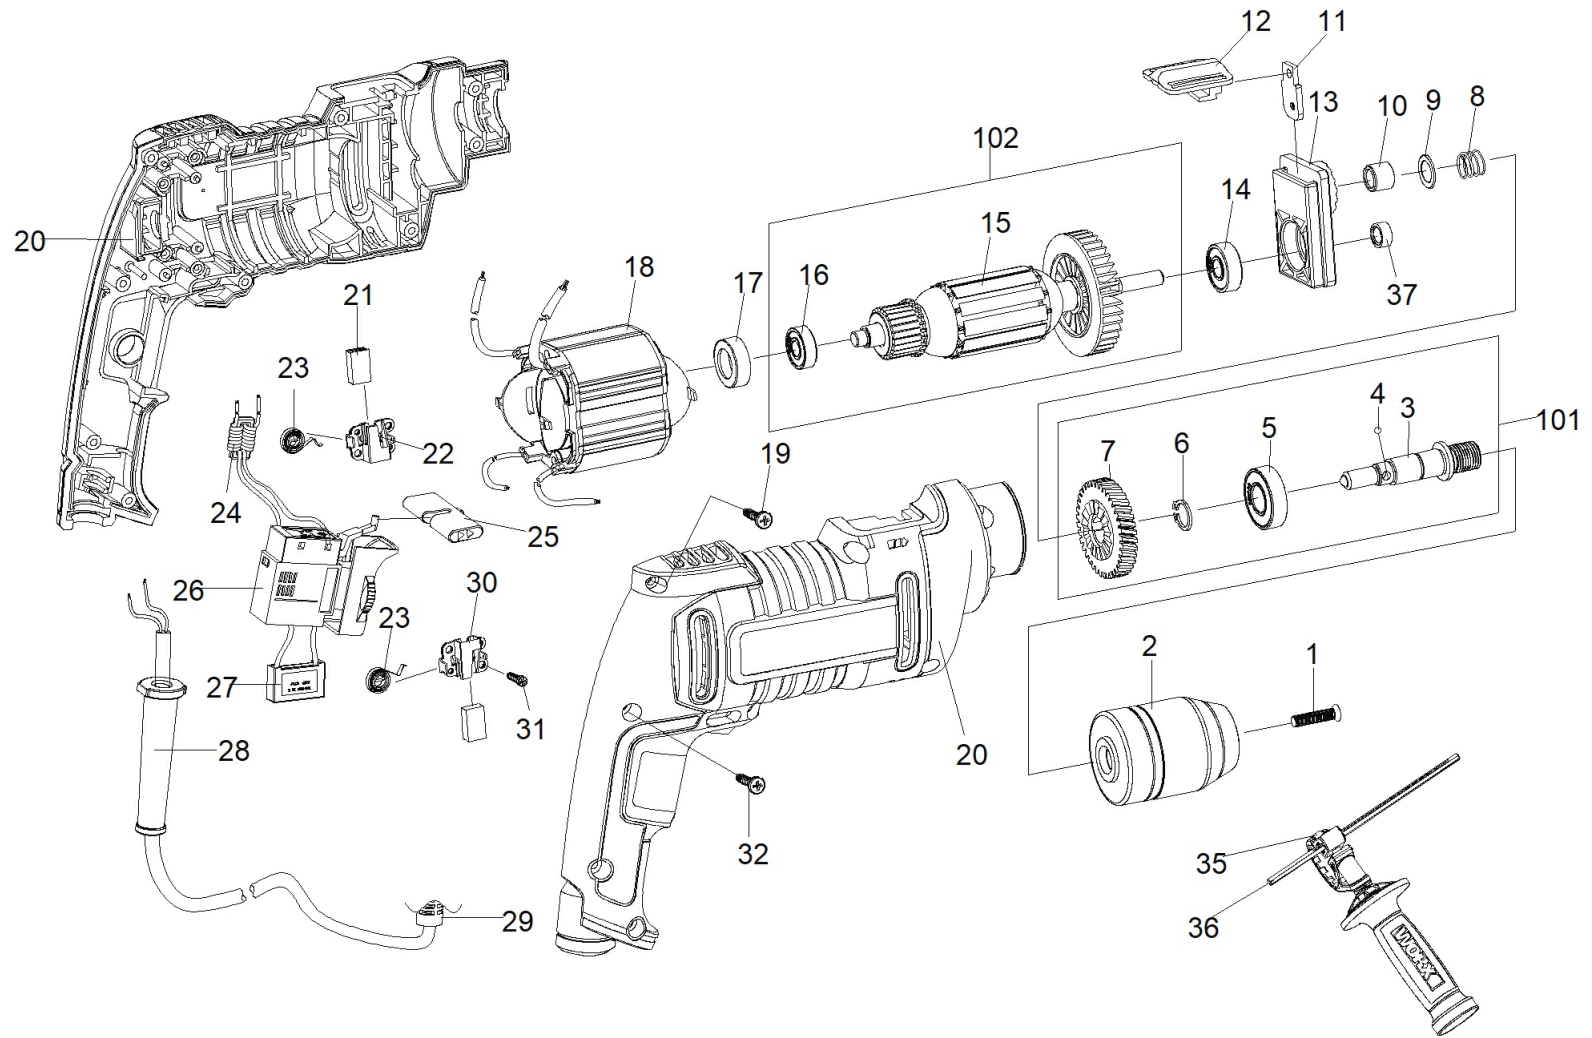

WX328

	Part No	Description	Qty
1	60074740	Screw LH	1
2	60074741	Chuck	1
3	60074742	Output spindle	1
4	60074743	Steel Ball	1
5	60074744	Bearing 6001-ZZ	1
6	60074745	Ring	1
7	60074746	Driven Gear	1
8	60074747	Spring	1
9	60074748	Chip washer	1
10	60074749	Needle Bearing HK0810	1
11	60074750	Shift lever	1
12	60074751	Press Block	1
13	60074752	Center Branket	1
14	60074753	608-2RS Rolling Bearing	1
15	60074754	Rotor	1
16	60074755	607-ZZ Rolling Bearing	1
17	60074756	Bearing Sleeve	1
18	60074757	Stator Set	1
19	60074758	Self Tapping Screw ST4x14	1
20	60074759	Cover/Below Housing	1

WX328

	Part No	Description	Qty
21	60074760	Carbon Brush(pair)	1
22	60074761	Carbon Holder I	1
23	60074762	spring	2
24	60074763	Inductor	1
25	60074764	Forwarder/Reverse Knob	1
26	60074765	Switch	1
27	60074766	Capacitor 0.22Uf 250V	1
28	60074767	Cable Sheath	1
29	60074777	Cord & Plug	1
30	60074769	Carbon Holder II	1
31	60074770	Self tapping screw ST3X12	4
32	60074771	Self tapping screw ST4x16	8
35	60074772	Side handle	1
36	60074773	Ruler Staff	1
37	60074774	Oil Shield	1
101	60074775	Spindle Set	1
102	60074776	Rotor Set	1