
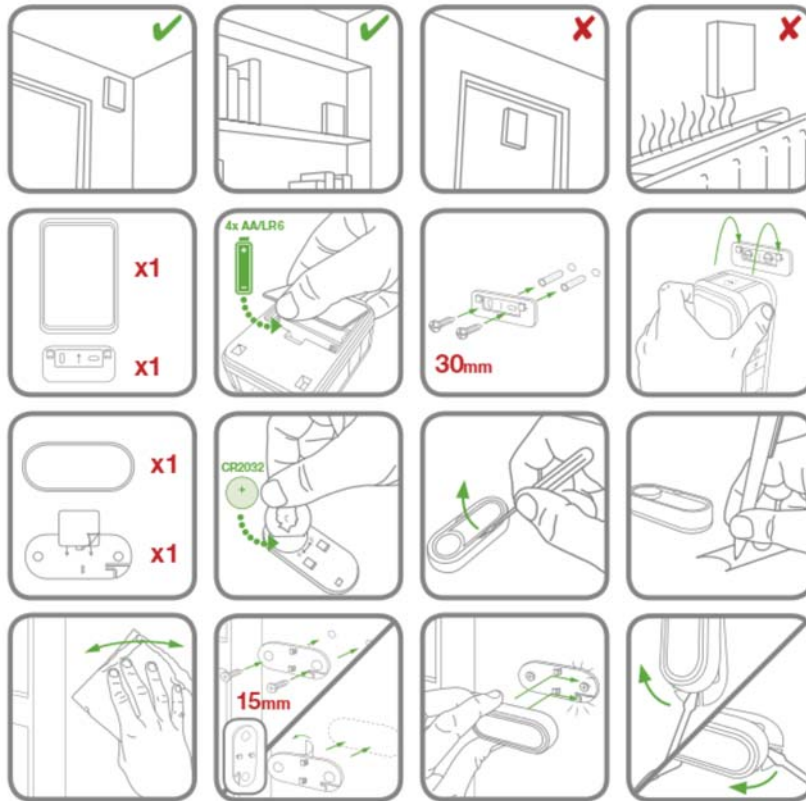



DC311XX
DC313XX

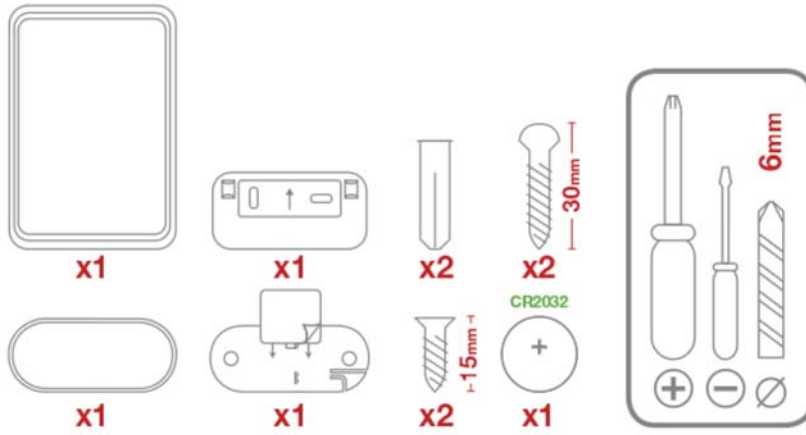





Gettir g started
Erste Schritte
Démarrage
Aar de slag
Aloiti sopas
Kom i garrg
Operazioni preliminar
Para empezar
Para começar
Πρώτο βήμα
Kom igång
Προετοιμασία
Irr eil

Gettir g started
Erste Schritte
Démarrage
Aar de slag
Aloiti sopas
Kom i garrg
Operazioni preliminar
Para empezar
Para começar
Πρώτο βήμα
Kom igång
Προετοιμασία
Irr eil

GB Optional features DE Optionale Funktionen
 FI Options disponibles NL Opties FI Valinnaiset ominaisuudet
 DK Valgør funktioner IT Funzionalità opzionali
 ES Opciones disponibles PT Funções opcionais
 GR Προαιρετικές λειτουργίες πρόσθετων SE Möjliga funktioner

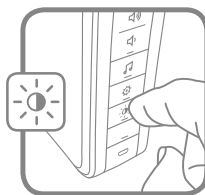

	Hello	Ding Dong	Westminster	Marimba	Piano	Bell	Telephone	Soft Alert
4	•	•					•	•
6	•	•	•	•			•	•
8	•	•	•	•	•	•	•	•

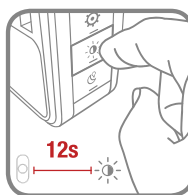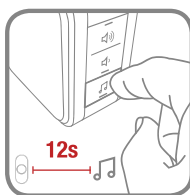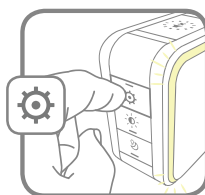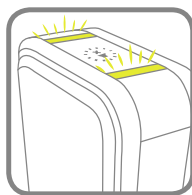

GB Linking DE Einlernen FI Programming
 NL Verknüpfung FI Linkittäminen DK Forbinde
 IT Collegamento ES Enlace
 PT Programação GR Ουδέσση SE Länkning



GB Trouble shooting DE Fehlerbehebung FR Dépannage NL Probleemoplossing
 FI Vianmääritys DK Problemløsning IT Risoluzione dei problemi ES Solución de
 problemas PT Resolução de problemas GR Αντιμετώπιση προβλημάτων SE Felsökning

livewell.honeywell.com



32305352-001 Rev.A