



- 1: Thermometer
- 2: Lid
- 3: Front Lid Grate Bracket
- 4: Handle
- 5: Cooking Grate
- 6: Burner Tube
- 7: Rear Cookbox Grate Bracket
- 8: Cookbox
- 9: Front Cookbox Grate Bracket
- 10: Grease Tray Rails
- 11: Disposable Grease Tray
- 12: Slide-Out Grease Tray
- 13: Left Frame Rail
- 14: Cookbox Bracket
- 15: Front Frame Rail
- 16: Lid Lock
- 17: Tool Hook
- 18: Control Knob
- 19: Control Knob Bezel
- 20: Folding Leg Assembly Frame
- 21: Axle
- 22: Wheel
- 23: Hub Cap
- 24: Axle Bracket
- 25: Foot Lift Connector
- 26: Foot Lift Support
- 27: Lid Hinge
- 28: Rear Lid Grate Bracket
- 29: Igniter Electrode
- 30: Valve Assembly
- 31: Shock
- 32: Rear Frame Support
- 33: Table
- 34: Burner Guard
- 35: Cross Brace
- 36: Right Frame Rail
- 37: Hand Release
- 38: Frame Lock
- 39: Folding Leg Assembly Frame Bumper
- 40: Frame Bumper