
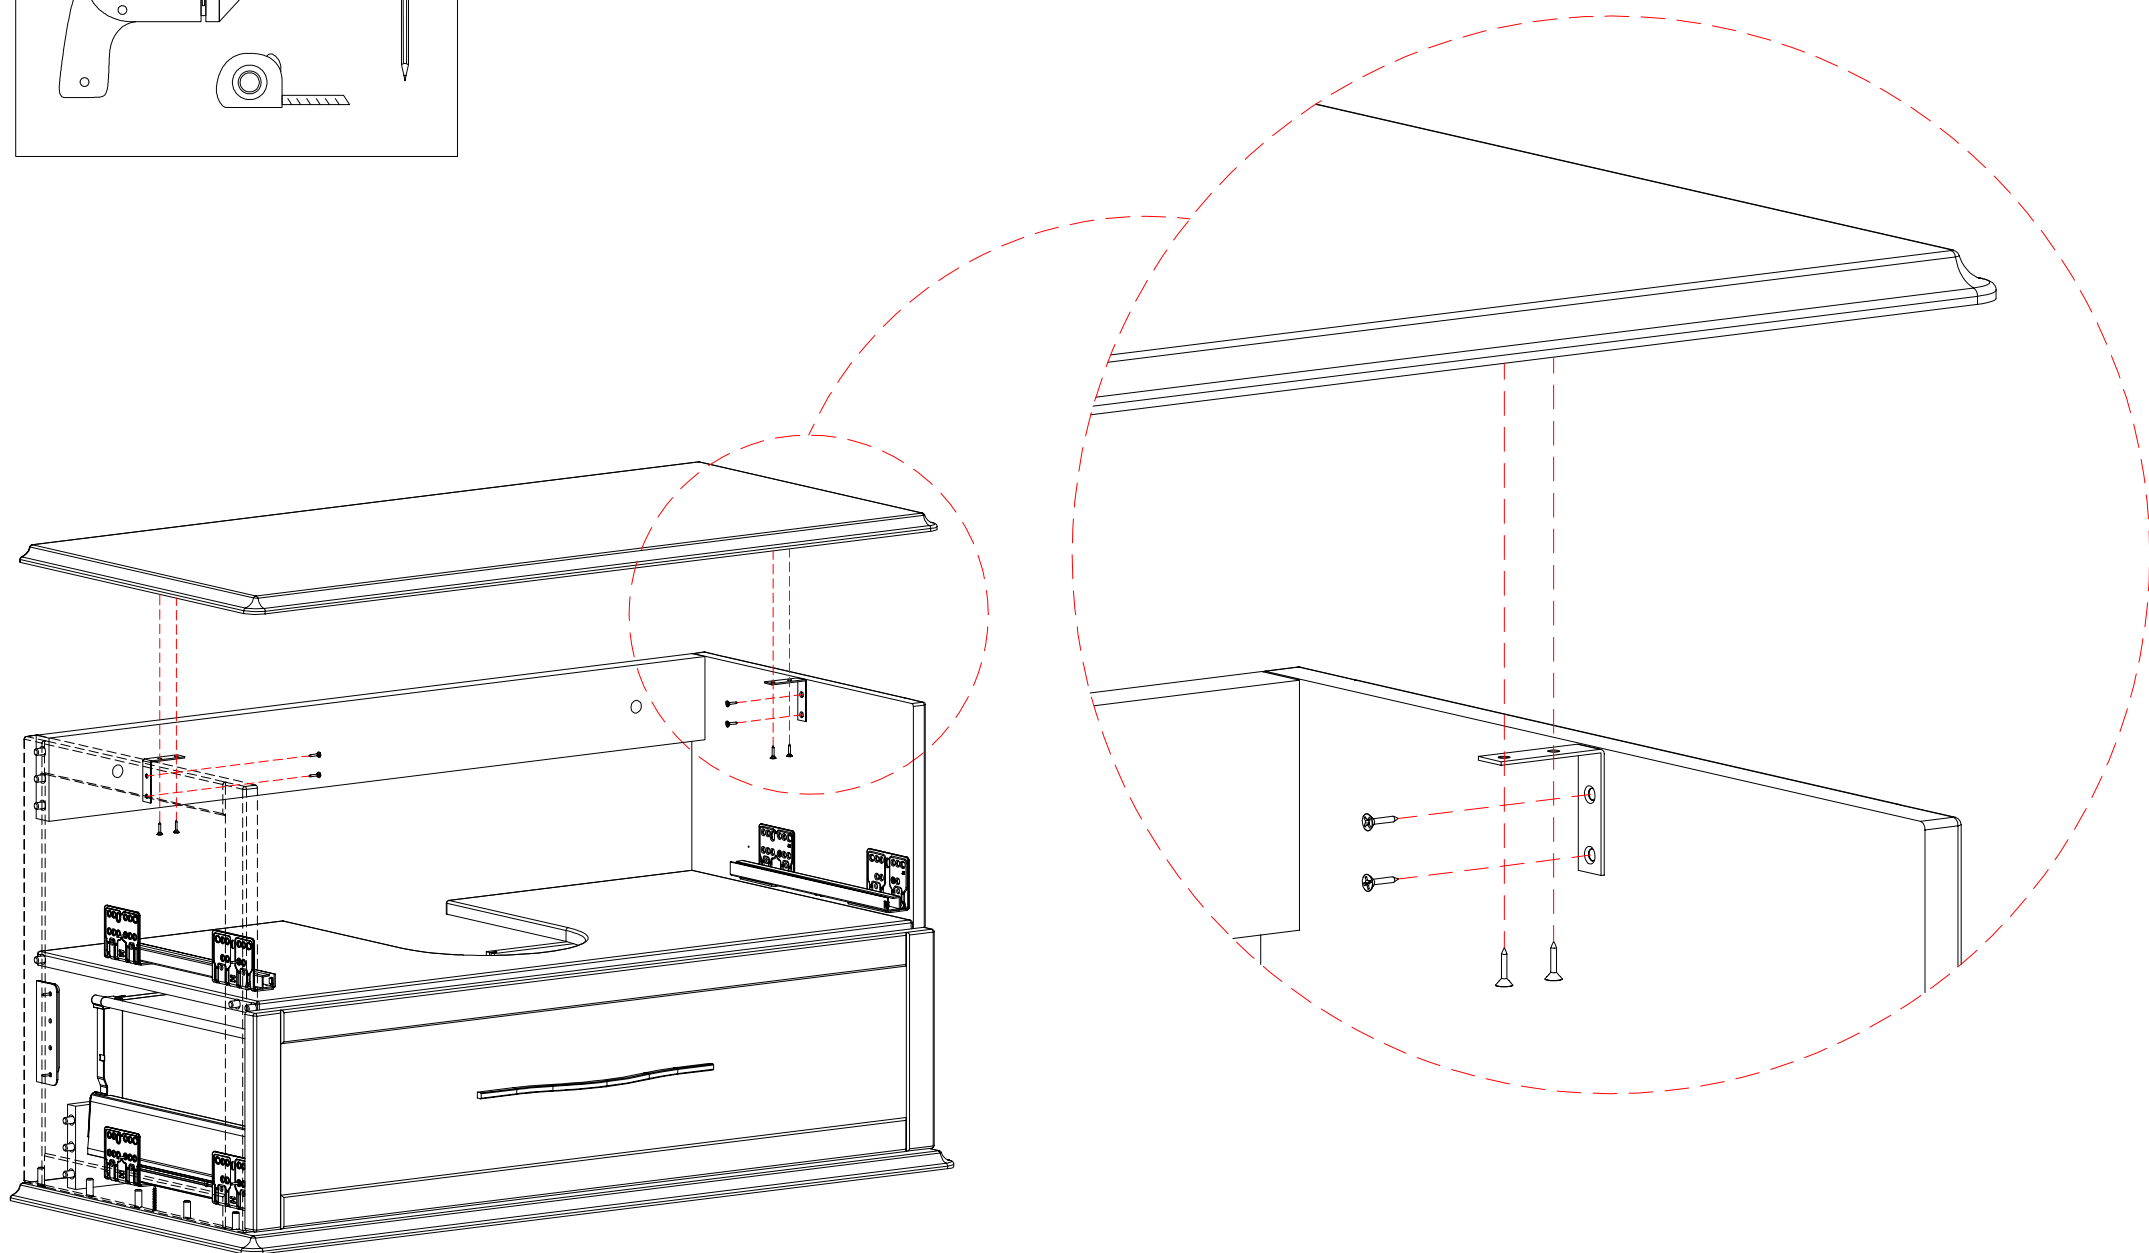


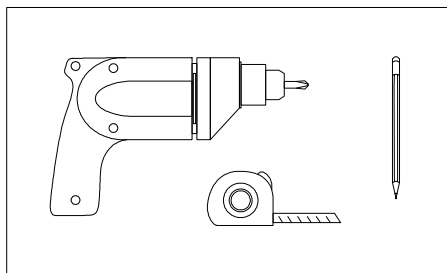

TO FIX THE WOODEN TOP ON WALL, USE A NEUTRAL SILICONE, WHITE OR TRANSPARENT COLOUR