 











Assembly Instructions

       Parcel box

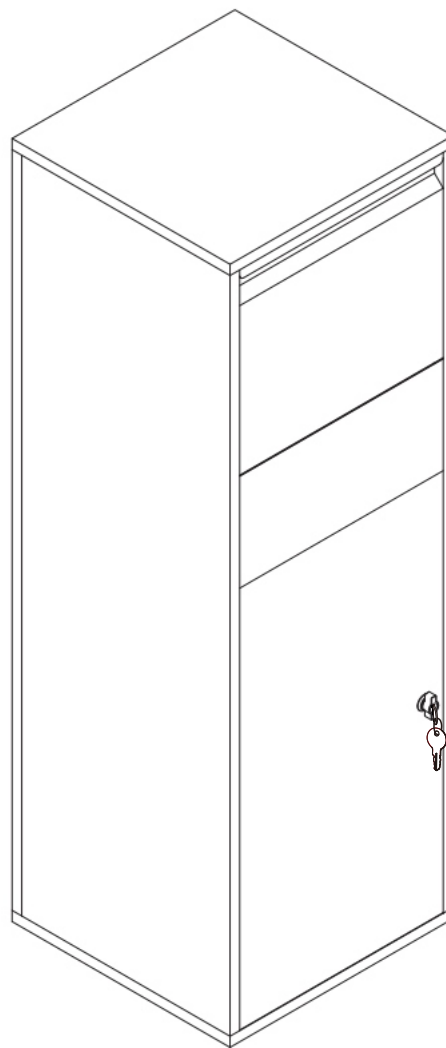




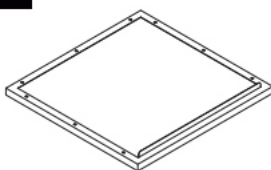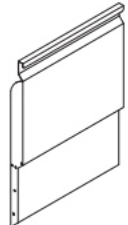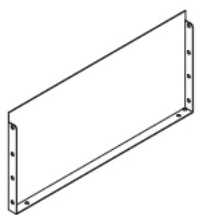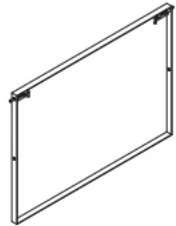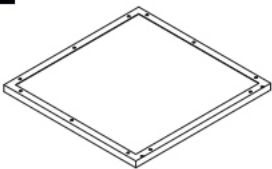
A  x1	B  x1	C  x1		
D  x1	E  x1	F  x1		
G  x1	H  x1	I  x1		
J  x1	K  x2	L  x2	M  x2	N  x2
O  x4	P M4x10mm  x12	Q M4x8mm  x36	R  x4	S  x1
T  x1	U  x1	V  x1	 x1	



 
1

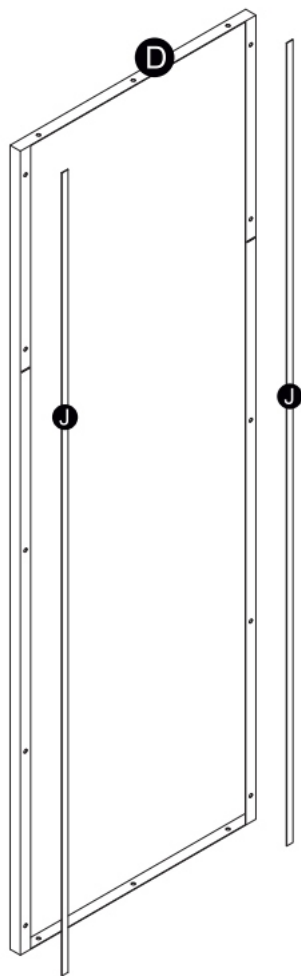

2

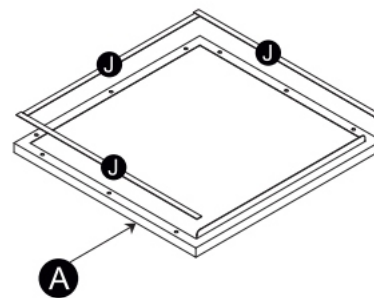 


3

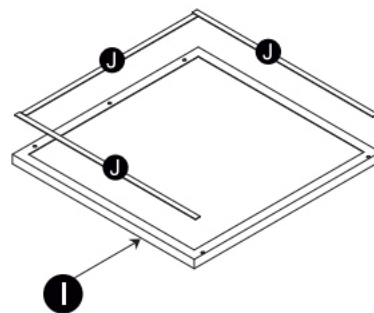 




4

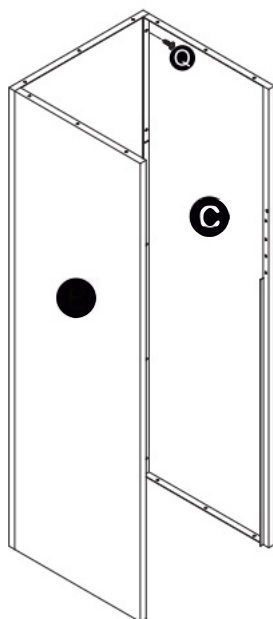 


5

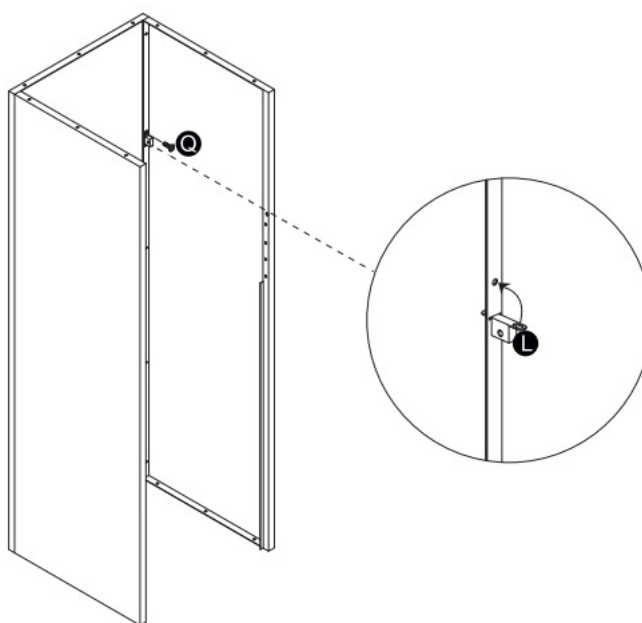 




6

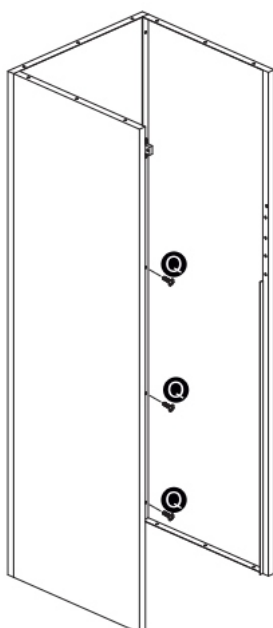 


7

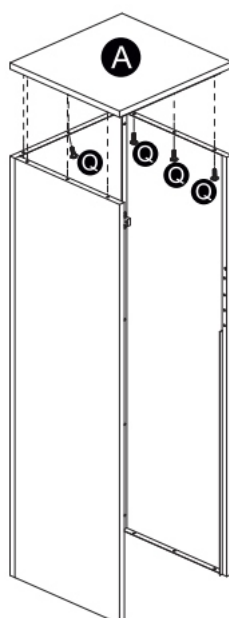 




8

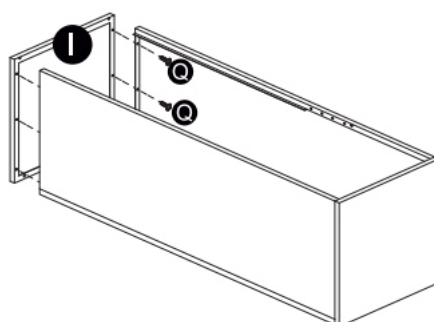 


9

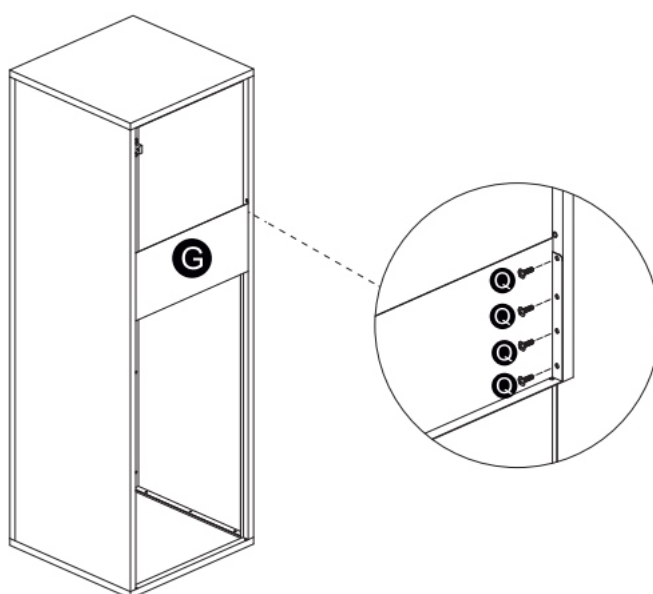 




10

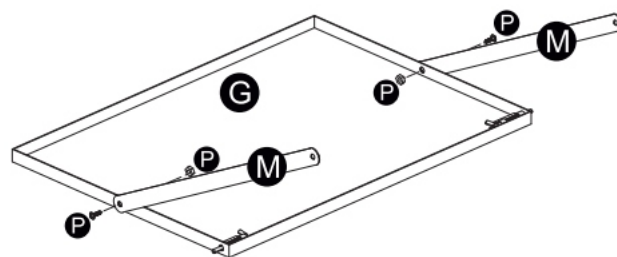 


11

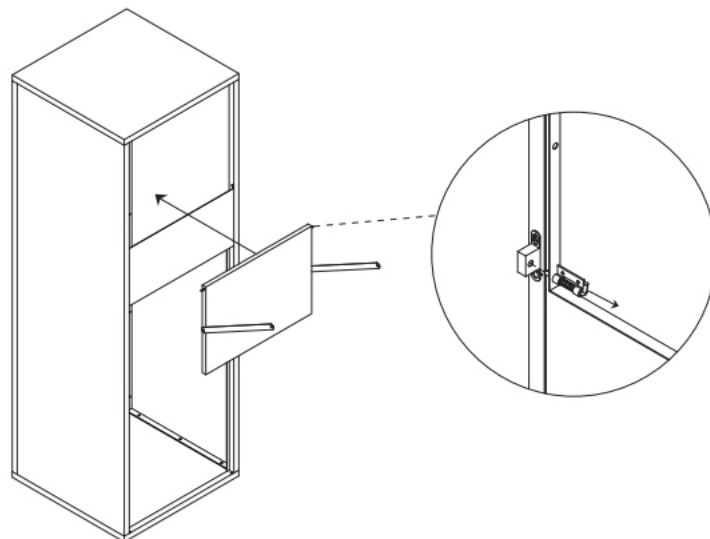 




12

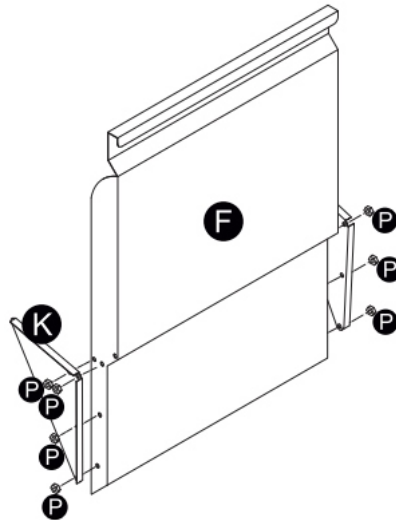 


13

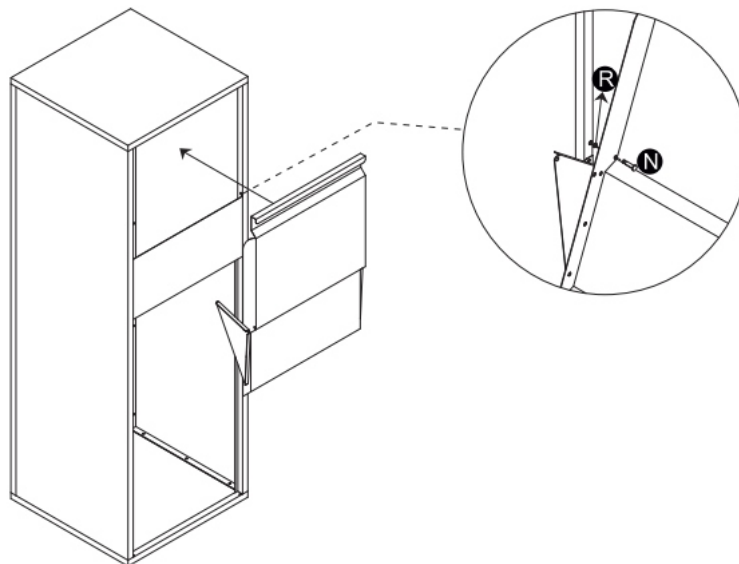 




14



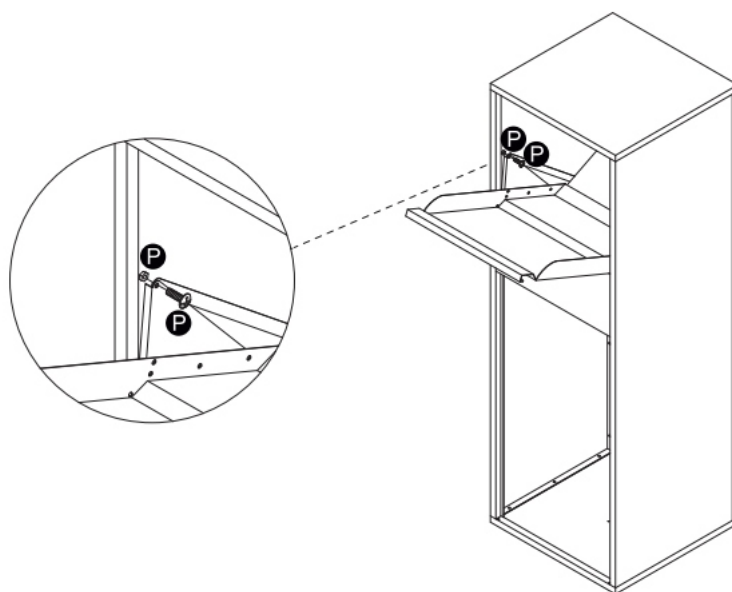 


15

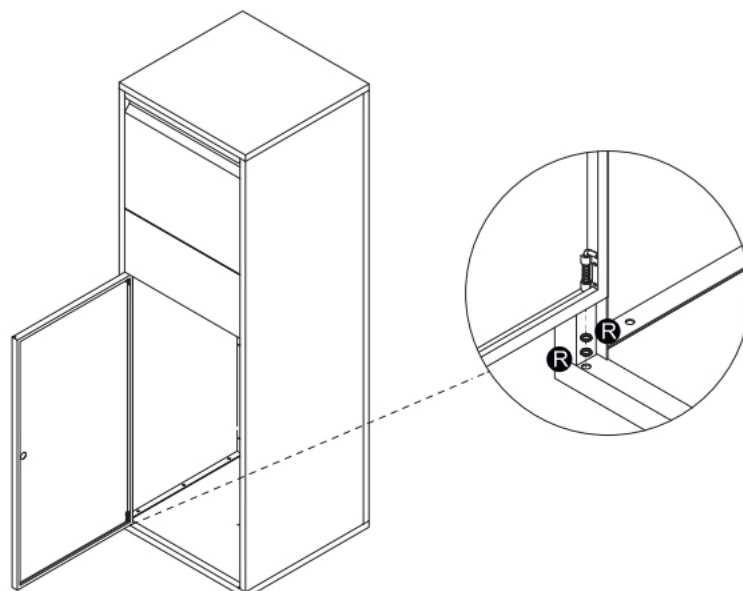 




16

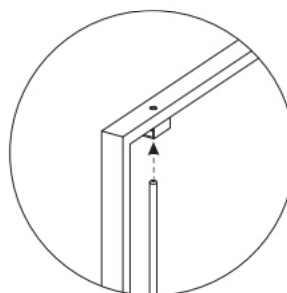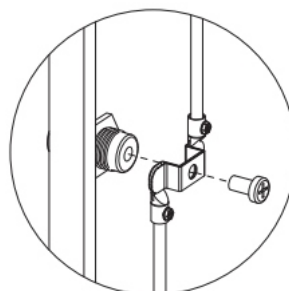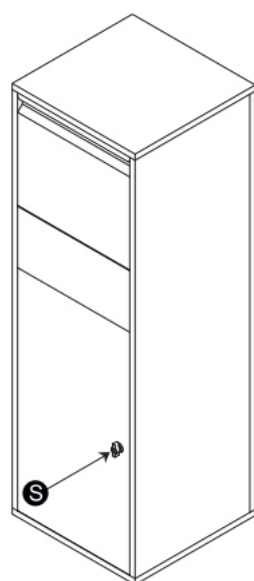   


17

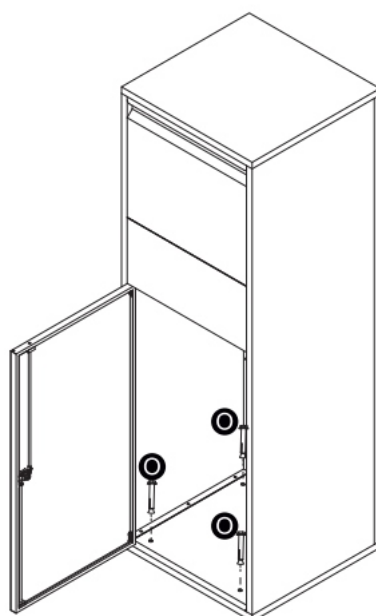 



18

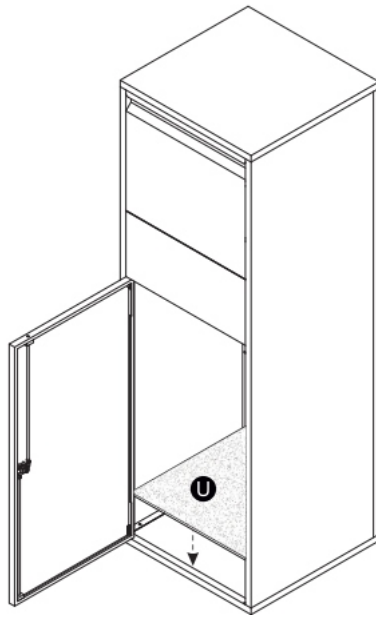 

19

