
NV68A114**S , NV68A114**B, NV68A111**S , NV68A111**B

. Disassembly of the Assy control box / pcb

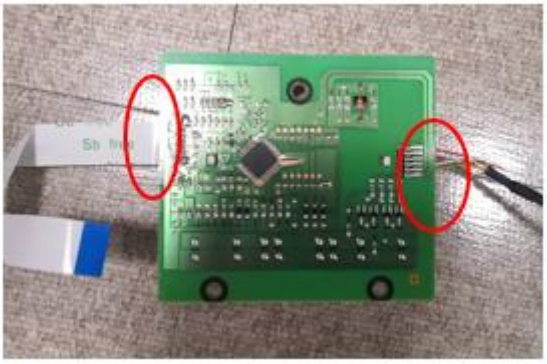









Disassembly of the Motor

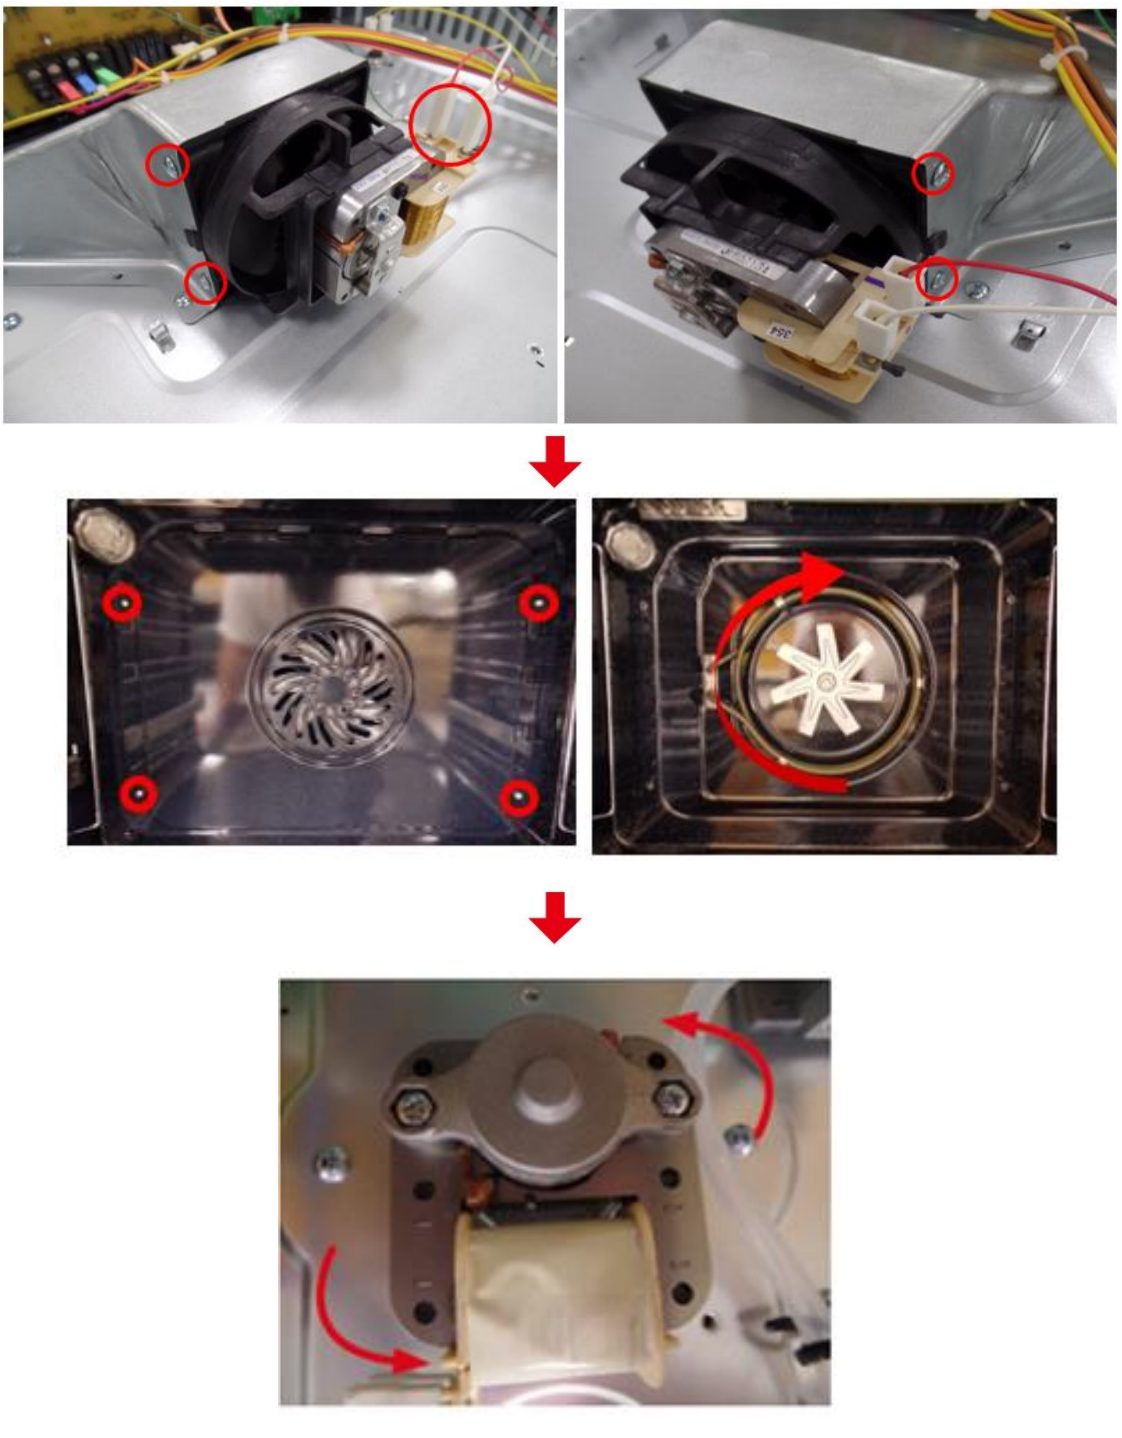



. Disassembly of the convection Heater



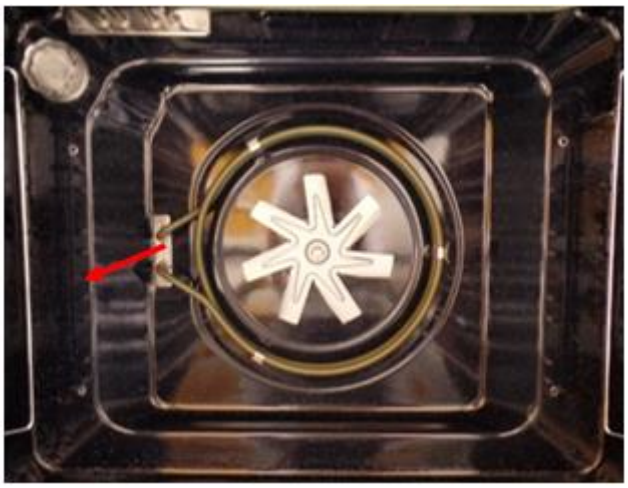


. Disassembly of the Heater grill

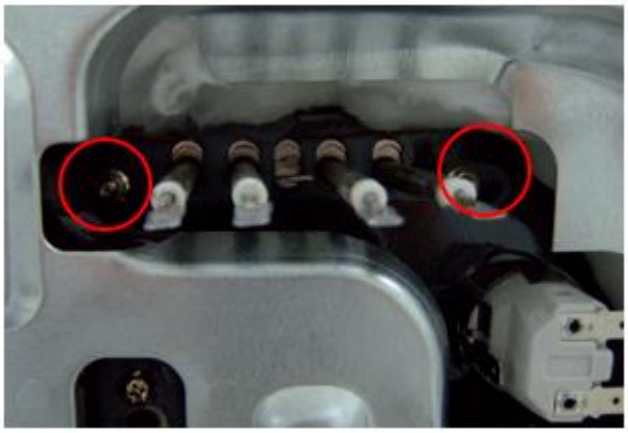

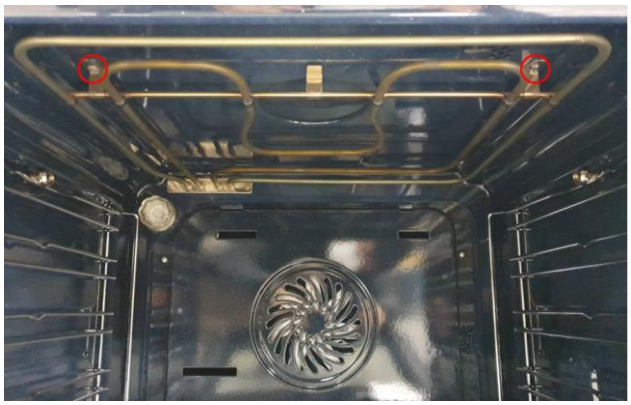

. Disassembly of the Heater Bottom

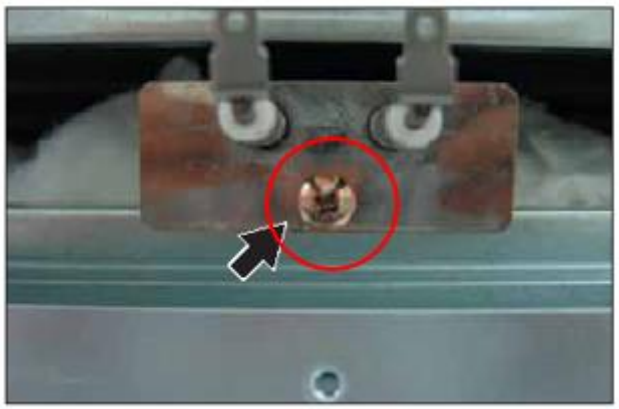

. Disassembly of the Temp sensor / Terminal block

