Villeroy & Boch
1748

RockLite Shower Tray

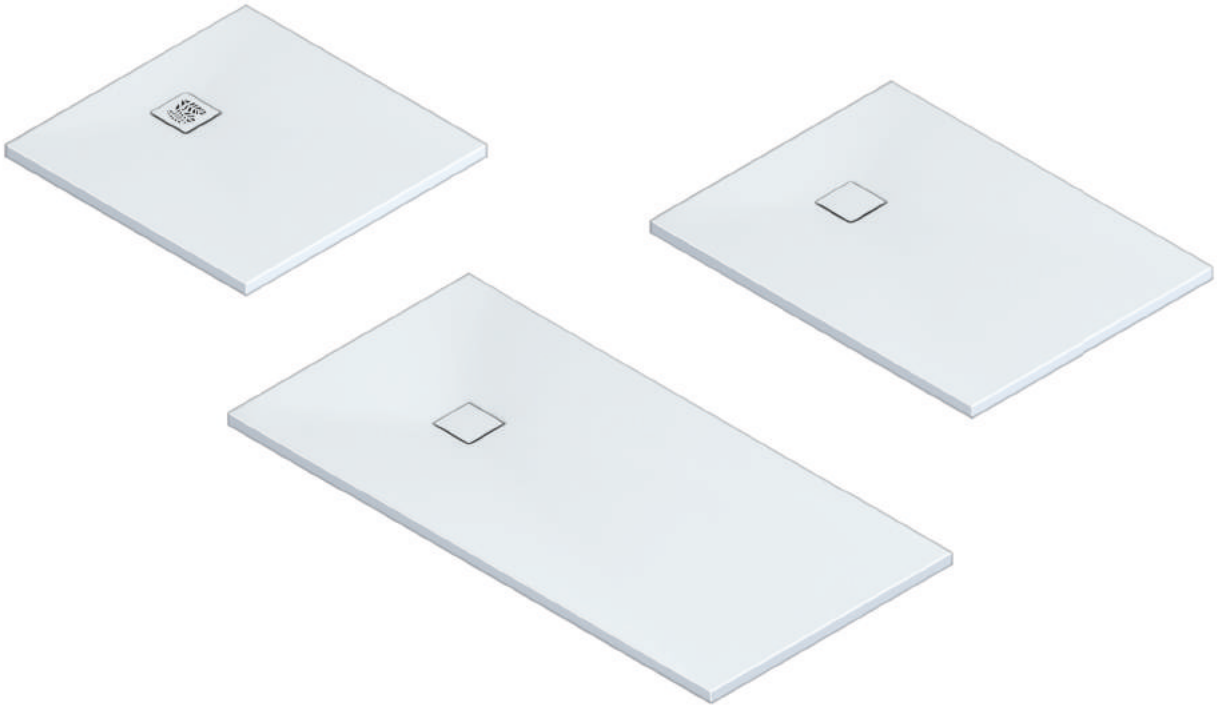

DE Montageanleitung

EN Installation instructions

FR Instructions de montage

IT Istruzioni per il montaggio

NL Montagehandleiding

M.VILLEROY-BOCH.COM

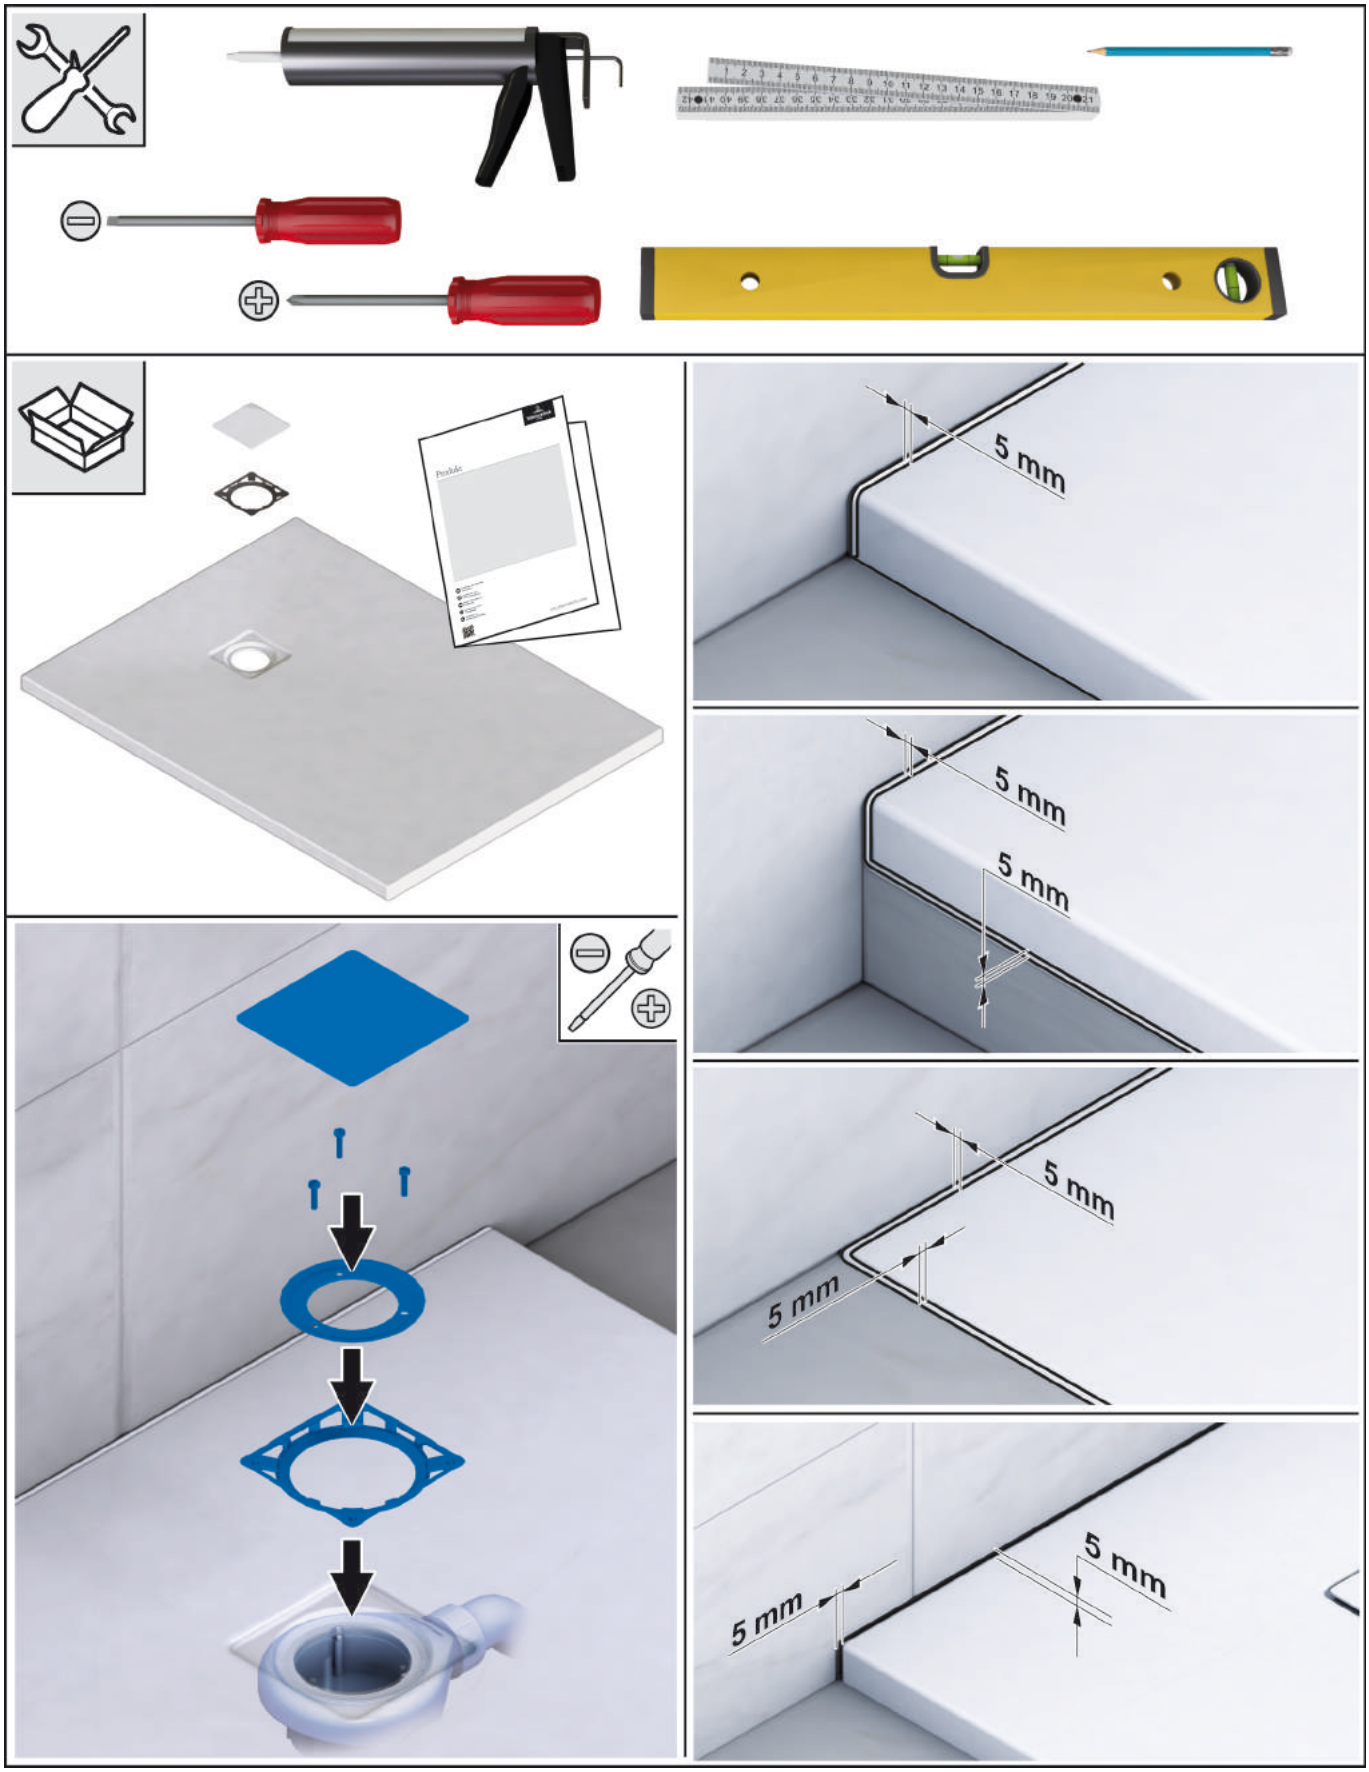
5 mm
5 mm
5 mm
5 mm
5 mm
5 mm

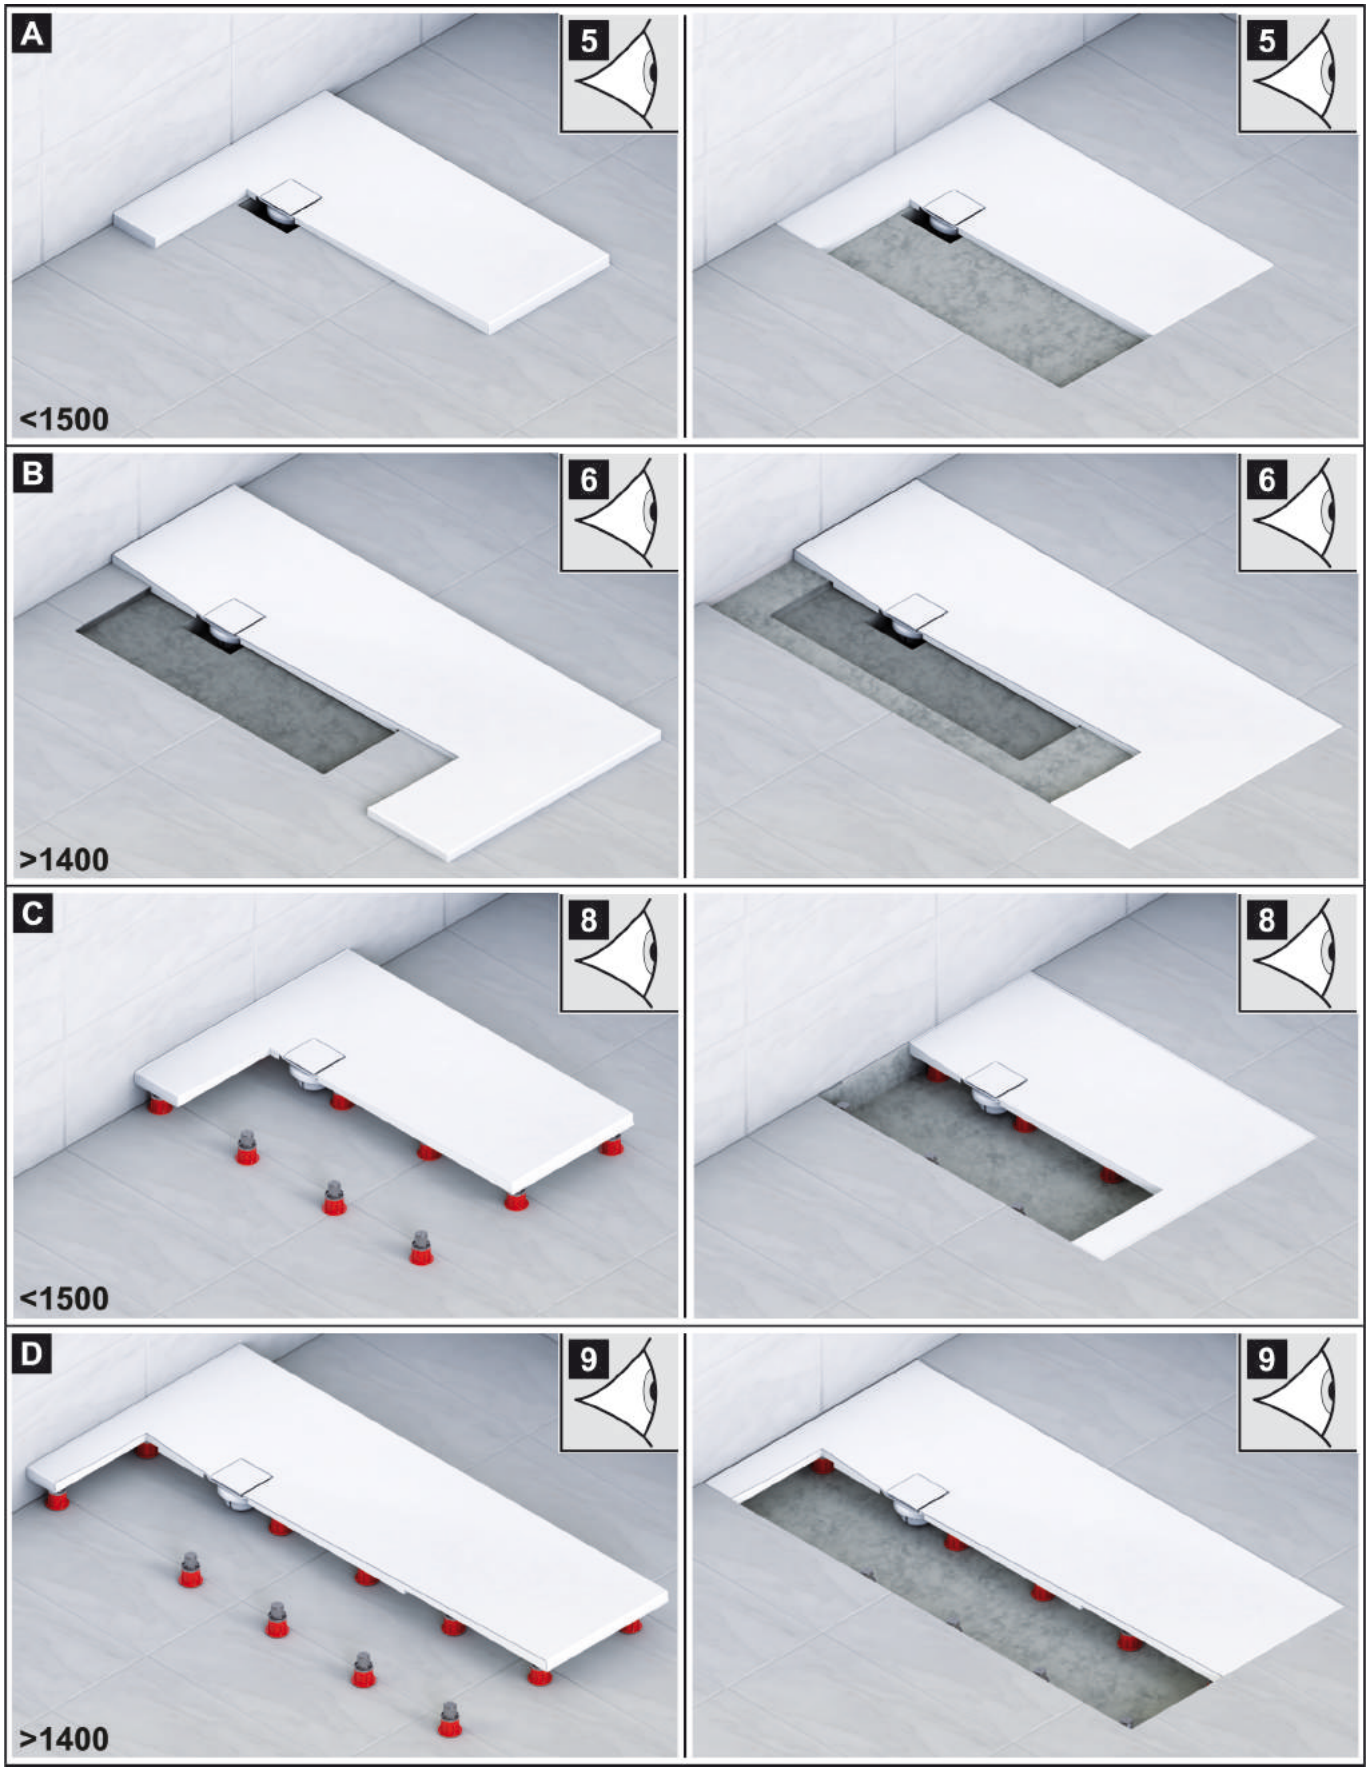
A
5
<1500
5
B
6
>1400
6
C
8
<1500
8
D
9
>1400
9

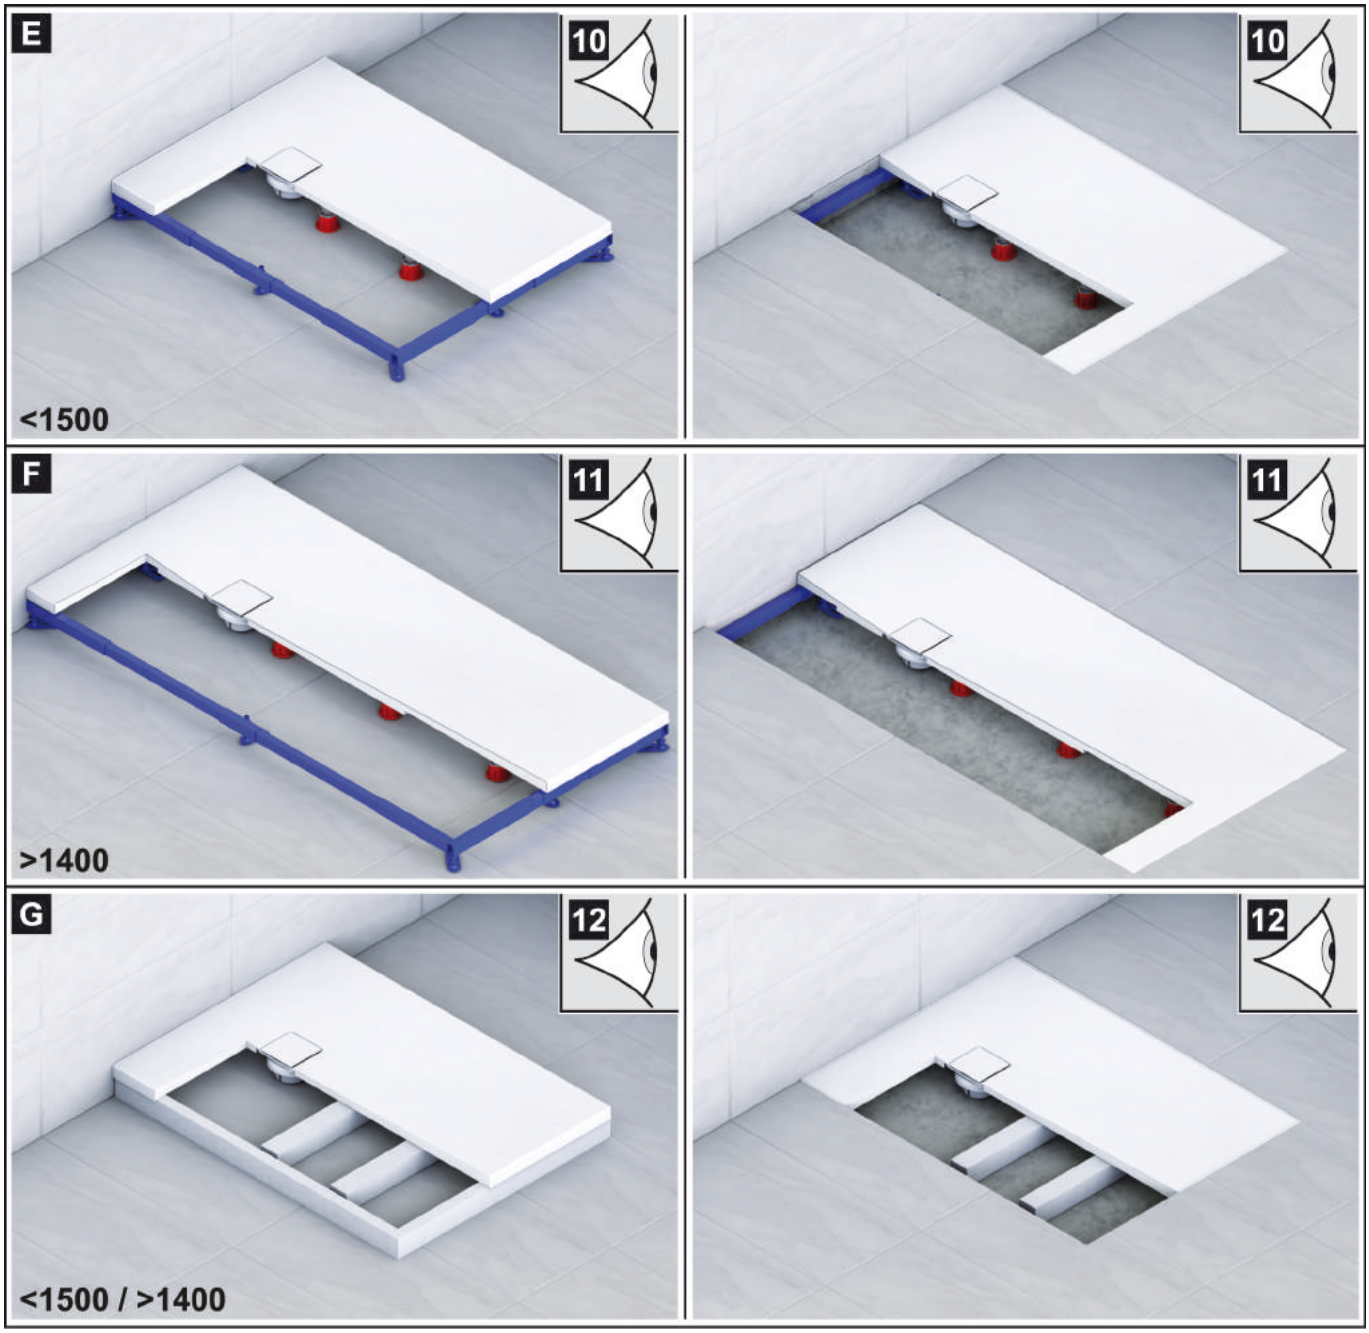
E
10
<1500
10
F
11
>1400
11
G
12
<1500 / >1400
12

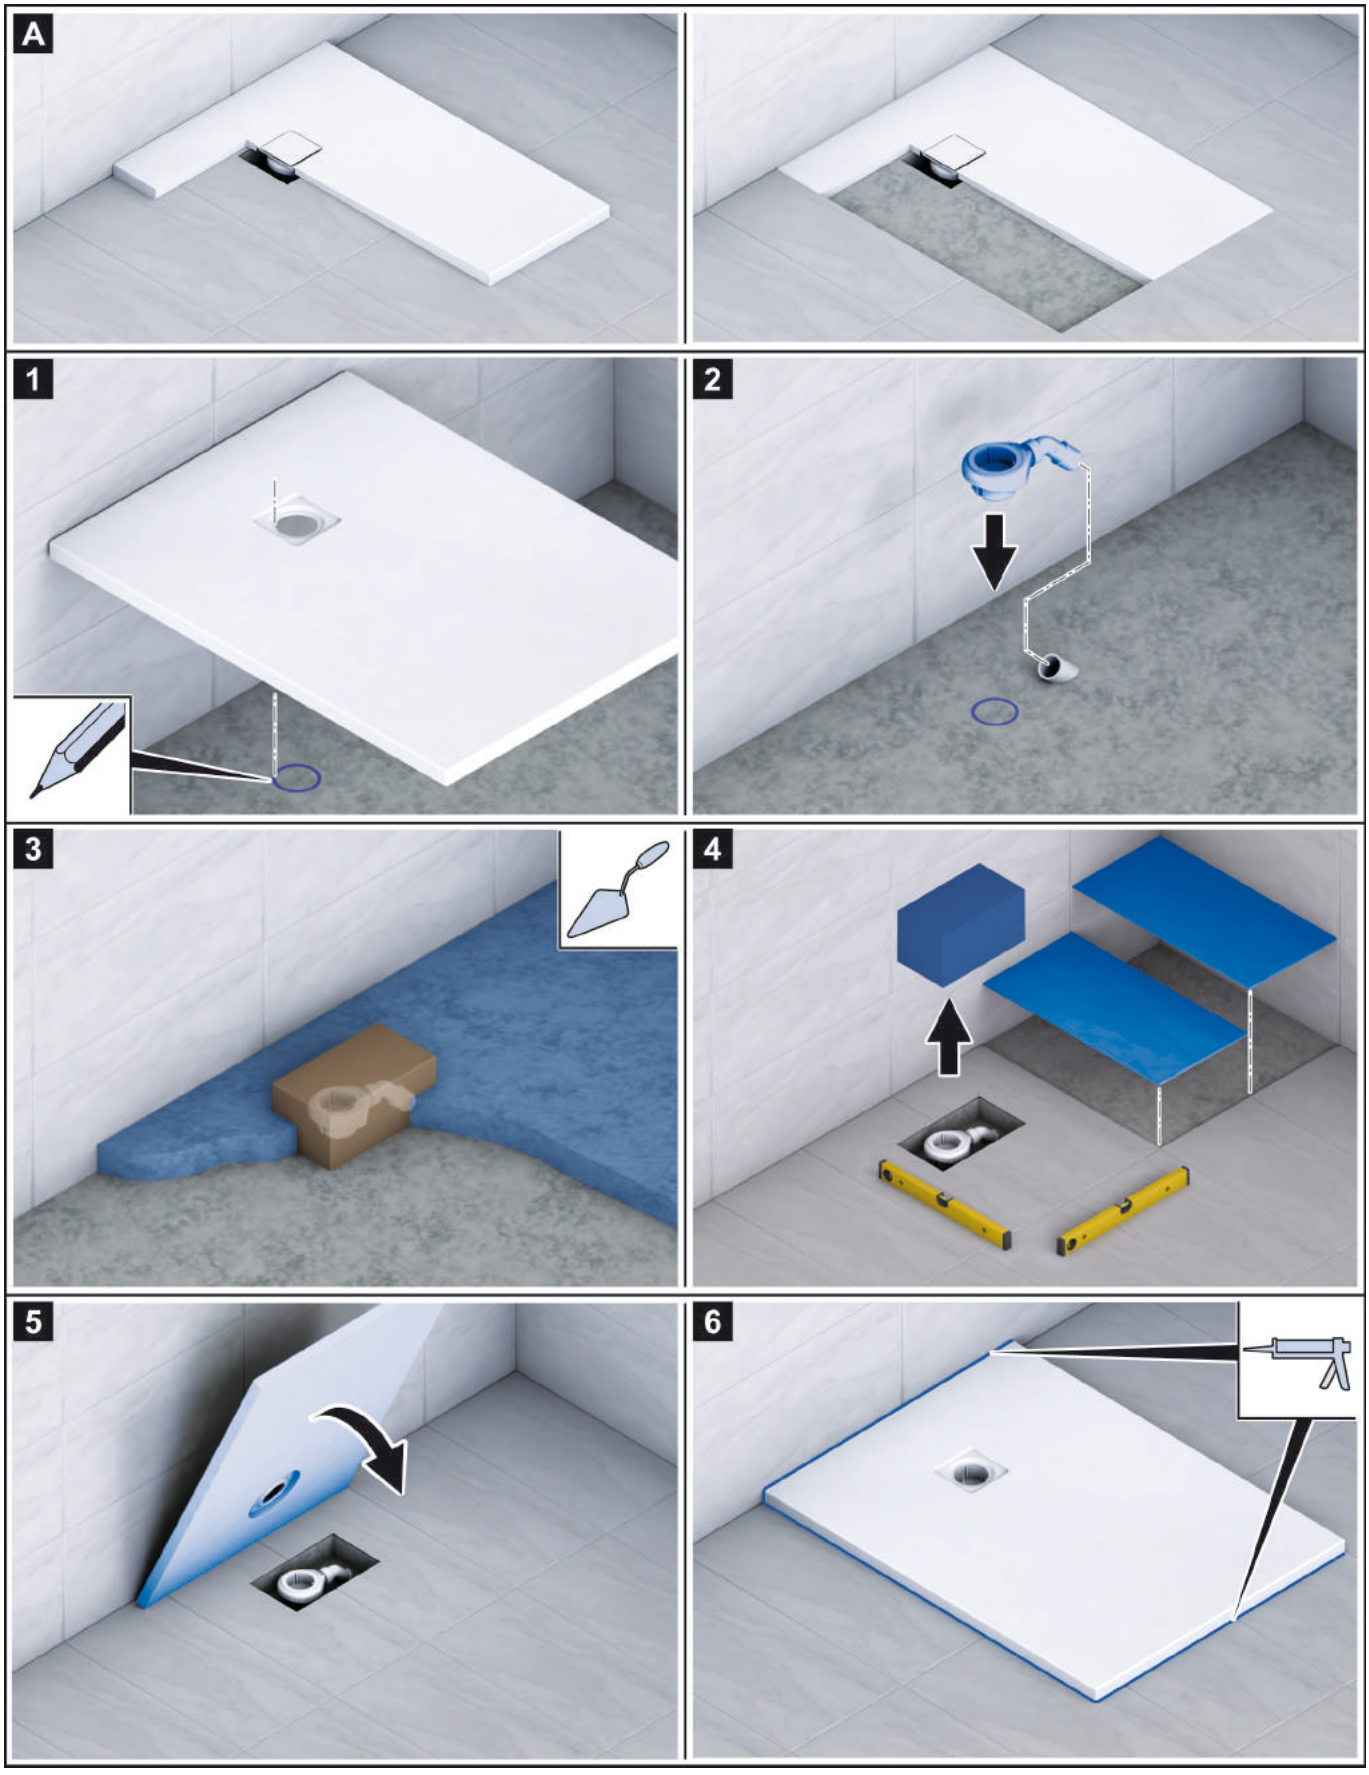
A
1
2
3
4
5
6

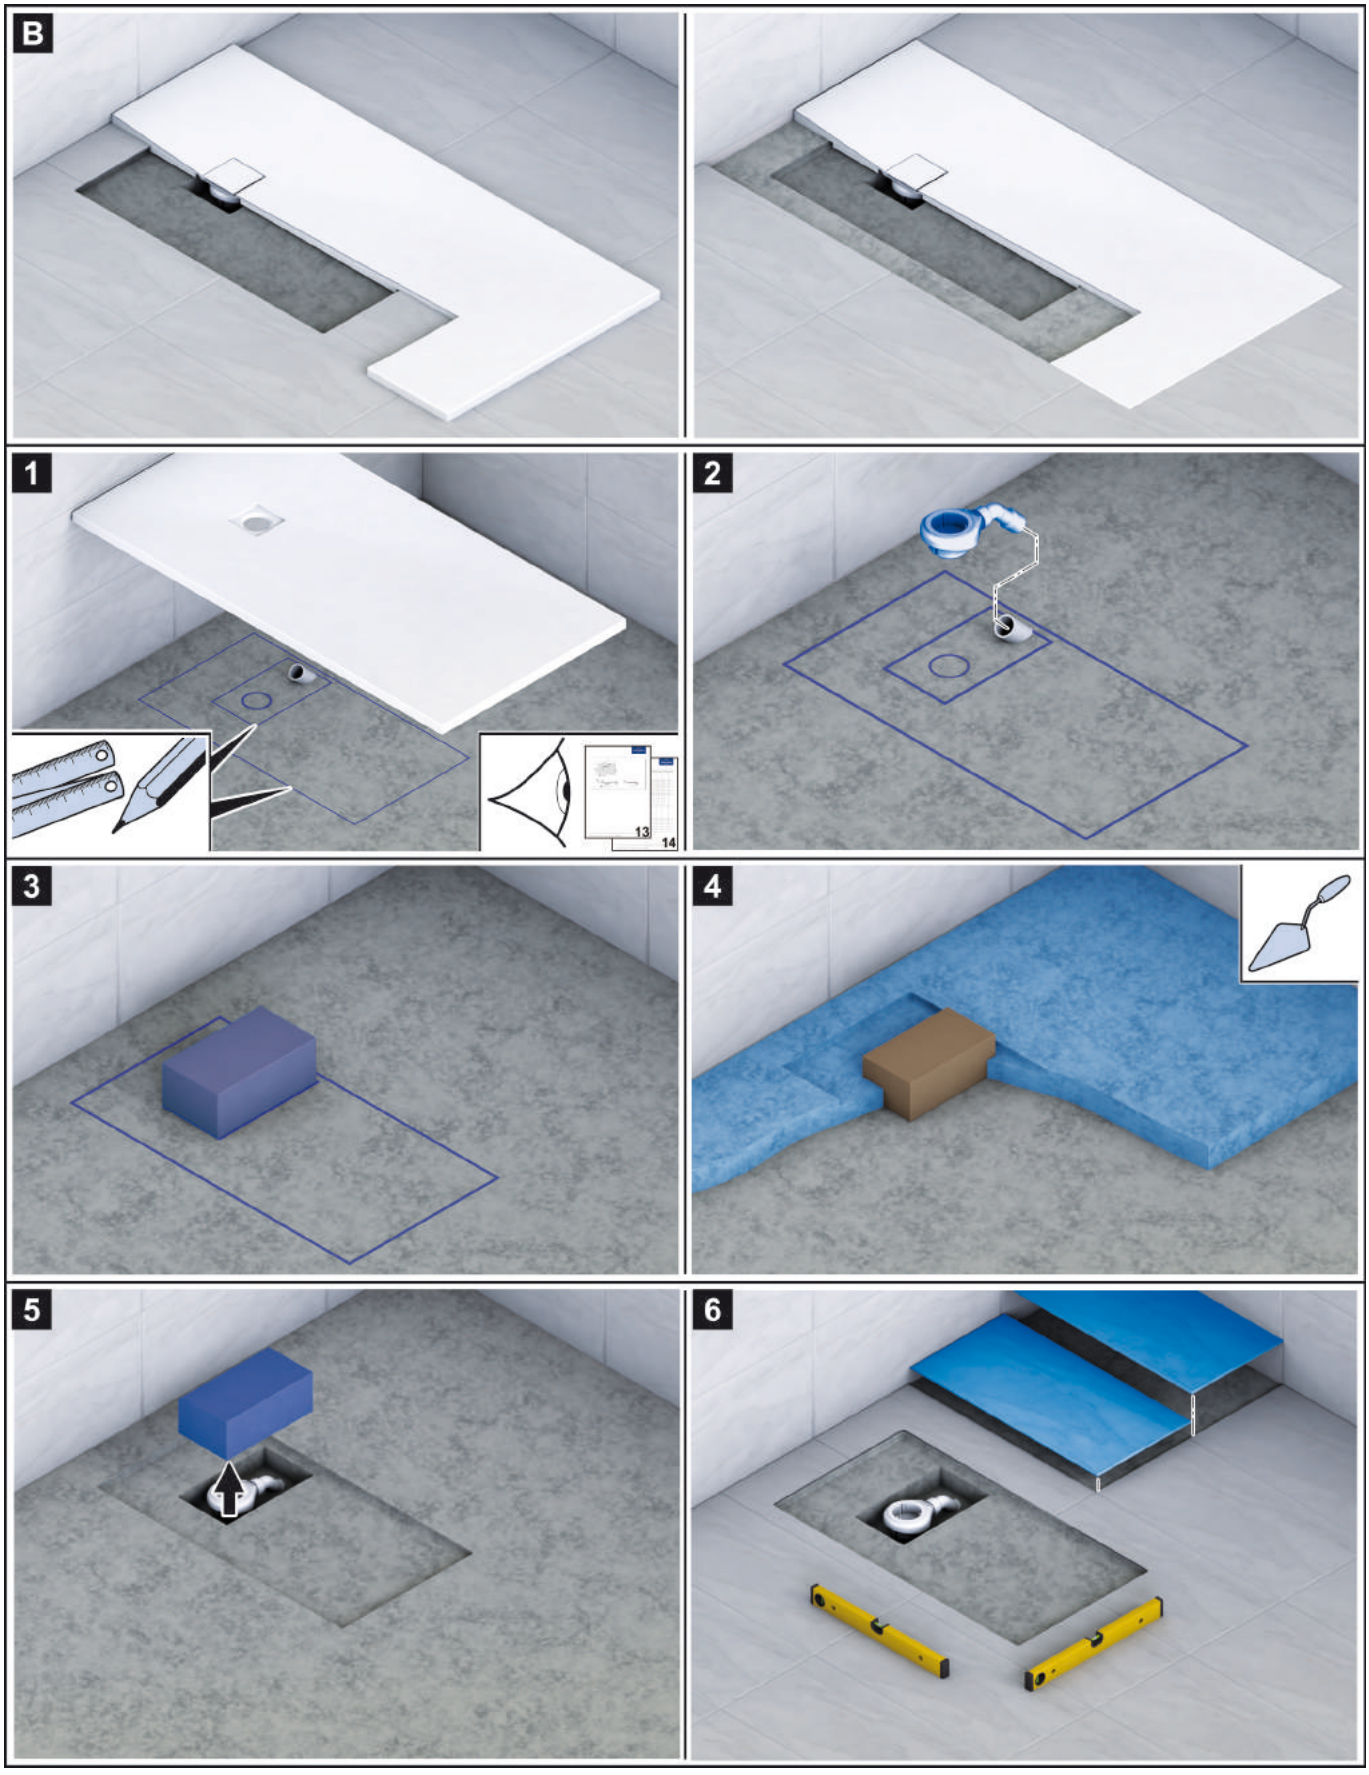
B
1
2
3
4
5
6
13
14

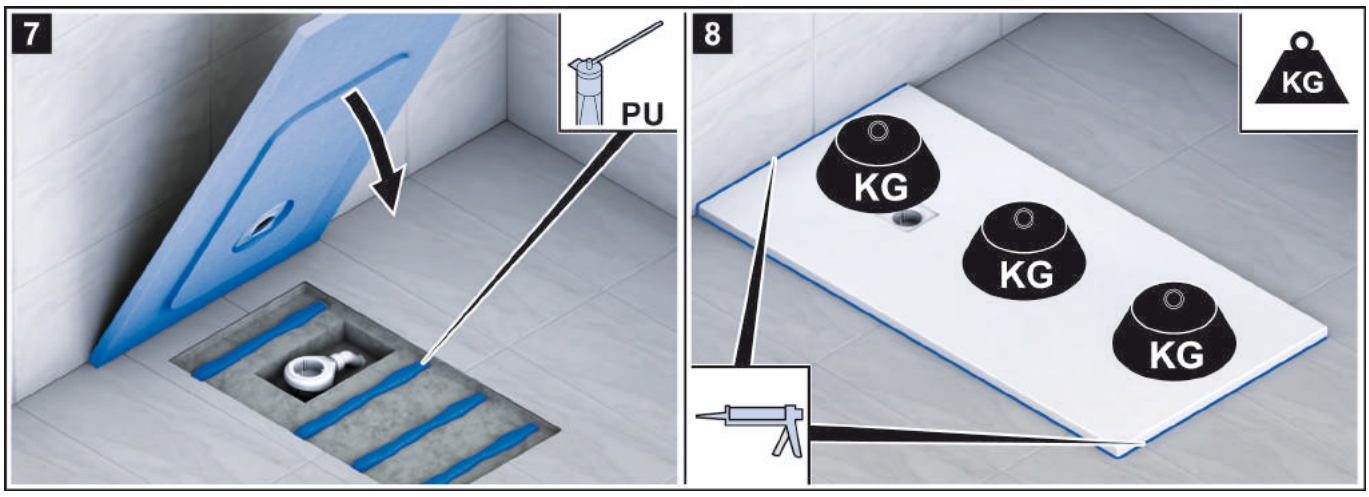
7
PU
8
KG
KG
KG
KG

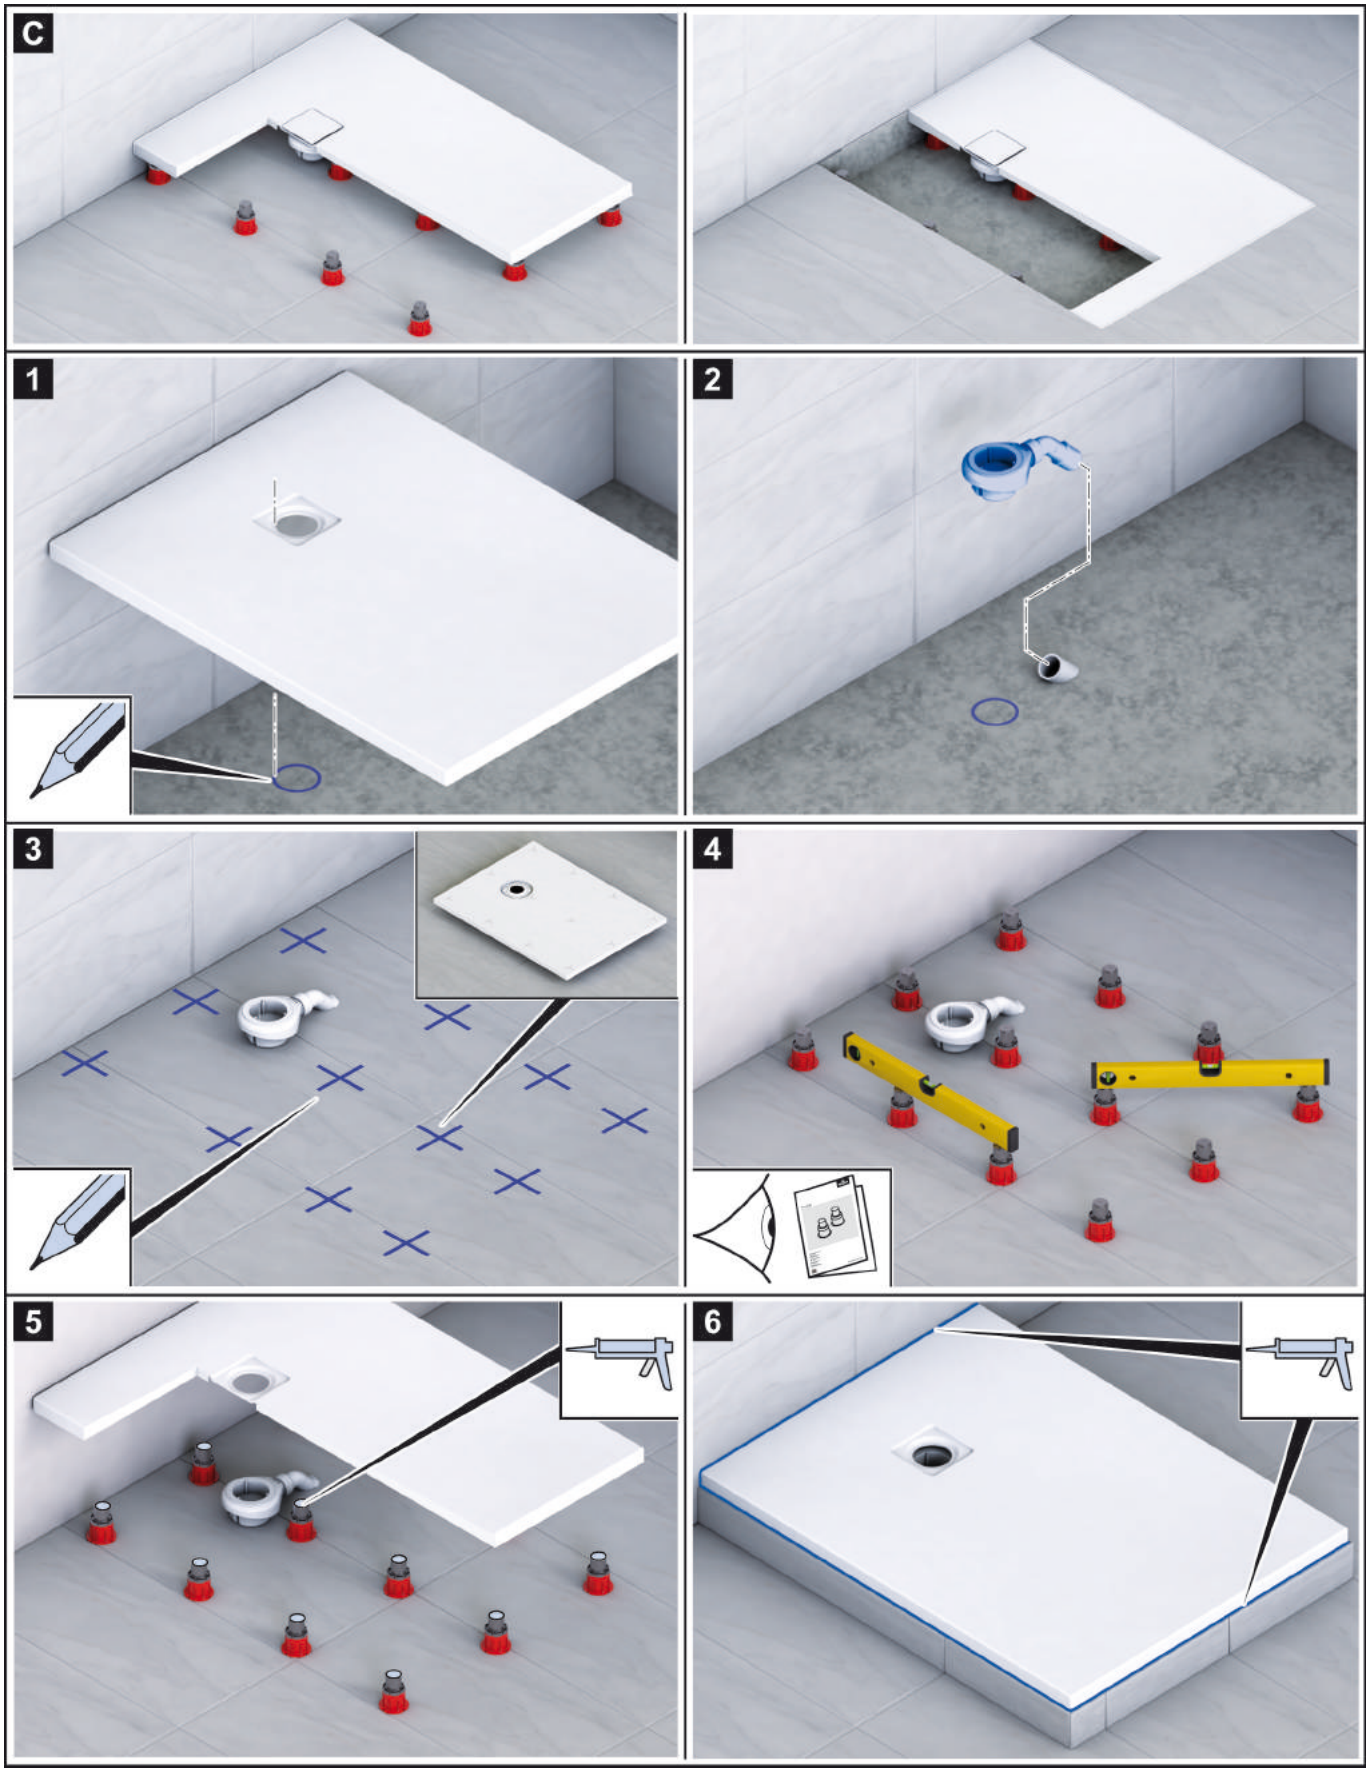
C
1
2
3
4
5
6

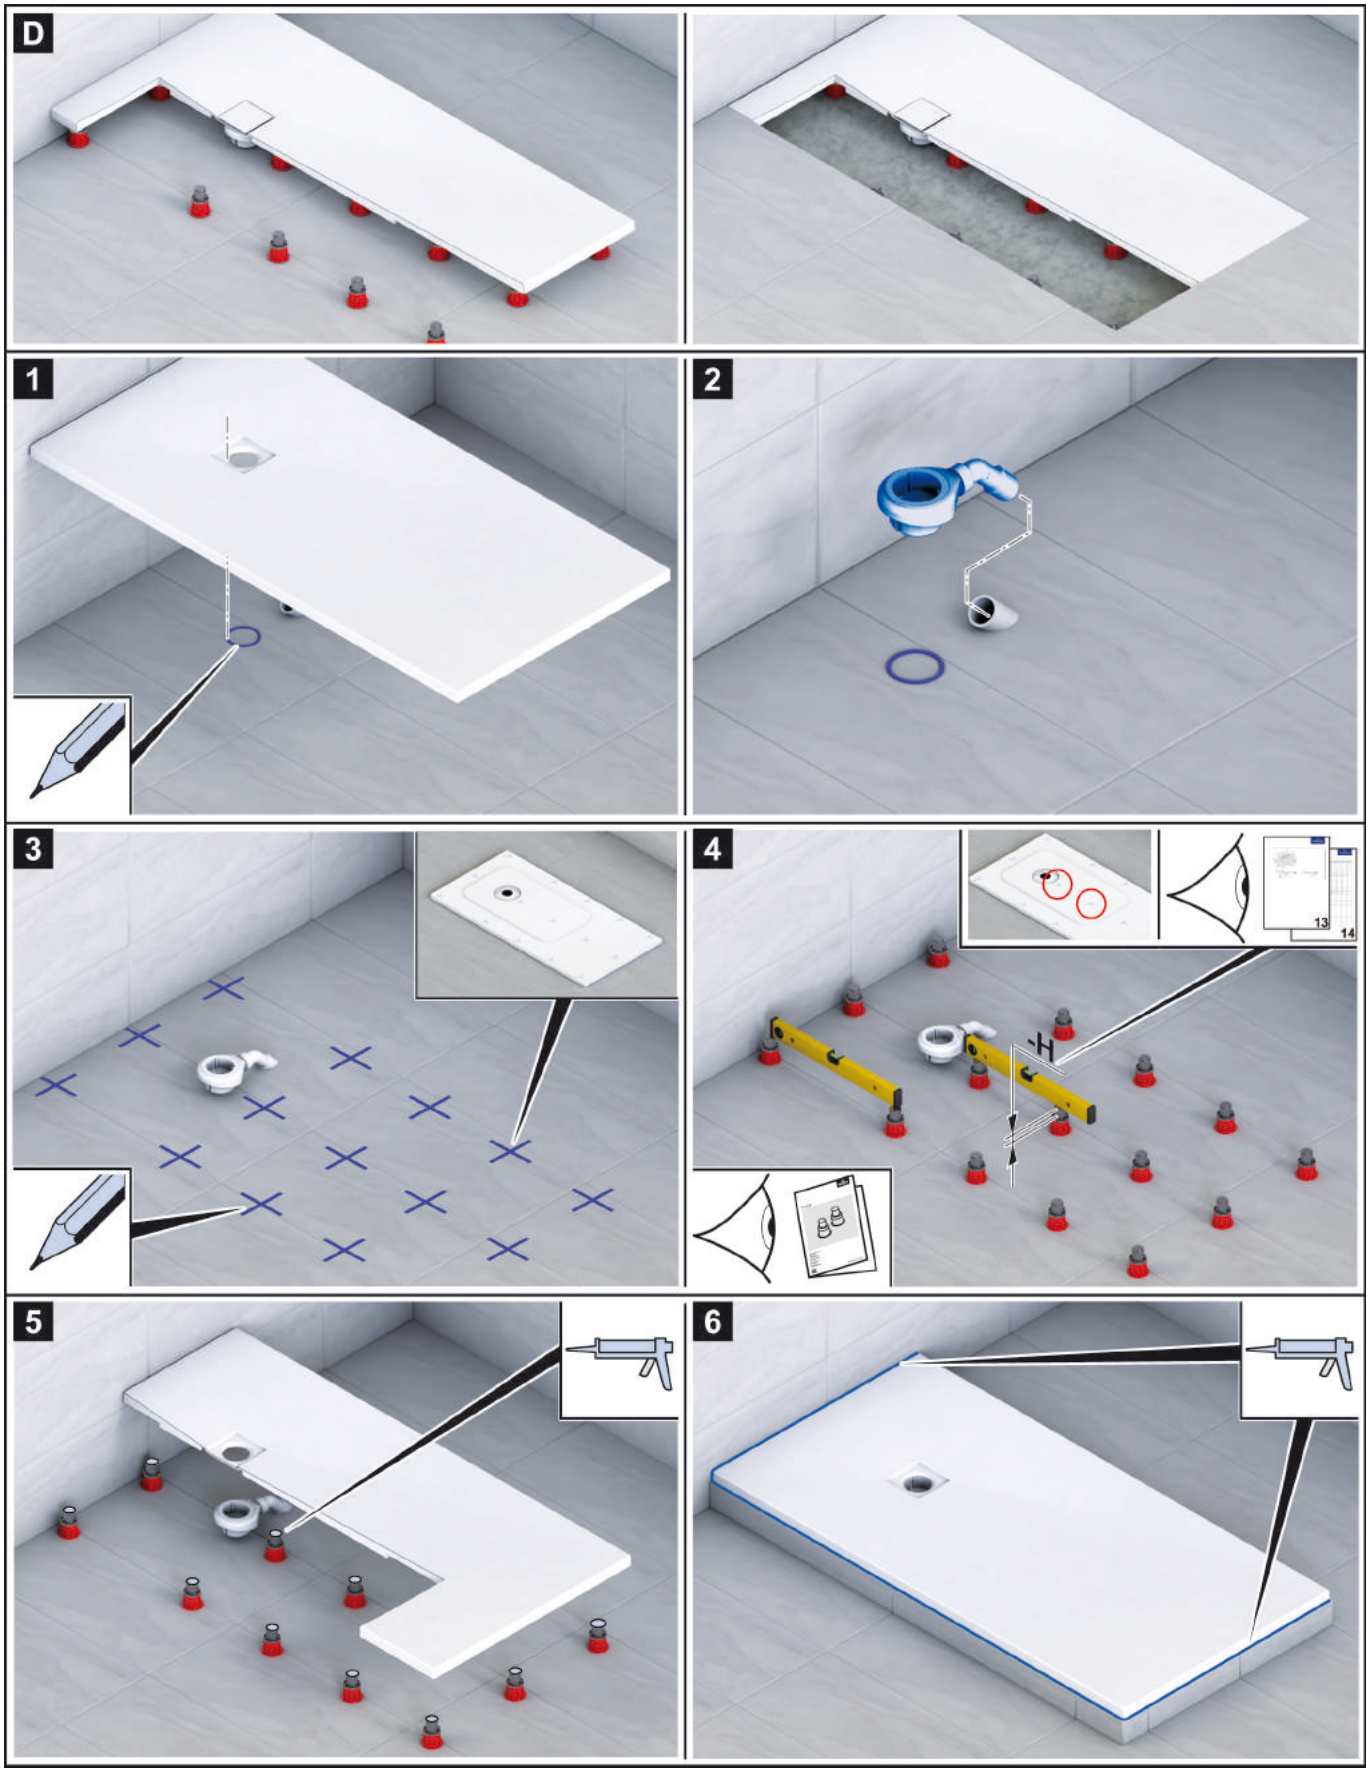
D
1
2
3
4
5
6
-H
13
14

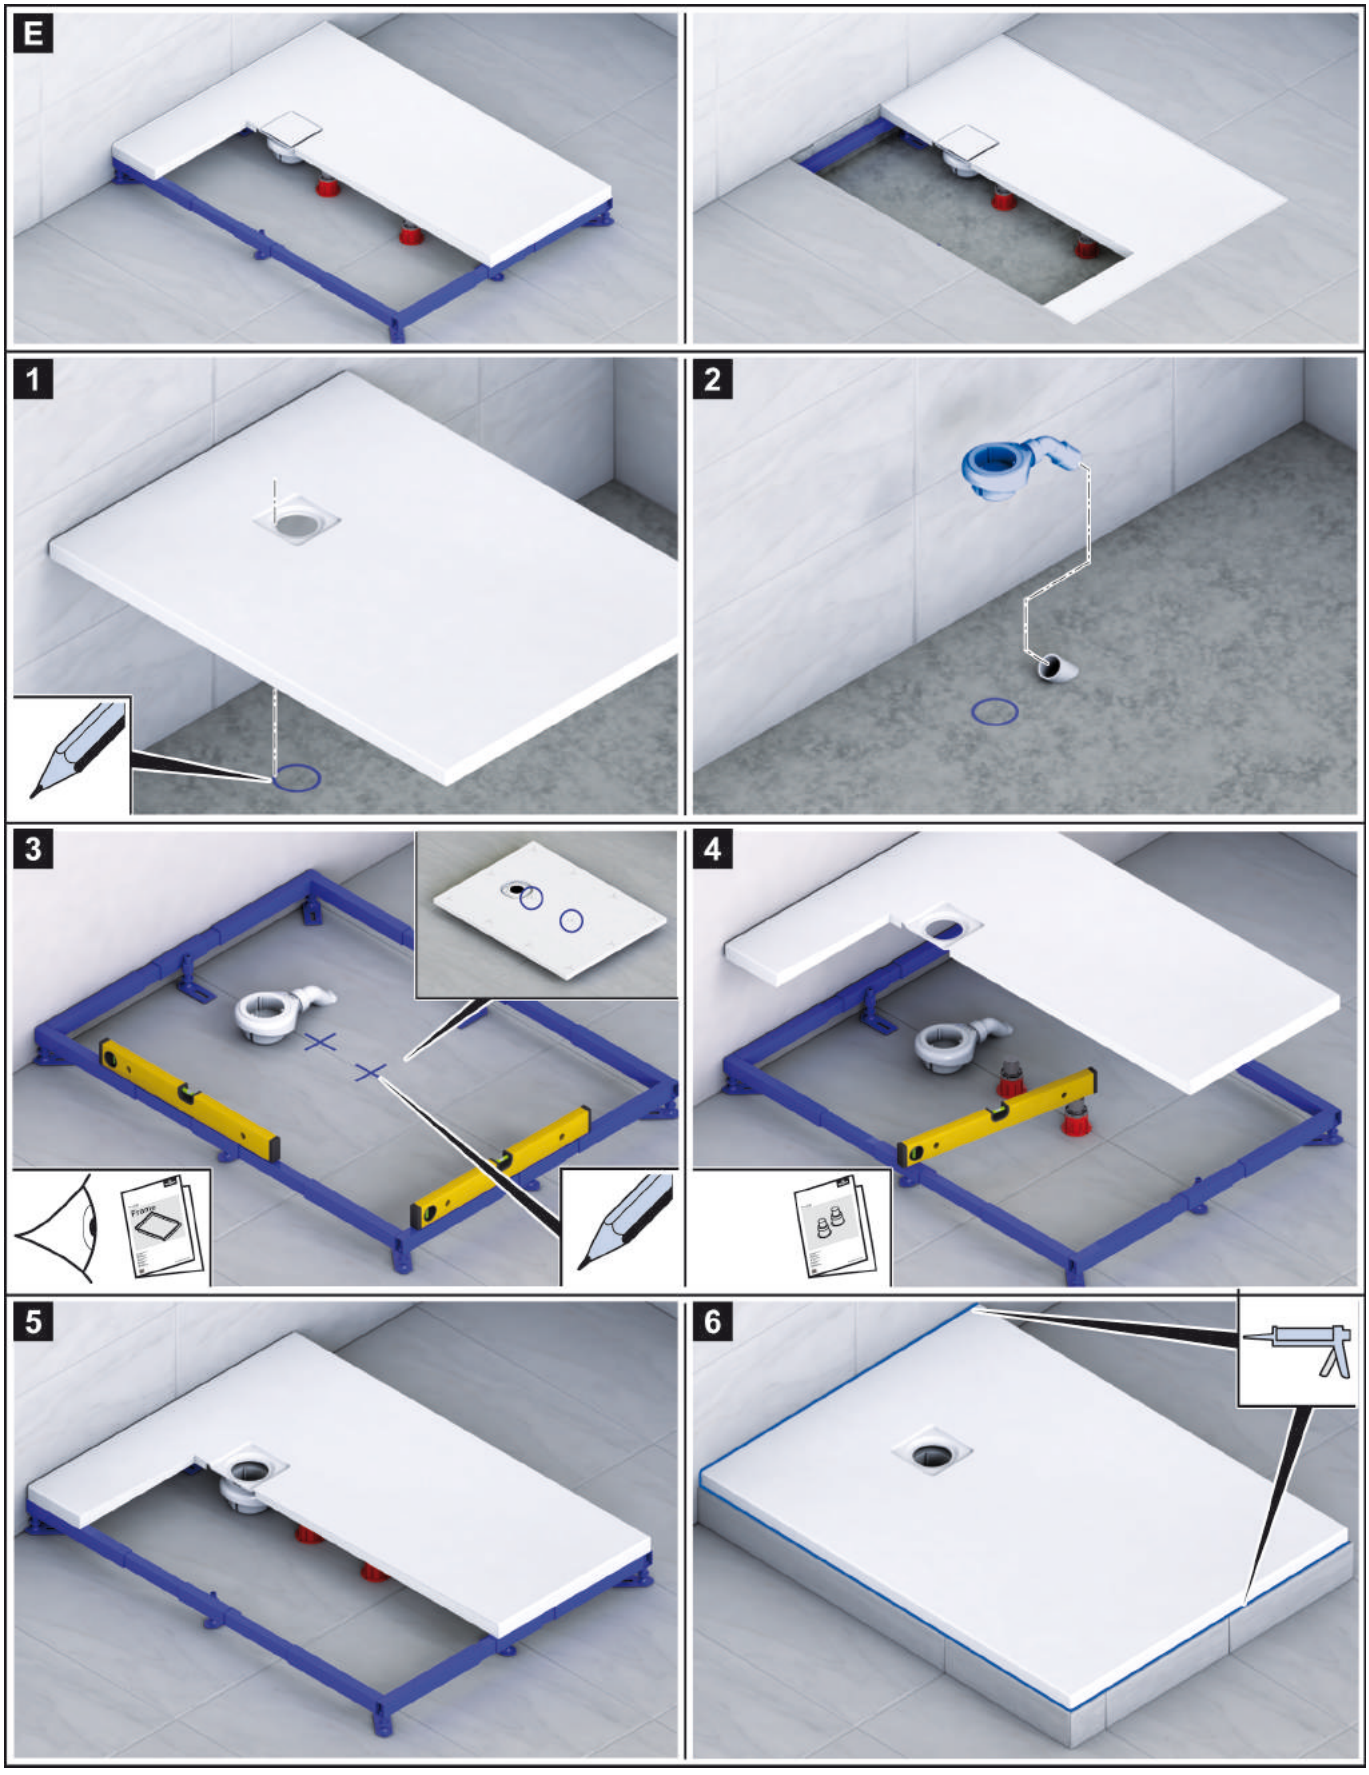
E
1
2
3
4
5
6

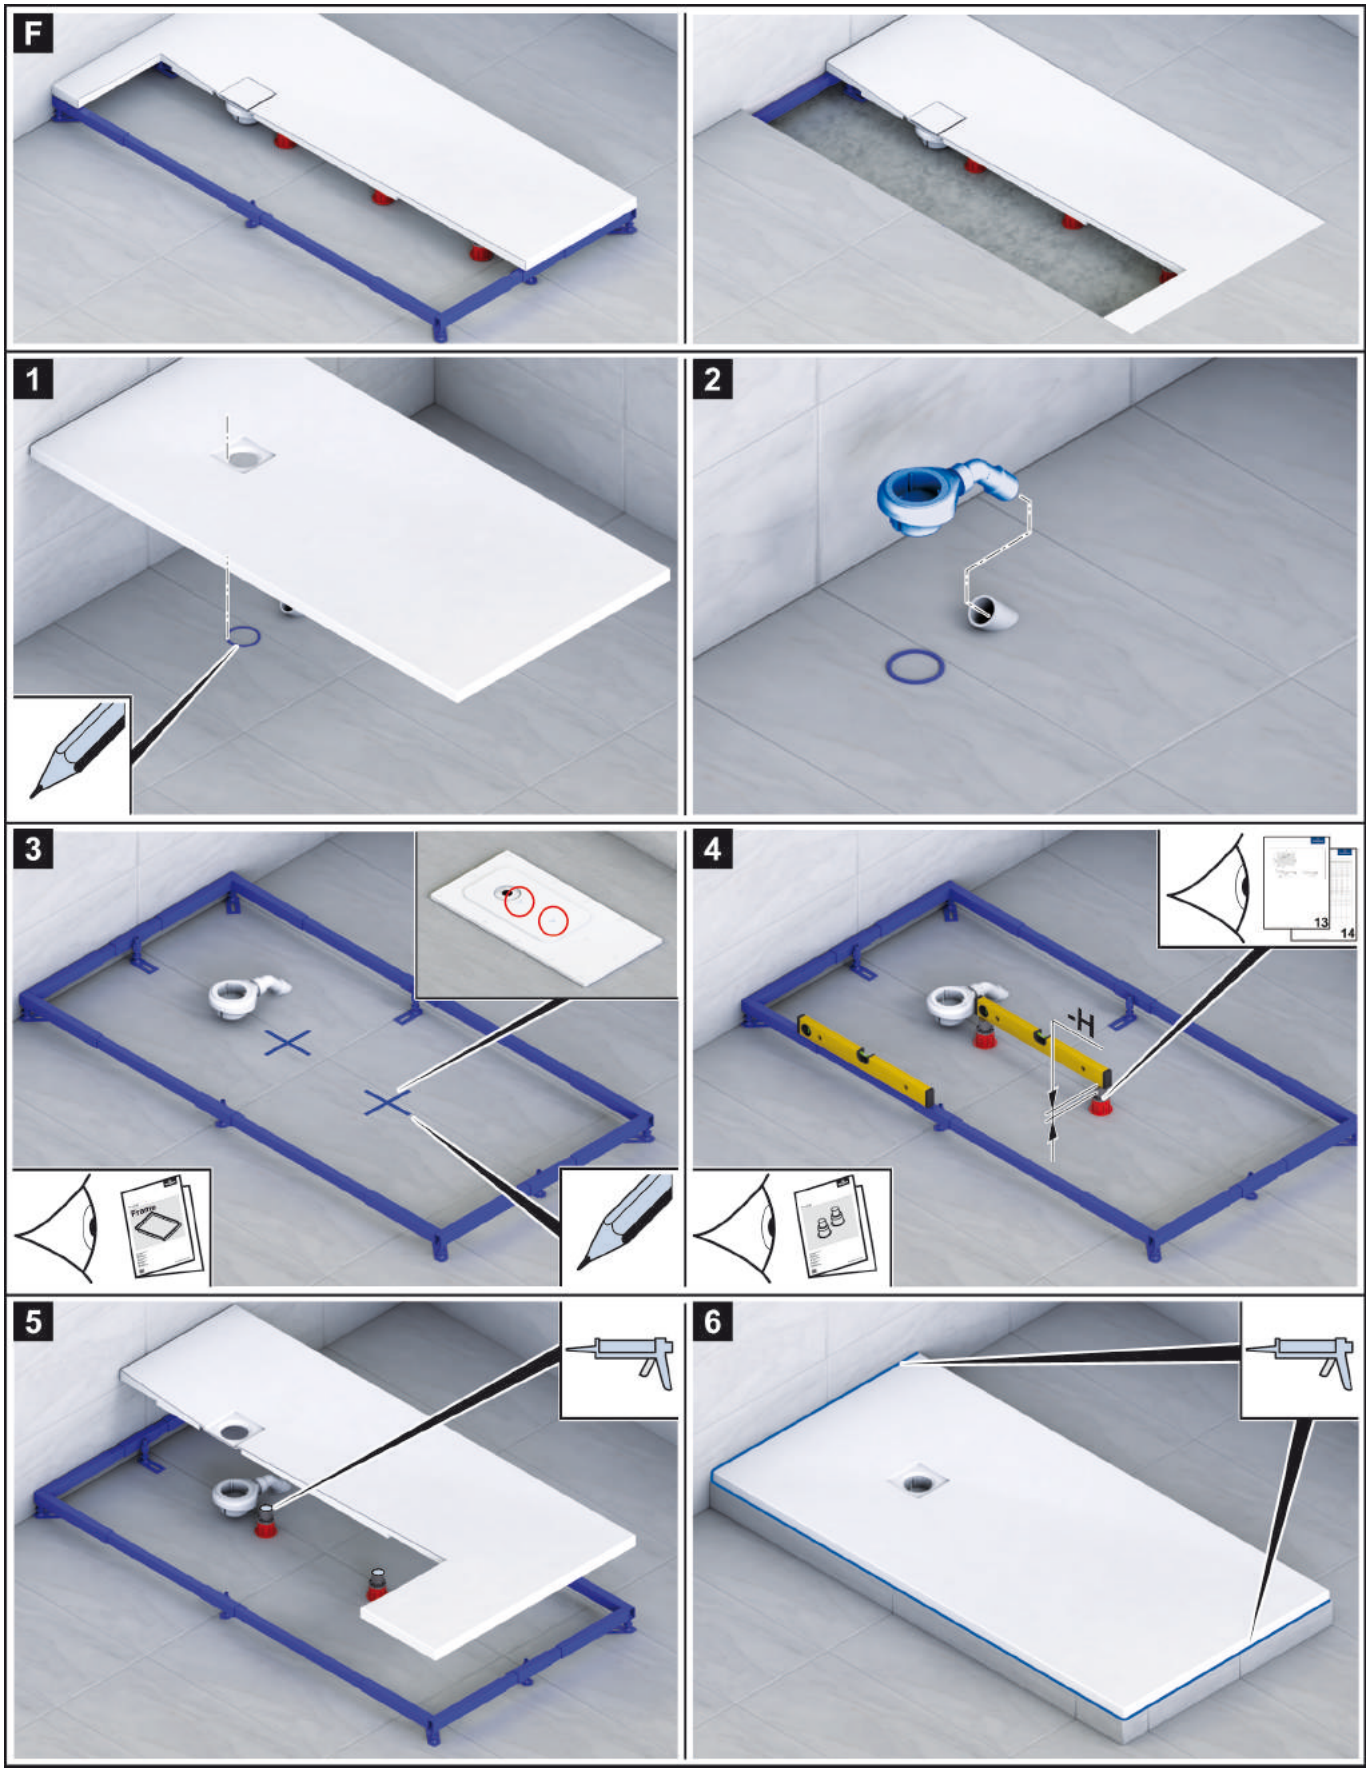
F
1
2
3
4
5
6
-H
13
14

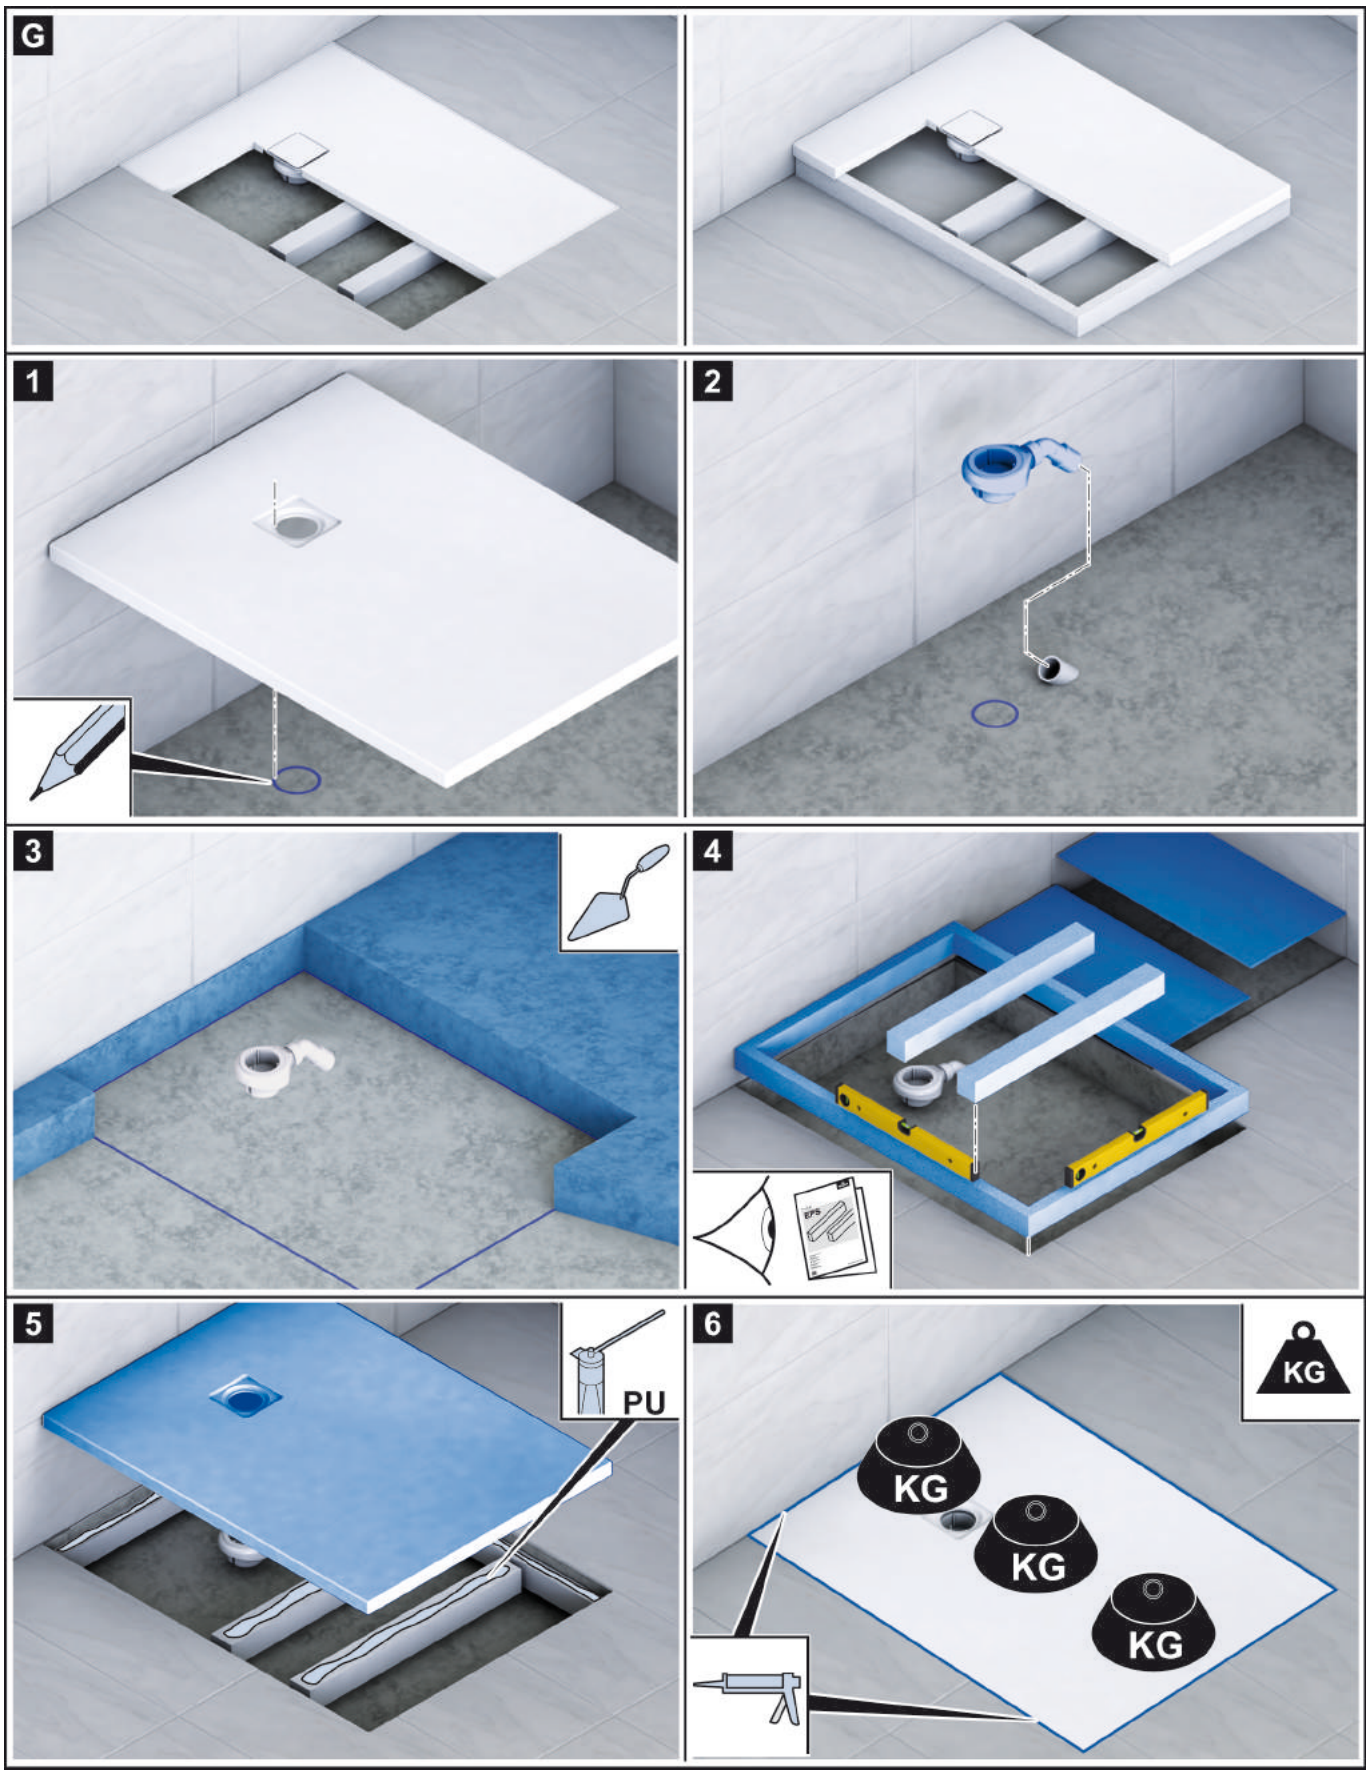
G
1
2
3
4
5
PU
6
KG
KG
KG
KG

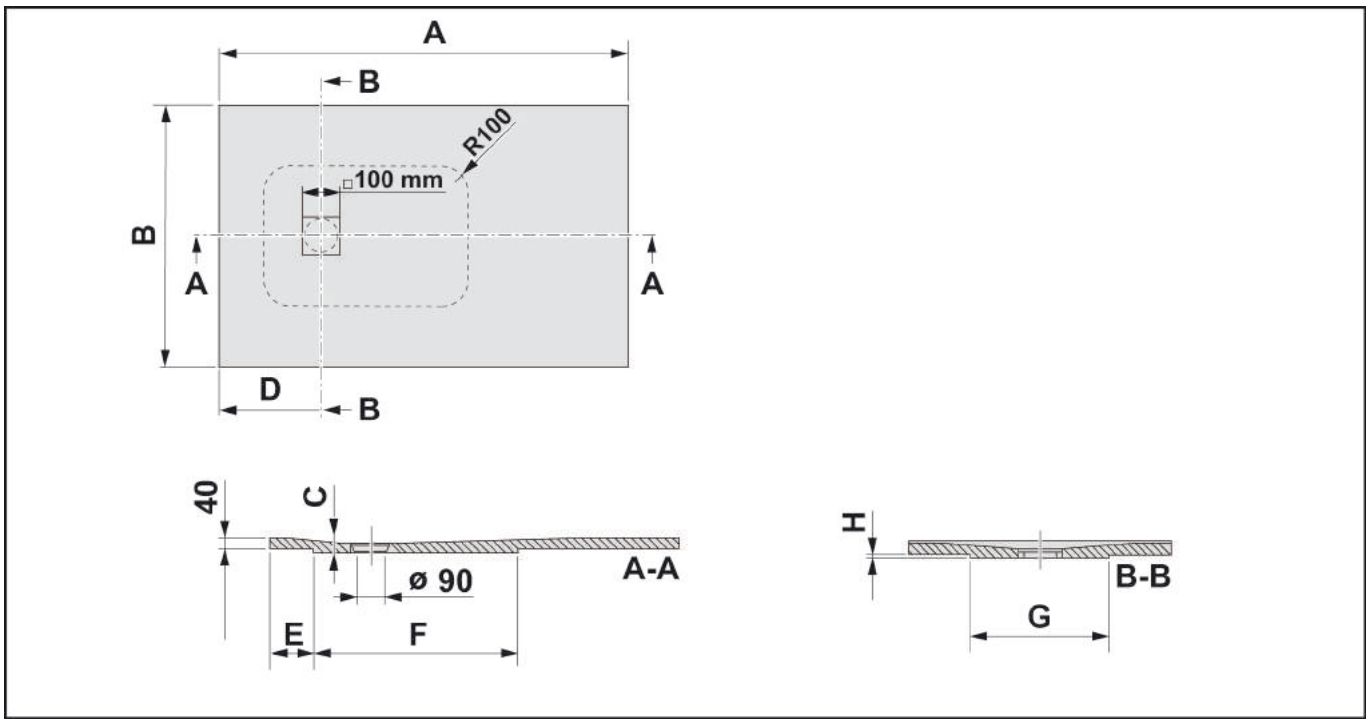
A
B
R100
100 mm
B
A
A
D
B
40
C
ø 90
A-A
E
F
H
B-B
G

A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]	G [mm]	H [mm]
1000	1000	15	250	-	-	-	-
900	900	15	225	-	-	-	-
800	800	15	200	-	-	-	-
1800	1000	29	450	230	785	485	10
1800	900	30	450	230	785	450	10
1800	800	30	450	171	935	470	12
1700	900	29	425	230	690	420	8
1700	800	27	425	205	805	435	10
1600	1000	28	400	225	600	420	8
1600	900	27	400	225	600	390	6
1600	800	25	400	175	820	460	10
1500	1000	24	375	200	610	445	7
1500	900	25	375	200	610	410	7
1500	800	24	375	200	610	380	7
1400	750	23	350	-	-	-	-
1400	900	22	350	-	-	-	-
1400	800	21	350	-	-	-	-
1400	750	21	350	-	-	-	-
1200	900	19	300	-	-	-	-
1200	800	18	300	-	-	-	-
1200	750	15	300	-	-	-	-
1000	900	15	250	-	-	-	-
1000	800	15	250	-	-	-	-
1000	750	15	250	-	-	-	-
900	800	14	225	-	-	-	-
900	750	14	225	-	-	-	-

Mafell 200506
Festo 491952

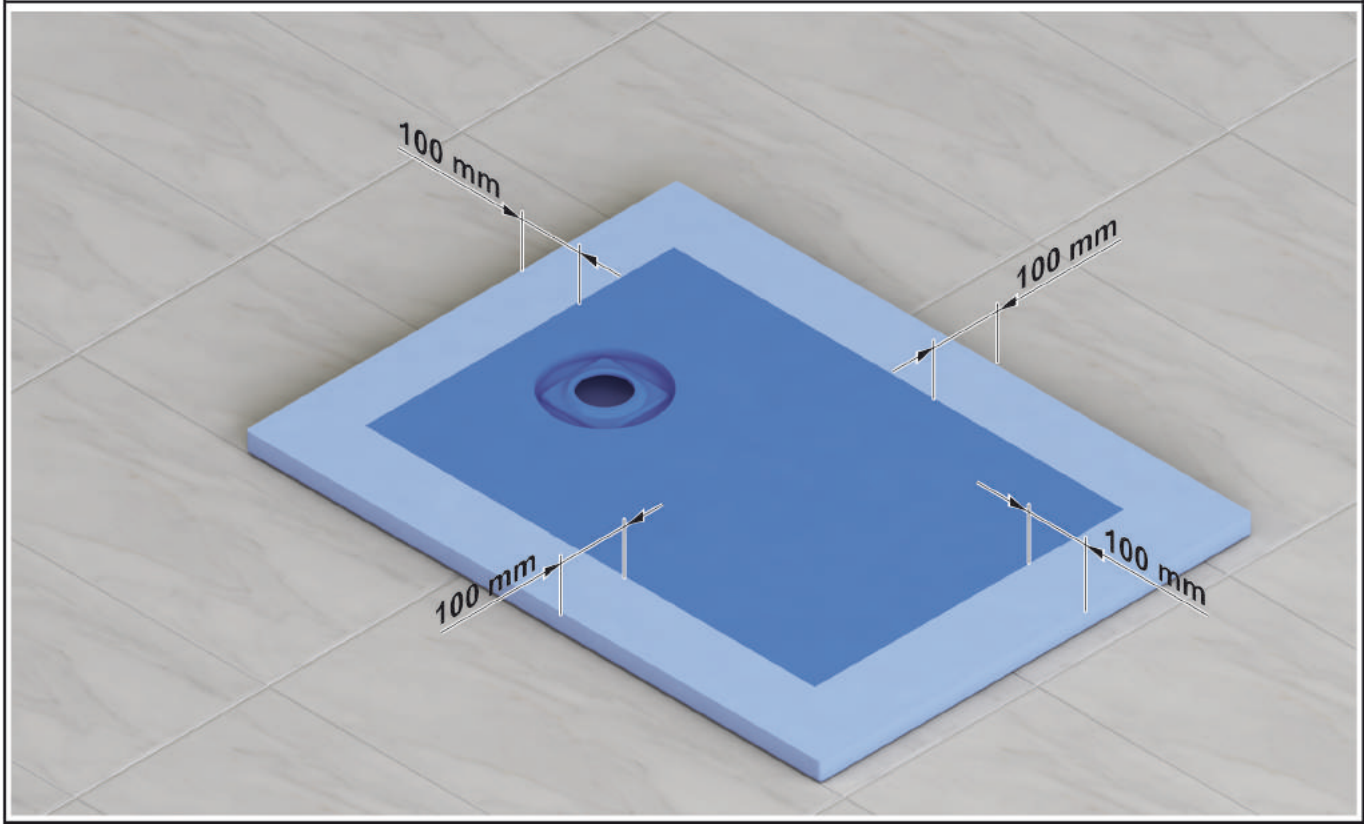
100 mm
100 mm
100 mm
100 mm

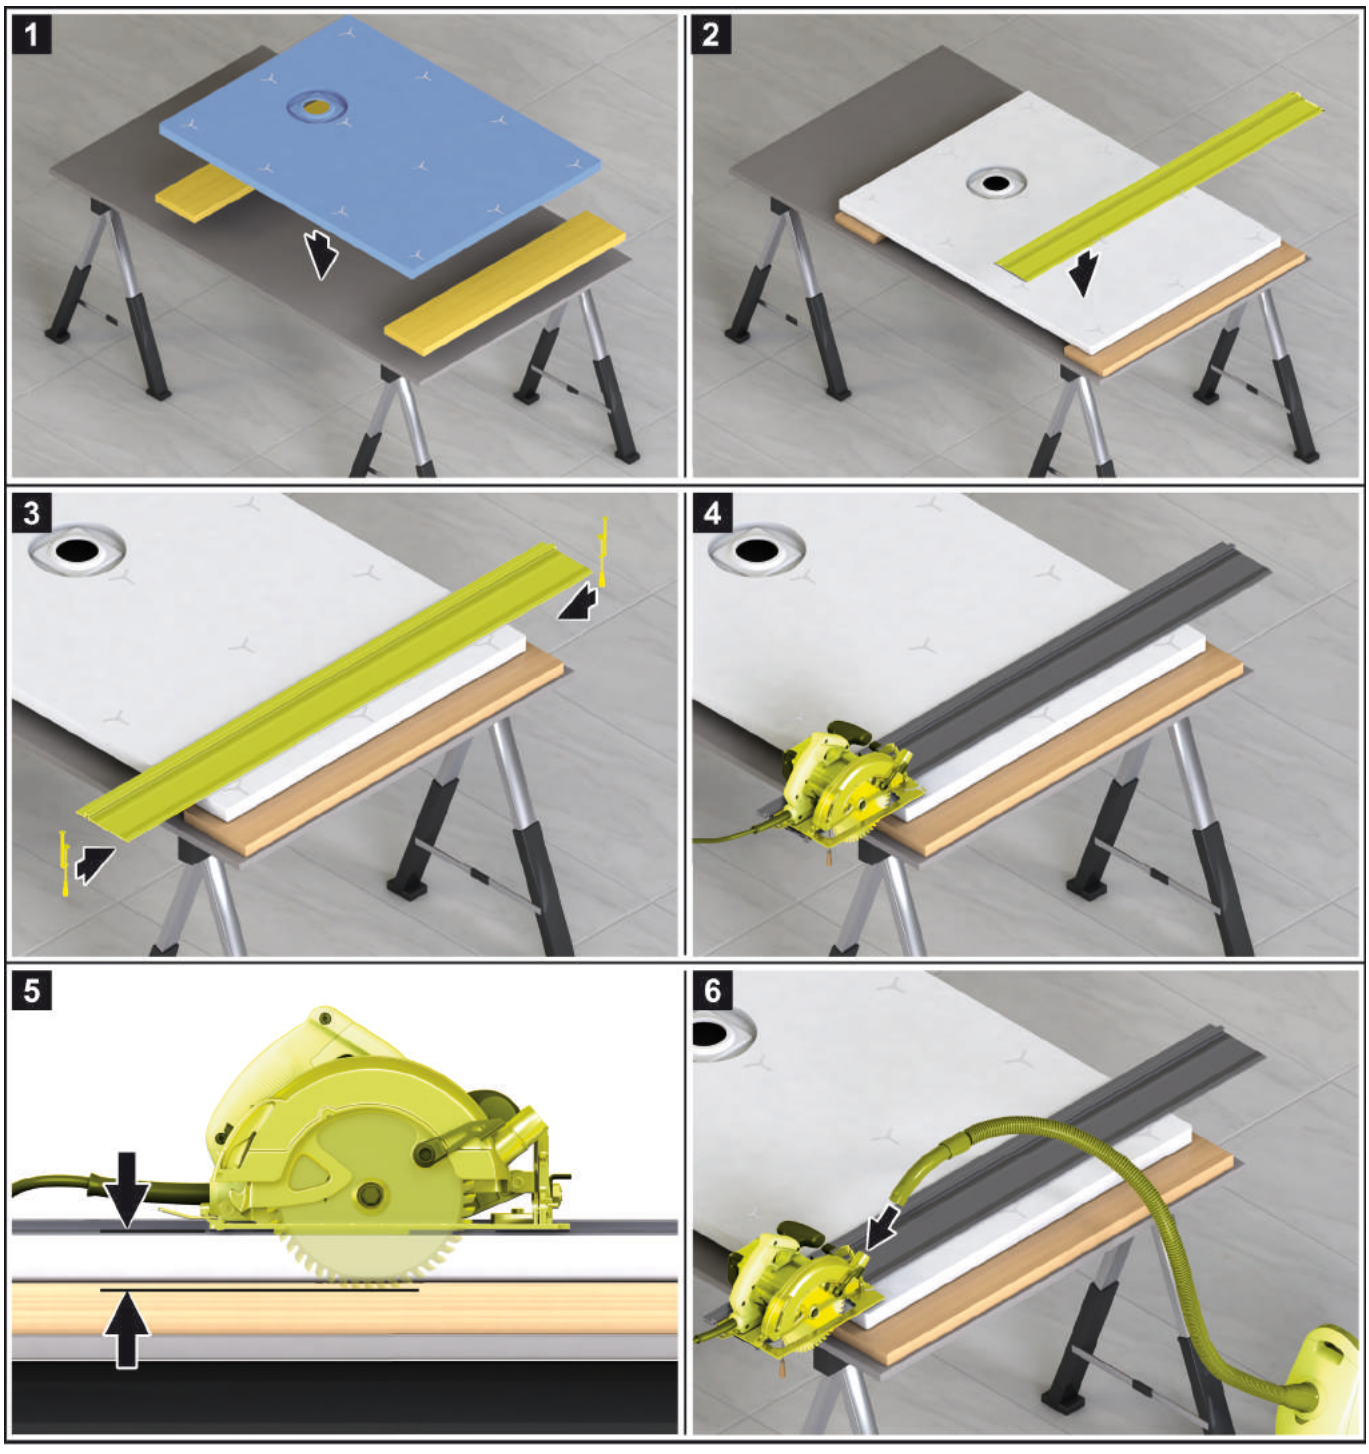
1
2
3
4
5
6

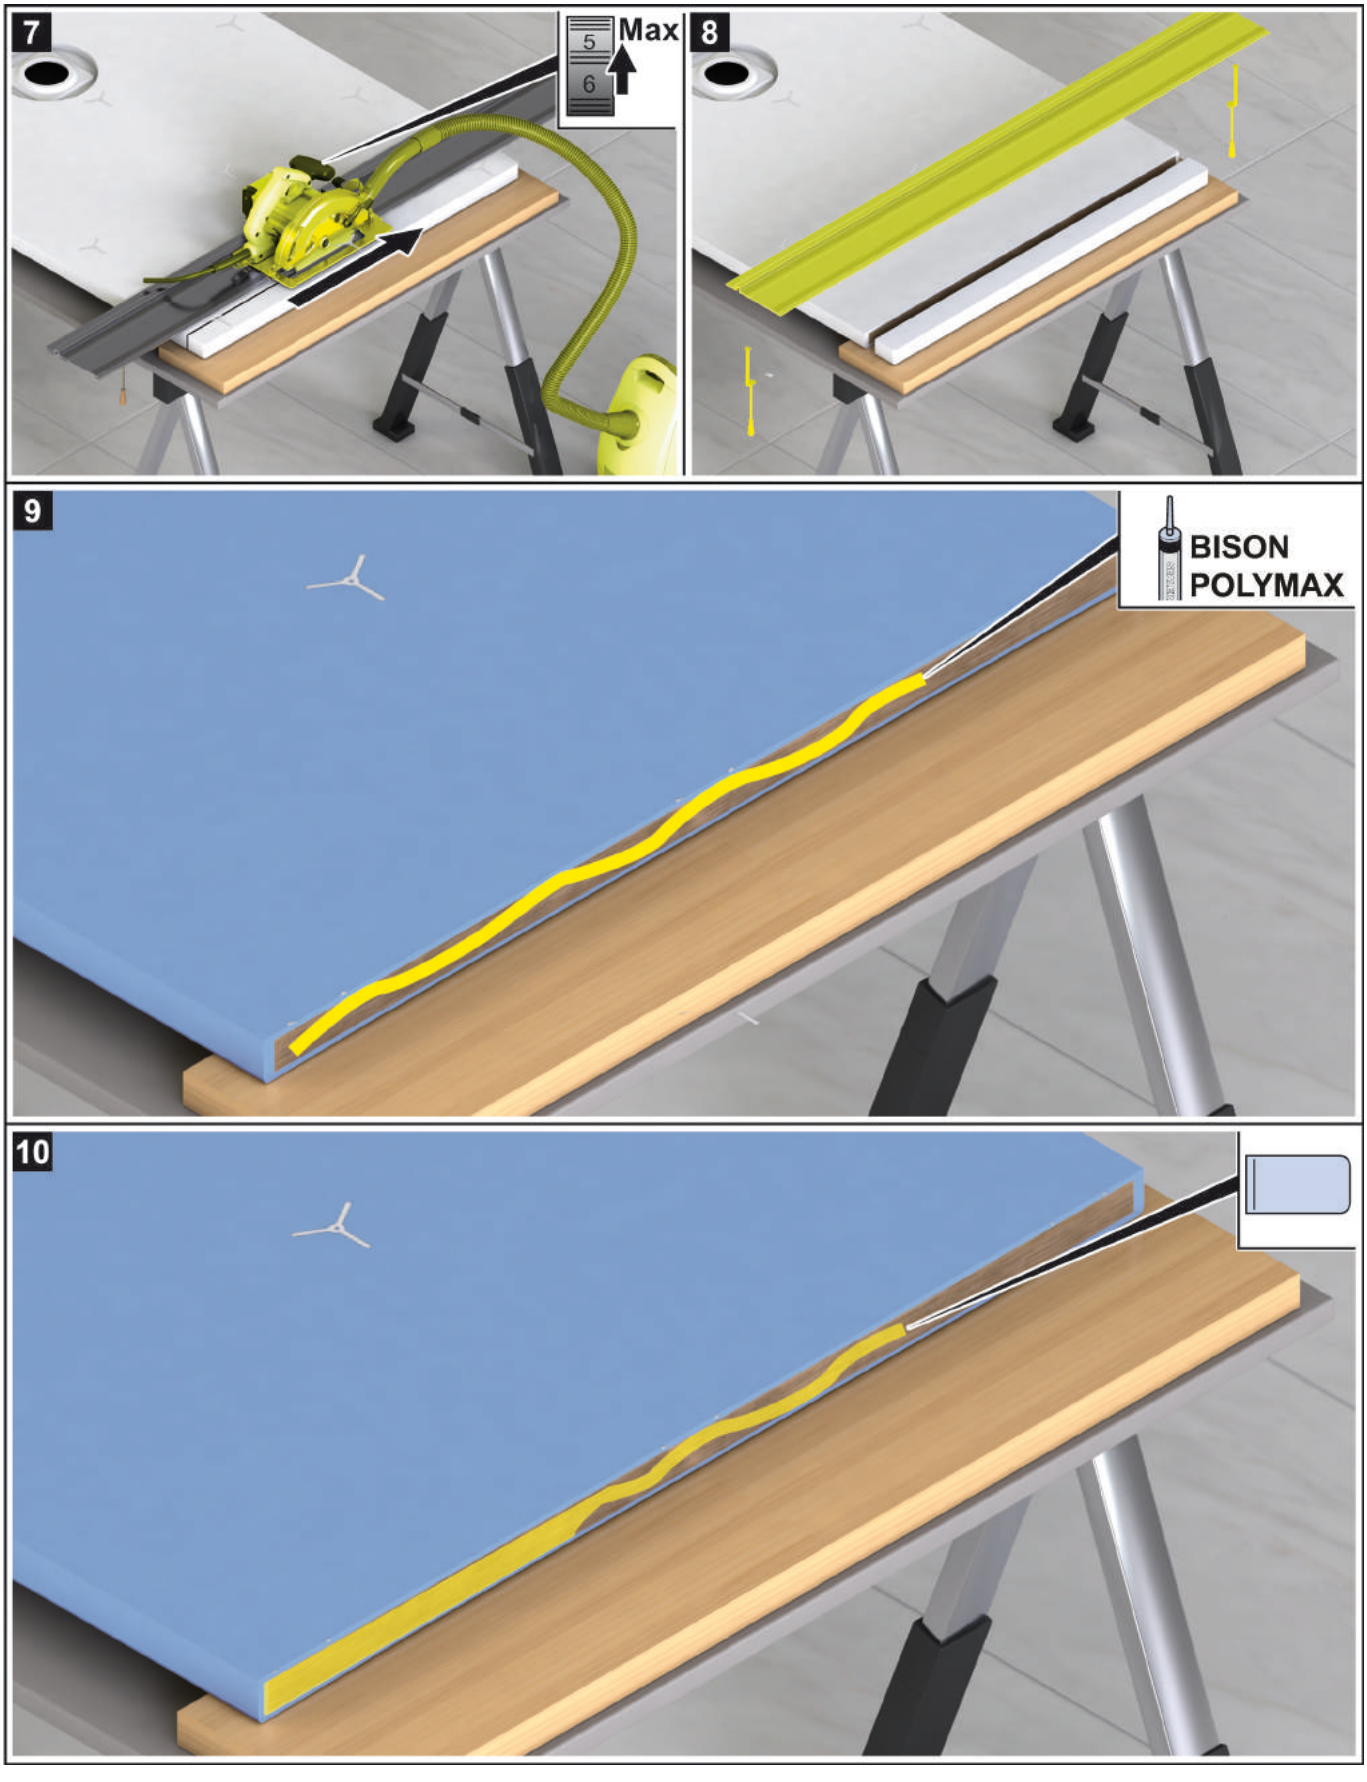
7
Max
5
6
8
9
BISON
POLYMAX
10

VILLEROY & BOCH

GERMANY

Villeroy & Boch AG
Bathroom and Wellness Division
Headquarters
66693 Mettlach
Germany

Tel: +49 (0) 68 64 / 81 0
Fax: +49 (0) 68 64 / 81 1484

UCMAN0341- VORABVERSION // 2019

Shades and dimensions subject to the usual tolerances. We reserve the right to make technical modifications to the range and alter colours.