


TYPE T090


- (D) Montageanleitung
- (GB) Assebly Instructions
- (F) Instructions de montage
- (I) Instruzione di montaggio
- (E) Instrucciones de montage
- (H) Szerelési utasitás
- (NL) Montageaanwijzing

© Copyright by PMA 08/06 852 260

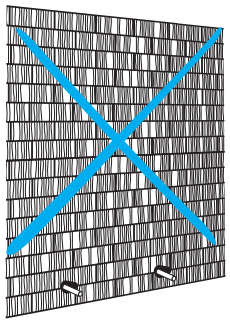


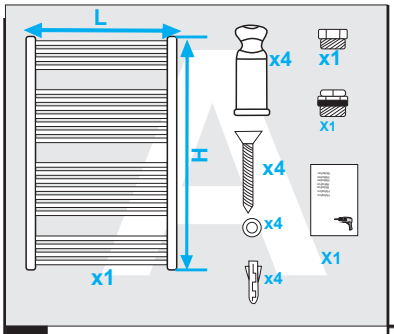


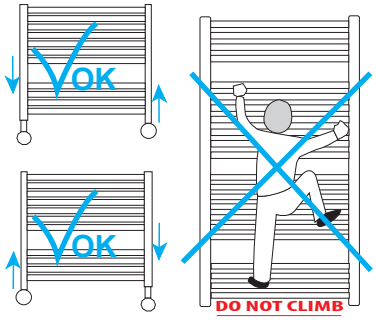


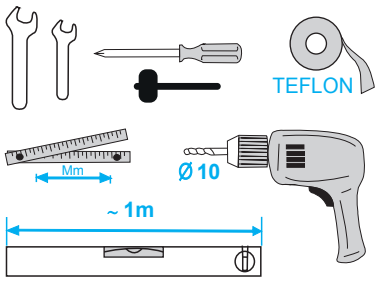





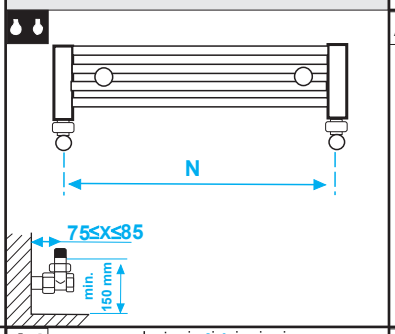


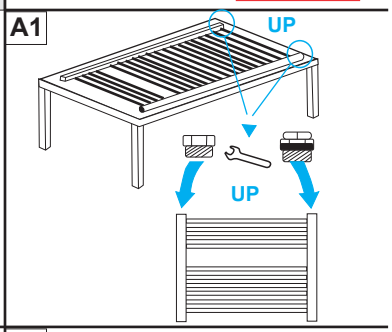


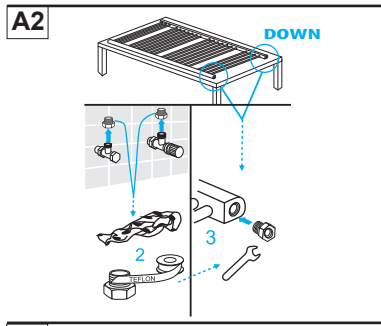


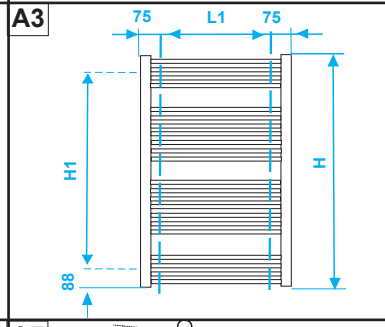


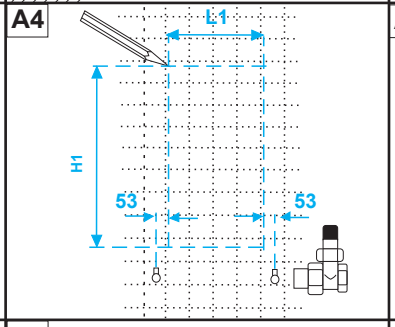


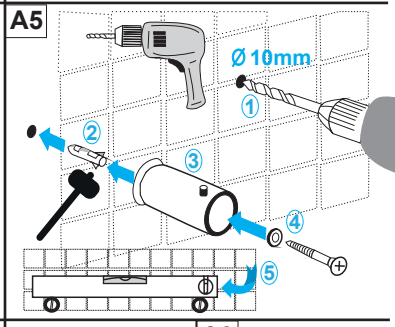


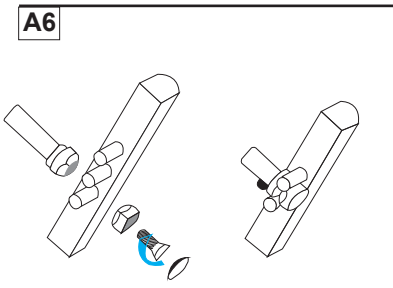


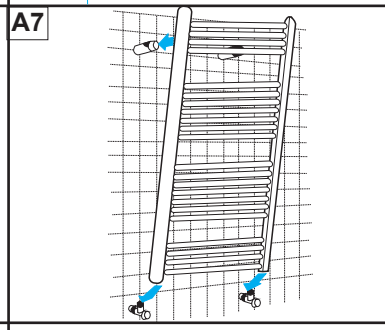


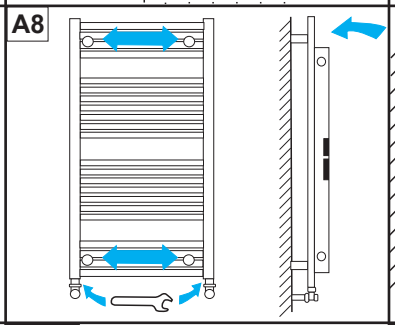


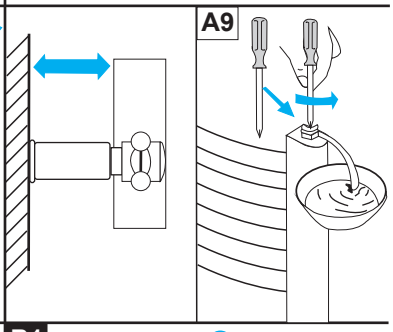


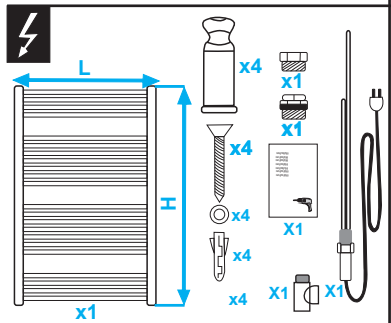


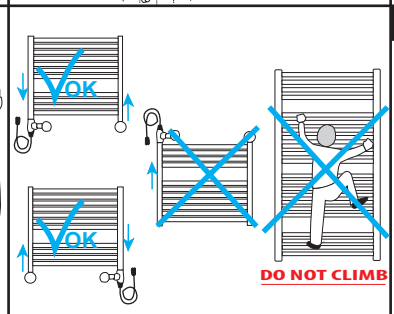


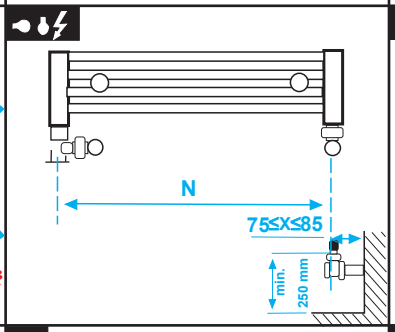


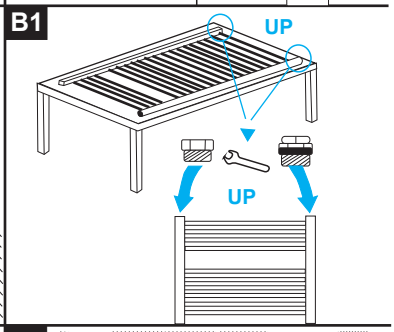


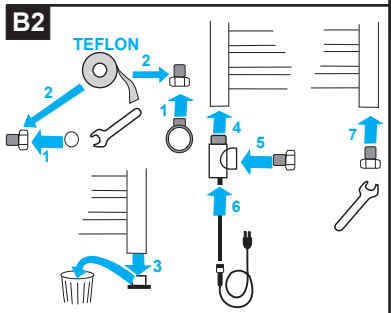


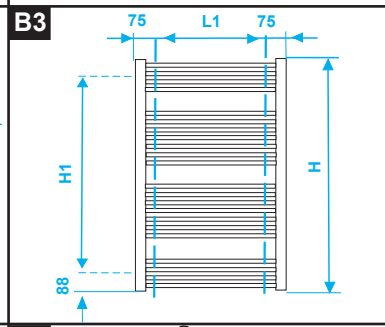


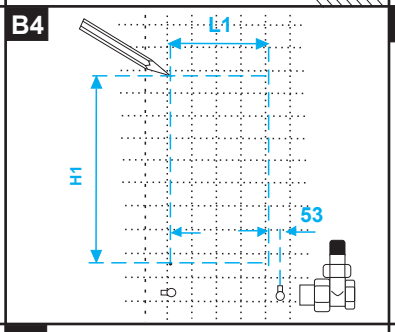


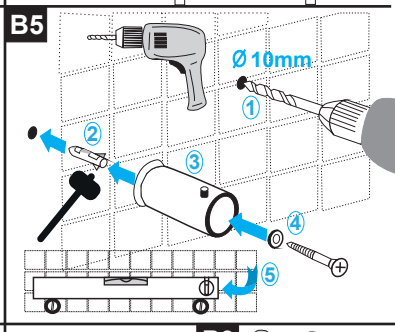


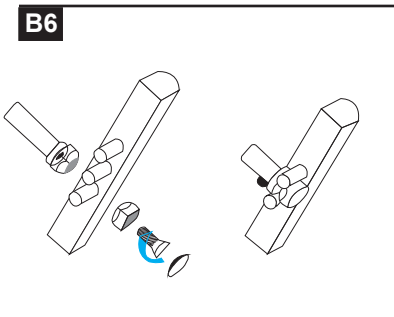


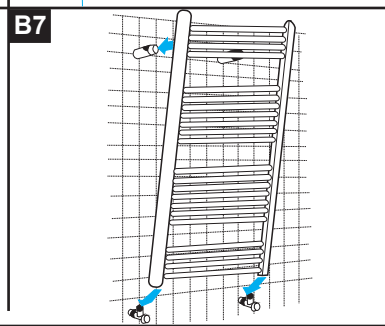


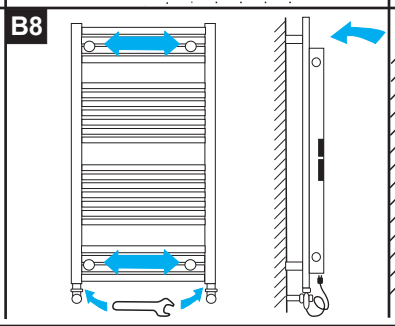


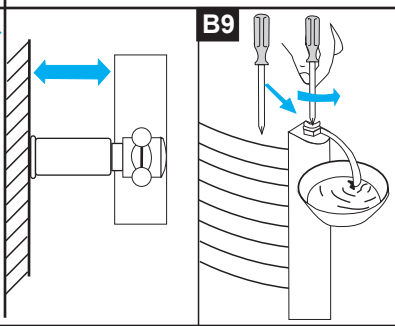


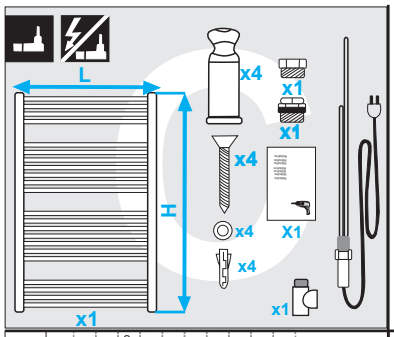


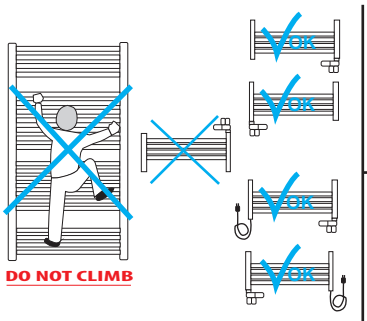


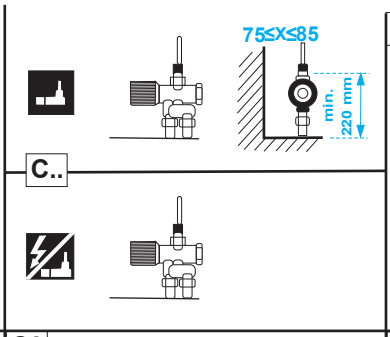


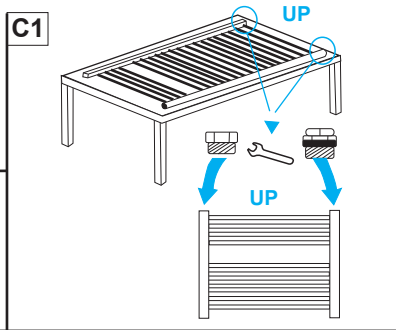


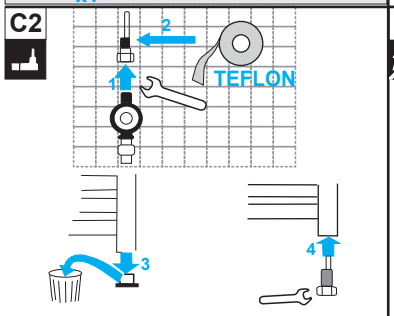


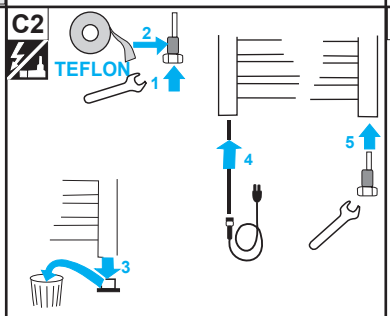


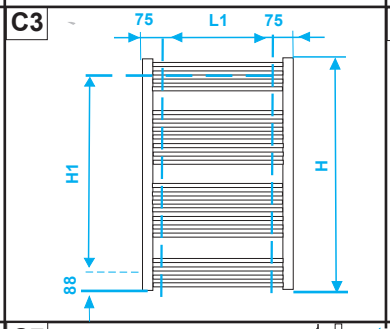


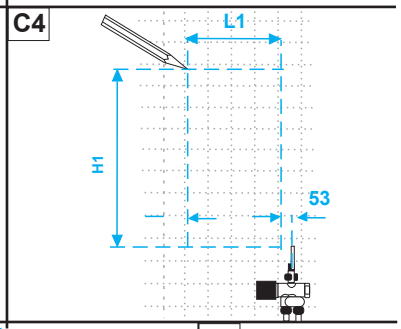


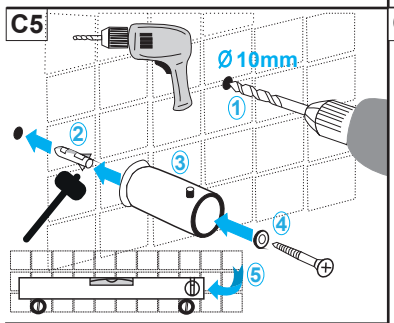


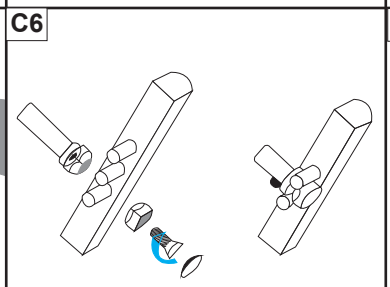


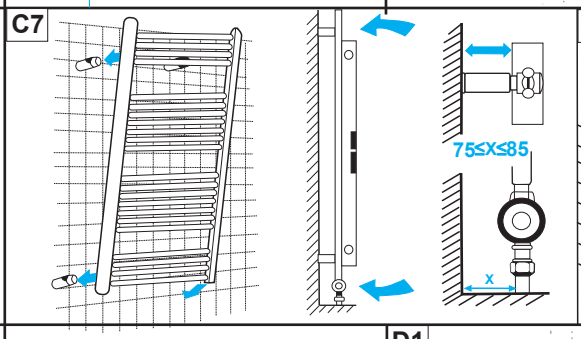


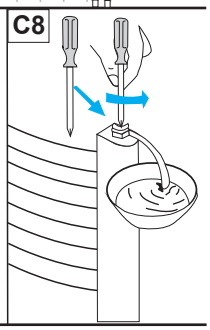


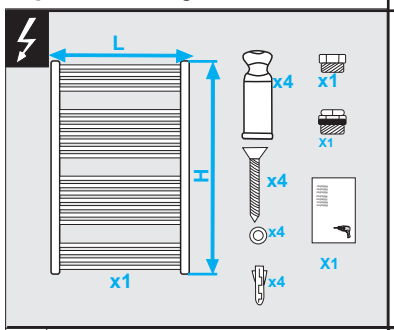


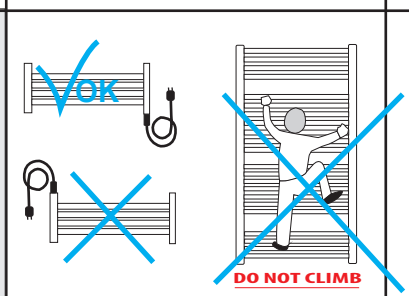


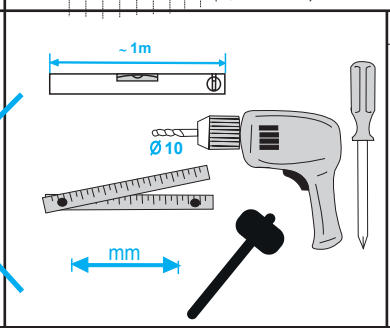


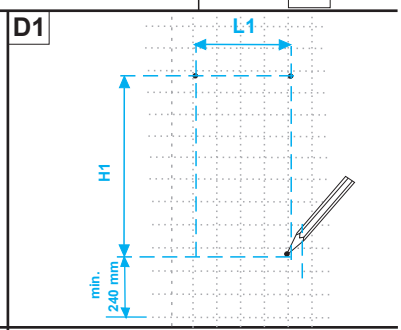

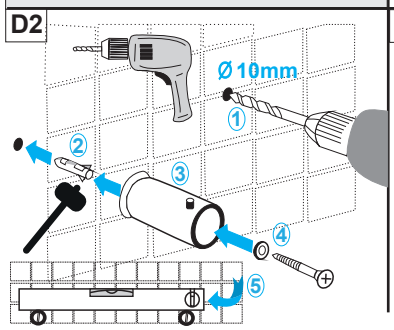

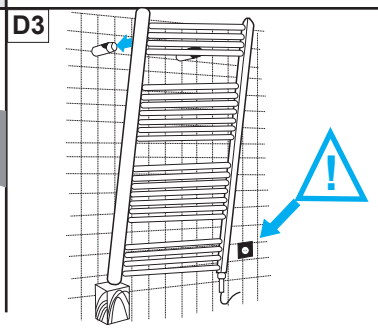

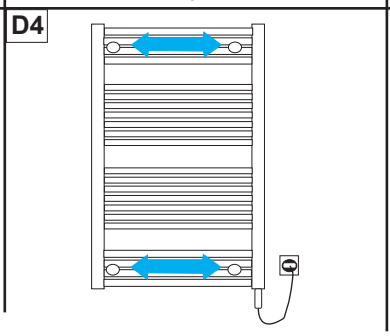

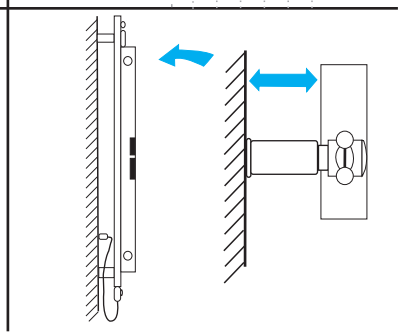

- If a colored radiator is dirty due to transport, warehousing or installation, the surface of the radiator should be cleaned with cold or luke warm water. For persistent marks, a neutral or low alkaline cleaner can be used.
- Further cleaning can be achieved by using soft, non-abrasive cloths or rags.
- The surface temperature of the radiator must not be higher than 25 ºC during the cleaning process.
- The maximum temperature for the detergent is 25 ºC. Do not use steam jet appliances.
- Do not use scraping or abrasive devices. Only use soft cloths for cleaning. Vigorous rubbing is to be avoided.
- Do not use acid or alkaline detergents or wetting agents.
- Do not use organic dissolving agents containing ester, ketone, alcohol, aromatics, glycol ether, halogenated hydrocarbons or other similar products.
- Do not use detergents with unknown compounds.
- Rinse with clear, cold water immediately after cleaning.

H	H1	L	L1	N
607	431	400	250	355
775	599	450	300	405
1217	1041	500	350	455
1469	1293	550	400	505
1856	1680	600	450	555
		750	600	705

