


A120

NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUÇÕES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI

1/12

AVANT DE COMMENCER, SE REPORTER AUX CONSEILS DE MONTAGE EN ANNEXE
BEFORE STARTING, REFER TO THE ASSEMBLING ADVICE IN ANNEX
VOR DER MONTAGE, BEILIEGENDE ANWEISUNGEN BEFOLGEN
PRIMA DI COMINCIARE LEGGETE LE ISTRUZIONI DI MONTAGGIO
ANTES DE COMENÇAR, CONSULTE OS CONSELHOS DE MONTAGEM EM ANEXO
ANTES DE EMPEZAR CONSULTE LOS CONSEJOS PARA EL MONTAJE
PRIJE MONTIRANJA OVOG ARTIKLA, MOLIMO PROU CITE PRILO ZENE UPUTE ZA MONTAZU
BASLAMADAN ONCE, EKTEKI MONTAJ TALIMATLARINI INCELEYINIZ

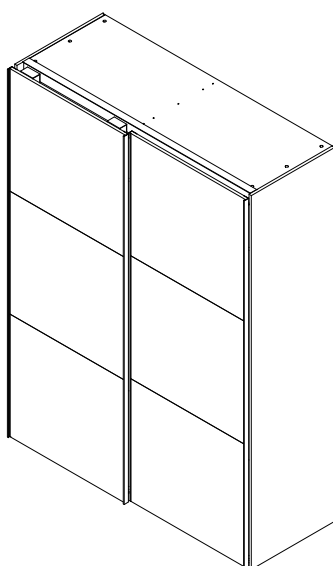

CAJA 1/3	41kg	2060x625x60mm
CAJA 2/3	24kg	1230x560x50mm
CAJA 3/3	26kg	720x680x100mm

MUEBLE MONTADO





2000x1200x615mm

- SERIE ONE -
- ARMARIO 2 PUERTAS CORREDERAS -
- 200 x 120 x 62 -


A120

NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUCOES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI


2/12

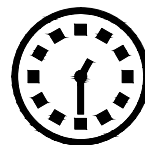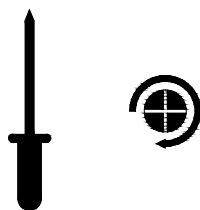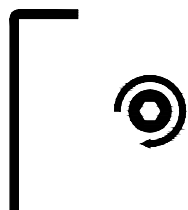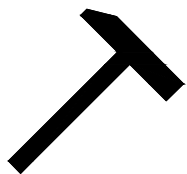

1:30 h.

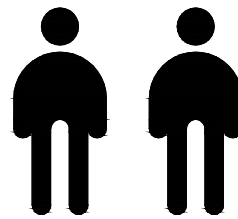


















01 1168 x 525 x 16 - x1	02 1168 x 539 x 16 - x1
03 1168 x 50 x 16 - x1	04 2000 x 542 x 16 - x1
05 1916 x 520 x 16 - x1	06 2000 x 570 x 16 - x1
07 576 x 518 x 16 - x2	08 655 x 601 x 16 - x2
09 655 x 601 x 16 - x2	10 601 x 657 x 16 - x2
11 1934 x 296 x 3 - x4	12

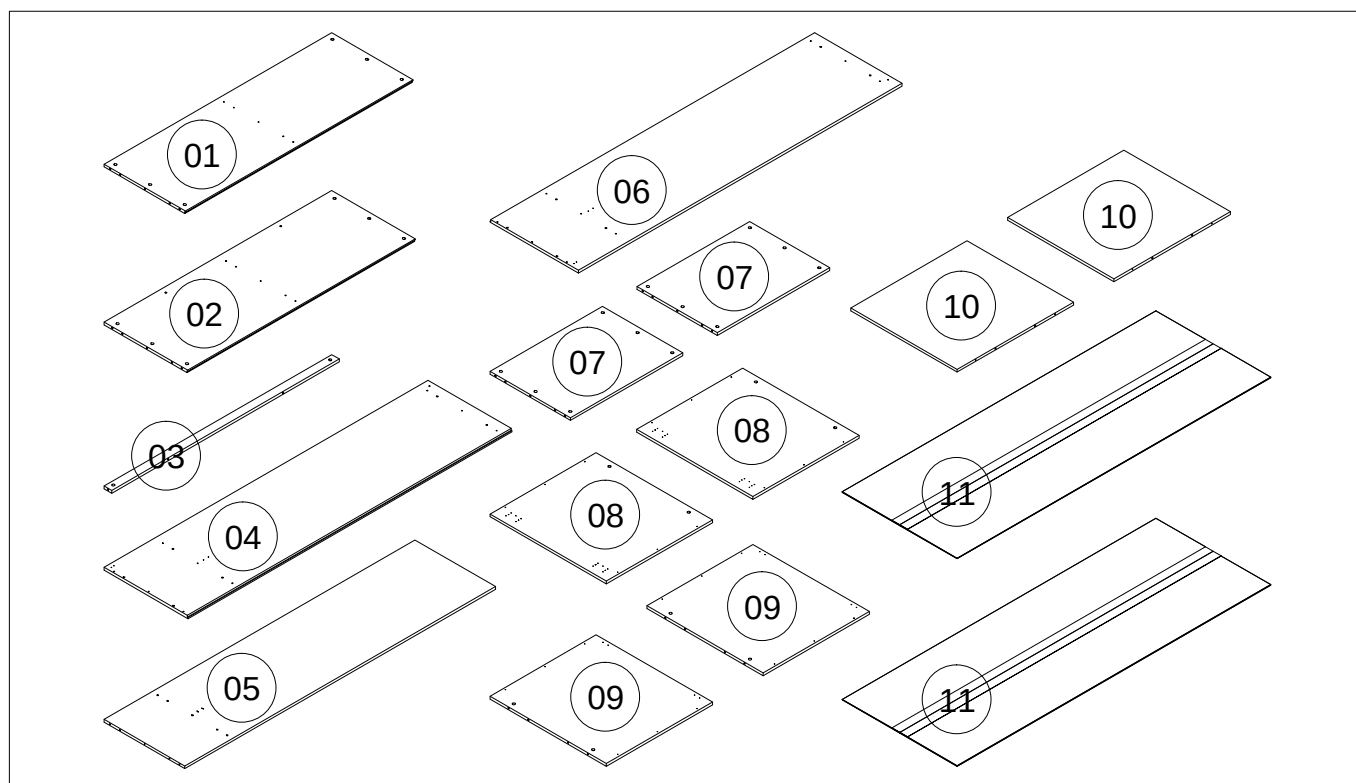

A120

NOTICE DE MONTAGE
 ASSEMBLING INSTRUCTIONS
 MONTAGEANLEITUNG
 ISTRUZIONI DI MONTAGGIO
 INSTRUCOES DE MONTAJE
 UPUTE ZA MONTAZU
 MONTAJ TALIMATI

3/12


A	 8 x 30	x27	B		x28
C		x34	D	 5 x 50	x10
E		x32	F	 4 x 16	x80
G	 4 x 25	x04	H	 EURO	x28
I		x04	J		x02
K		x06	L		x02
M		x01	N		x02
O		x02	P		x02
Q		x05	R		x03
S		x02	T		x01
U		x01	W		x02
X		x02	Y		x02
Z		x01	AB		x01
AC		x01	AD		x03

A120

NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUCOES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI

4/12

1

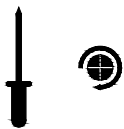




G  x04

F  x08

B  x20

I  x04

L  x02

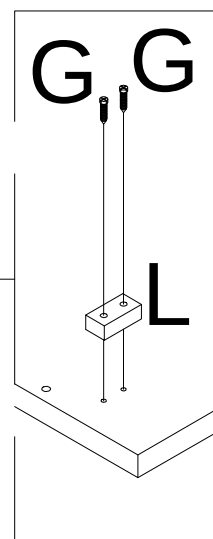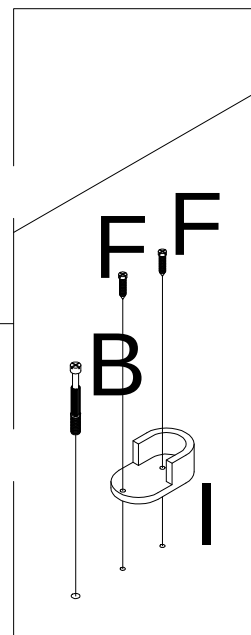
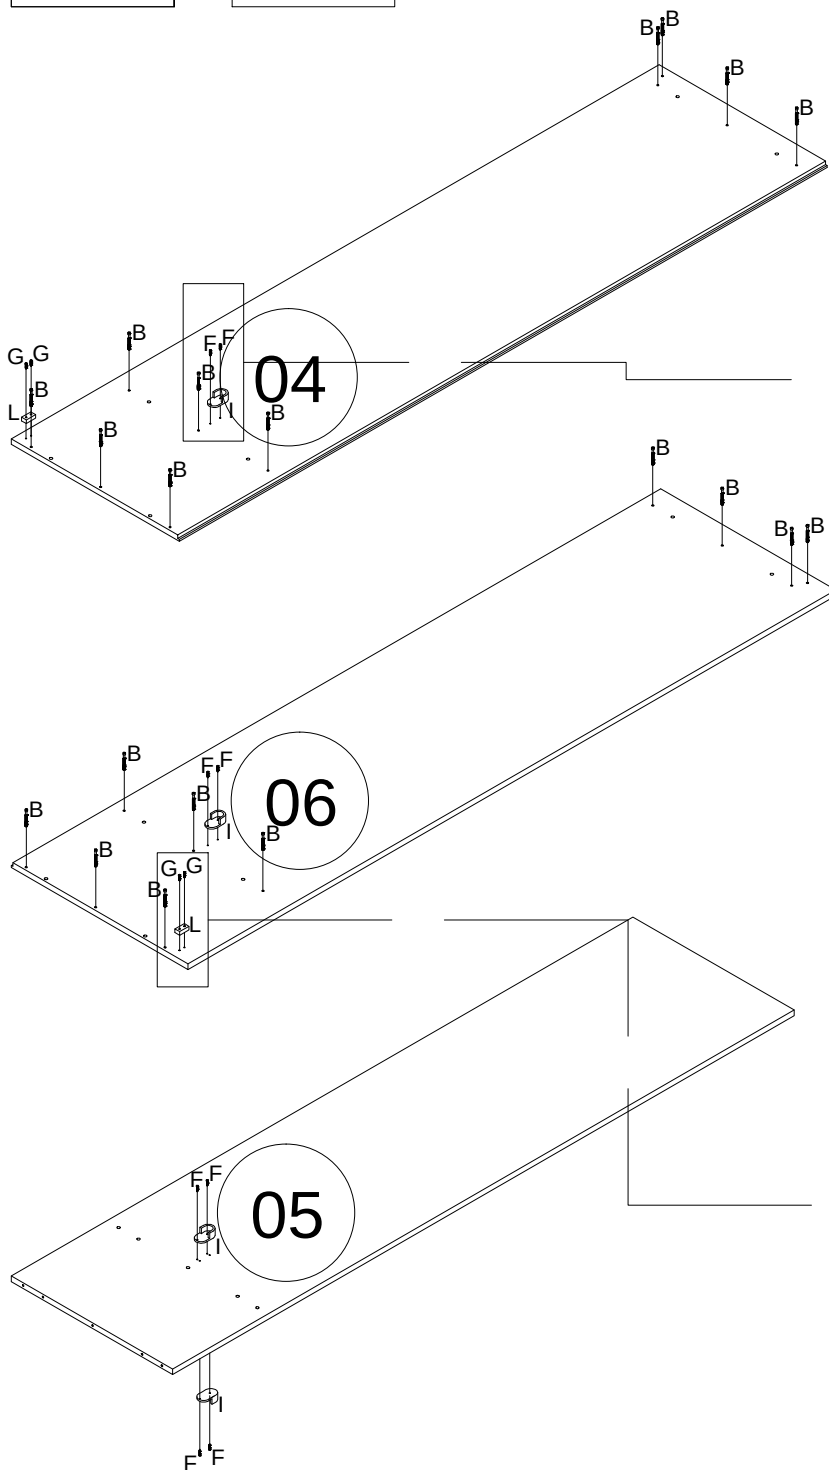


A120








NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUCOES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI

5/12

2

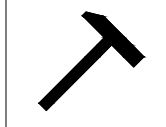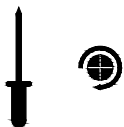

A x26
B x08
C x26

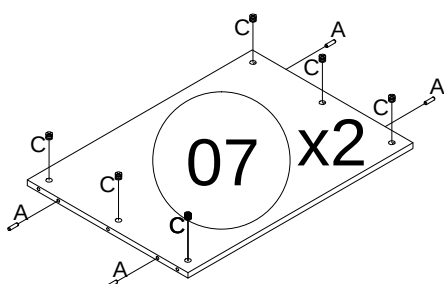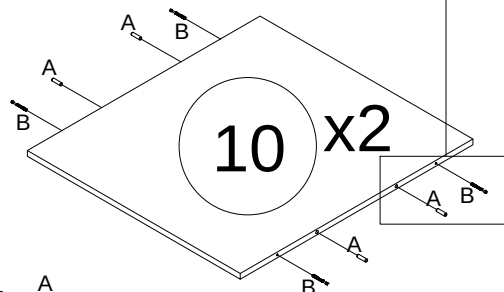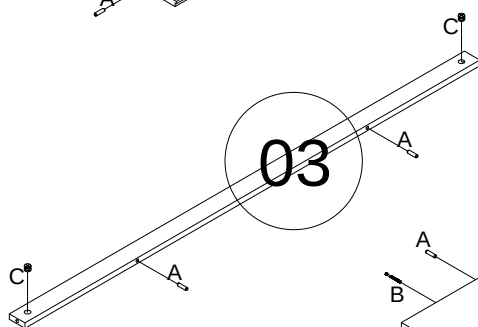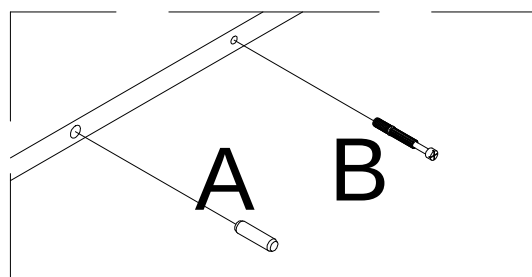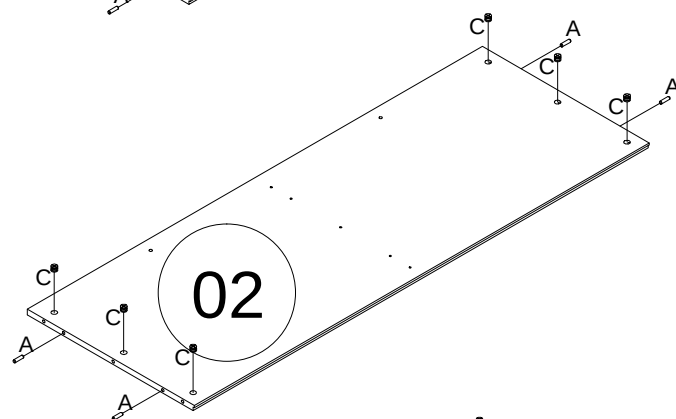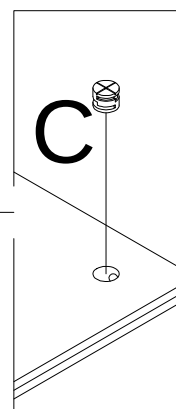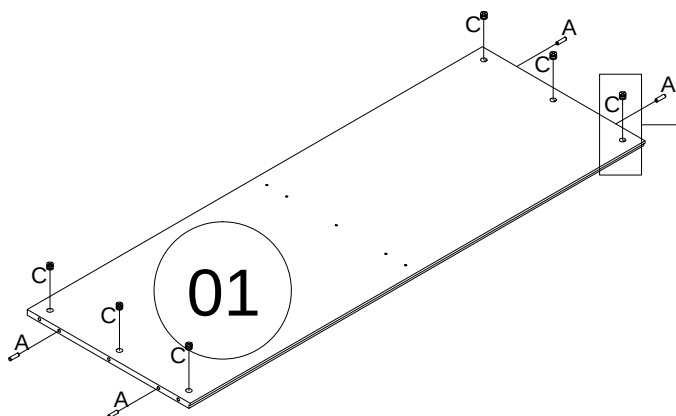


A120

NOTICE DE MONTAGE
 ASSEMBLING INSTRUCTIONS
 MONTAGEANLEITUNG
 ISTRUZIONI DI MONTAGGIO
 INSTRUCOES DE MONTAJE
 UPUTE ZA MONTAZU
 MONTAJ TALIMATI

6/12












3

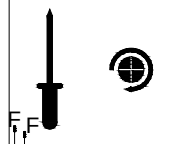

X x02

U x01
 T x01
 W x02

Y x02
 F x24
 C x08

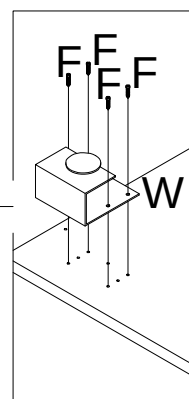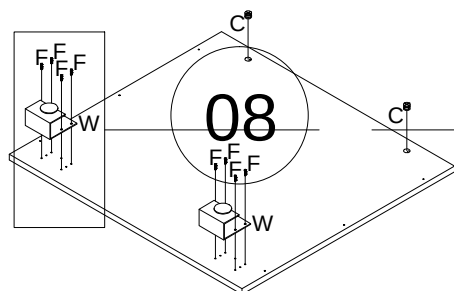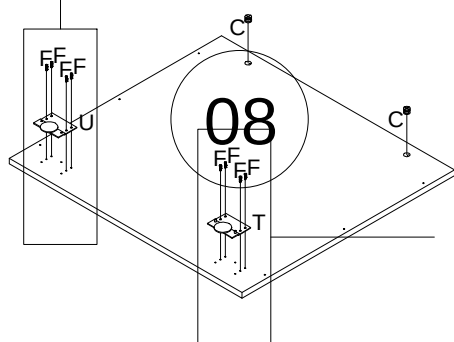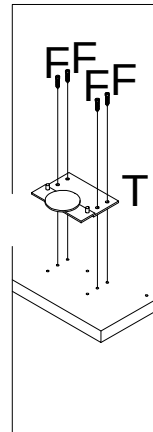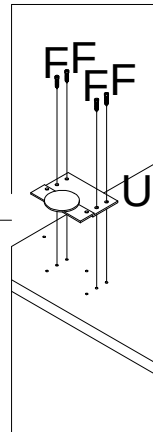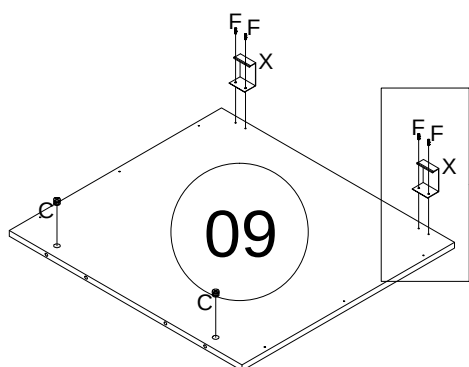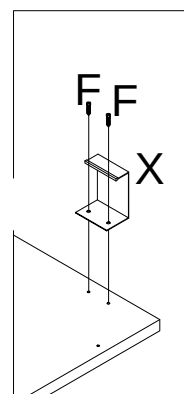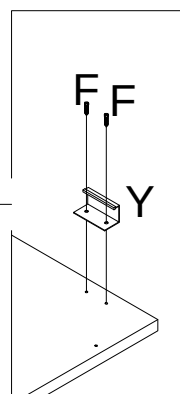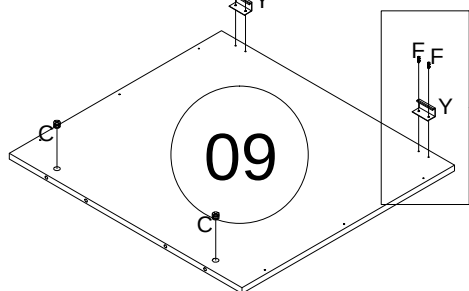



A120

NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUÇÕES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI



7/12

4



D x10
5x10

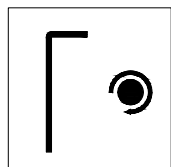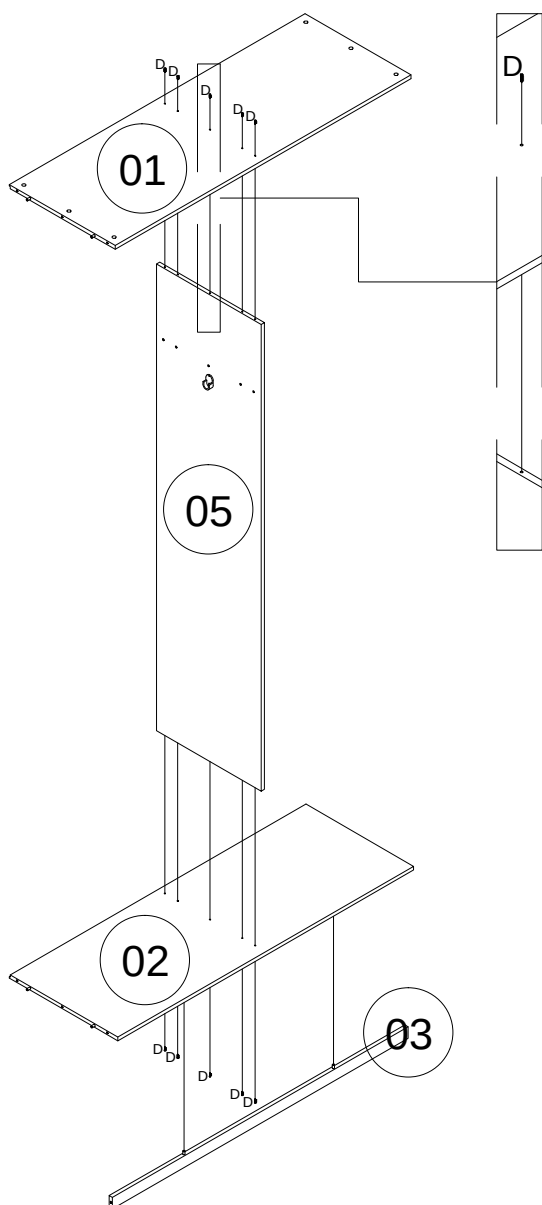

5

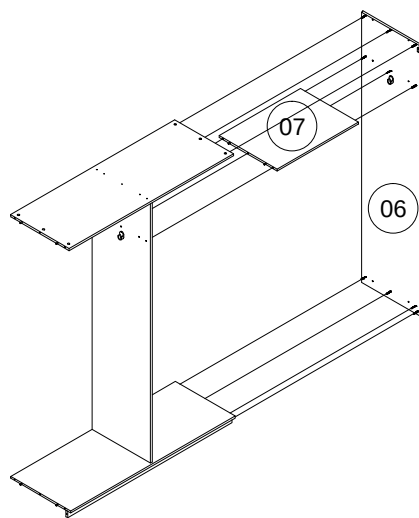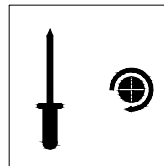

6

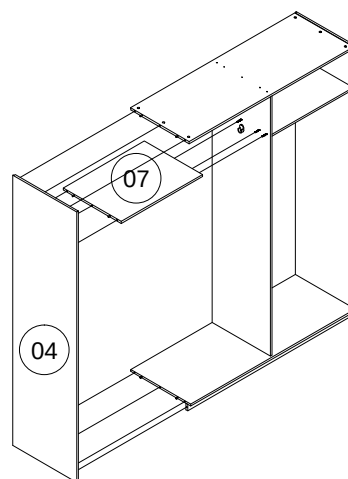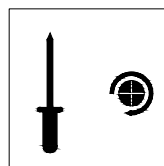


A120

NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUÇÕES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI

8/12



7

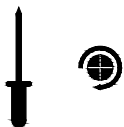

E  x22

F  x05

Q  x05

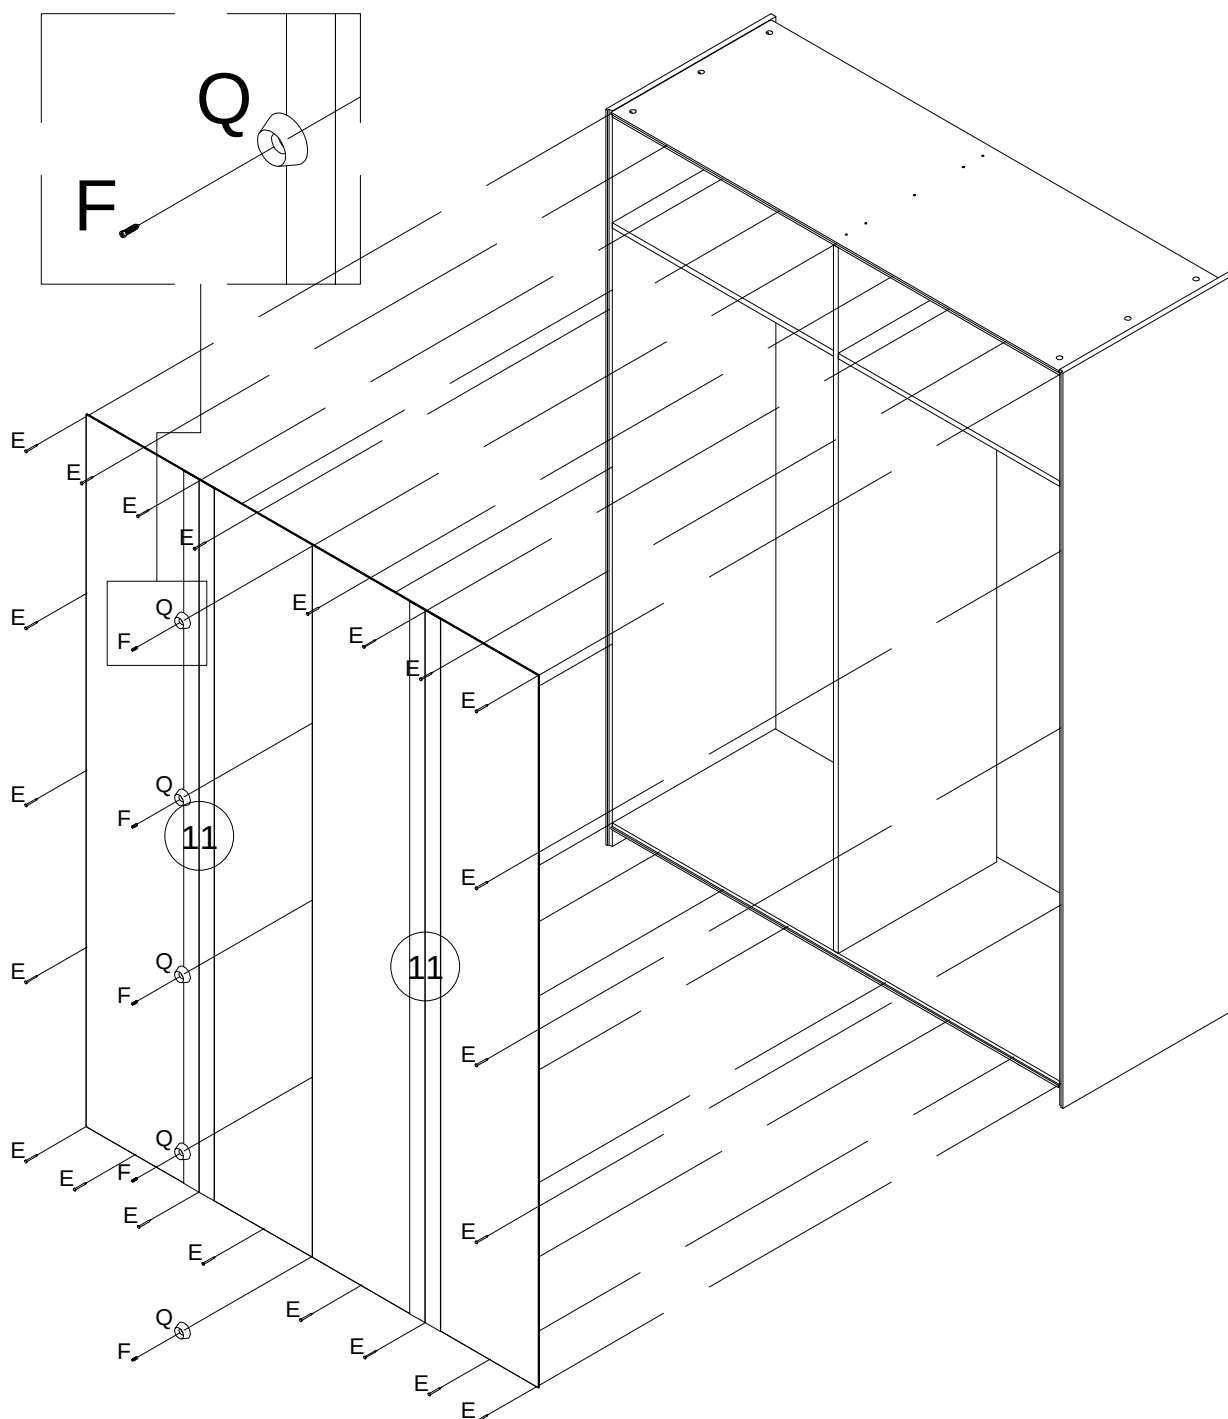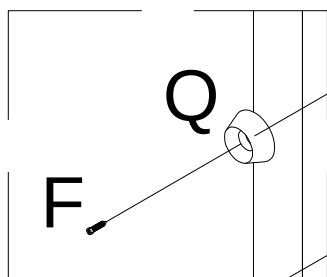


A120

NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUCOES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI


9/12

8

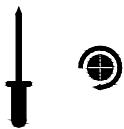

N  x02
Z  x01
AB  x01

P  x02
F  x14
O  x02


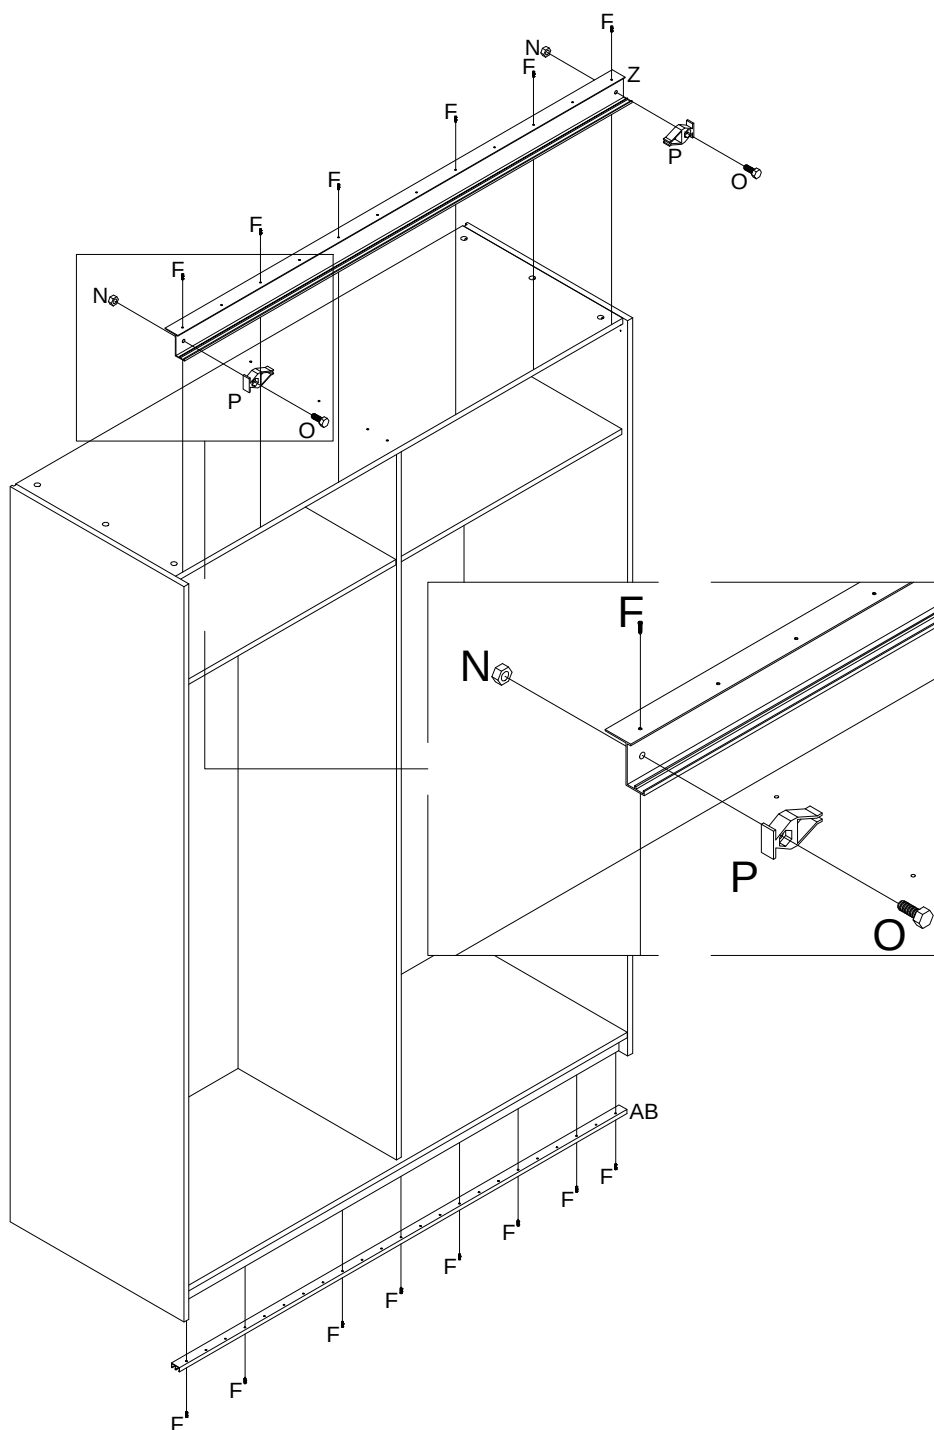


A120


NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUCOES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI

10/12


9

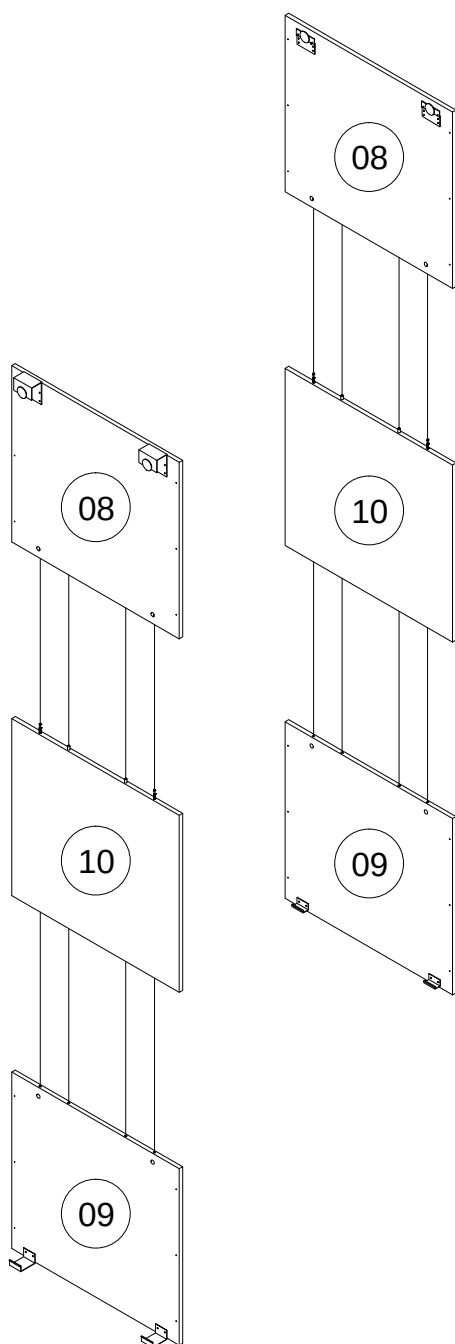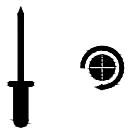

10

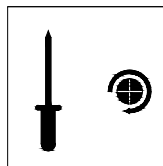

F  x24
AD  x03
AC  x01

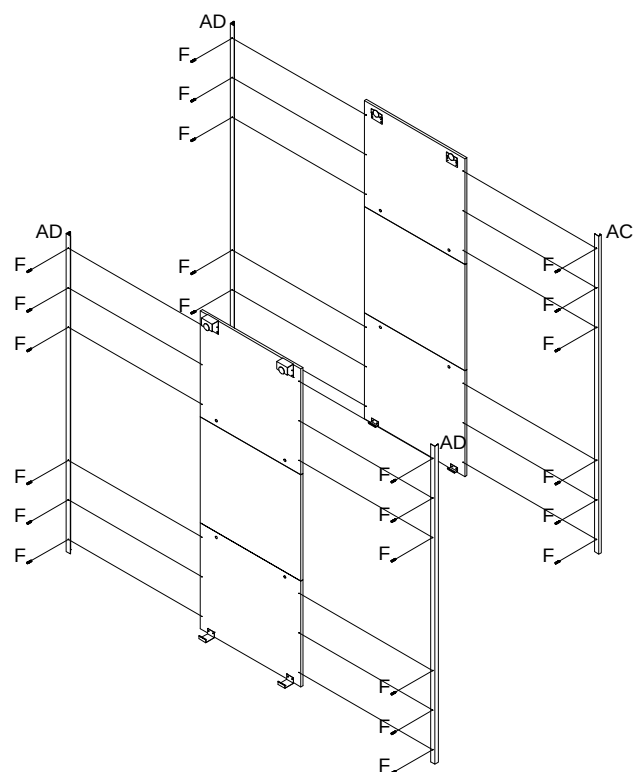


¡ATENCIÓN!
COMENZAR MONTAJE
POR EXTREMOS
EXTERIORES

A120

NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUCOES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI

11/12

11

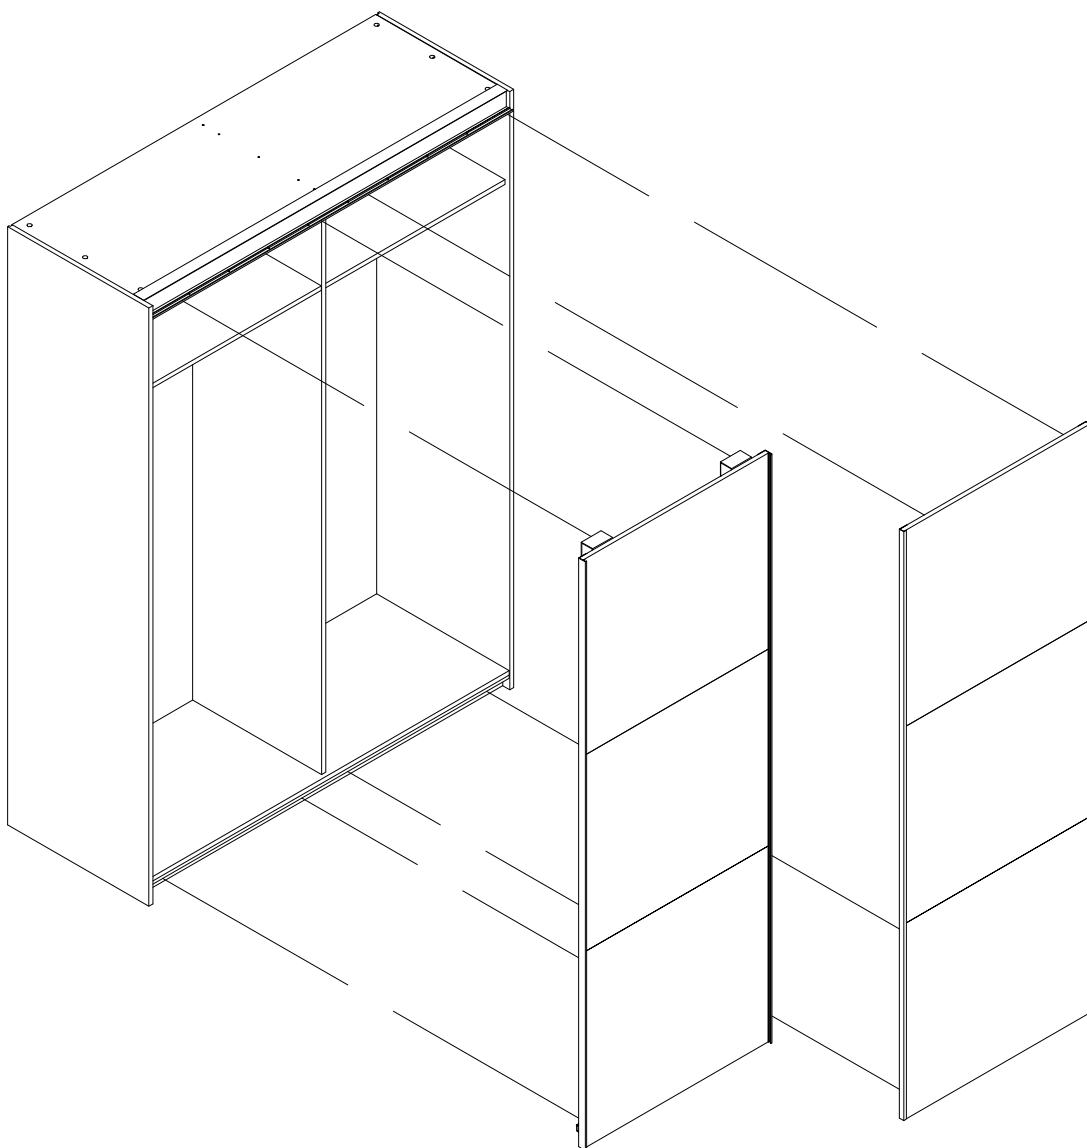

A120

NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MONTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO
INSTRUÇÕES DE MONTAJE
UPUTE ZA MONTAZU
MONTAJ TALIMATI

12/12

12

