

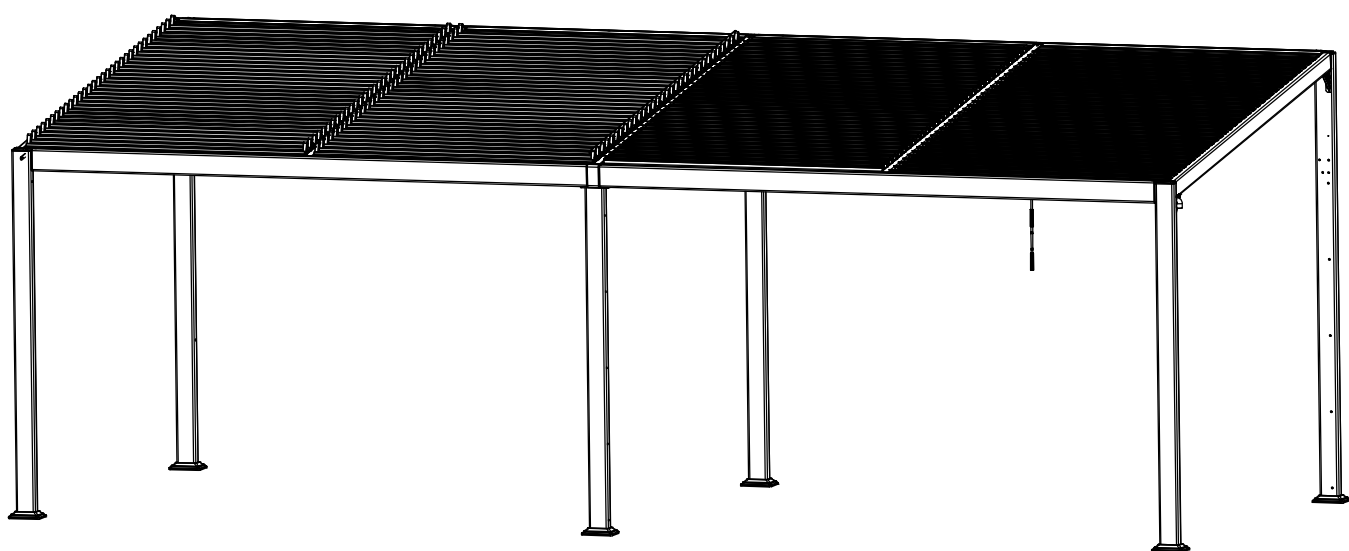












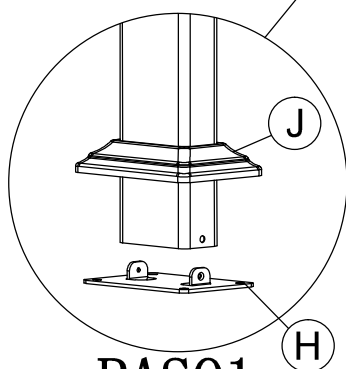


REF	PARTE	PIEZA		CANT	DIM
	A1			1	
	A2			1	
	A3			1	
	A4			1	
	A5			1	
	A6			1	
	B1			1	
	B2			1	
	B3			1	
	C1			1	
	C2			1	
	D			3	
	E1			1	
	E2			1	
	E3			1	

REF	PARTE	PIEZA	CANT	DIM
	F	 	128	
	G	 	4	
	H		6	
	J		6	
	K		1	
	L		2	
	M1		1	
	M2		1	
	N1		1	
	N2		1	
	P		4	
	Q	 M8*20	54+2	
	Q1	 M8*25	20+1	
	Q2	 M6*20	30+2	
	Q3	 M4*18	4	


PASO 01

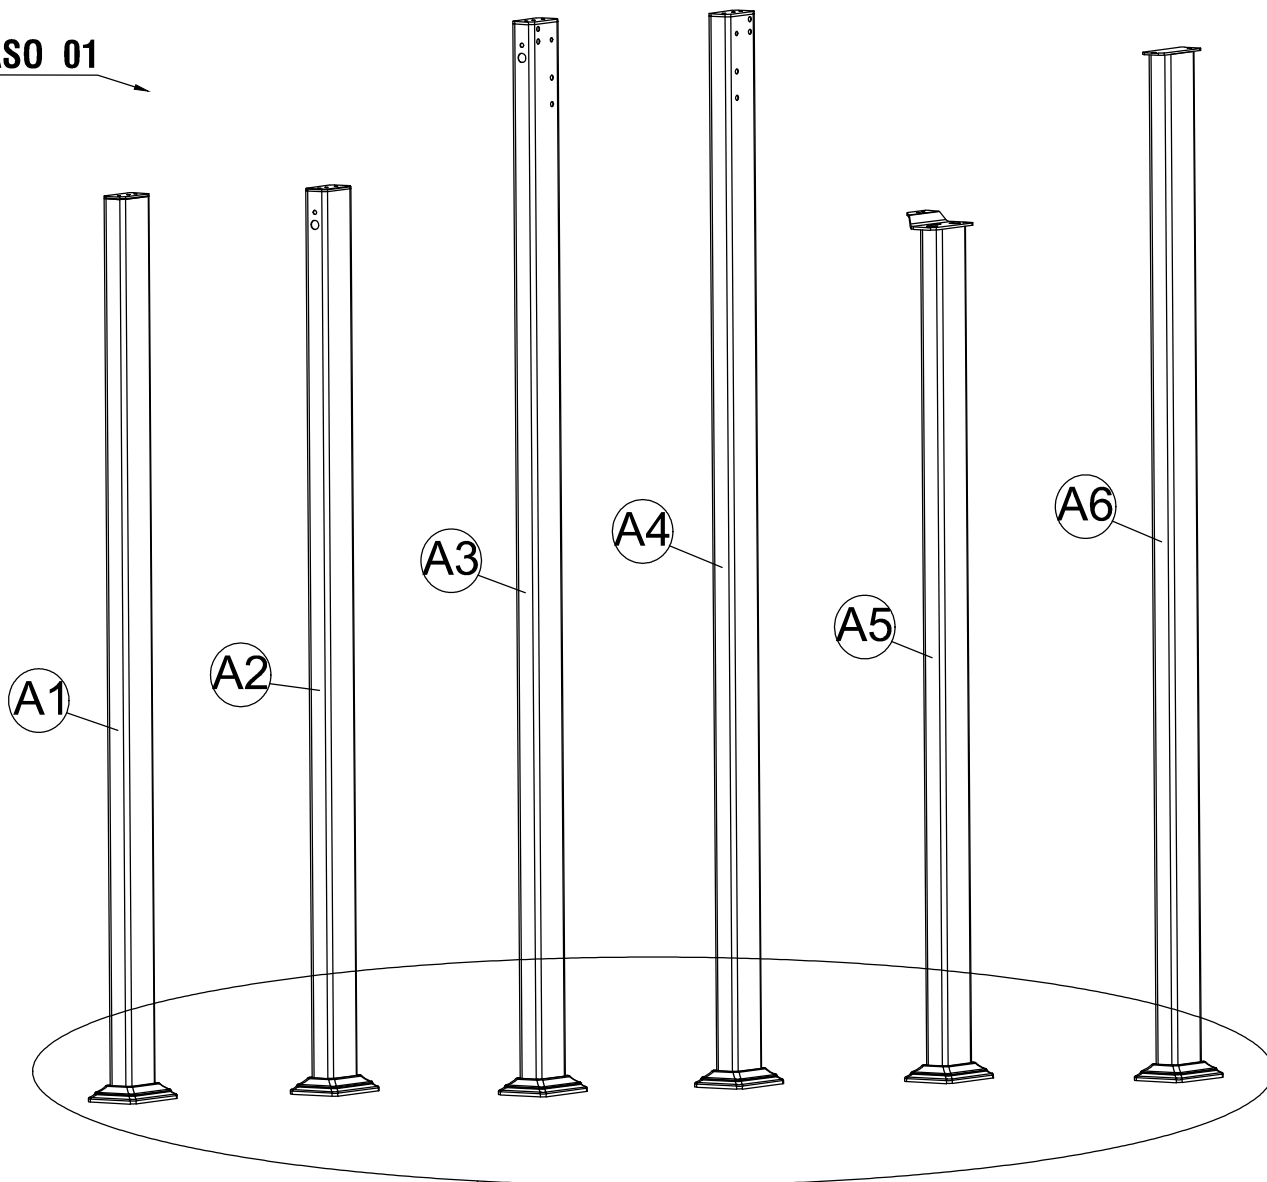



PASO1

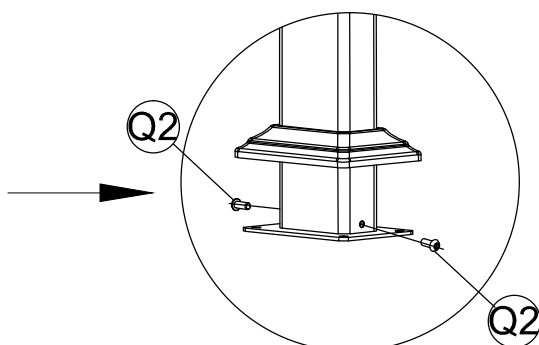



PASO2

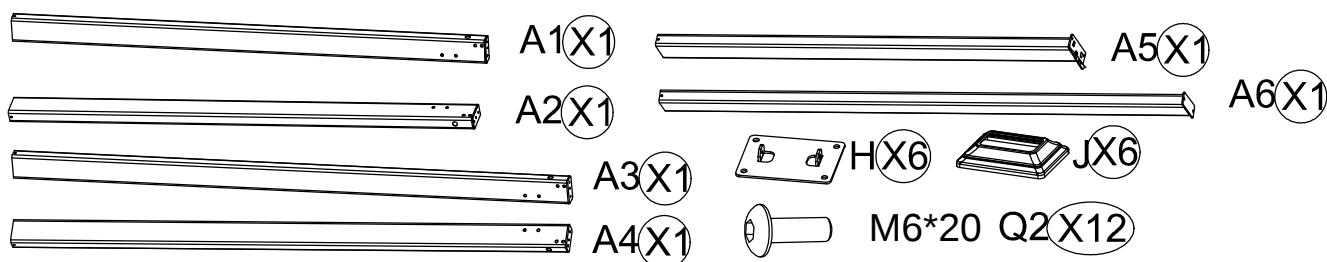



PASO 02

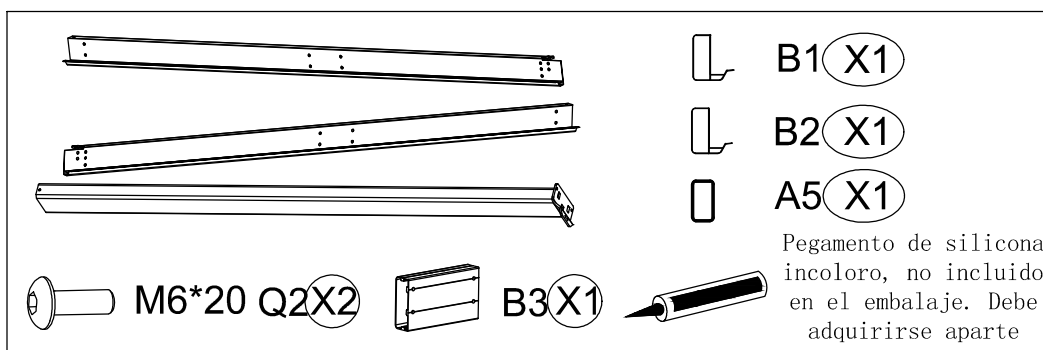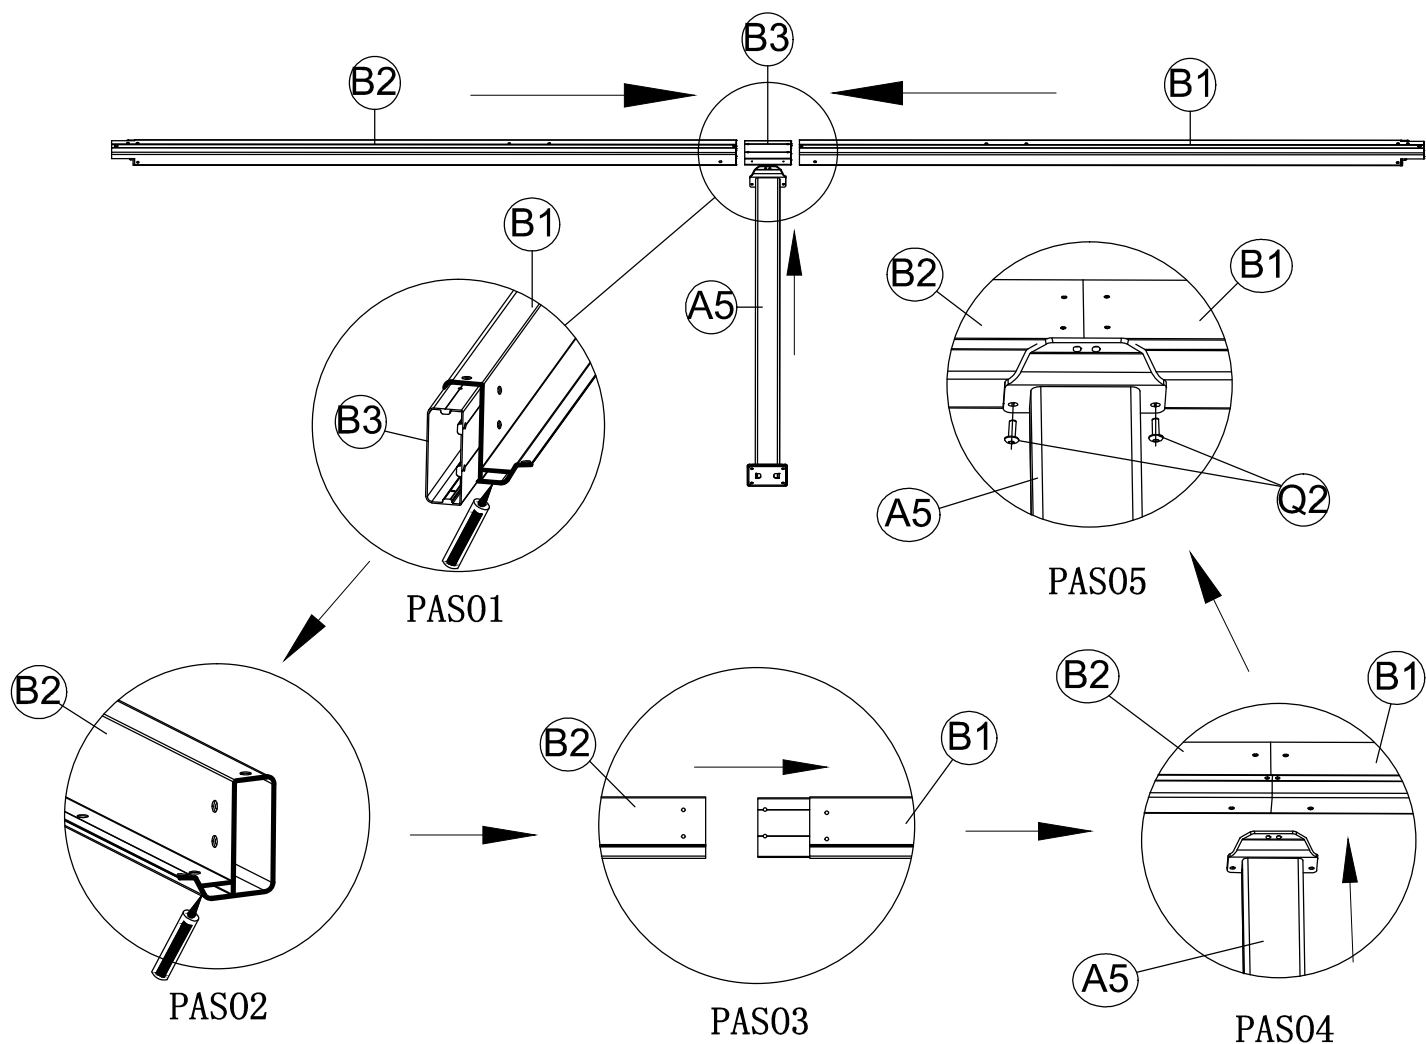



PASO 03

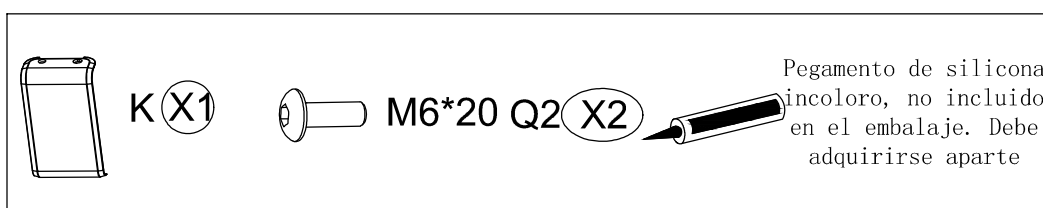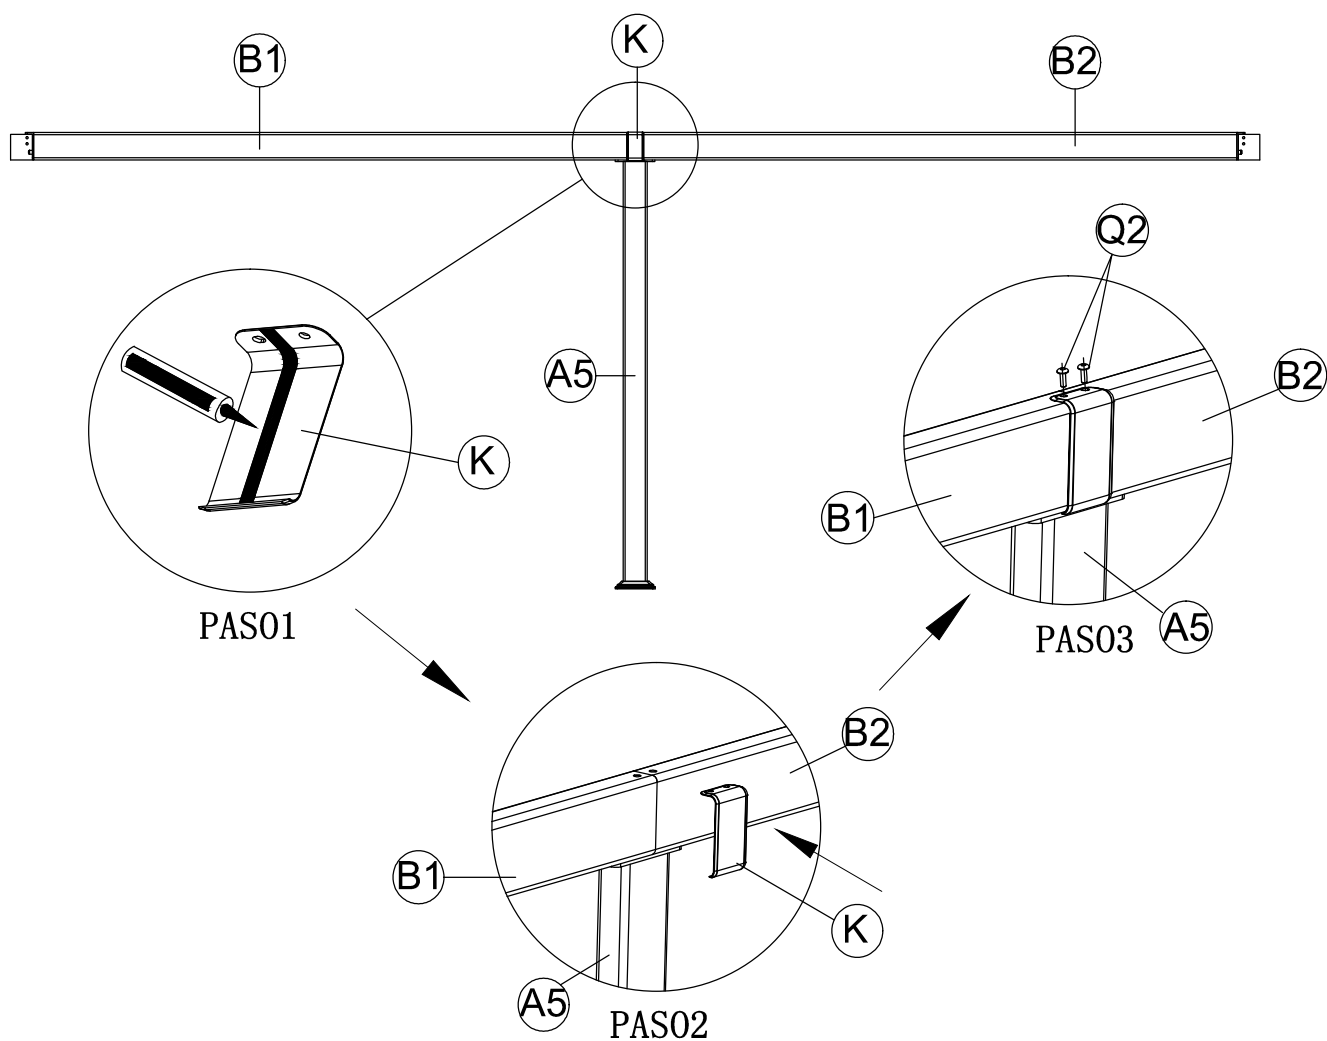


PASO 04

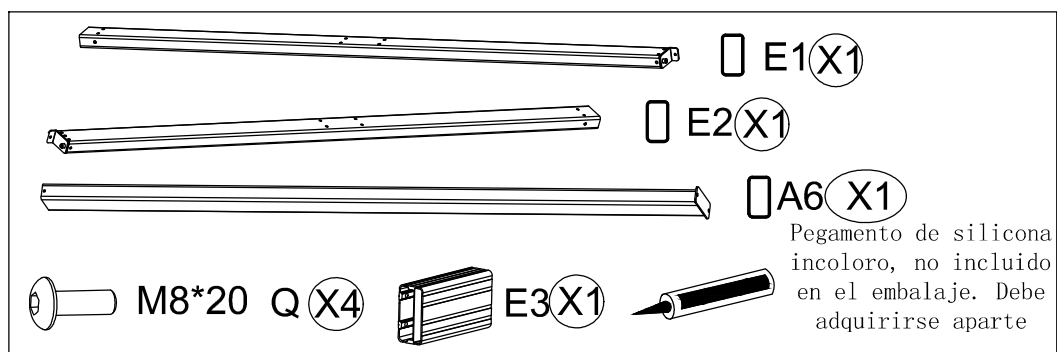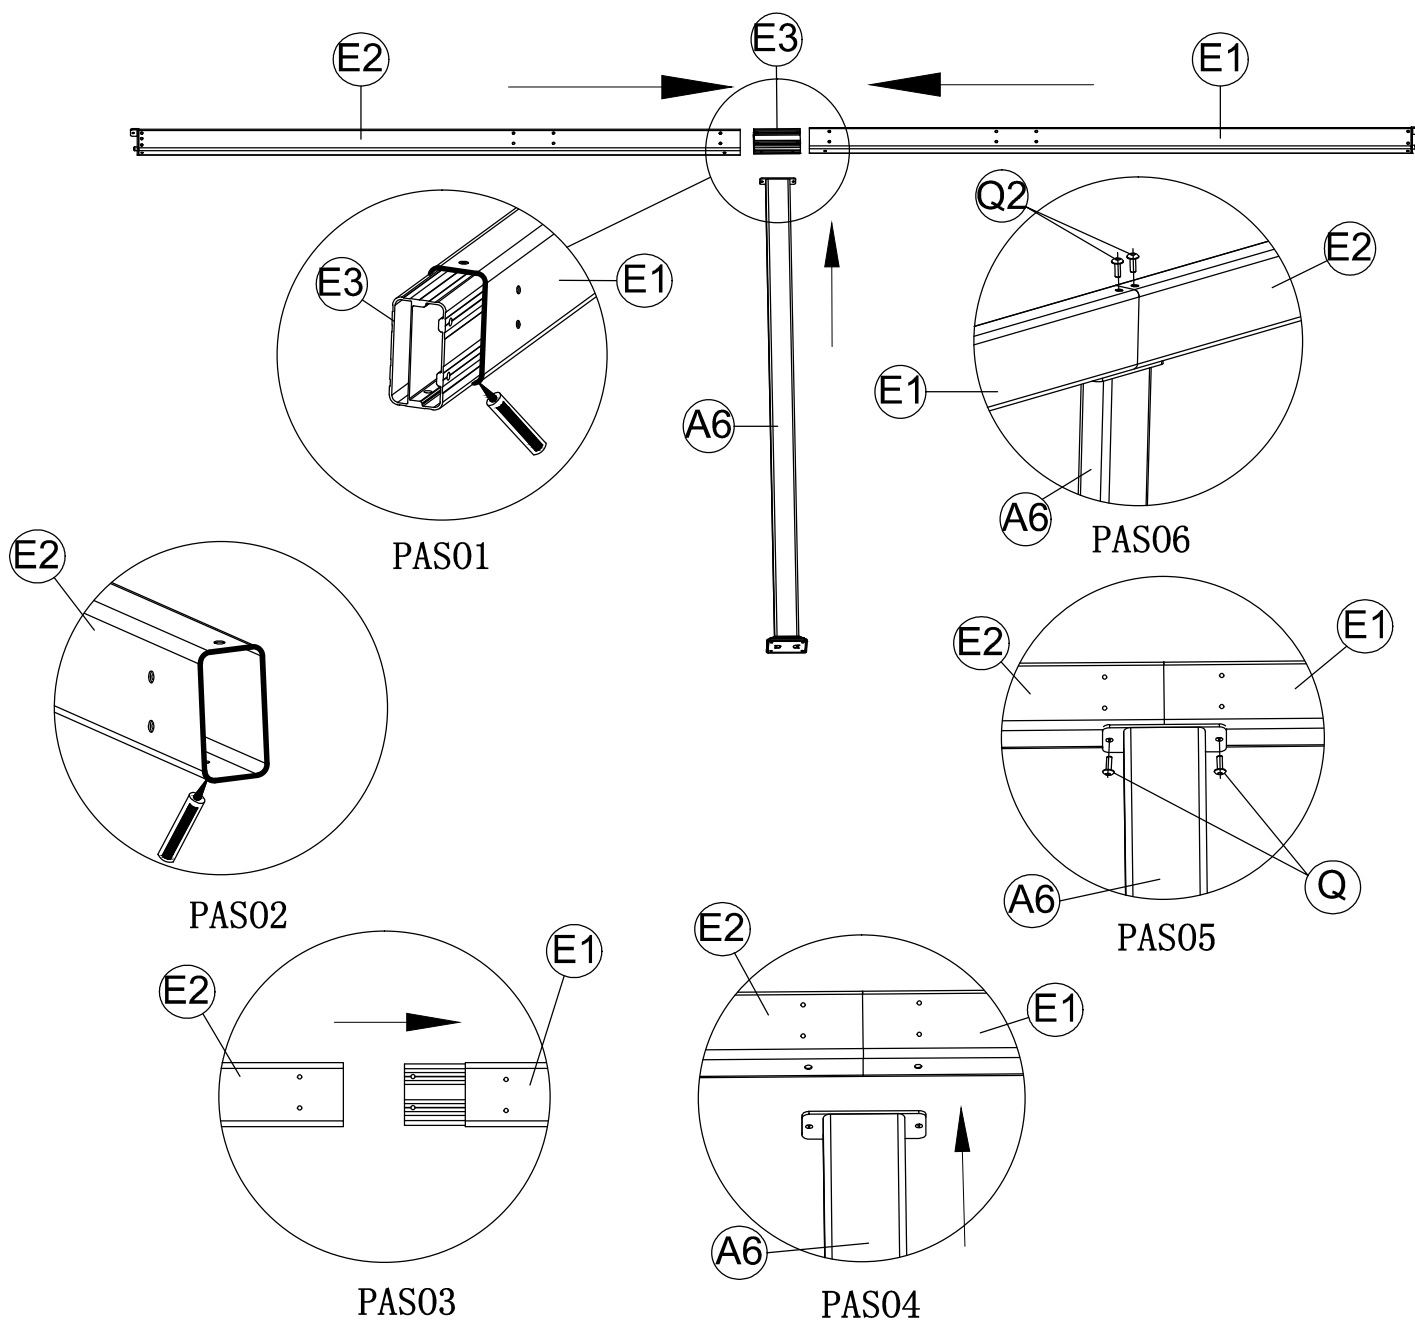

PASO 05

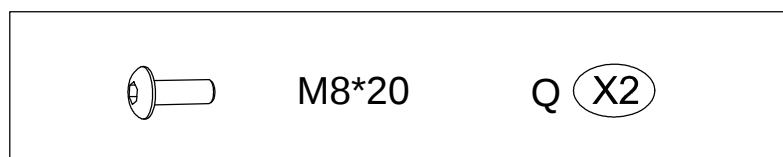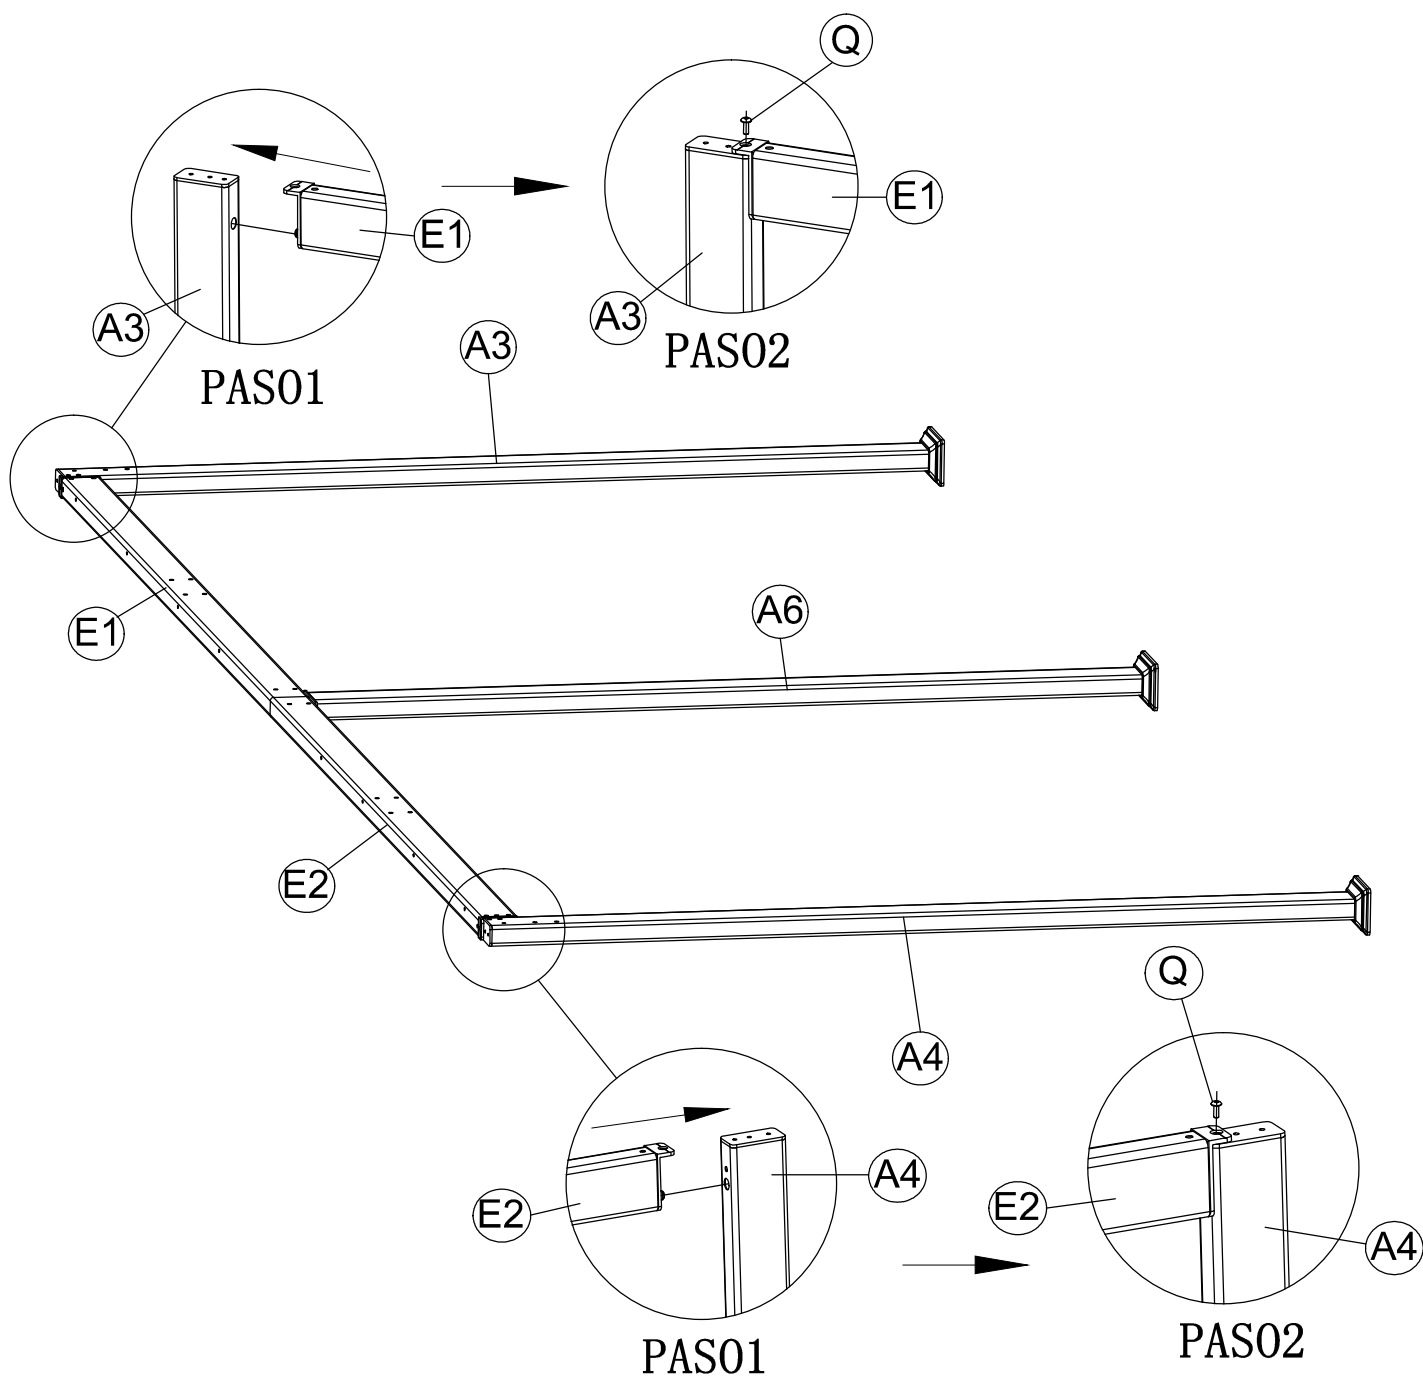



PASO 06

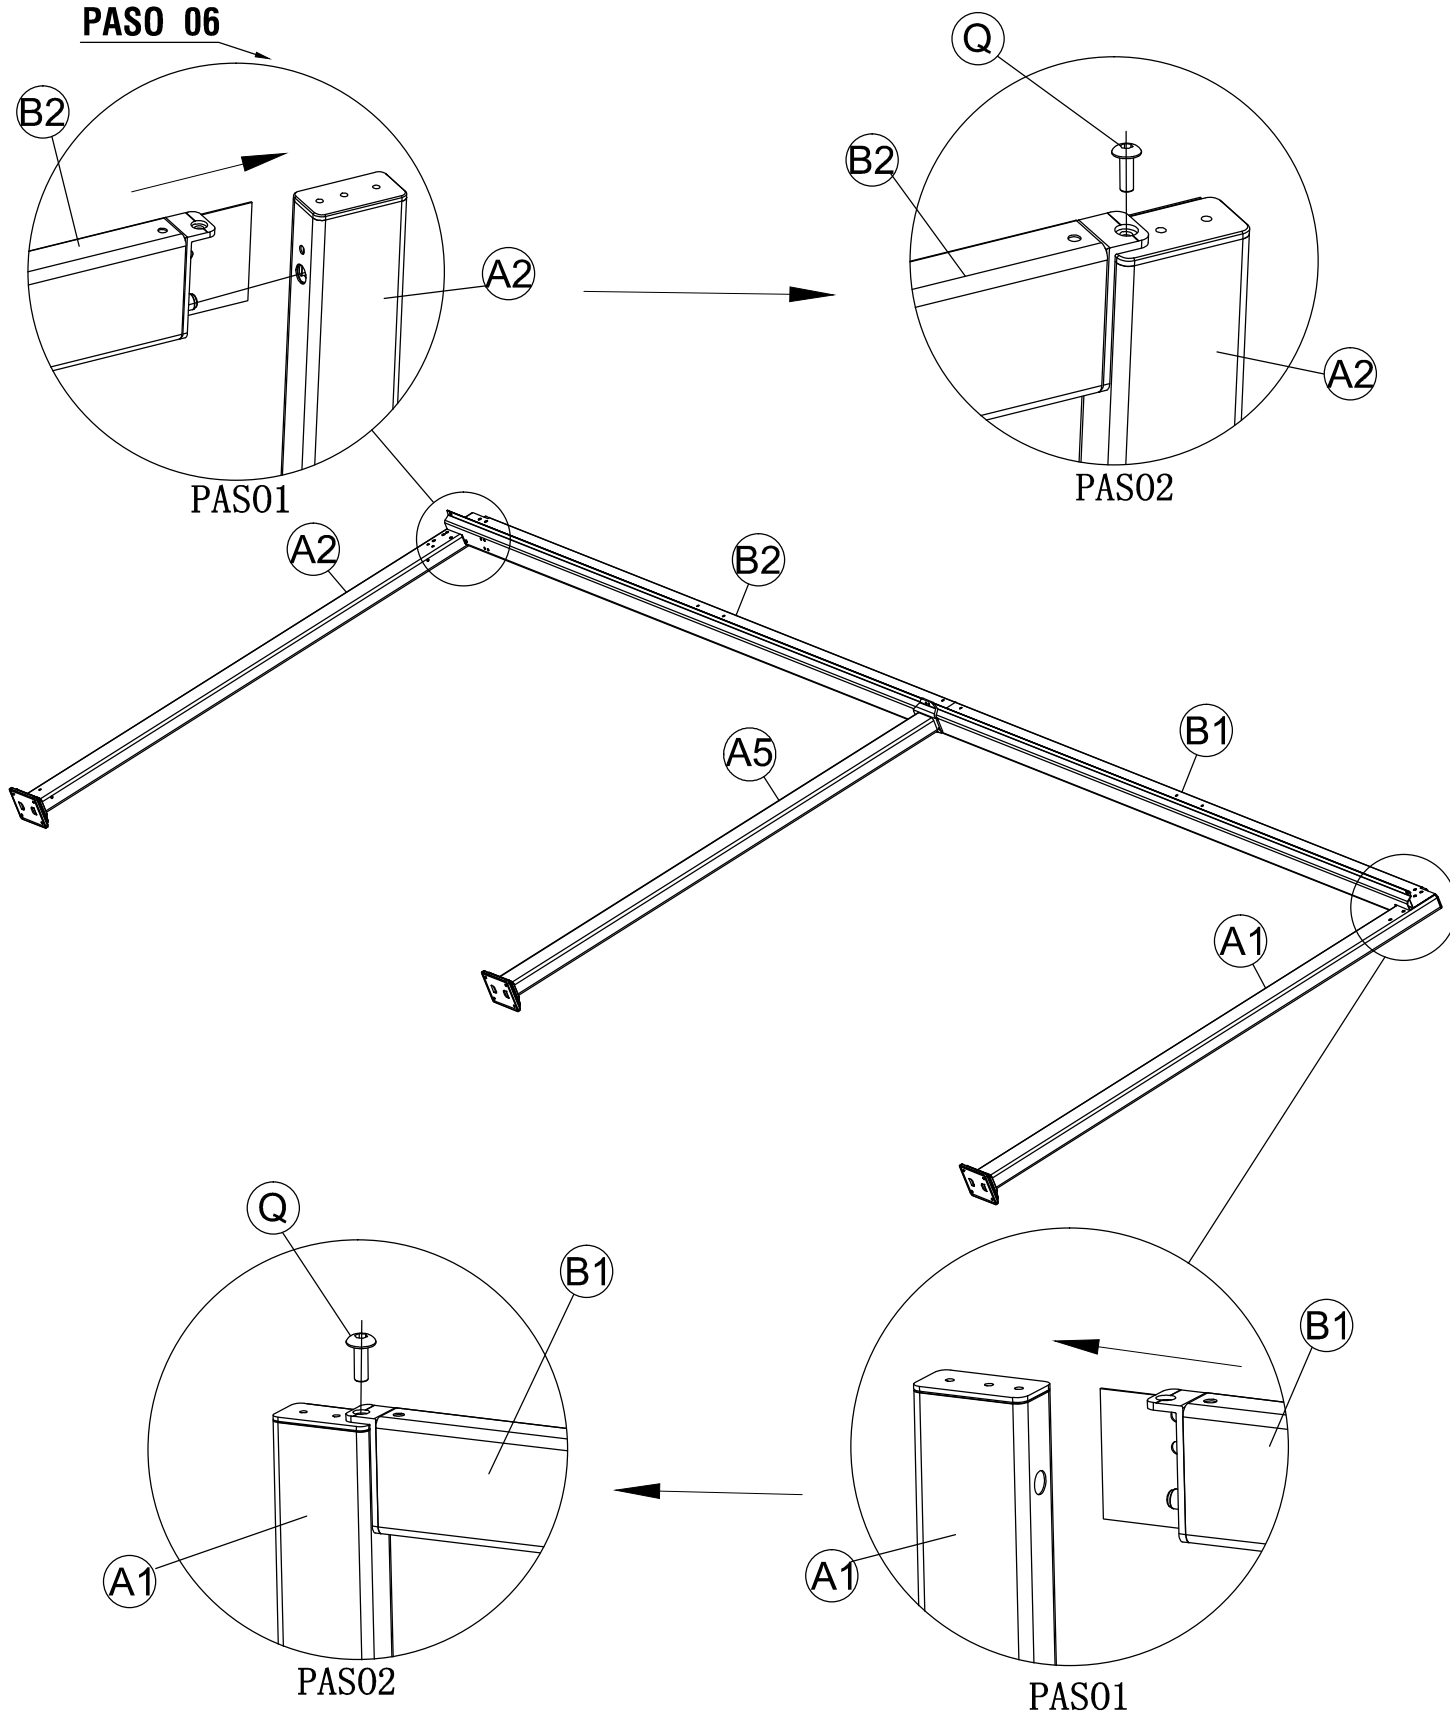



M8*20

Q (X2)



PASO 07

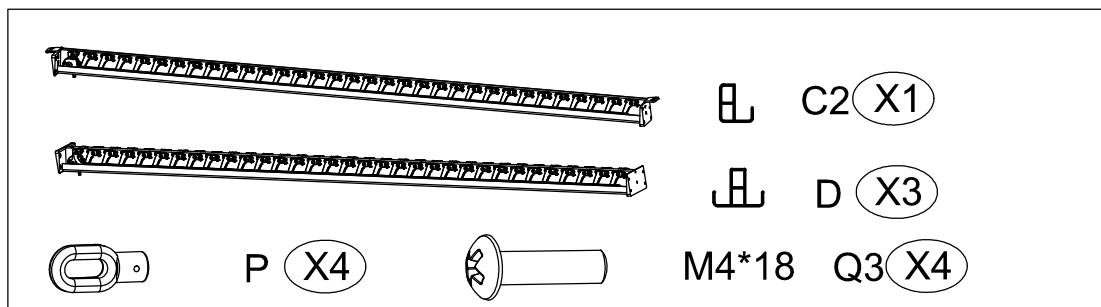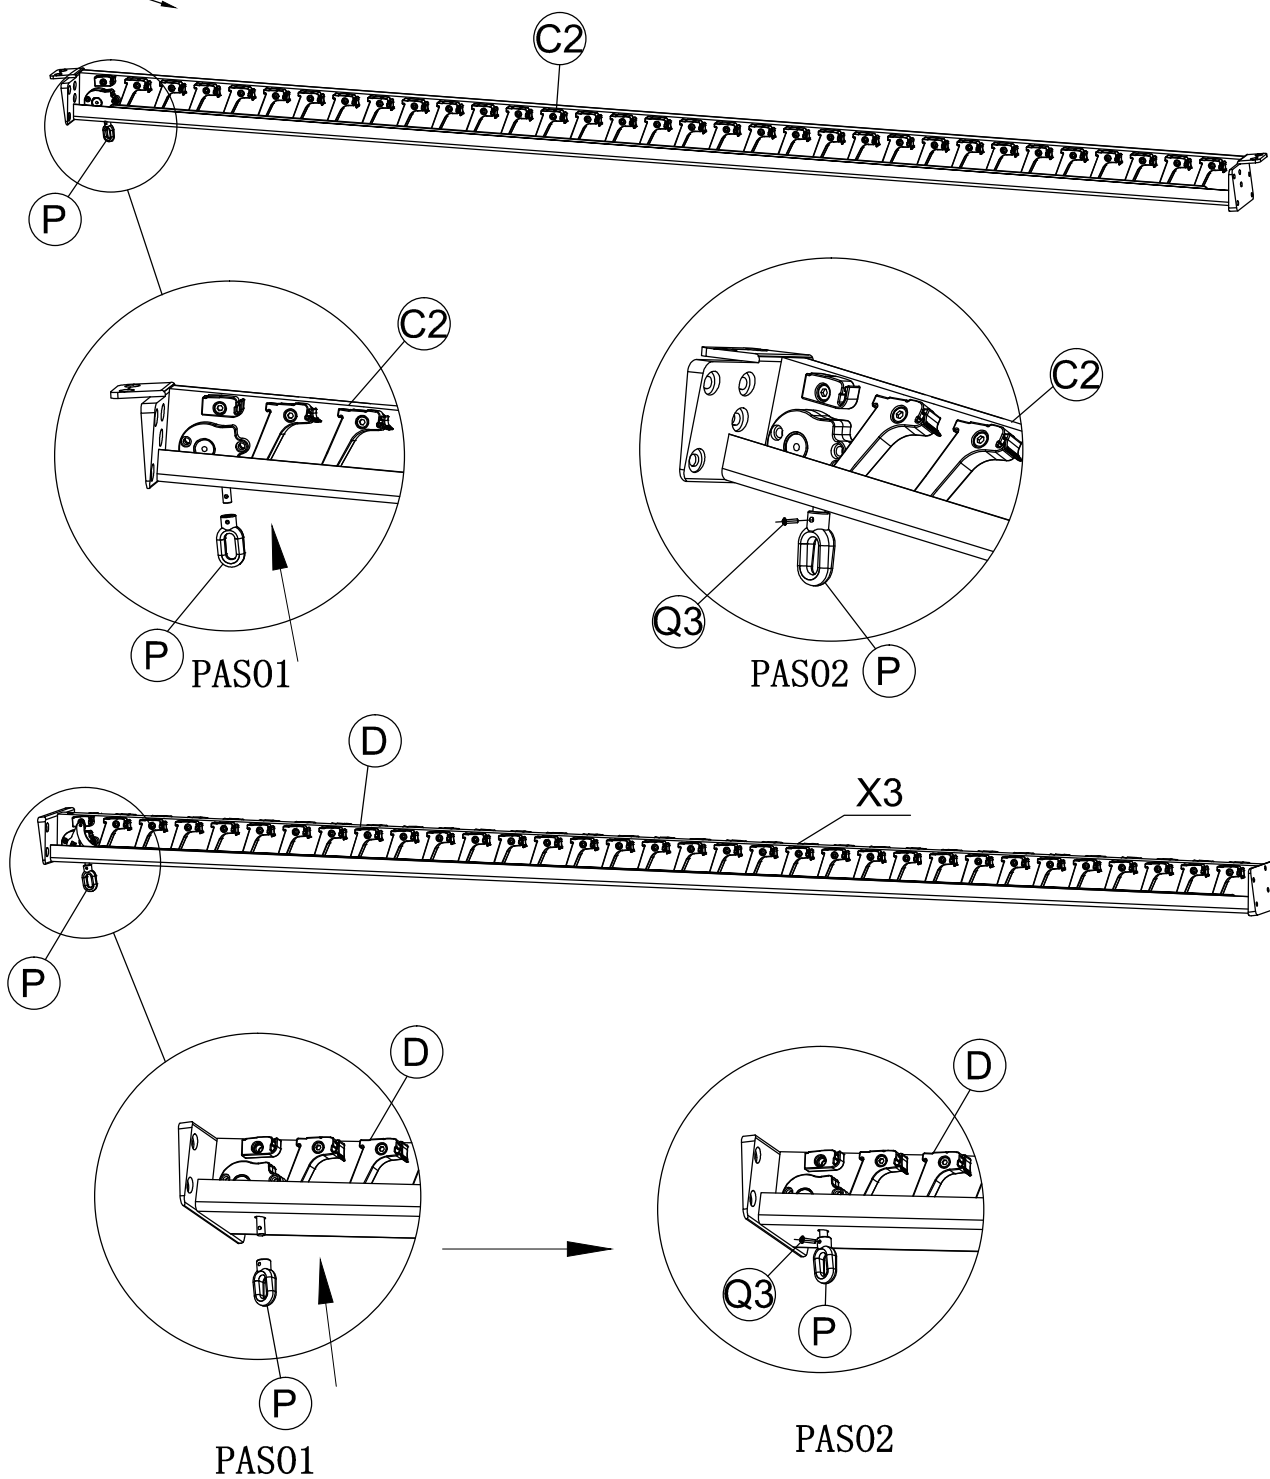


PASO 08

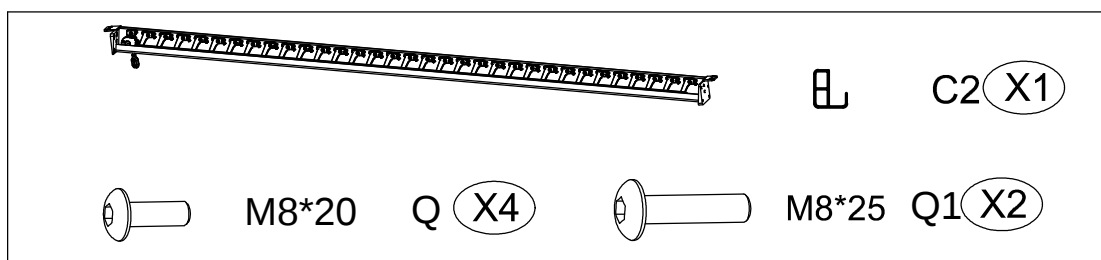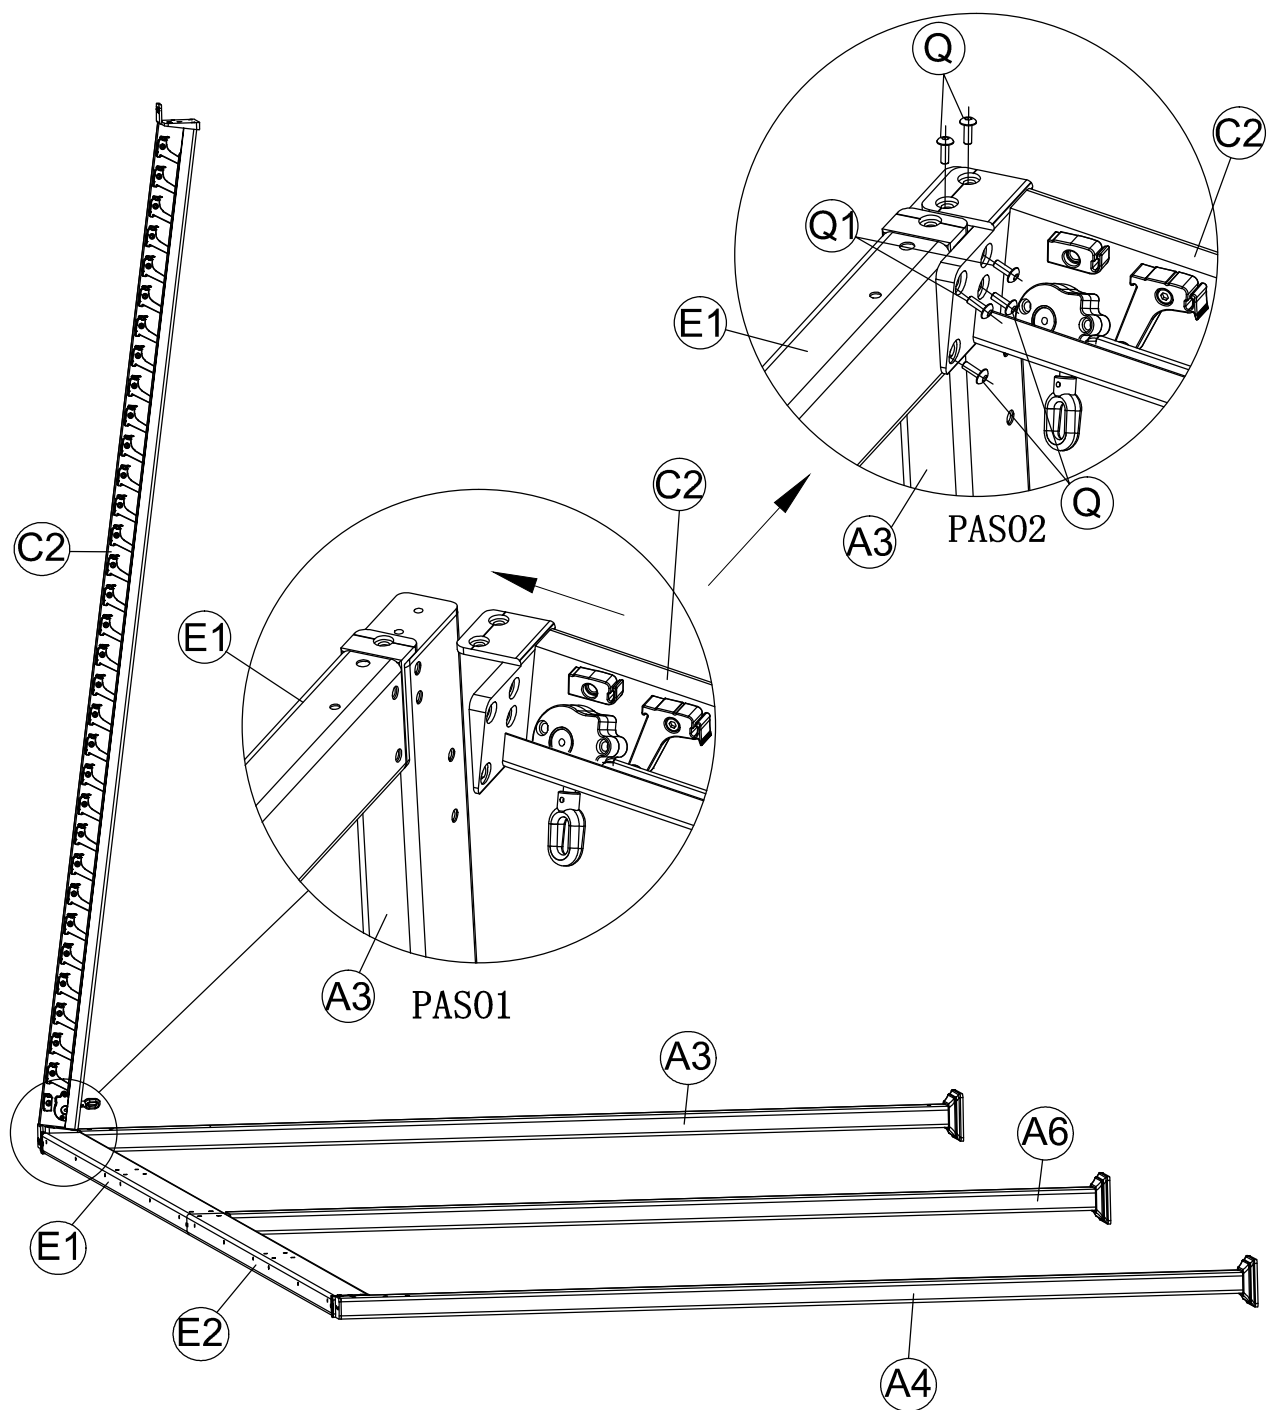

PASO 09

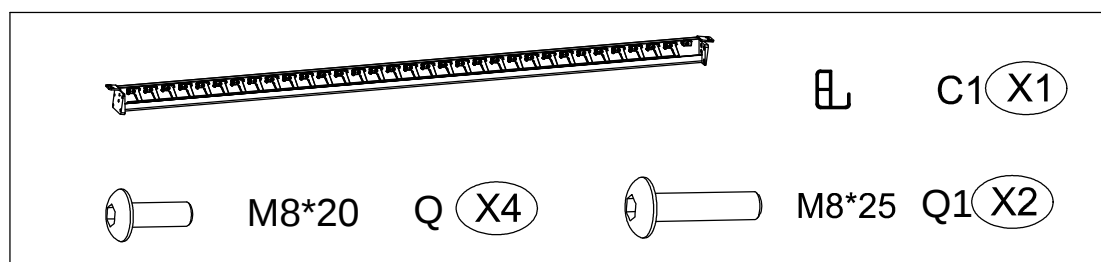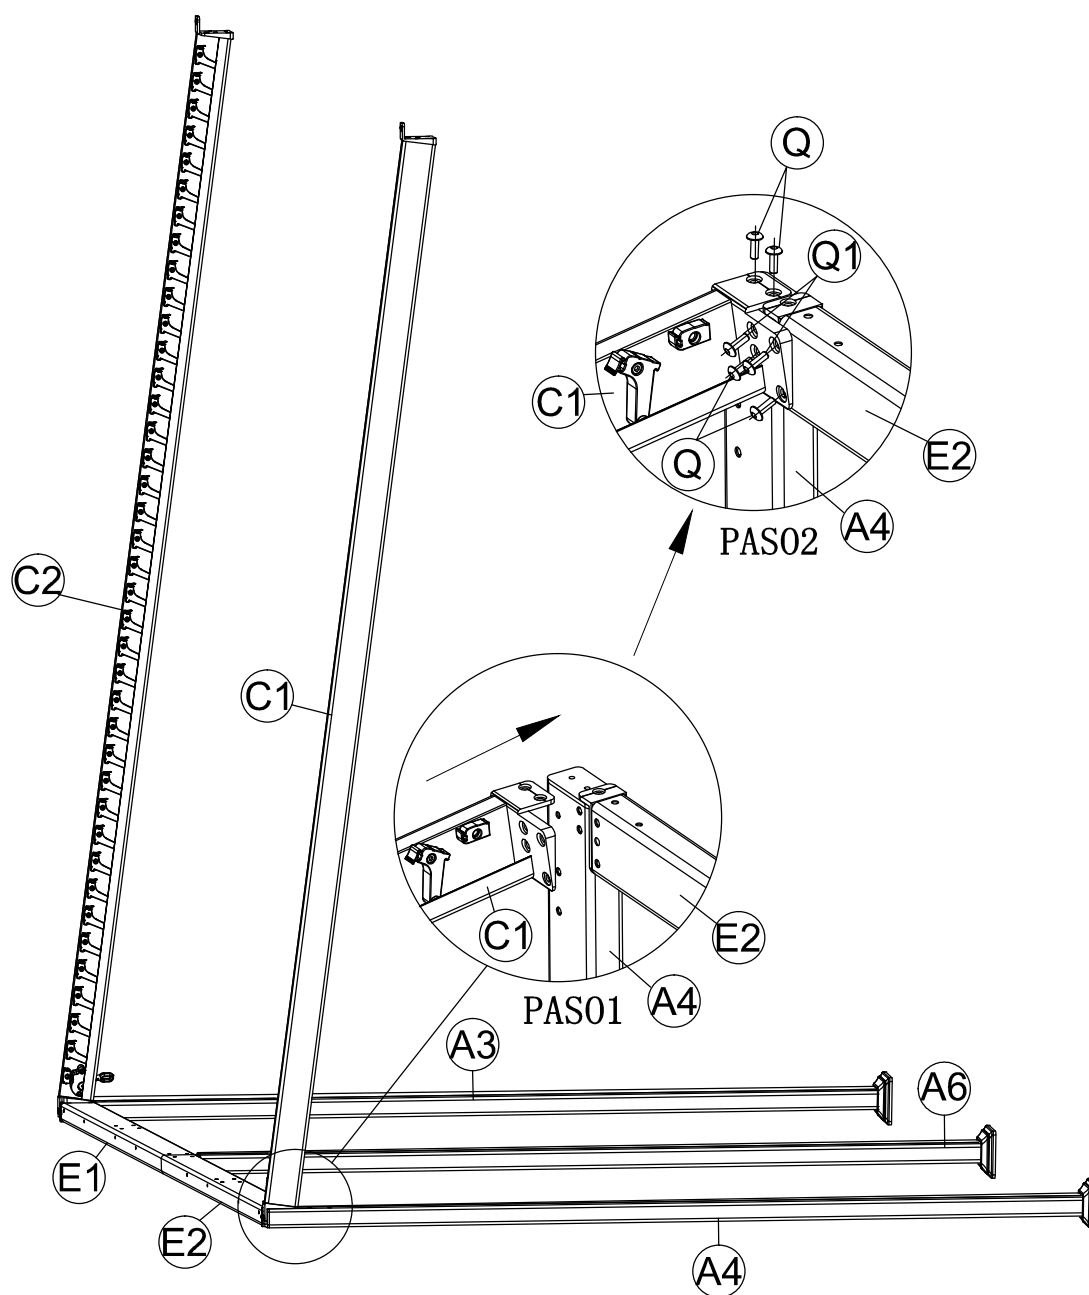


PASO 10

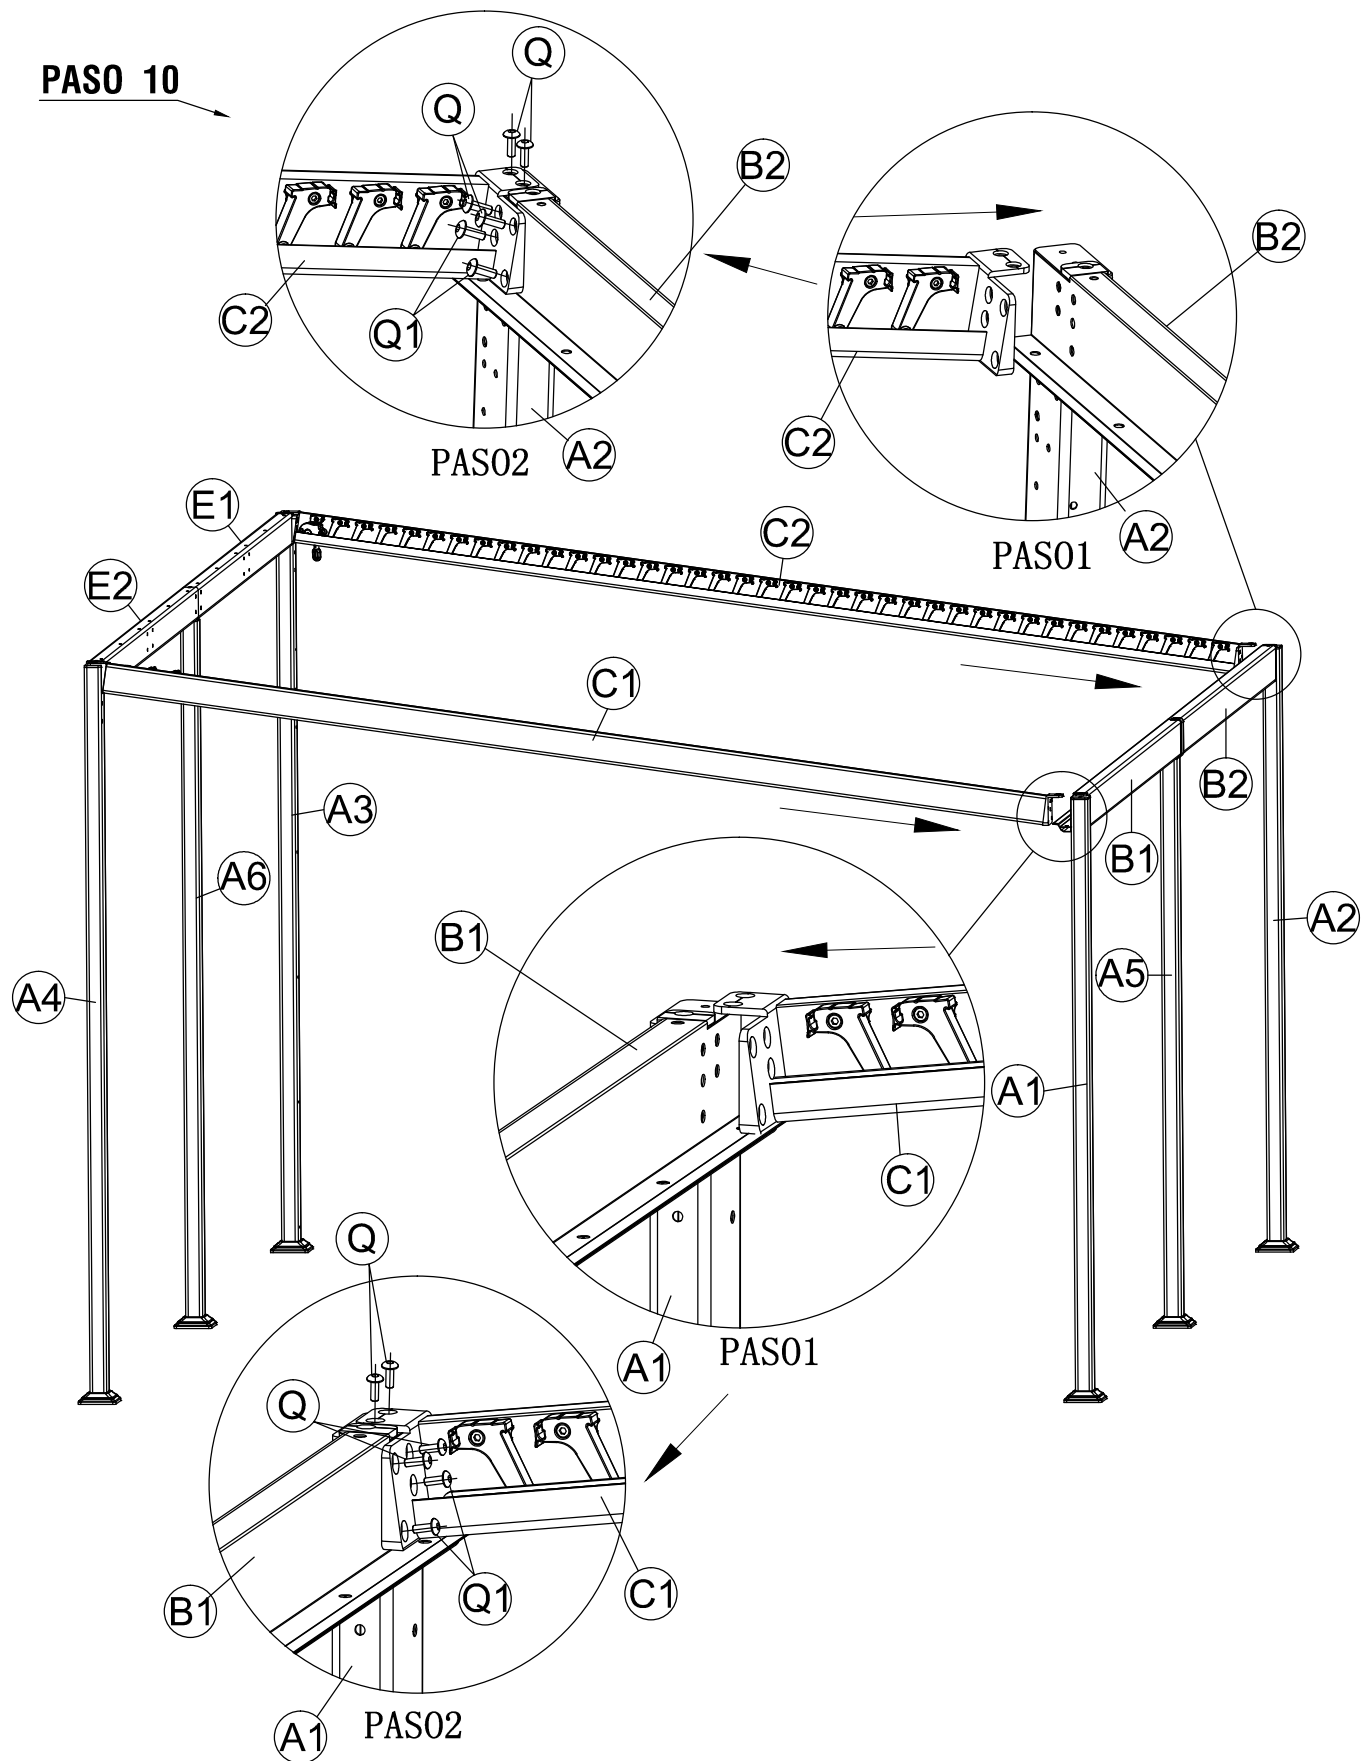

M8*20

Q

X8





M8*25








Q1

X4

PASO 11


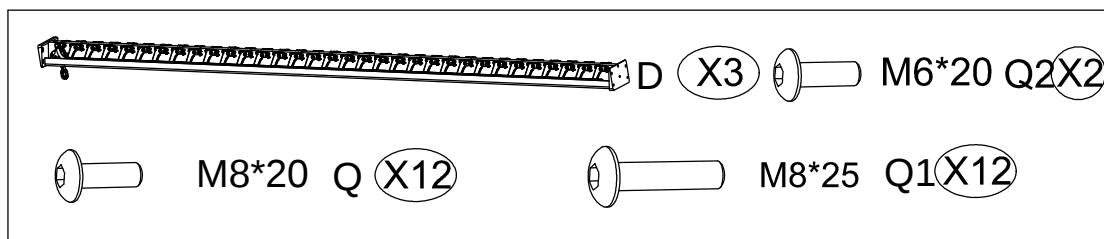
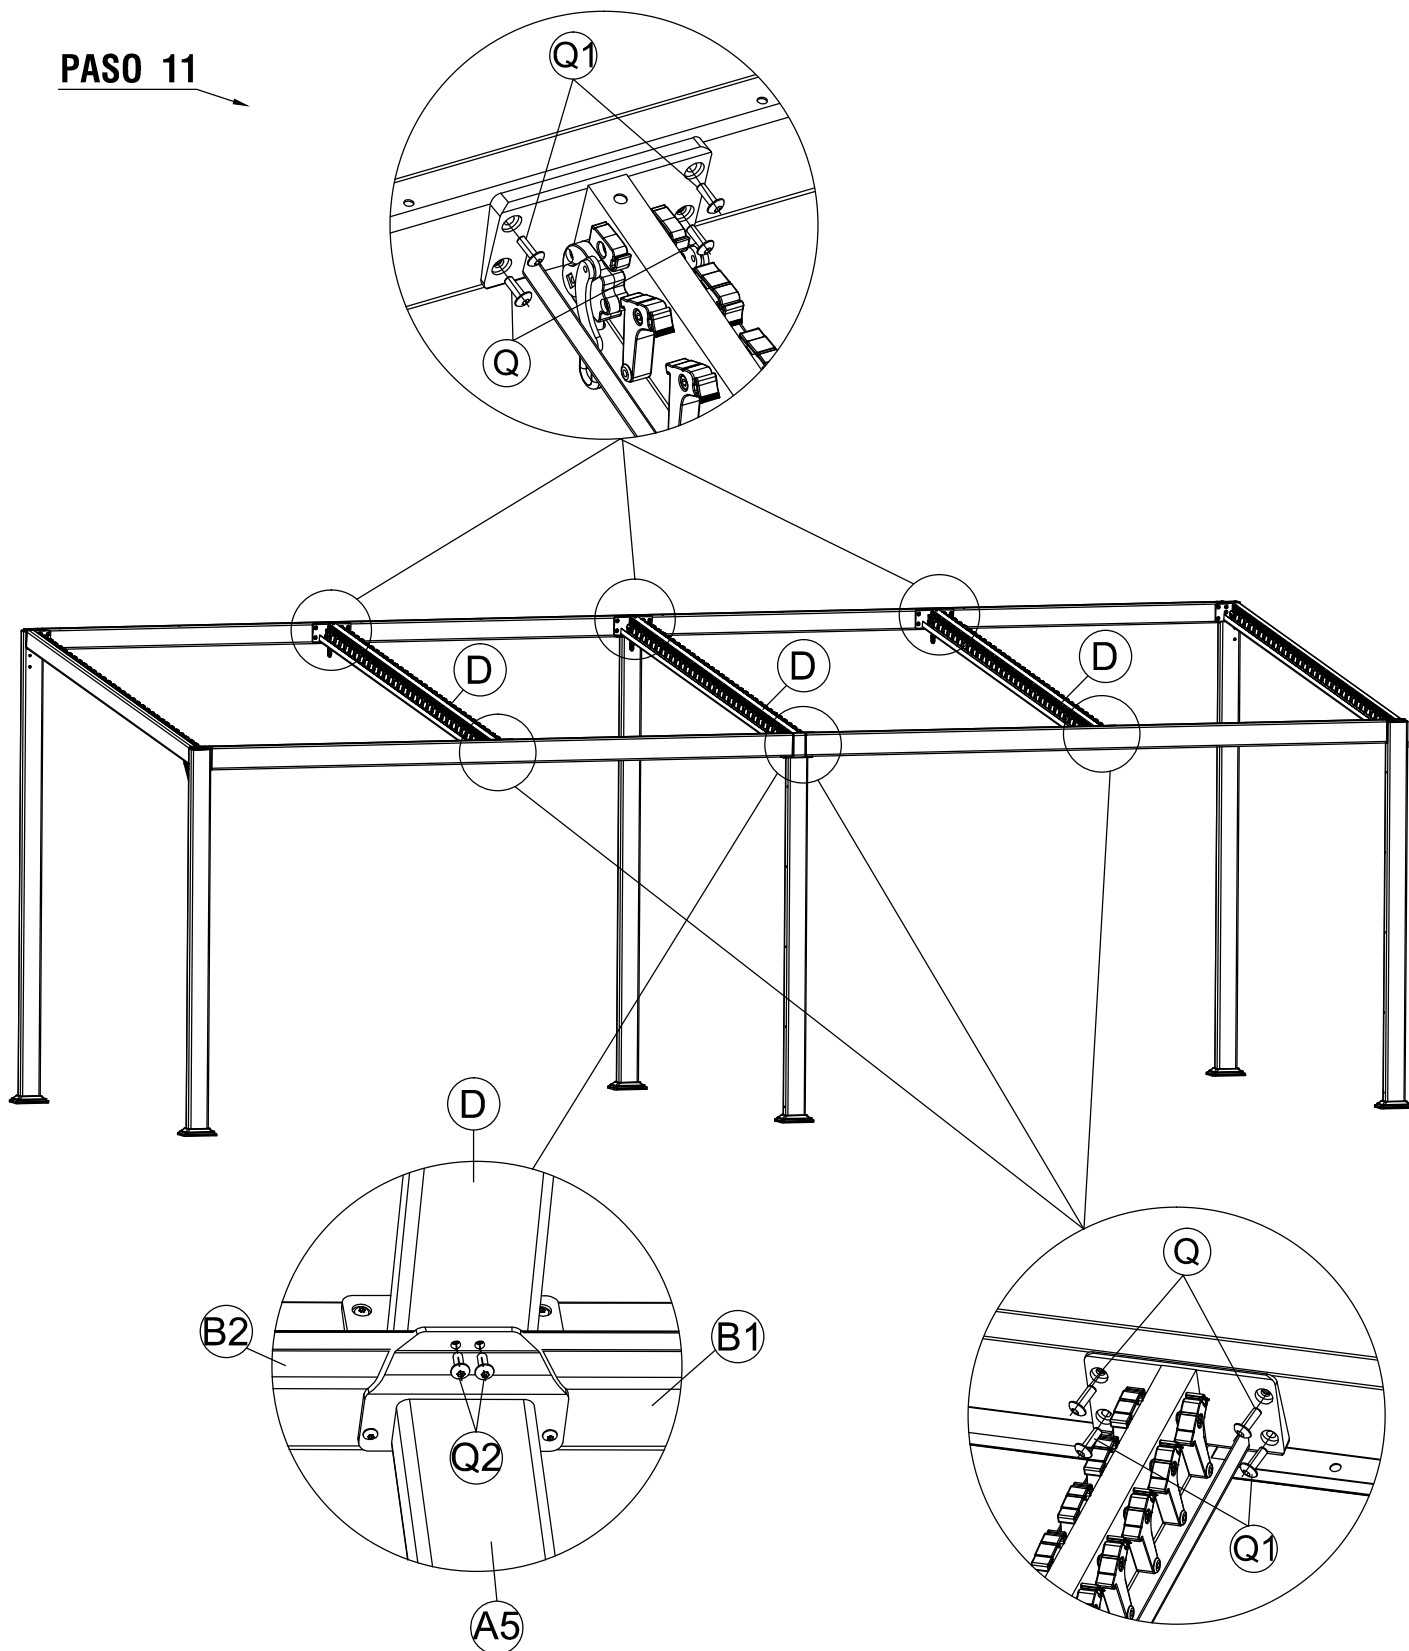


PASO 12

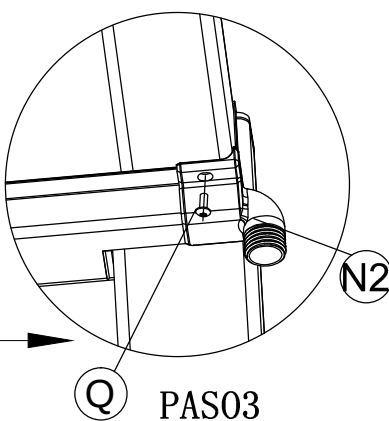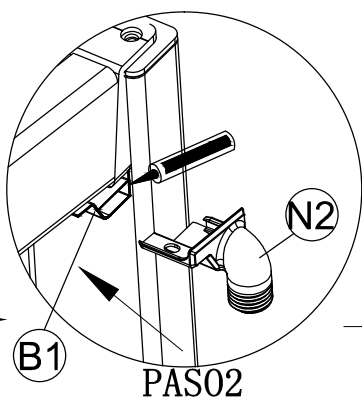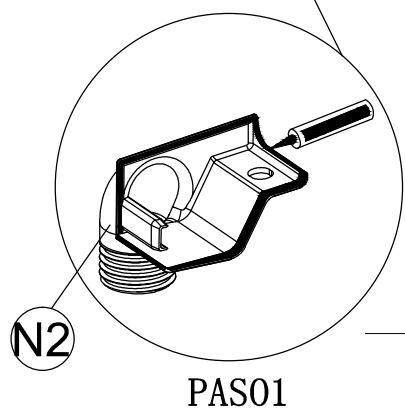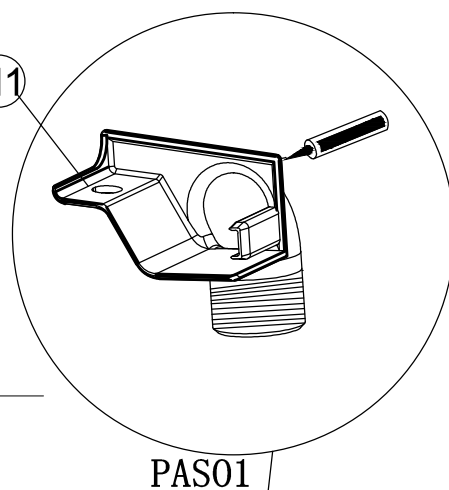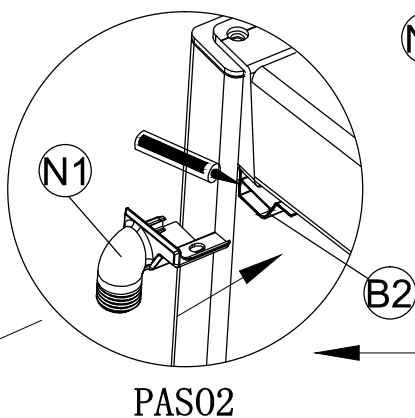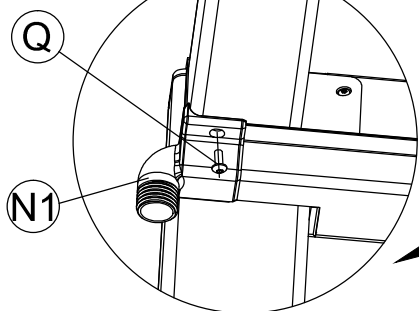
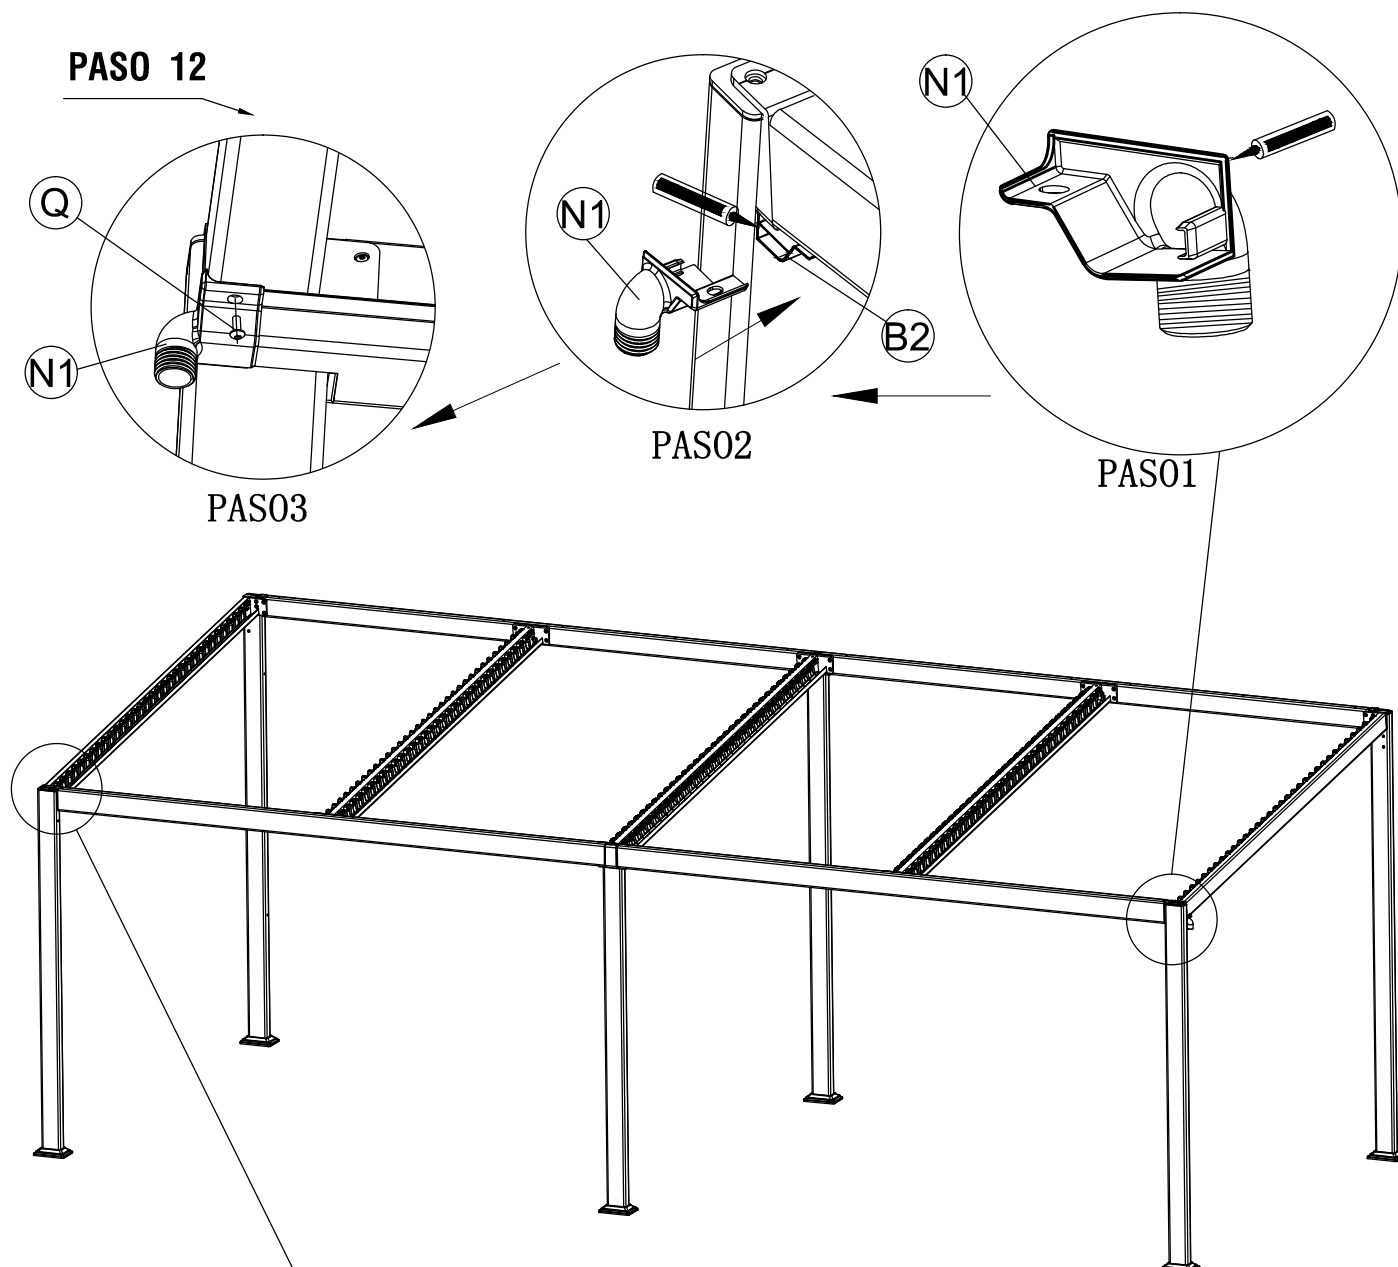


 N2 (X1)	 N1 (X1)	 M8*20	 Q (X2)
---	---	---	--


PASO 13

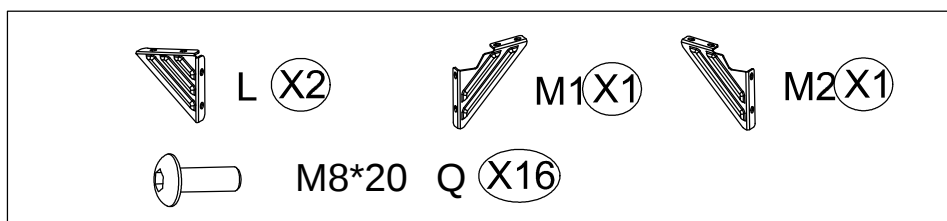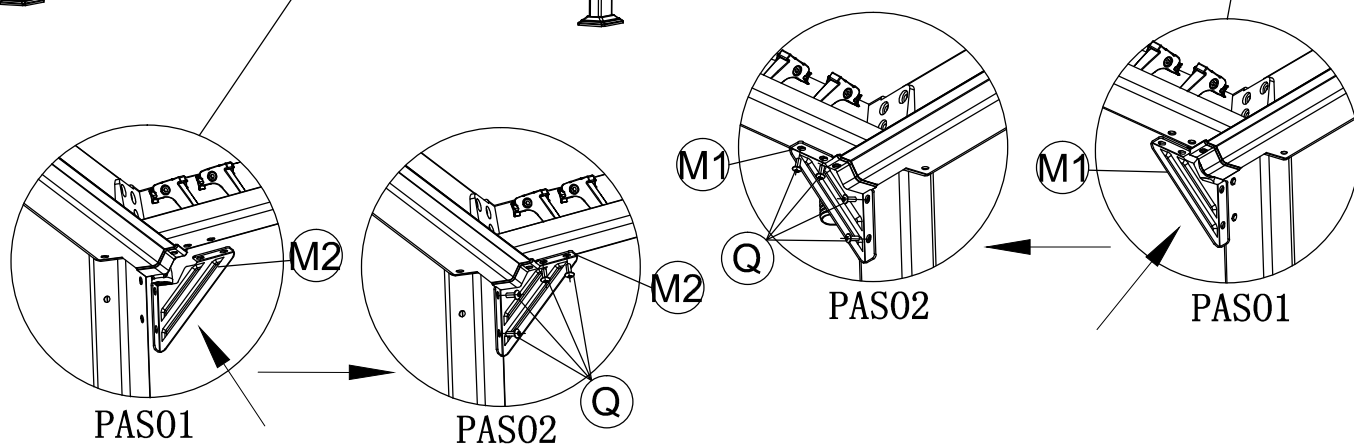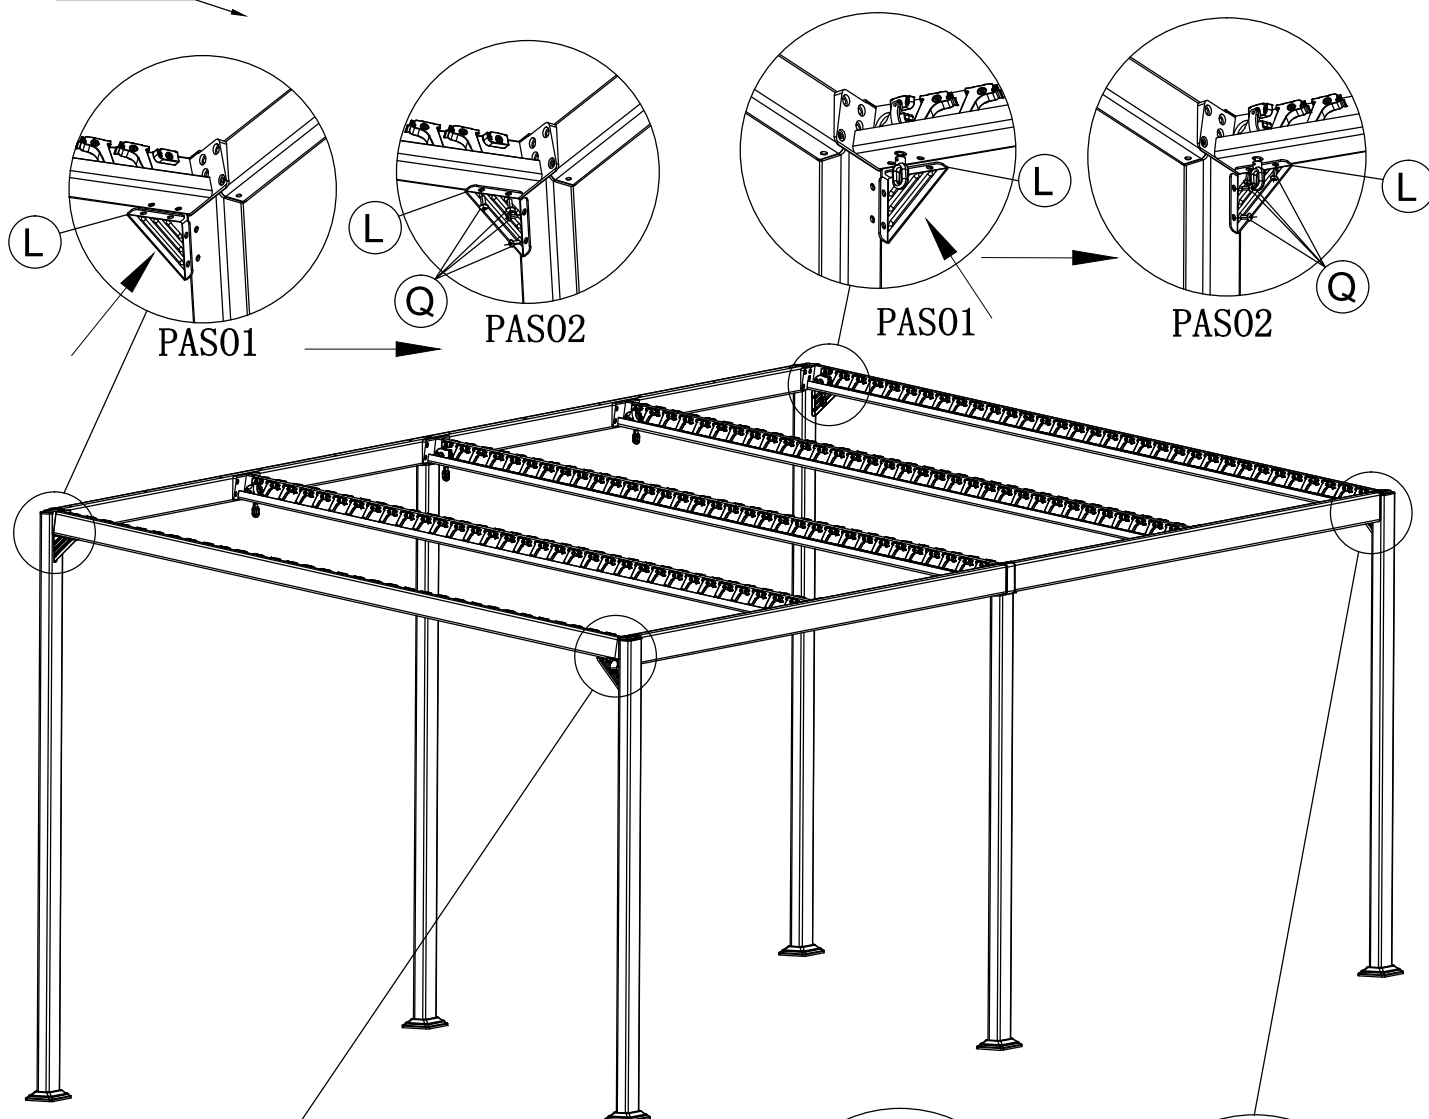

PASO 14

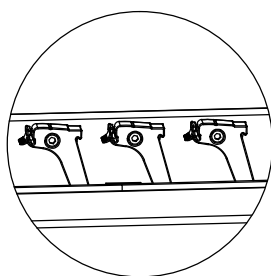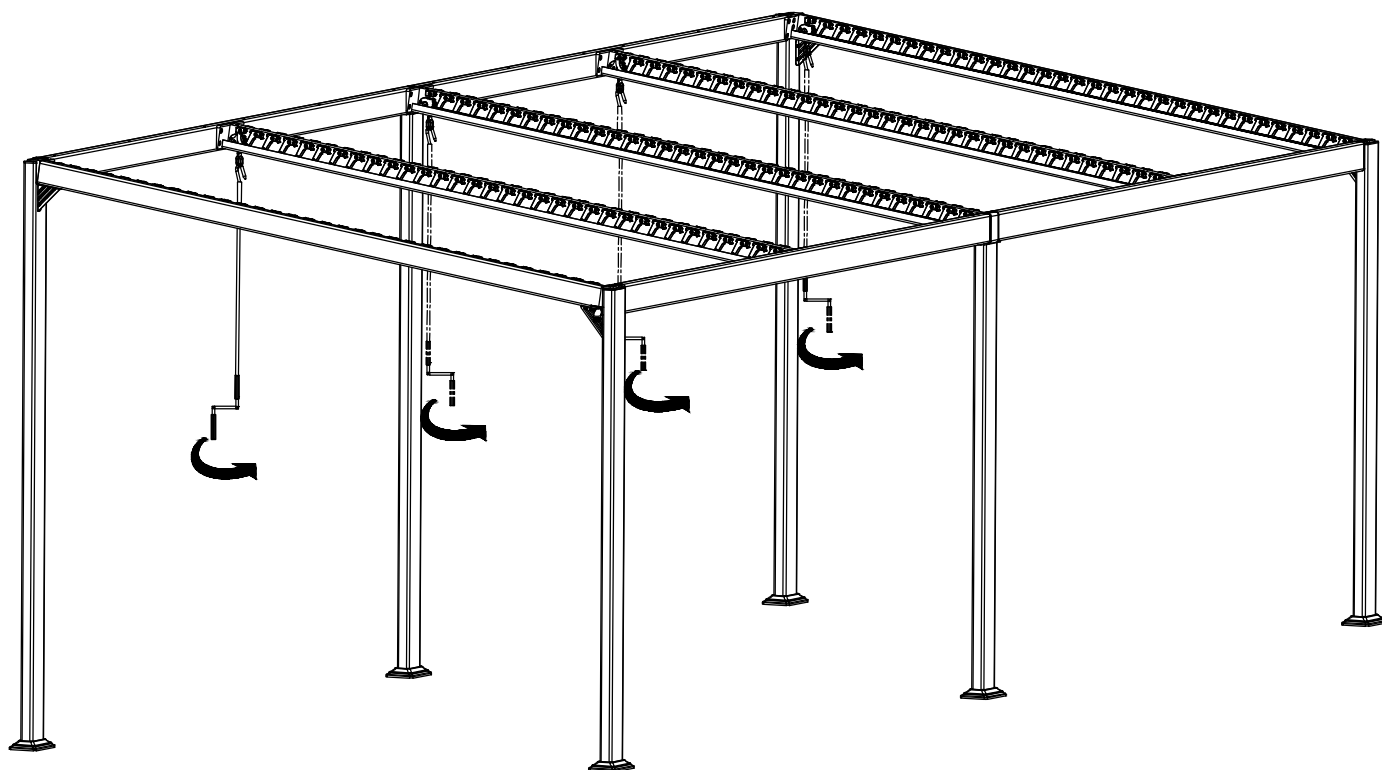


1

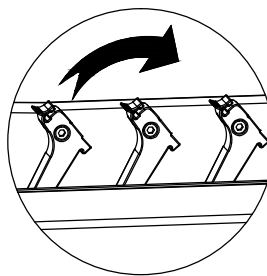



2

Antes de cargar las placas de aluminio F y G, pasar de la figura 1 a la figura 2 con el rocker




R (X1)



PASO 15

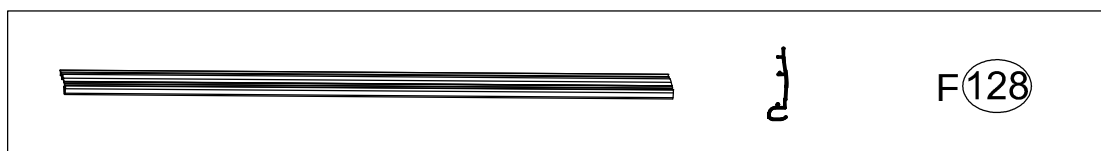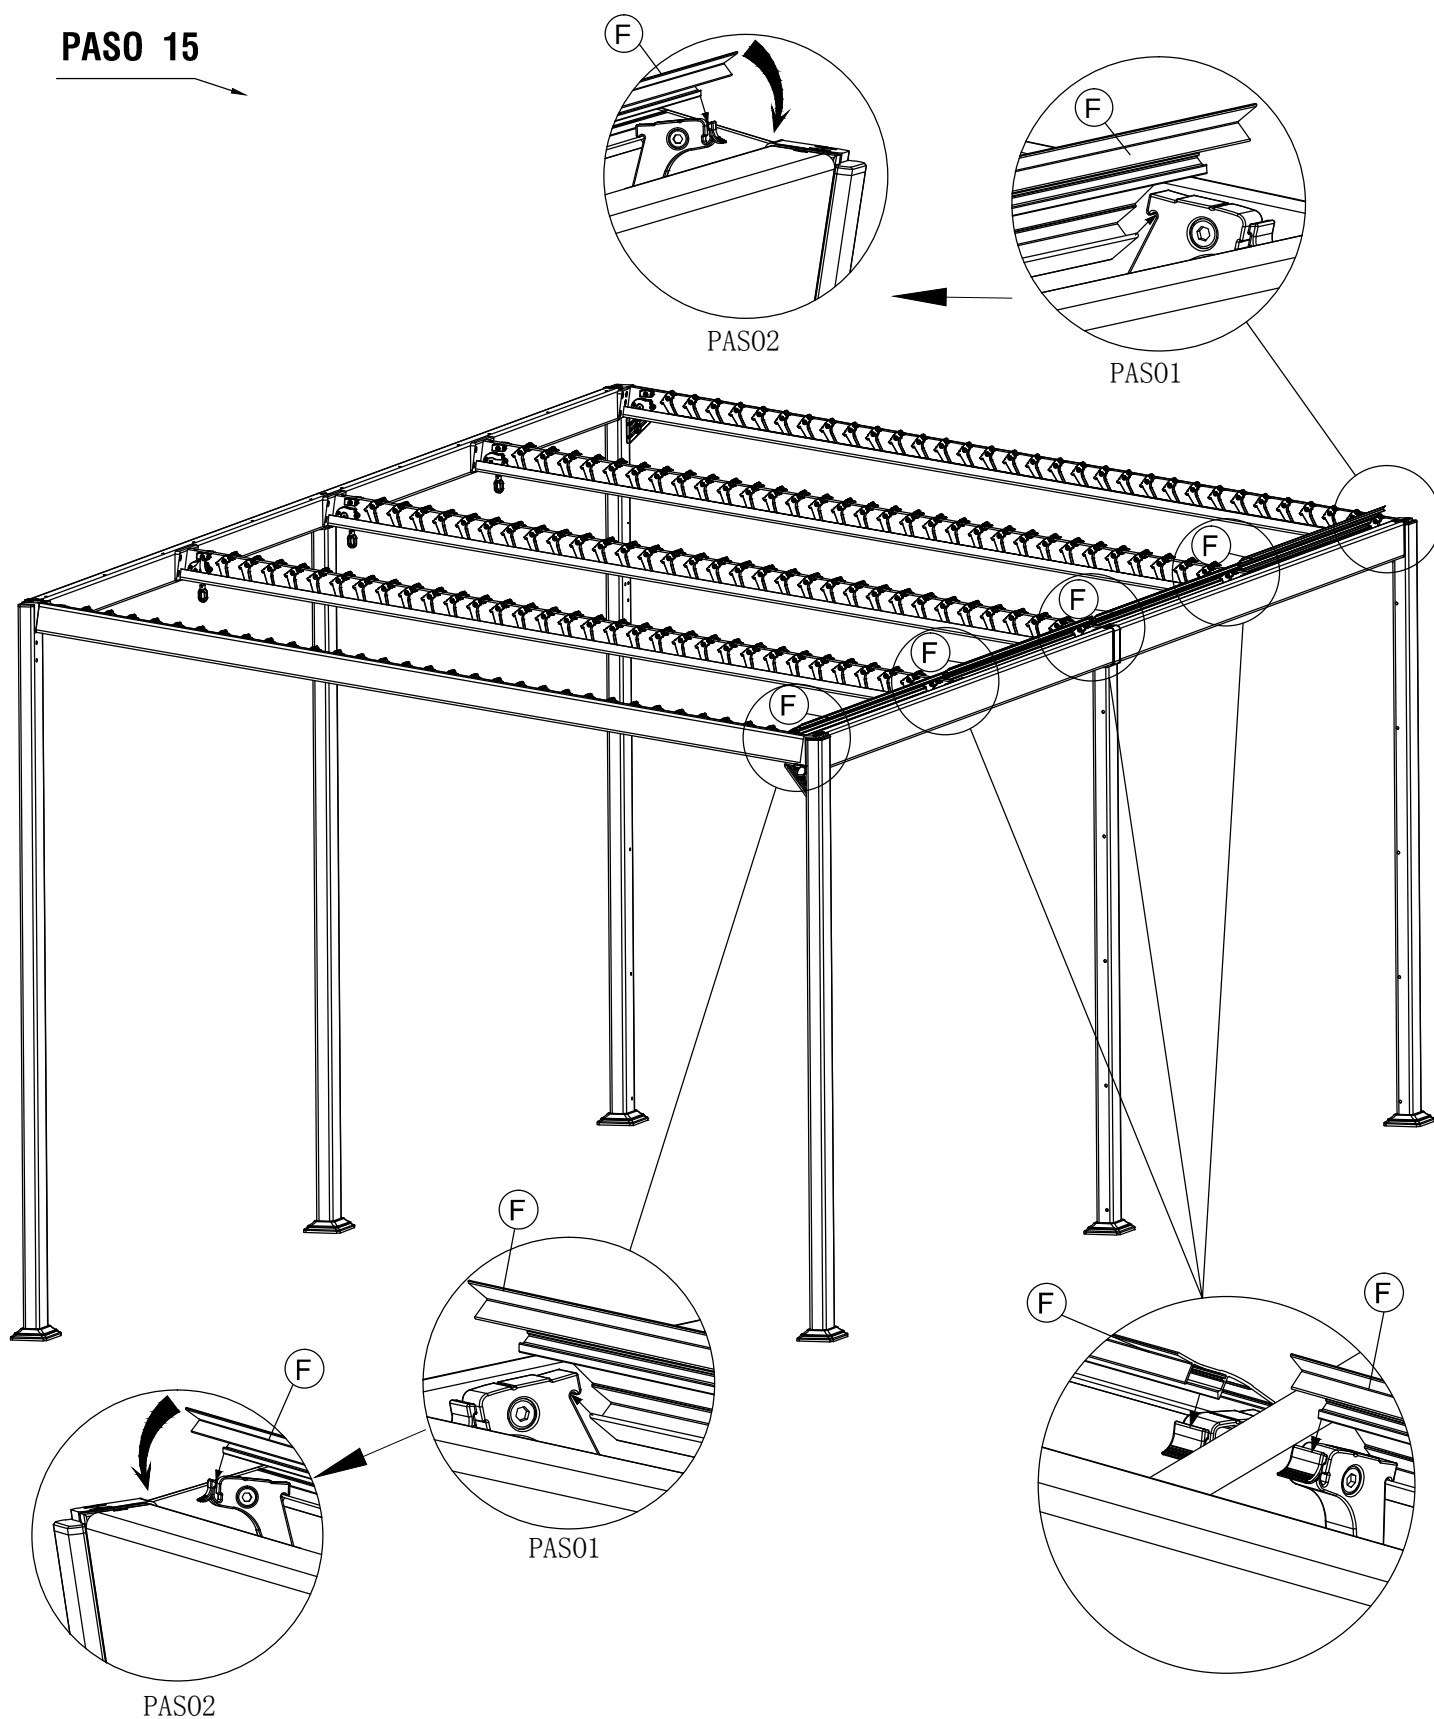


PASO 16

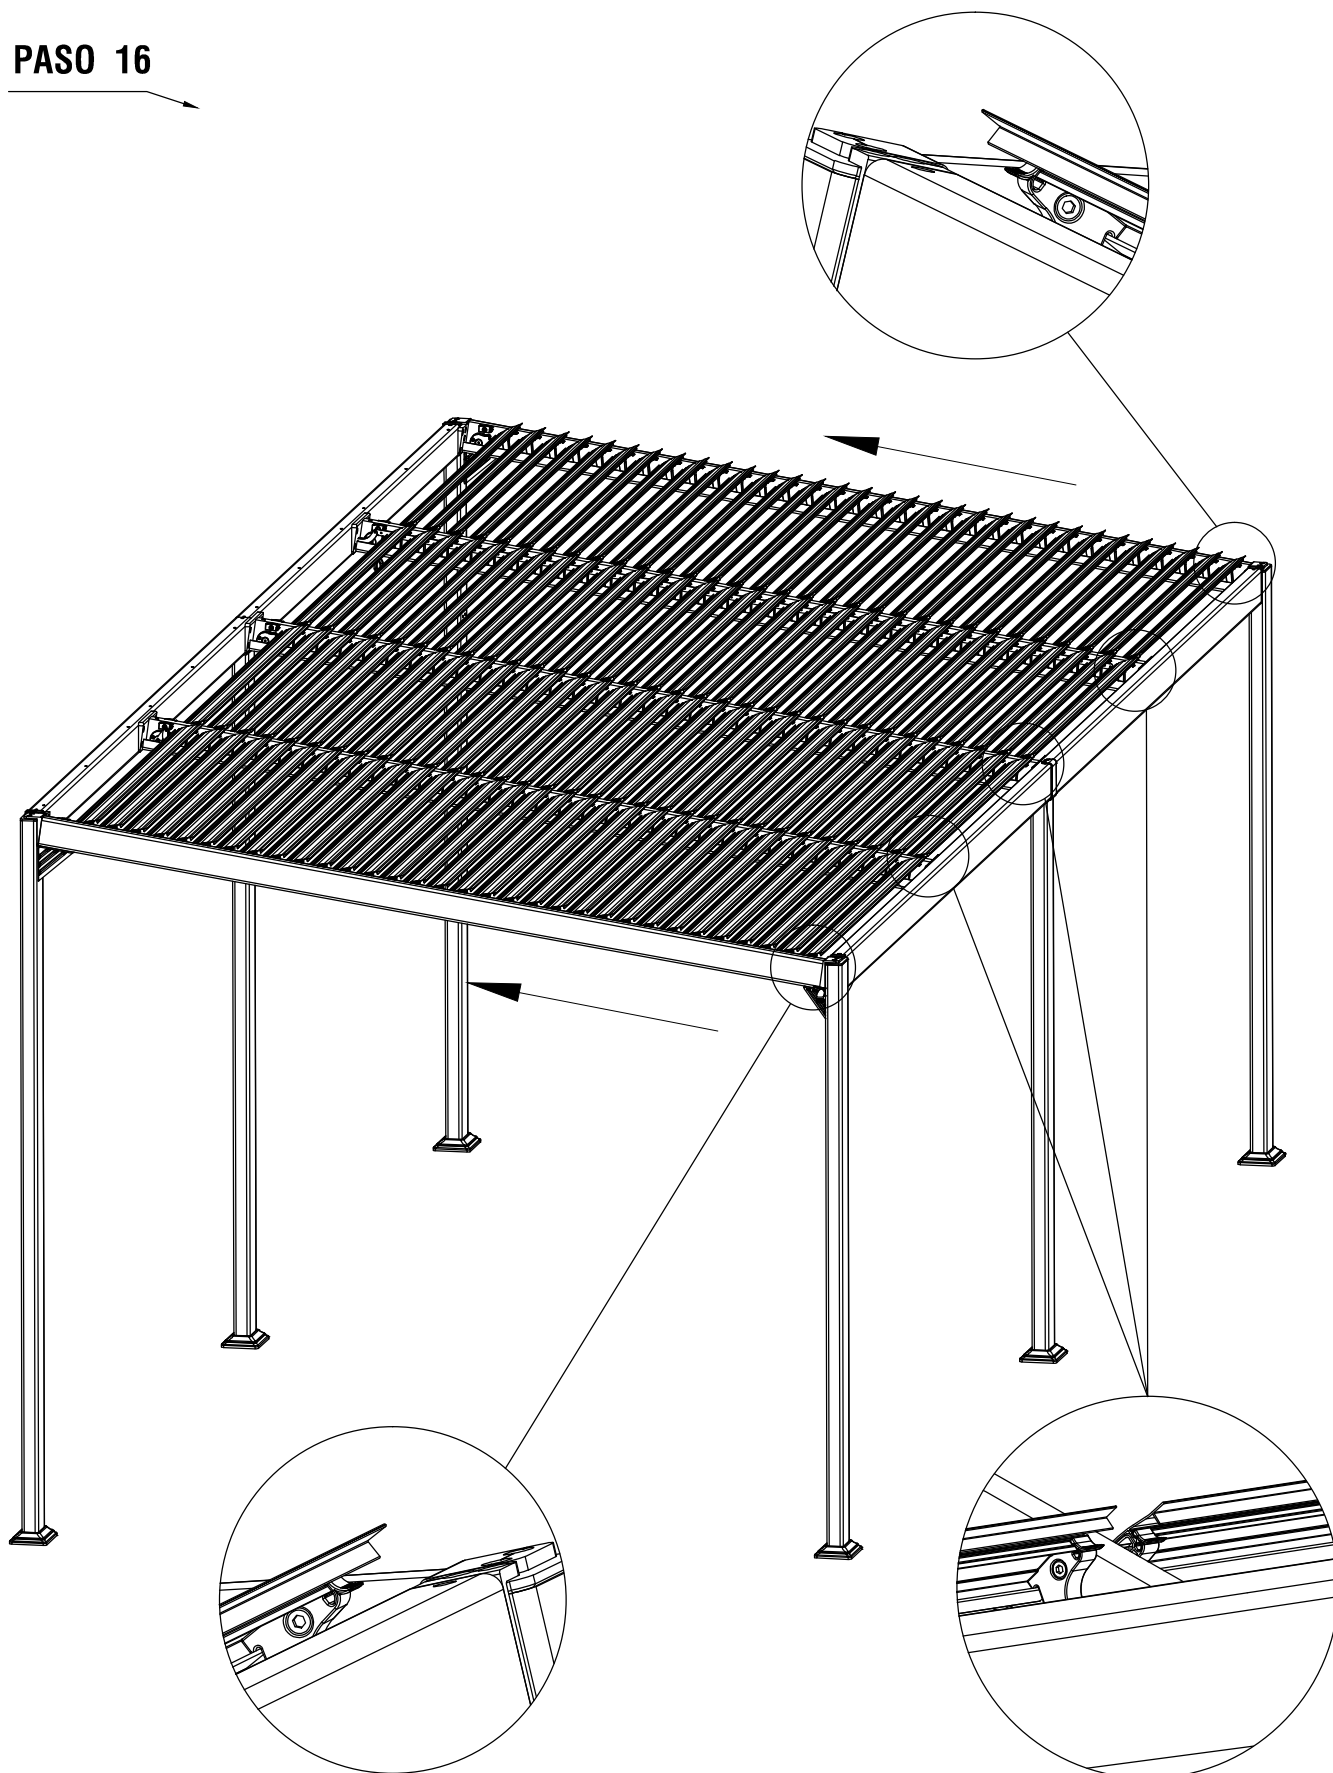

PASO 17

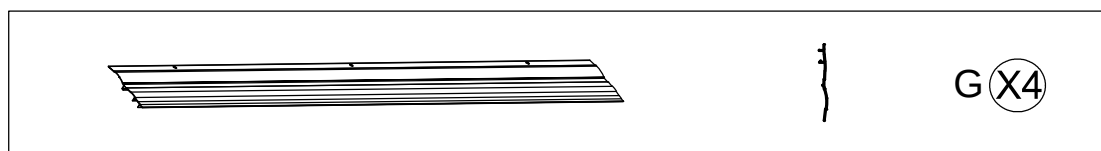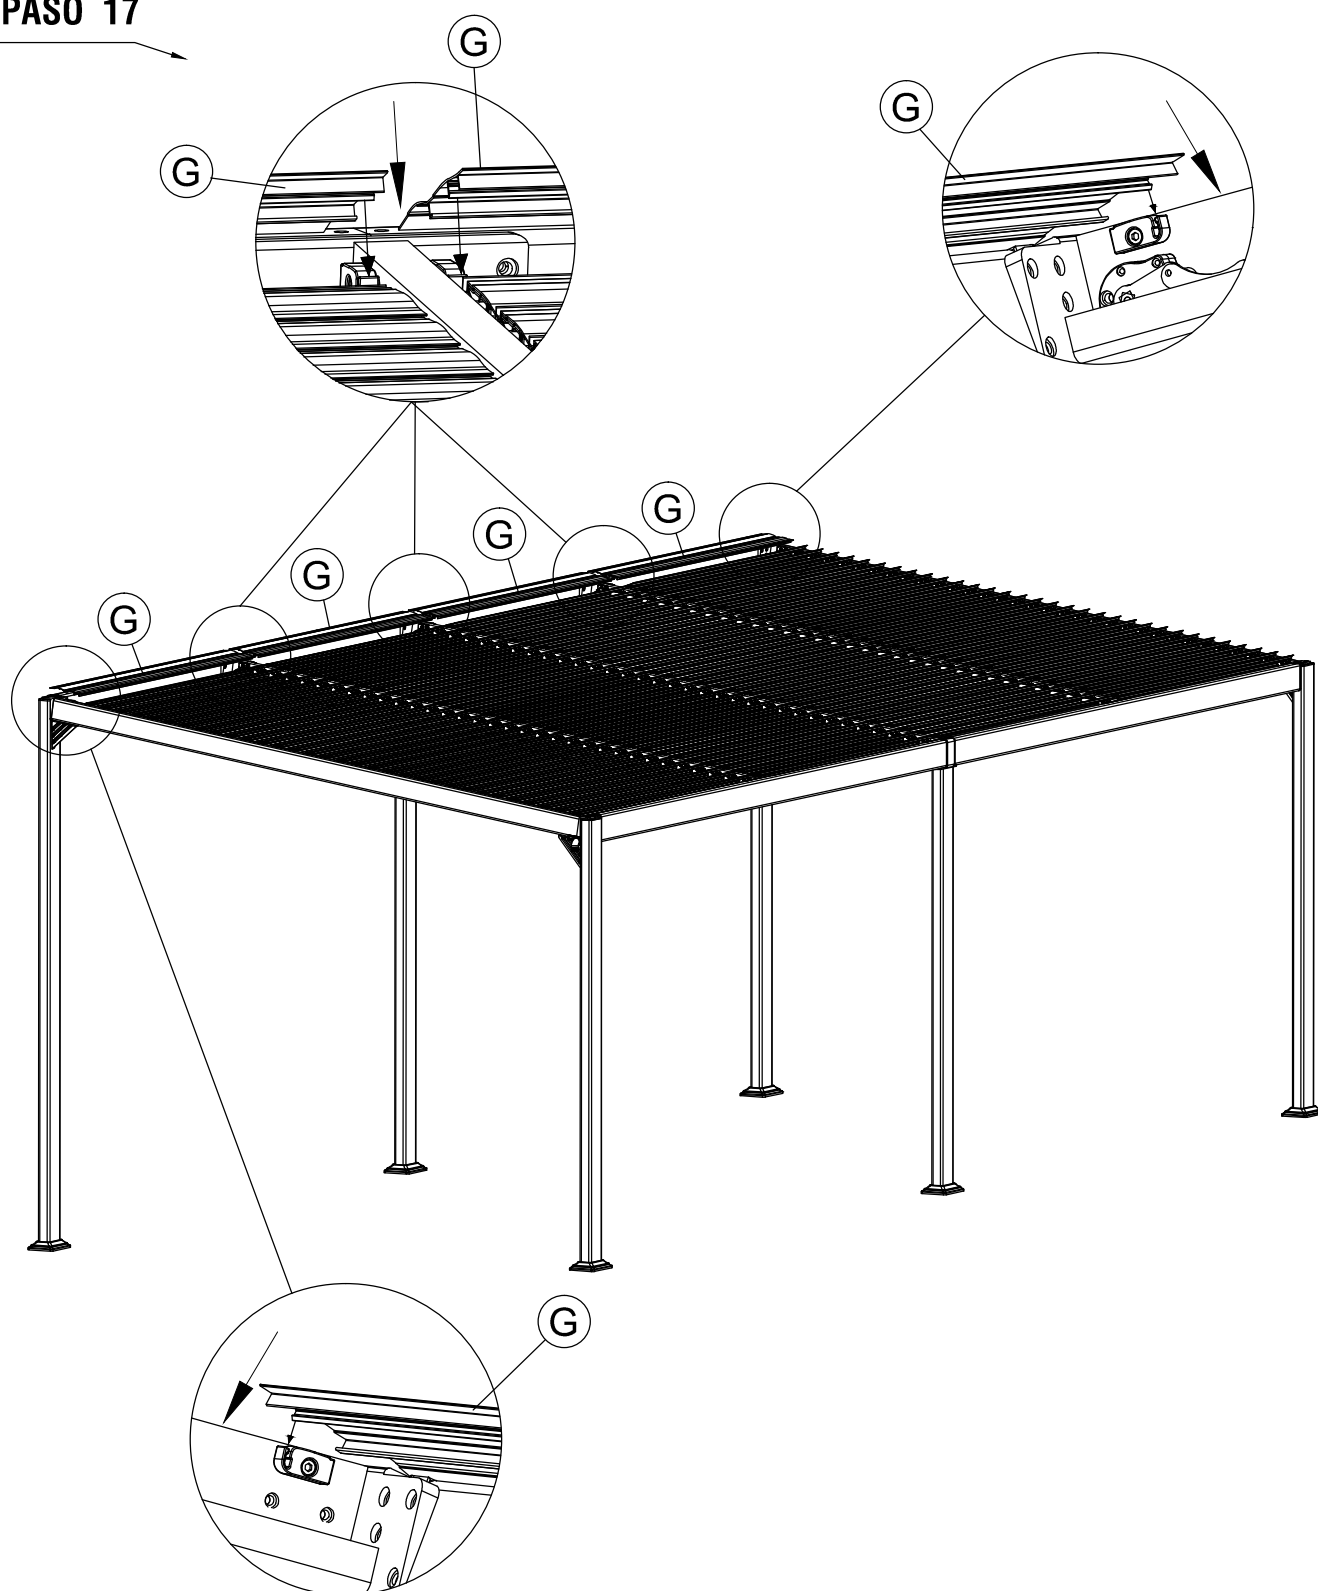



PASO 18

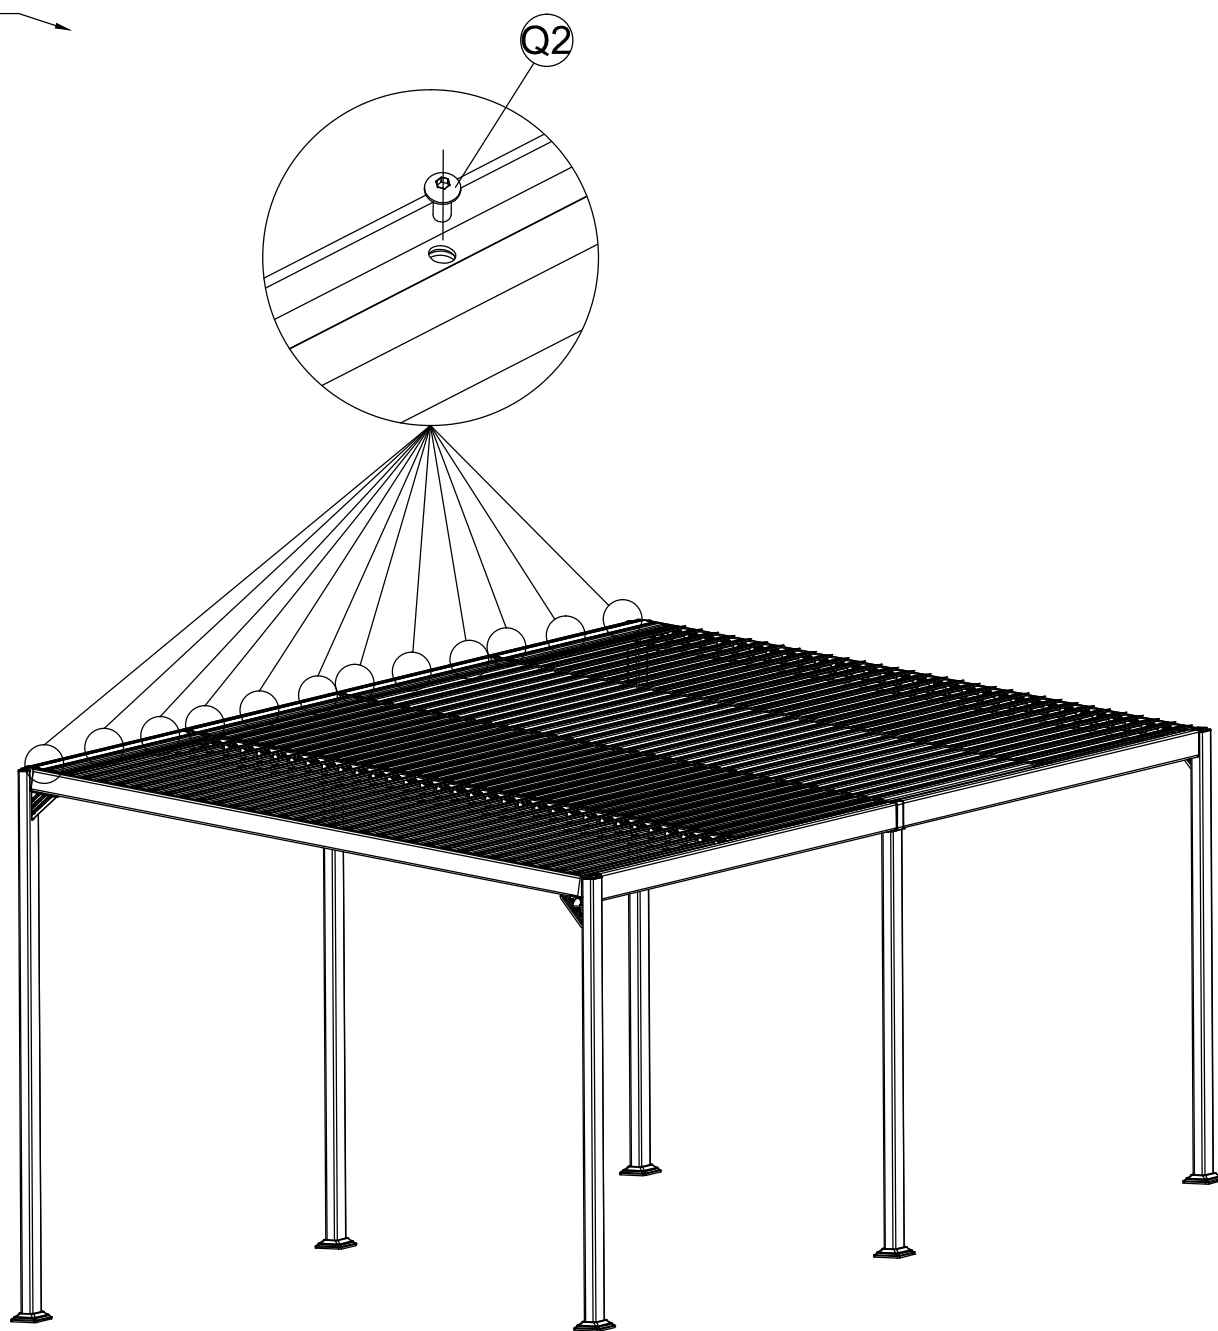

M6*20

Q2 X12

PASO 19

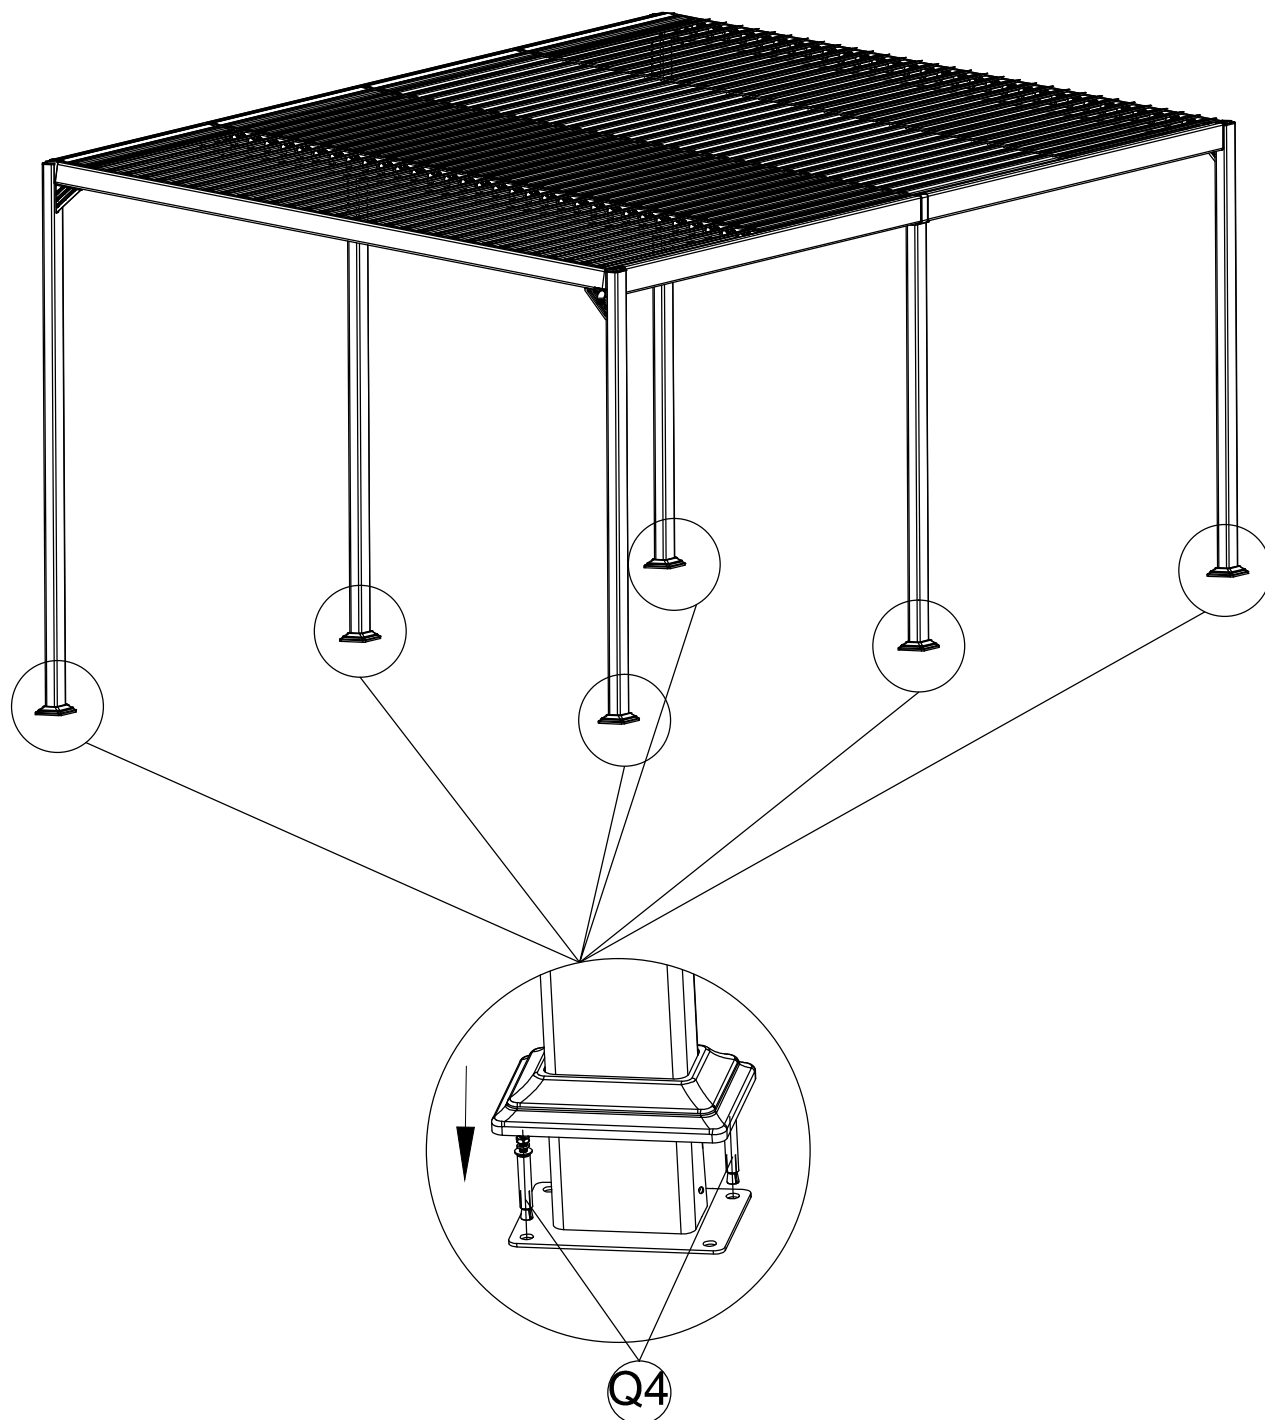

Q4 X12