


clever



G R I F E R Í A

Todos los diagramas de instalación son únicamente de referencia.
All installation diagrams are only for your reference.

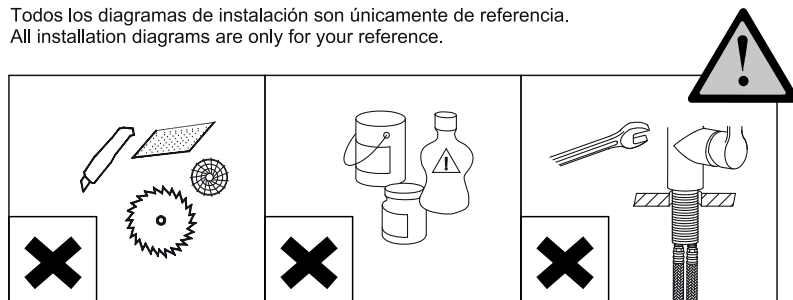


clever

G R I F E R Í A

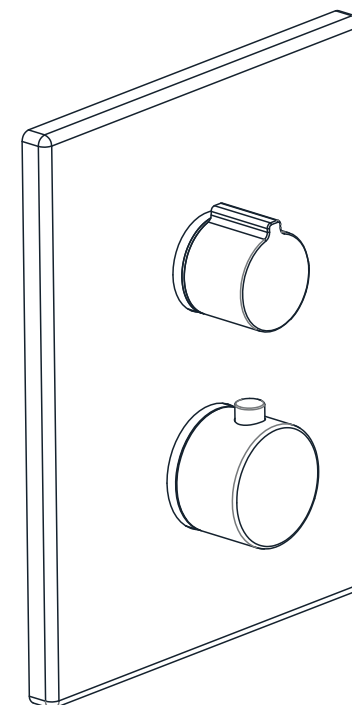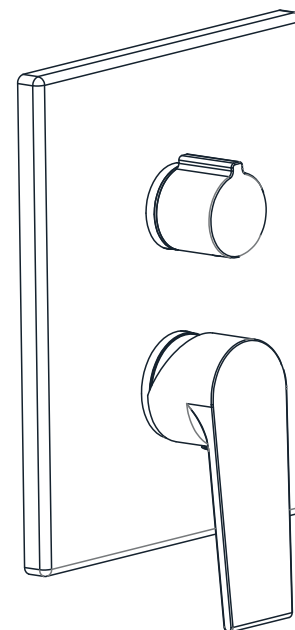


SH Standard Hidráulica


www.griferiaclever.com

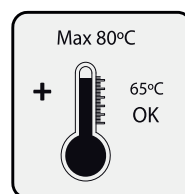

TERMOSTÁTICO 2-3 VÍAS
THERMOSTATIC 2-3 WAYS

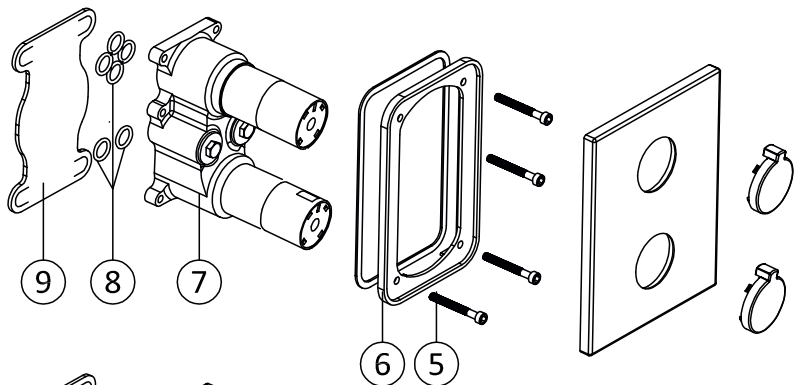

MONOMANDO 3-4 VÍAS
SINGLE LEVER 3-4 WAYS

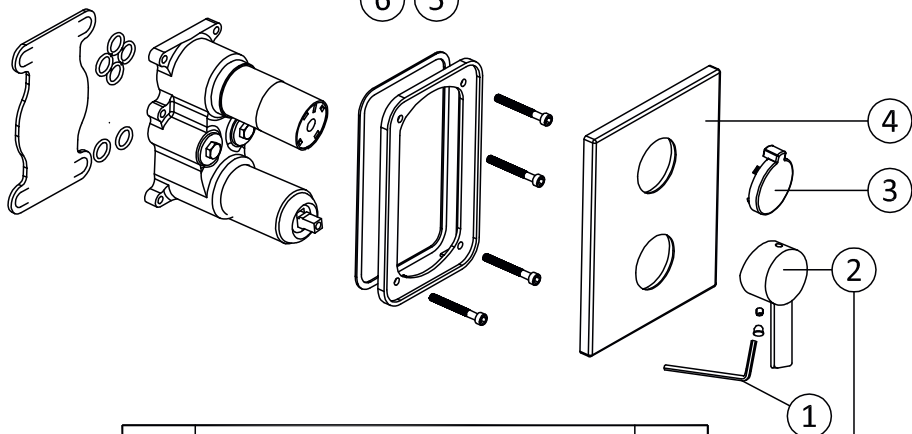

Nr.	DESCRIPCIÓN DESCRIPTION	CANT. QTY.
1	LLAVE HEXAGONAL ALLEN HEXAGONAL ALLEN KEY	1
2	CONJUNTO MANETA HANDLE SET	1
3	TAPA MANETA HANDLE COVER	1
4	FLORÓN CROMADO CHROMED PLATE	1
5	TORNILLO ALLEN M5 ALLEN SCREW M5	4
6	PLAFÓN DE SELLADO SEALING PLASTIC GASKET	1
7	CUERPO GRIFERÍA CONTROL VALVE BODY	1
8	JUNTA TÓRICA O-RING	1+2
9	PROTECCIÓN PROTECTION	1

SOLO PARA MONOMANDO
ONLY FOR 2 SINGLE LEVER

2 Uds PARA TERMOSTÁTICO
2 uds FOR THERMOSTATIC

ESTA GRIFERIA SOLAMENTE PUEDE SER INSTALADA UNA VEZ SE HAYA INSTALADO LA CAJA (98742). PARA LA INSTALACIÓN DE DICHA CAJA, CONSULTE LA GUÍA DE INSTALACIÓN DE LA CAJA "IM-BOXSHOWER4".

THIS CONTROL VALVE CAN BE INSTALLED ONLY ONCE THE BOX (98742) HAS BEEN INSTALLED. FOR THE INSTALLATION OF THE BOX, PLEASE REFER THE INSTALLATION GUIDE NAMED "IM-BOXSHOWER4".

CERRAR EL SUMINISTRO DE AGUA Y QUITAR EL BLOQUE DE PURGA Y LOS TAPONES. COLOCAR LA GRIFERIA (7) DENTRO DE LA CAJA Y ROSCARLA MEDIANTE LOS 6 TORNILLOS QUE SUJETABAN EL BLOQUE DE PURGA.

⚠️ -ASEGURARSE QUE LAS 4 JUNTAS (8) ESTÁN MONTADAS EN LA BASE.

STOP THE WATER SUPPLY AND DISASSEMBLE THE FLUSH BOARD AND PLUGS. PUT THE CONTROL VALVE BODY (7) INTO THE BOX AND FIX IT BY TIGHTENING THE 6 SCREWS WHICH WERE ASSEMBLED BEFORE.

⚠️ -MAKE SURE TO PUT THE 4 PIECES OF SEALING O-RING (8).

COLOCAR EL PLAFÓN DE SELLADO CON SU JUNTA (6) Y FIJARLA CON LOS 4 TORNILLOS ALLEN (5). ASEGURARSE QUE EL PLAFÓN (6) ESTÉ BIEN POSICIONADO ANTES DE APRETAR LOS 4 TORNILLOS (5).

PUT THE PLASTIC GASKET WITH THE SEALING RING (6) AND FIX IT WITH 4 ALLEN SCREWS (5).

PLEASE ADJUST THE PLASTIC GASKET (6) IN THE RIGHT POSITION BEFORE TIGHTENING THE SCREWS (5).

COLOCAR EL FLORÓN CROMADO (1), LA TAPA (3) Y LA MANETA (2) MEDIANTE LA LLAVE ALLEN (1). FINALMENTE MONTAR EL ÍNDICE. PARA GRIFERÍA TERMOSTÁTICAS, COLOCAR LAS 2 TAPAS (3)

INSTALL THE CHROME PLATE (1), THE COVER (3), THE HANDLE SET (2) BY TIGHTENING THE ALLEN SCREW (1). FINALLY PUT THE INDEX. FOR THERMOSTATIC VALVE, ASSEMBLE THE 2 COVERS (3).

