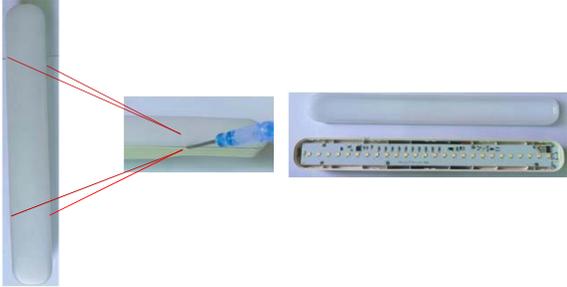
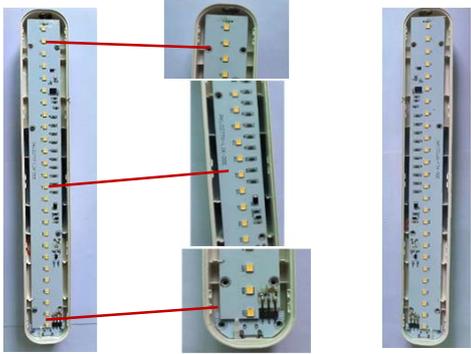
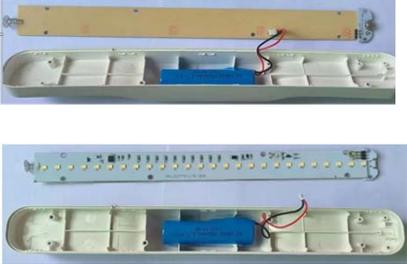
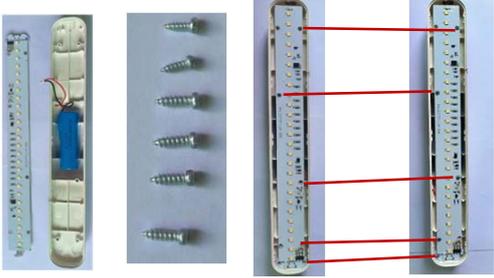


1	General information	Supplier's name or trade mark	INSPIRE
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	PKL027TP
4		Light sources maker model	PKL027TP-00

	Explanation of the step	Pictures	Tool
Step 1	Use a word screwdriver to insert the gap between the four positions between the lampshade and the base, and pry it open, and then take out the lampshade.		
Step 2	Use a cross screw to twist the corresponding screws.		
Step 3	Take out the PCB board and unplug the terminal between the lamp board and battery link.		
Step 4	Insert the new PCB board and use a cross screwdriver to tighten the corresponding screws.		
Step 5	Install the lampshade	