


# Armadio Tuttipiani 60/80


TP 60 L x P x H mm.600x400x1795

TP 80 L x P x H mm.800x400x1795

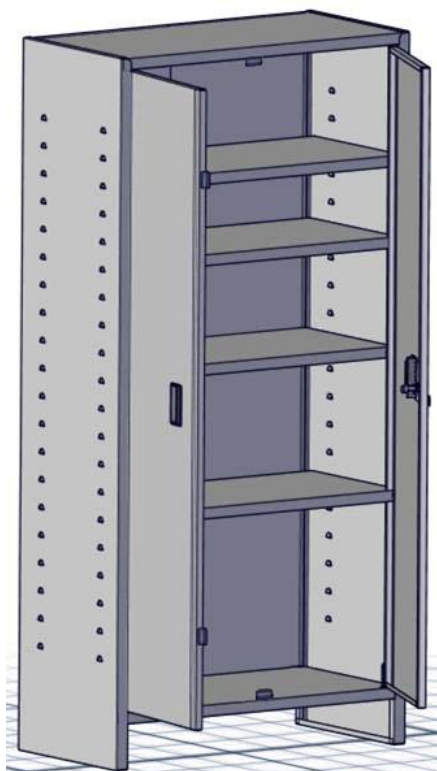

| A     | B     | C     | D     | E     | G     | H     | Y     |
|-------|-------|-------|-------|-------|-------|-------|-------|
| Pz. 1 | Pz. 1 | Pz. 1 | Pz. 1 | Pz. 2 | Pz. 1 | Pz. 1 | Pz. 4 |
|       |       |       |       |       |       |       |       |

| L      | M     | N     | O     | P     | Q     | R     | S     | T     | U      |
|--------|-------|-------|-------|-------|-------|-------|-------|-------|--------|
| Pz. 42 | Pz. 8 | Pz. 2 | Pz. 1 | Pz. 4 | Pz. 4 | Pz. 1 | Pz. 4 | Pz. 2 | Pz. 46 |
|        |       |       |       |       |       |       |       |       |        |

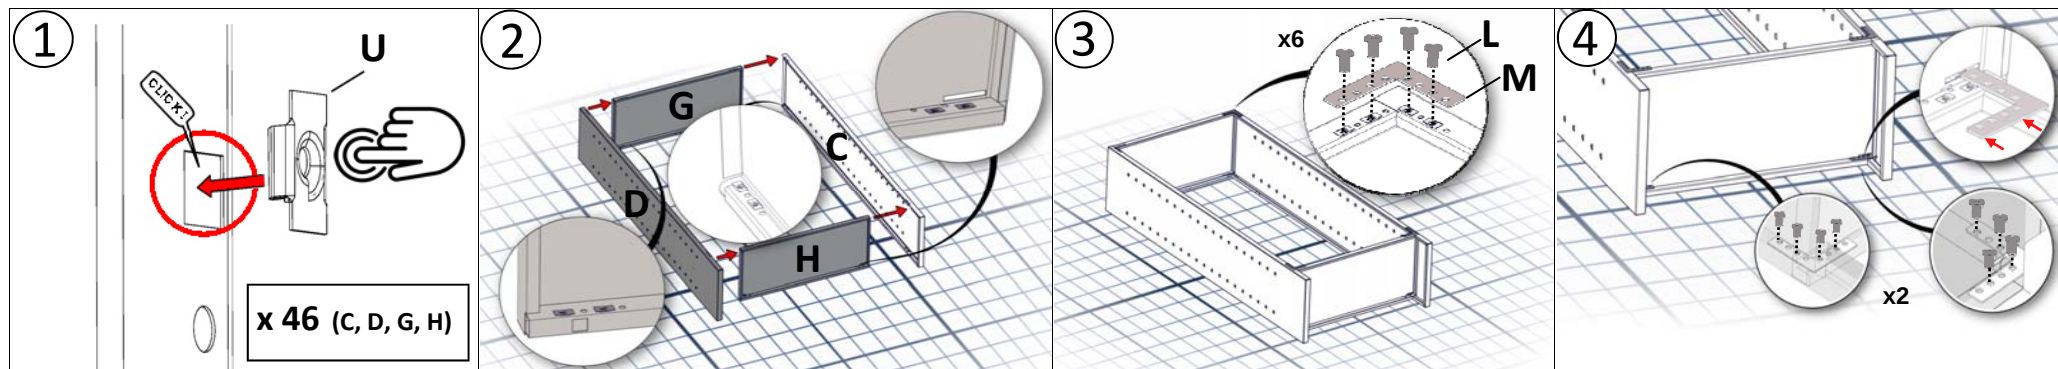

5

Diagram 5 shows the side panel (E) being attached to the back panel (E). Red arrows labeled 5a and 5b indicate the attachment points at the bottom. A circular inset provides a close-up view of the connection point, showing a red arrow pointing to the specific slot or hole where the panels meet.

6

7

Diagram 7 illustrates the step of attaching the door to the cabinet. The main drawing shows the cabinet with the door open. Two circular callouts provide detailed views of the attachment process. The top callout shows a door hinge being secured with a screw into a pre-drilled hole in the cabinet's top rail. The bottom callout shows a door hinge being secured with a screw into a pre-drilled hole in the cabinet's side rail.

8

T

Q

x4

9

8c

8d

8a

8b

11

10

Diagram 10 illustrates the process of attaching the side panel to the cabinet frame. The main drawing shows the cabinet frame with the side panel being attached to the right side. Two circular callouts provide detailed views of the attachment points. The top callout shows a blue bracket labeled 'P' being attached to the top of the side panel. The bottom callout shows a blue bracket labeled 'P' being attached to the bottom of the side panel. A red arrow points to the bottom of the side panel, indicating the direction of movement for the attachment.

Posizionare i ripiani con la feritoia larga anteriormente nelle apposite alette. Un ripiano deve essere necessariamente fissato all'undicesima serie di alette (contando dal basso), per poi consentire la chiusura della serratura e delle ante.