

BADEN HAUS


dal 1979, il tuo bagno

APPLIQUE

Series Caravaggio - Art. 40360

Installation notes:

Install this product according to the installation guide
Wall bracing and Baden Haus supplied hardware are recommended.

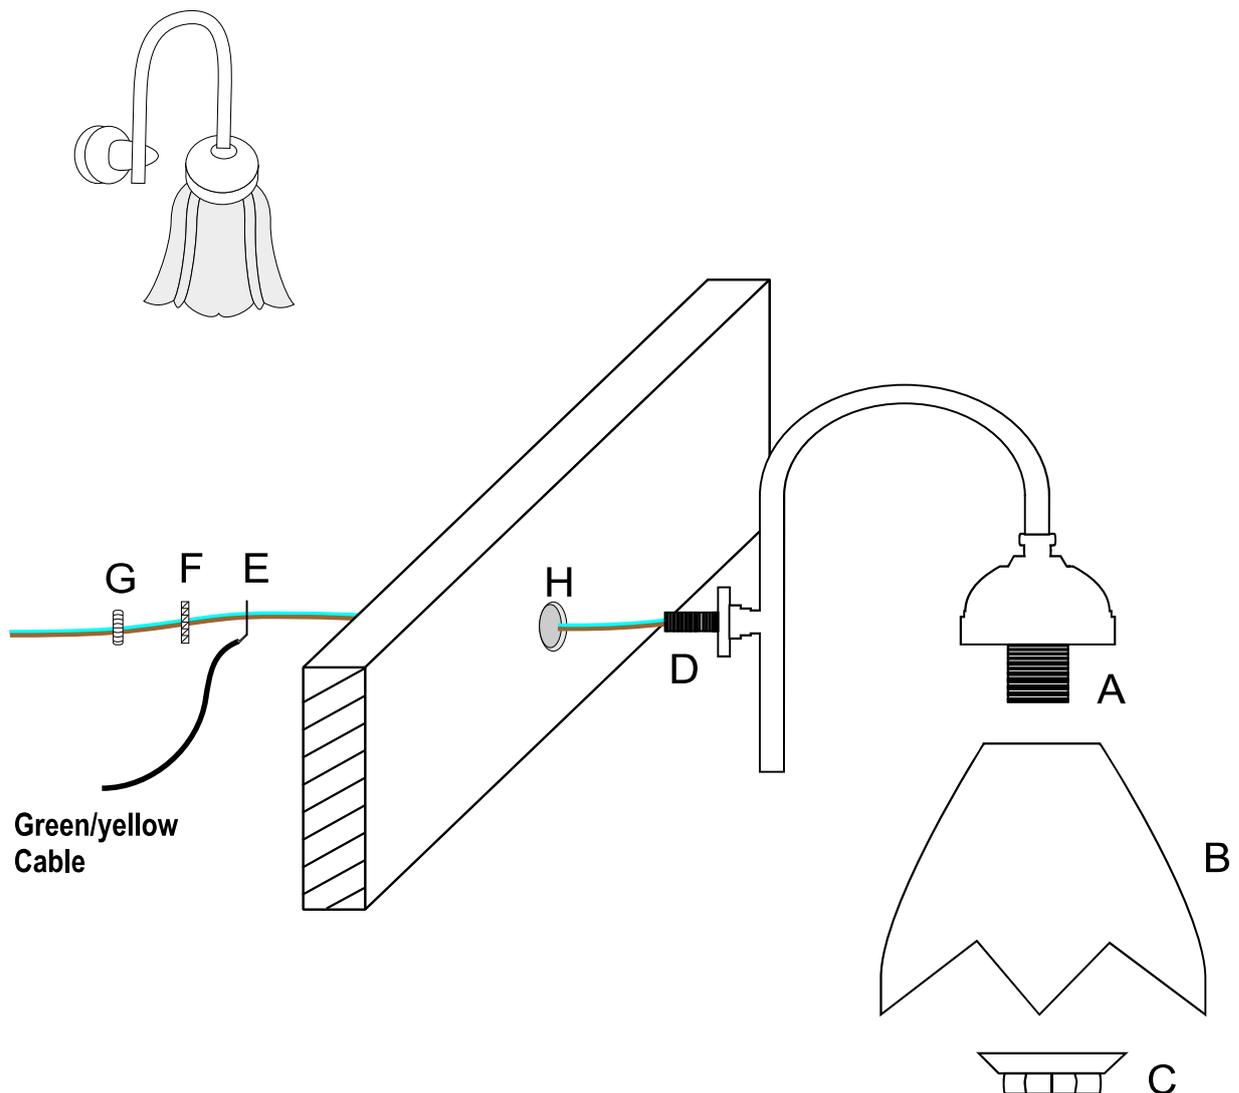

- 1) Unscrew part 'C' from ferrule 'A'.
- 2) Insert the glass bell 'B' in the ferrule 'A' and screw part 'C'.
- 3) Remove from pin 'D' the nut 'G', the washer 'F' and the earth cable 'E'.
- 4) Insert the pin 'D' into the hole 'H'.
- 5) Insert in pin 'D' the earth cable 'E', the washer 'F' and screw the nut 'G'.
- 6) Use only bulb max 40W.
- 7) Electrical connection must be made by authorized installer.

