


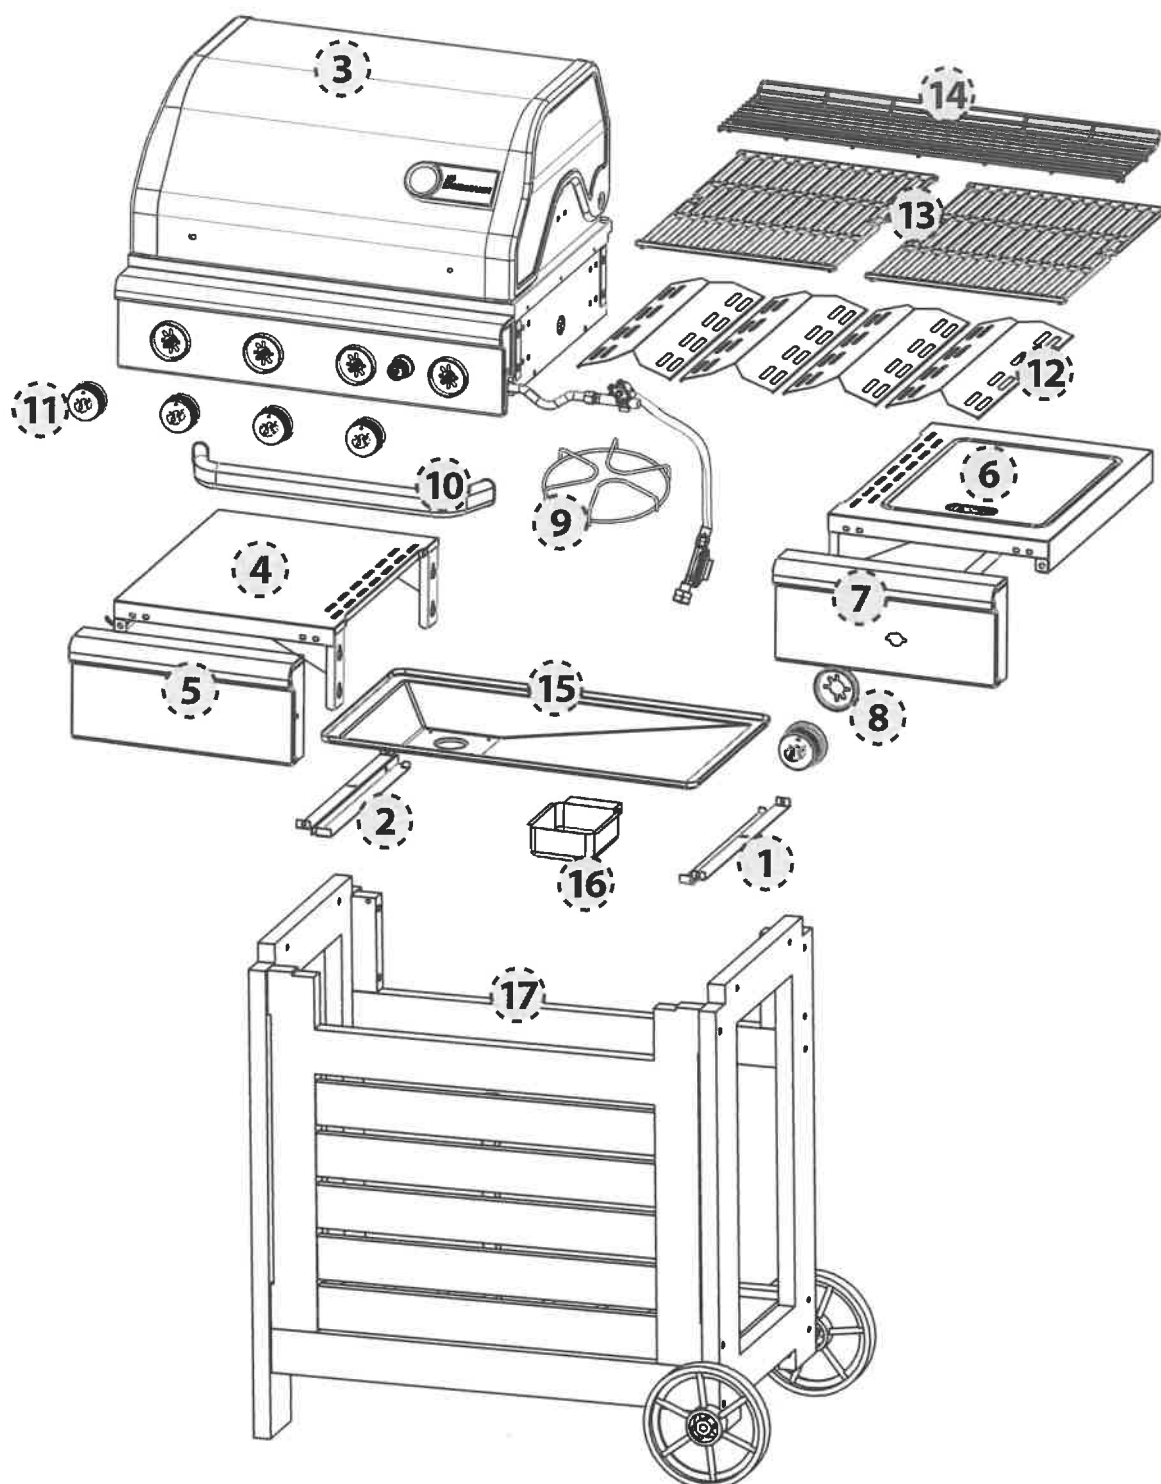

A	B	C	D	E	F	G
						
M4x10	M6x12	M5x10	M4x6	M6x40		M4x15
2x	10x	6x	2x	4x	2x	4x


Packed in the
Hardware Card of
wood trolley





A	B	C	D	E	F	
						
M8x100	M8	Ø8		M6x70	M6x45	
2x	2x	2x	6x	10x	4x	2x



the screw G used in
Step 1 of head unit
assembly

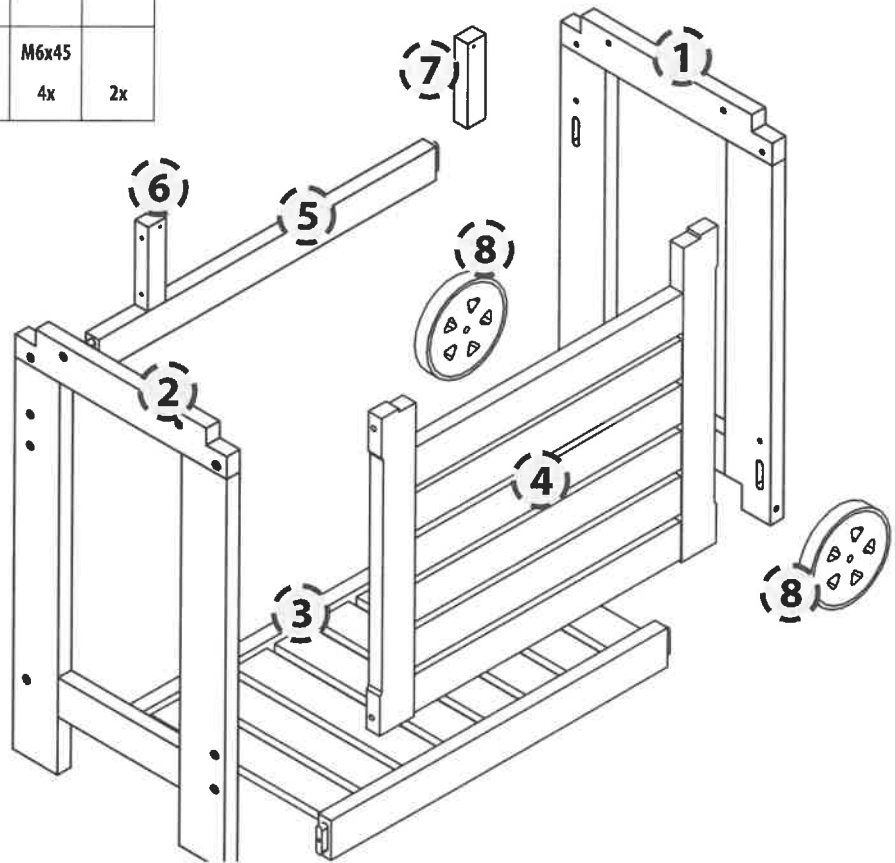


1.

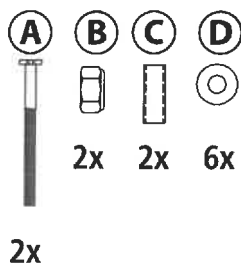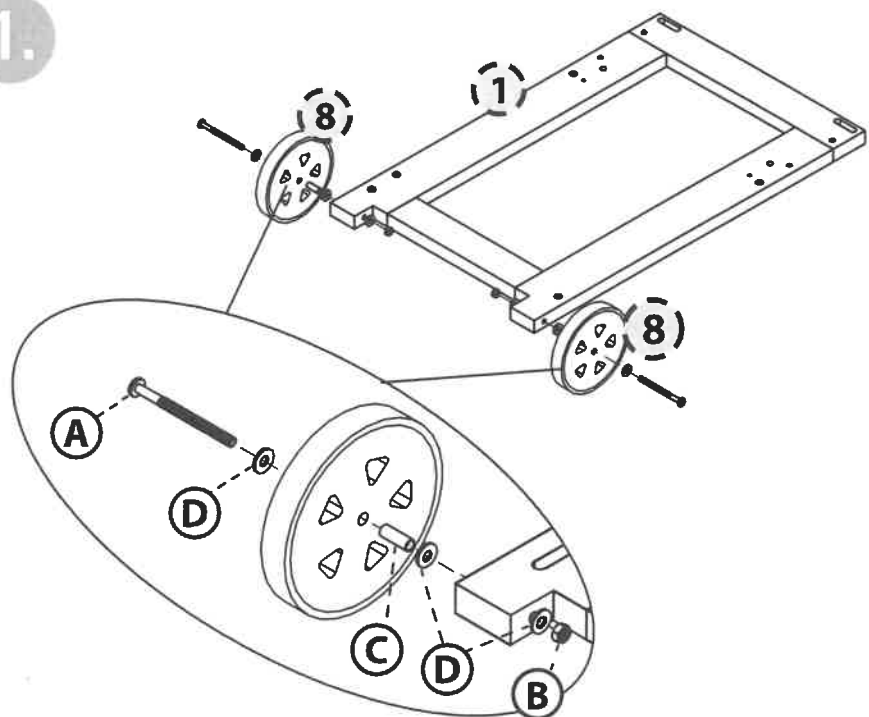

2.

E
10x

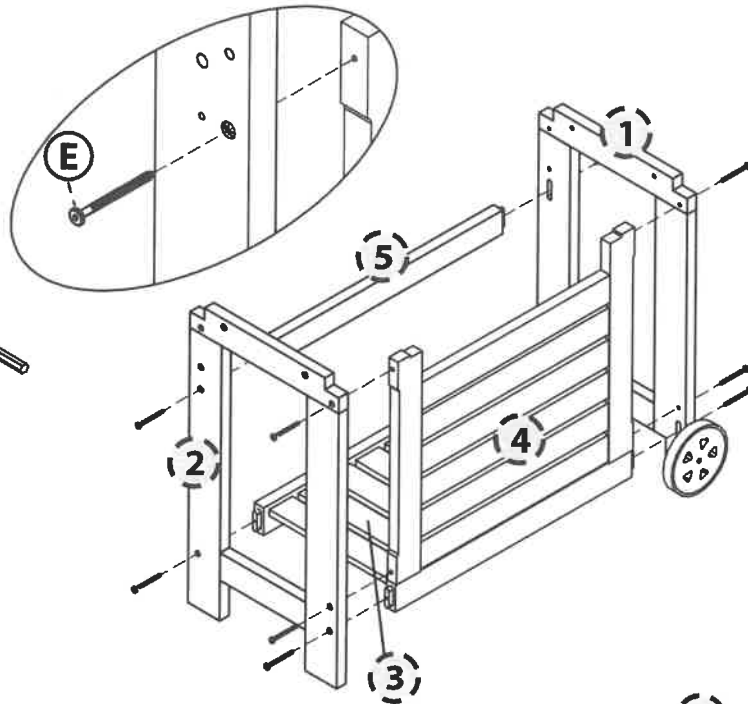

3.



F
4x

