




PORTARROLLOS RESERVA PARED

RESERVED WALL ROLL HOLDER

INSTALACIÓN DE MONTAJE / ASSEMBLY INSTALLATION

1. Atornillar el portarrollos reserva a a la pared.

1. Screw the reserve roll holder a to the wall.

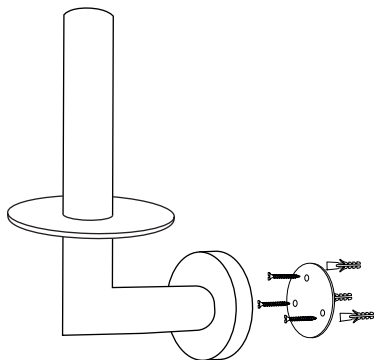

PURESANIT
