


STROHM


TEKA

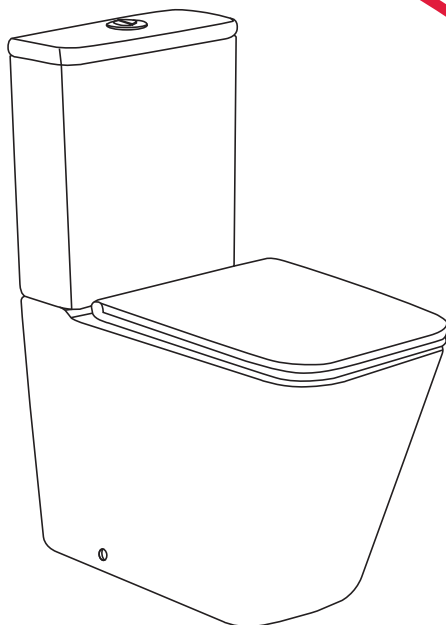

# FORMENTERA

GUÍA INSTALACIÓN INODORO  
TOILET INSTALLATION GUIDE









# 1. Cotas y rangos

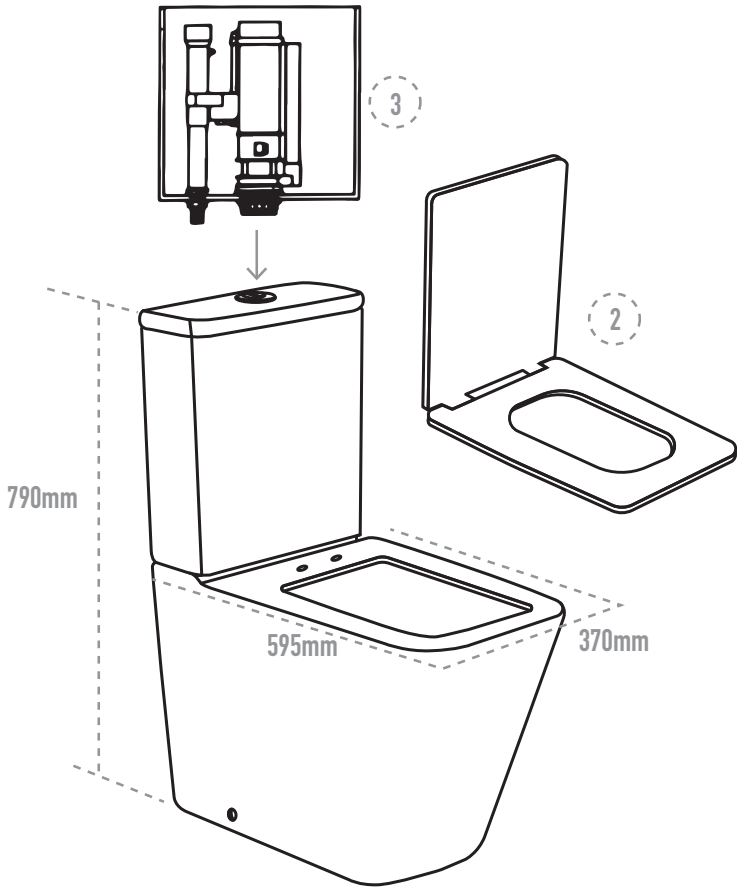

## 2. Contenido del paquete



No incluido  
Not included  
Non incluso  
Não incluido  
Neinclus  
Brak w zestawie  
Не включено

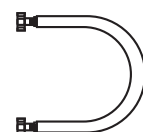






A (x2)



A1 (x2)

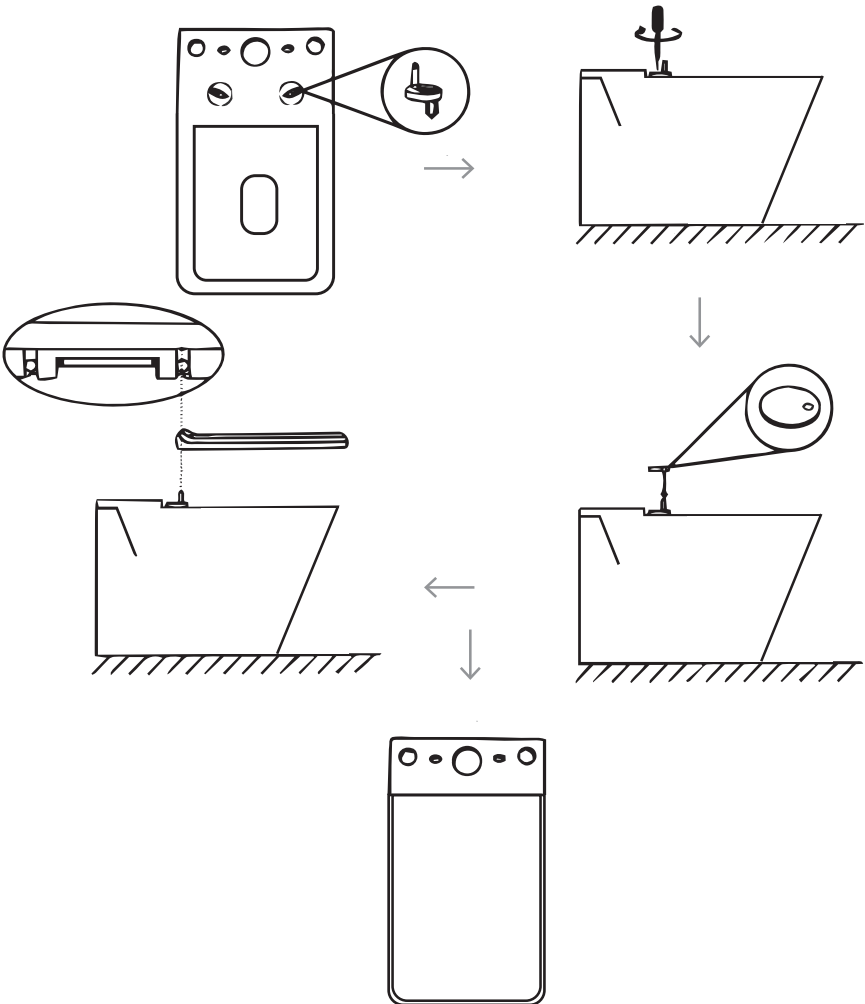

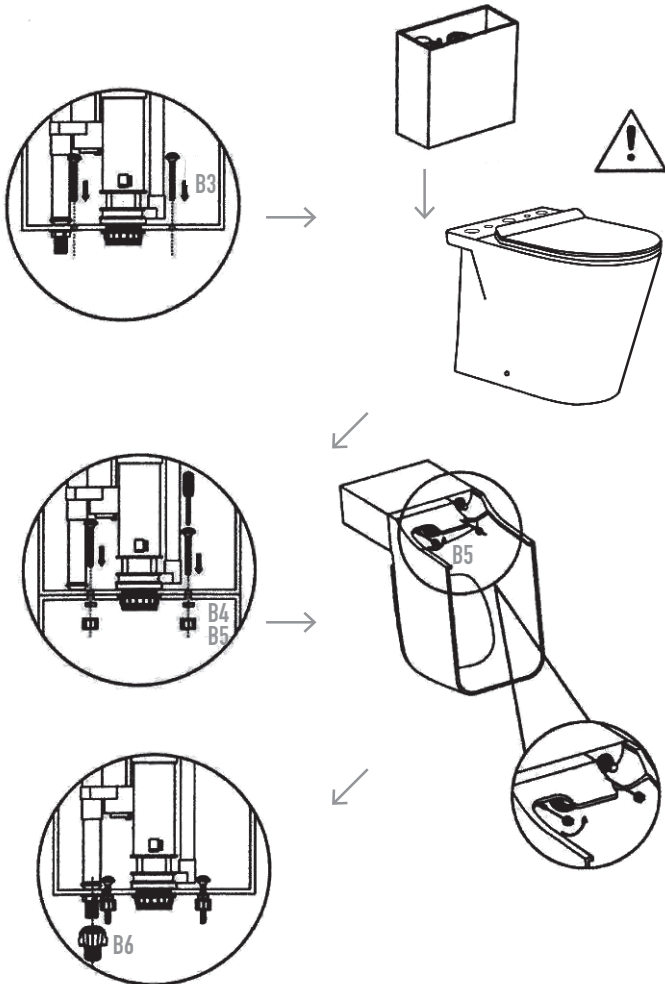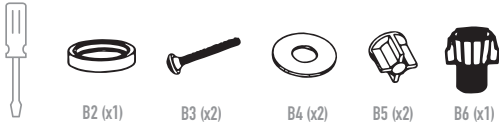







B (x1)





B1 (x1)

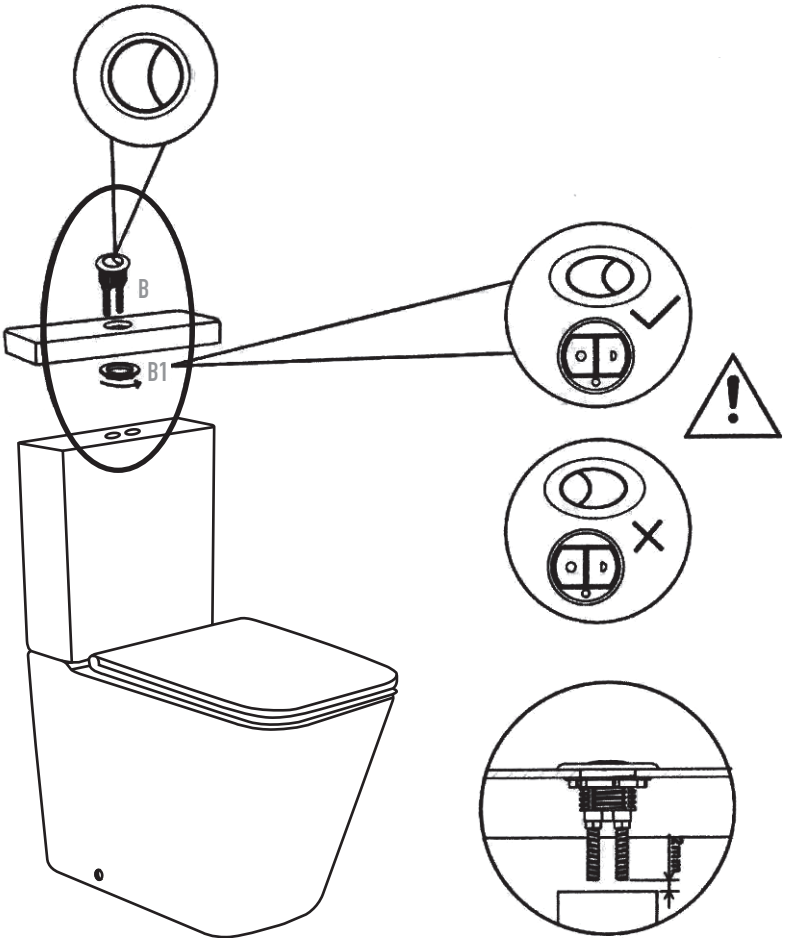


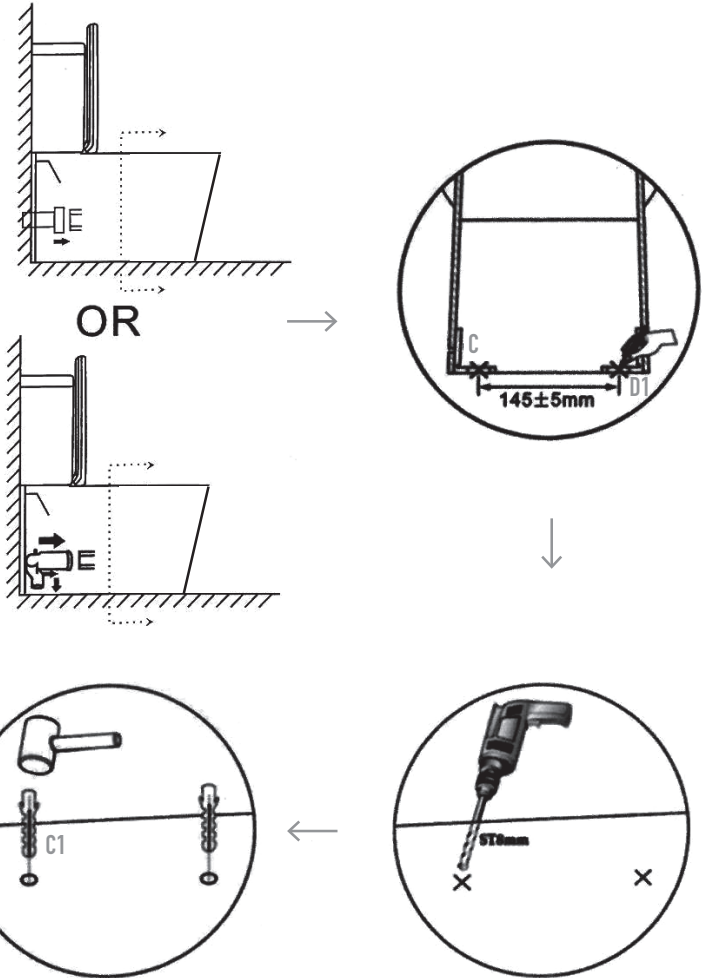

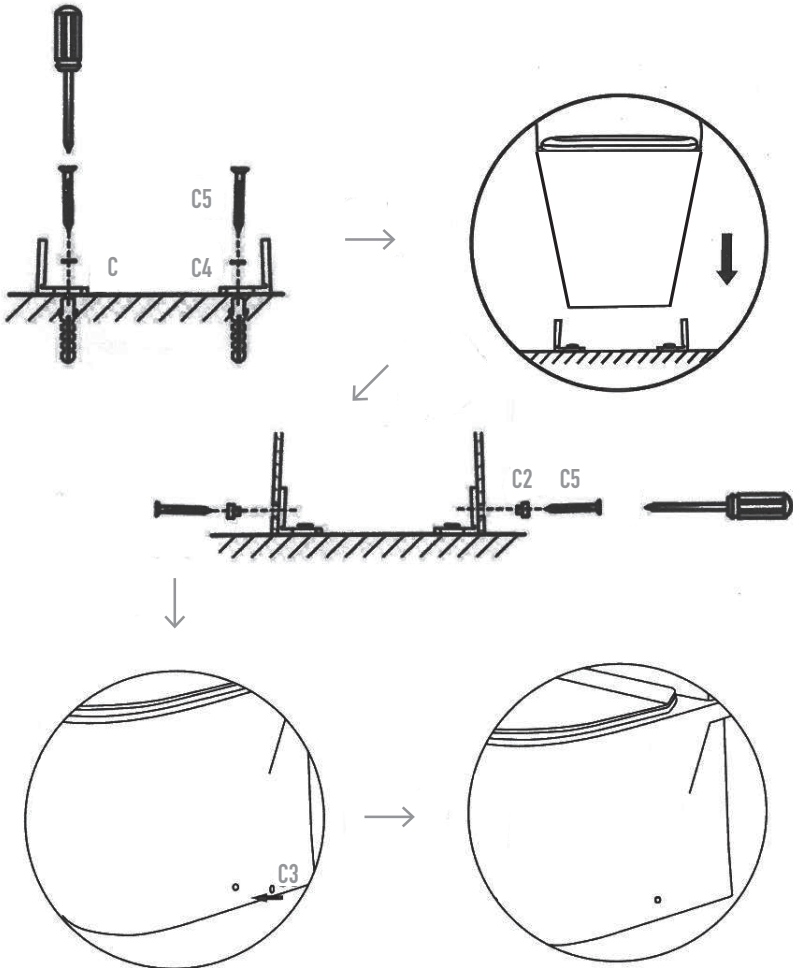



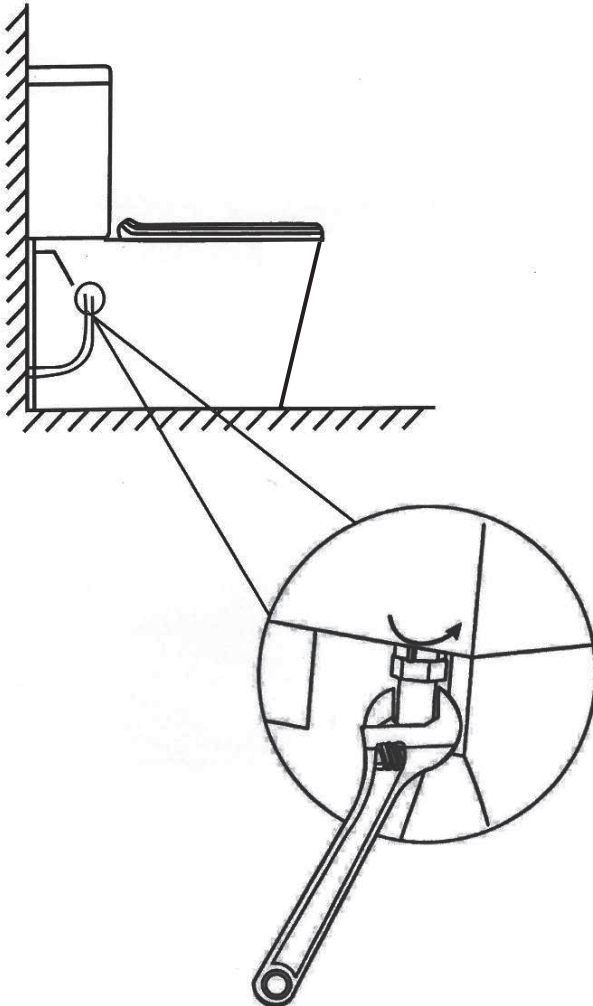

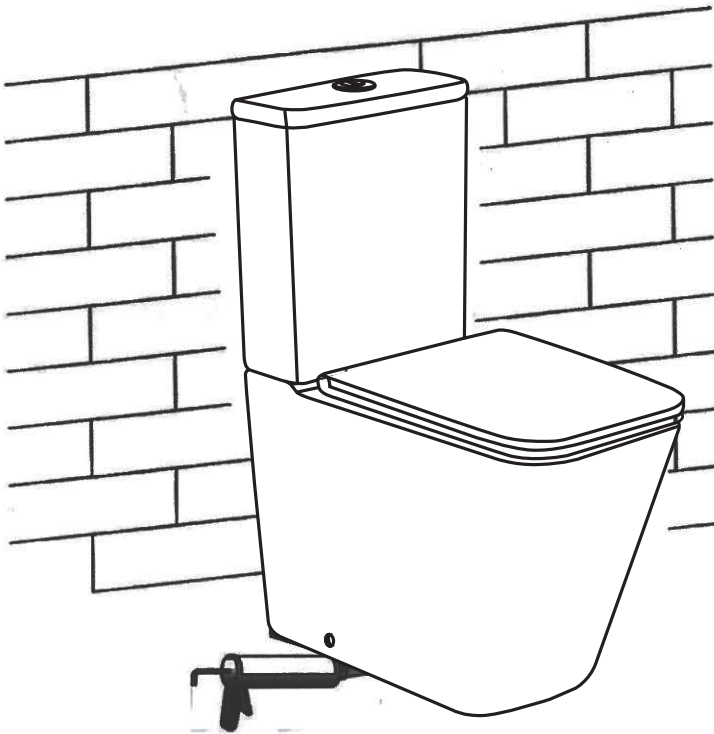



STROHM 

[WWW.STROHM-TEKA.COM](http://WWW.STROHM-TEKA.COM)