



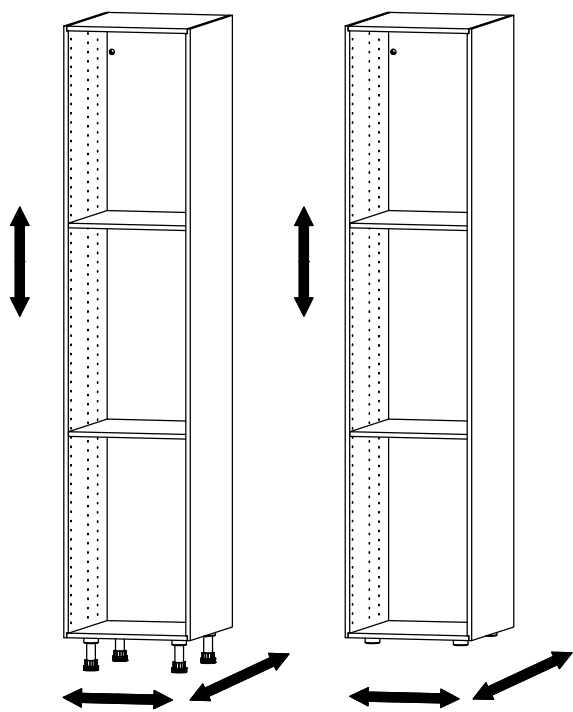


↑ 223 ↔ 45 ↗ 56

↑ 213 ↔ 45 ↗ 56

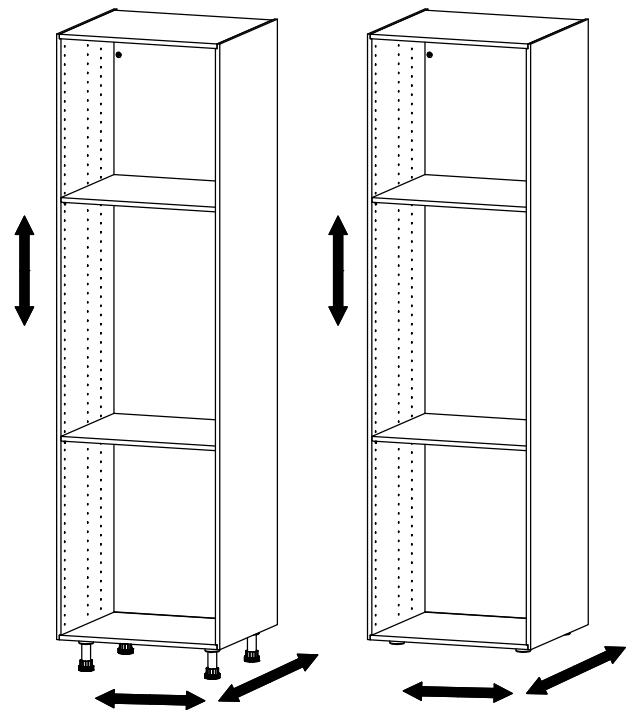


↑ 223 ↔ 60 ↗ 56

↑ 213 ↔ 60 ↗ 56

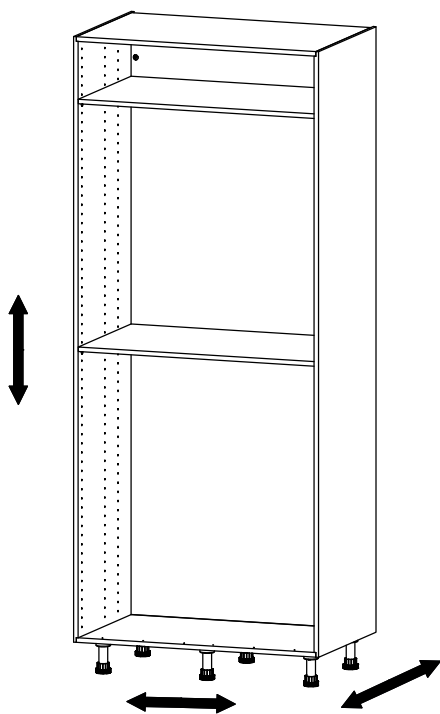

↑ 223 ↔ 90 ↗ 56

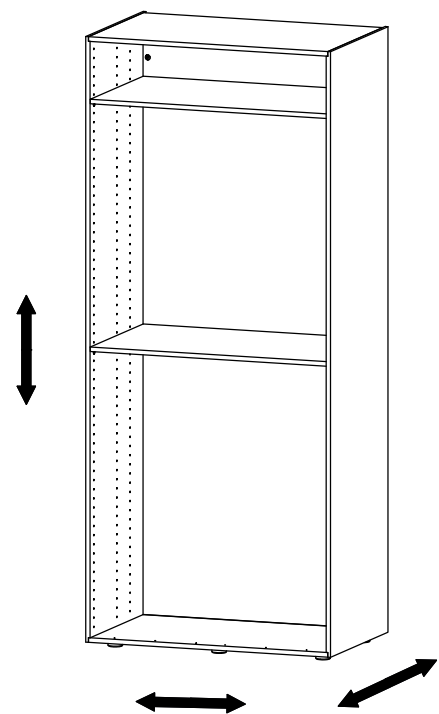


↑ 213 ↔ 90 ↗ 56

**FABRIQUÉ
EN FRANCE**










ALSAPAN
54 Rue du Général Rascas
57220 Boulay-Moselle
602740



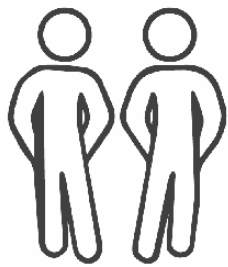


**20
MIN**

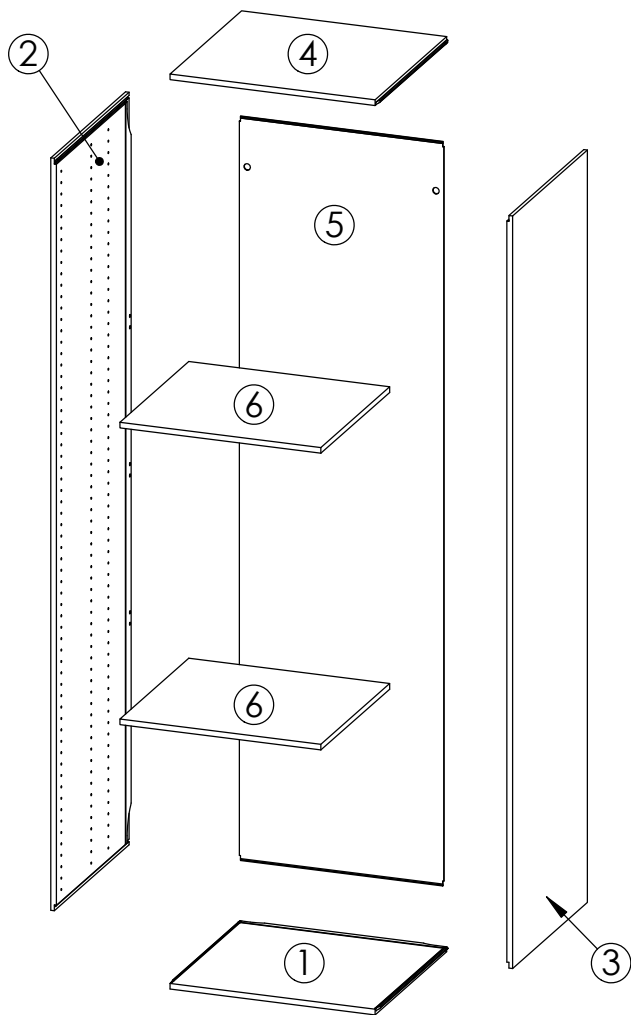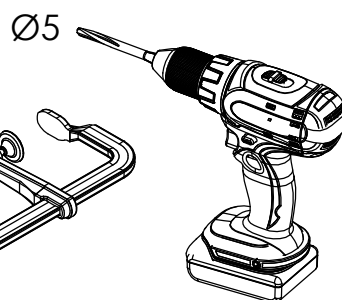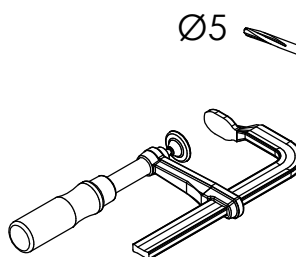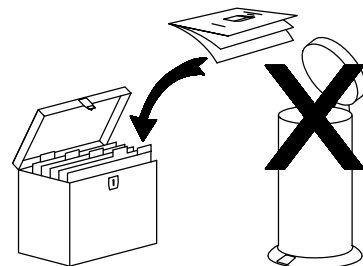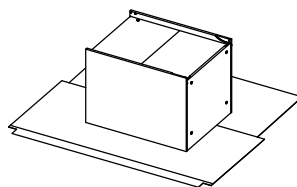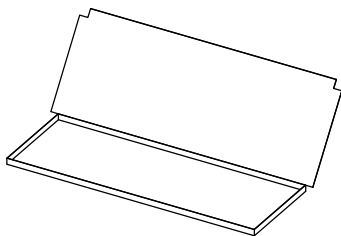


45

60

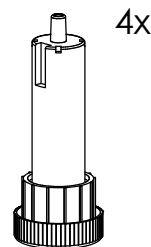

4x



4x




4x




4x

90



6x




6x



6x



6x

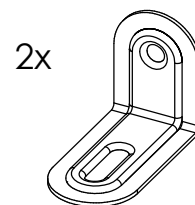

2x

2x



2x





2x



8x





2x

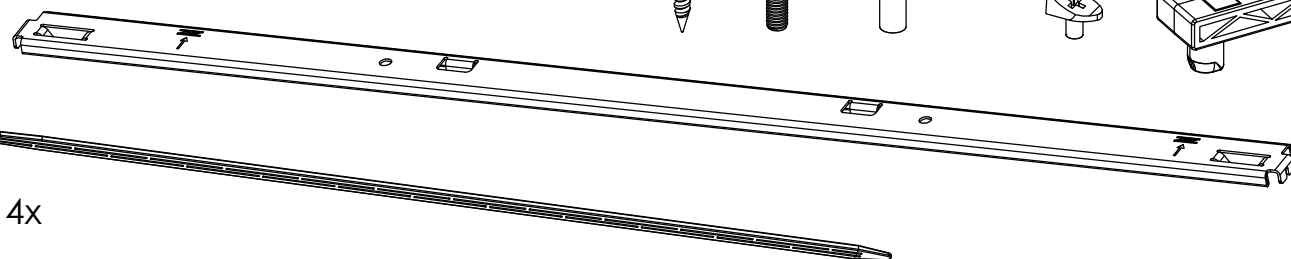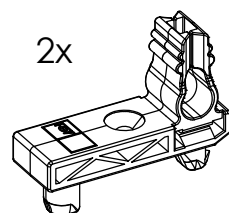

4x


1x

1

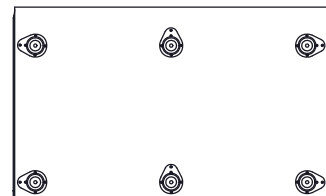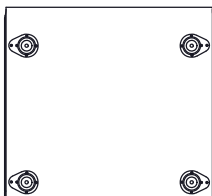

45
60

CUISINE




DRESSING



90




2

45
60




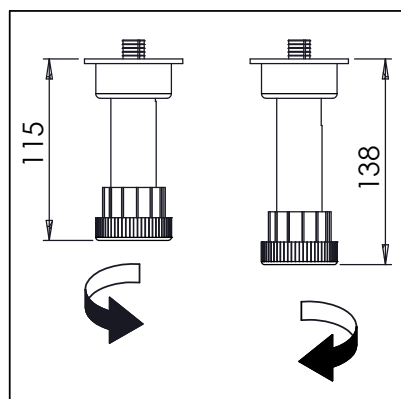


90

3

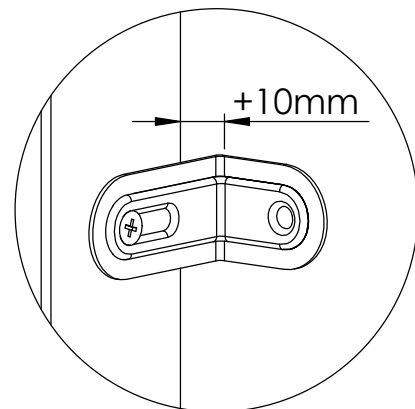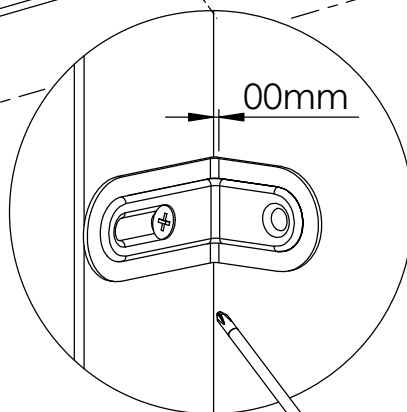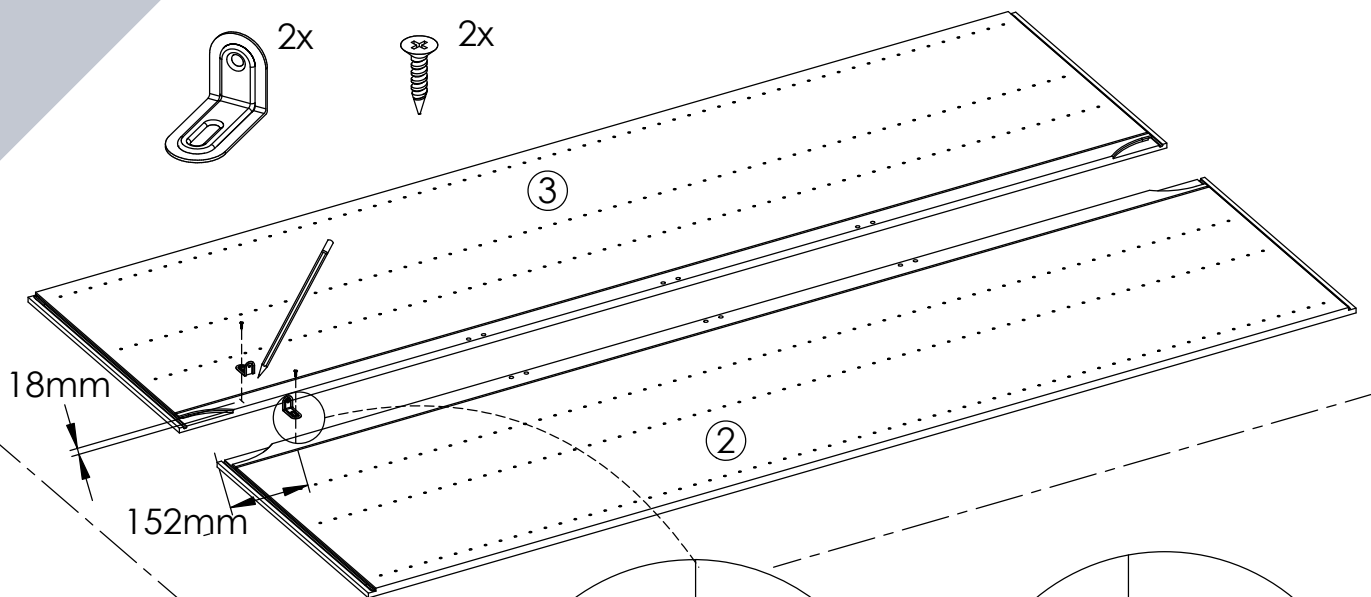


4

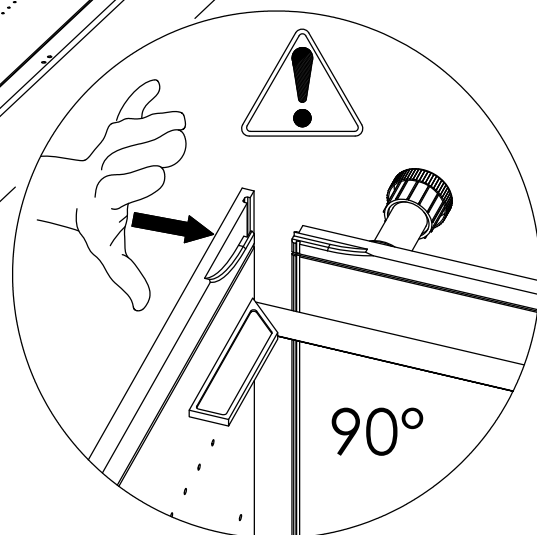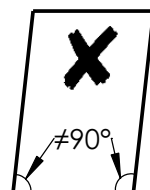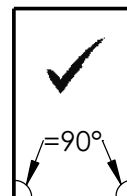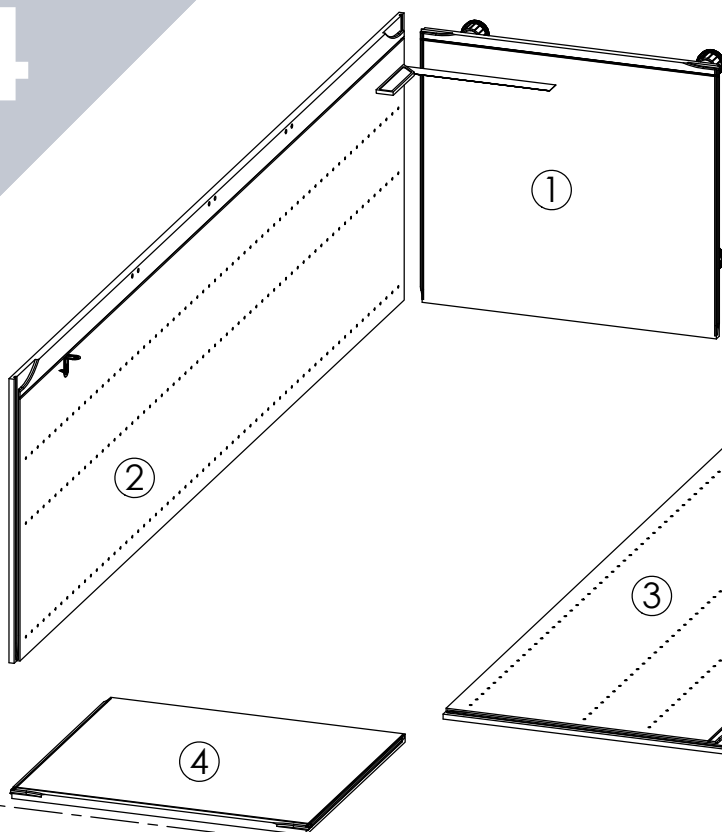

5



1x

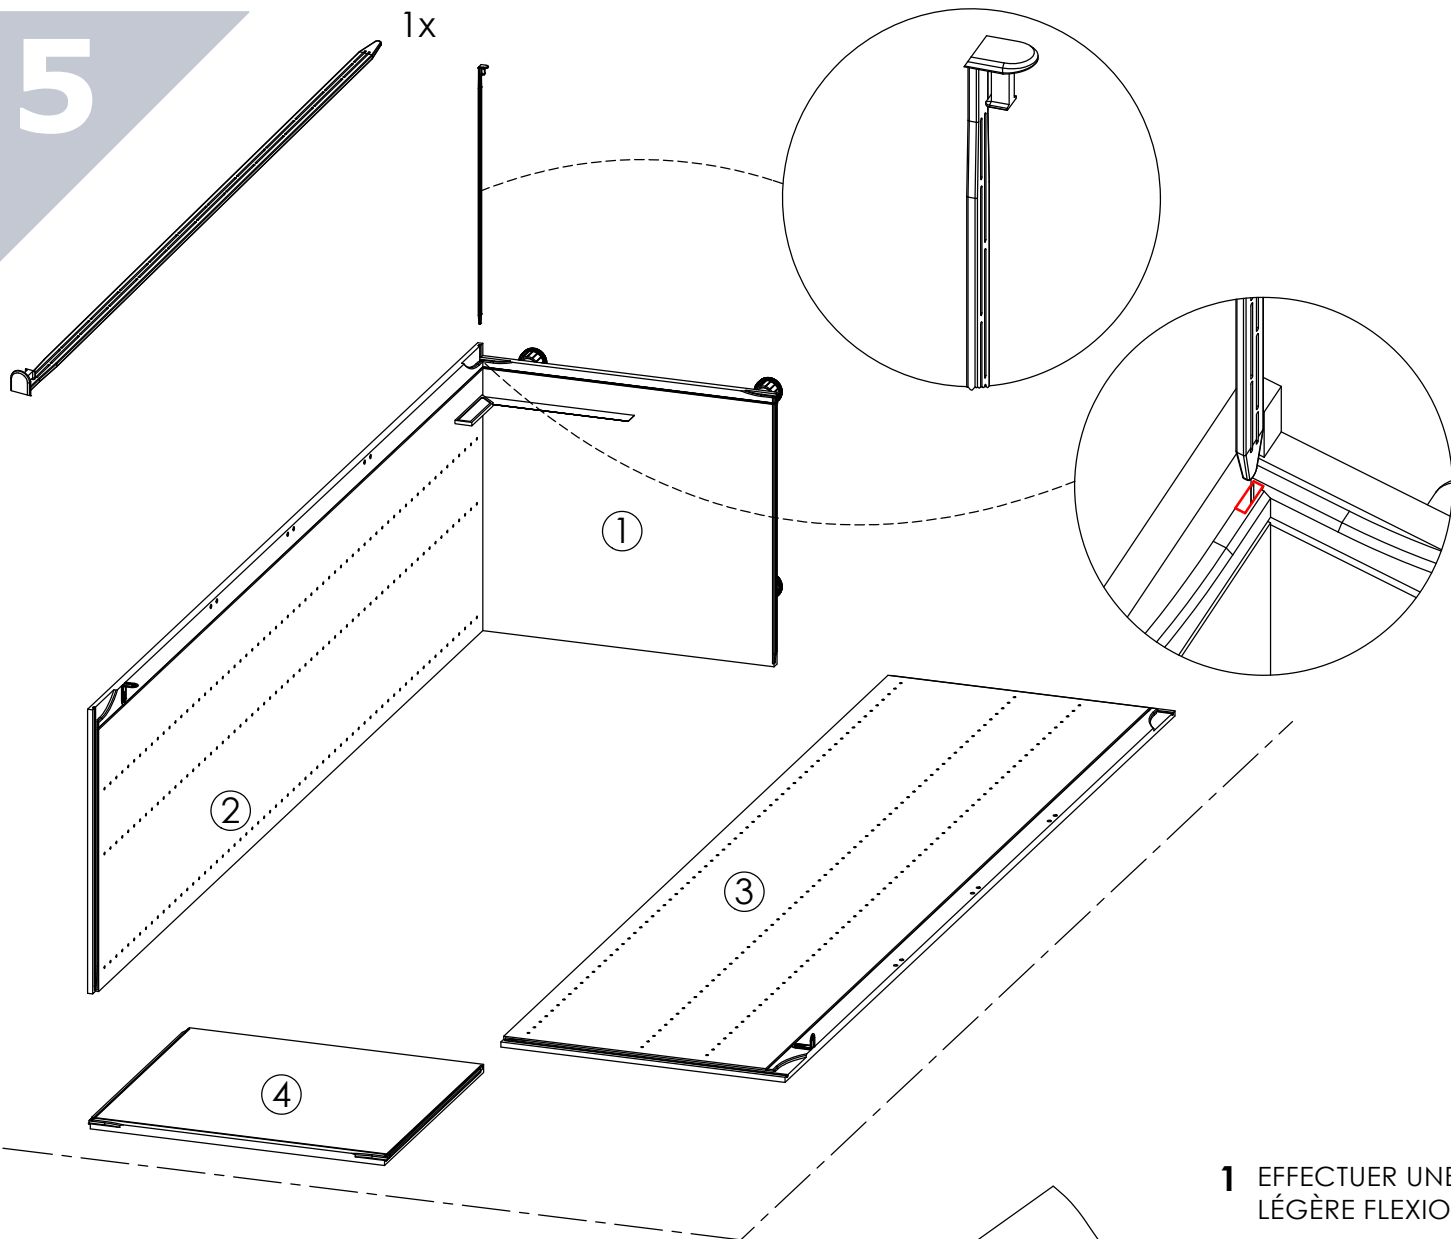

1 EFFECTUER UNE LÉGÈRE FLEXION



2 POUSSER LA ZIPETTE

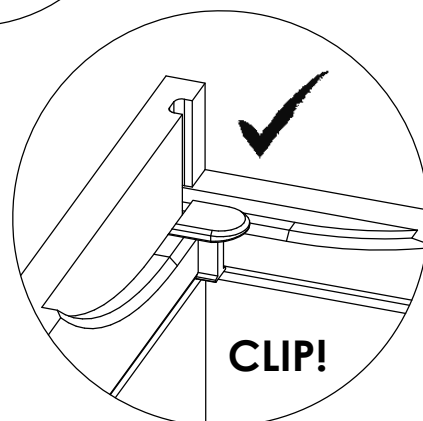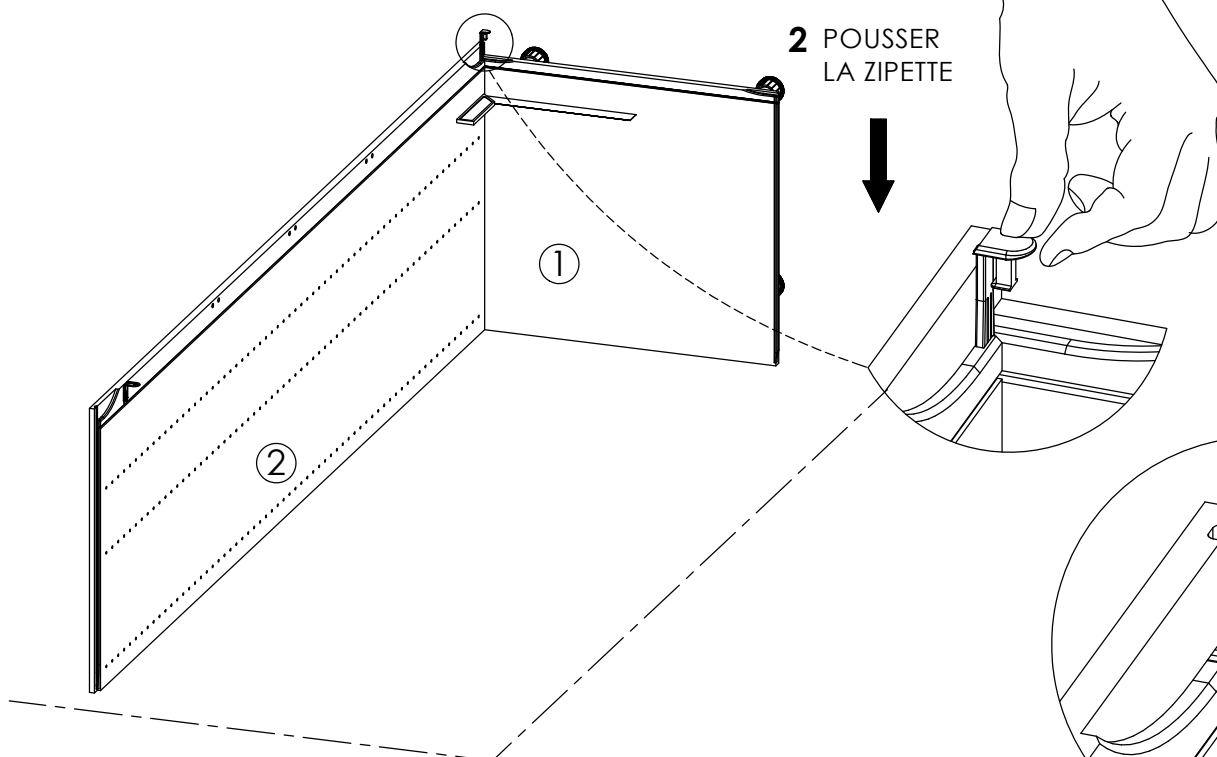

CLIP!







6




2 POUSSER LA ZIPETTE

CLIP!


7

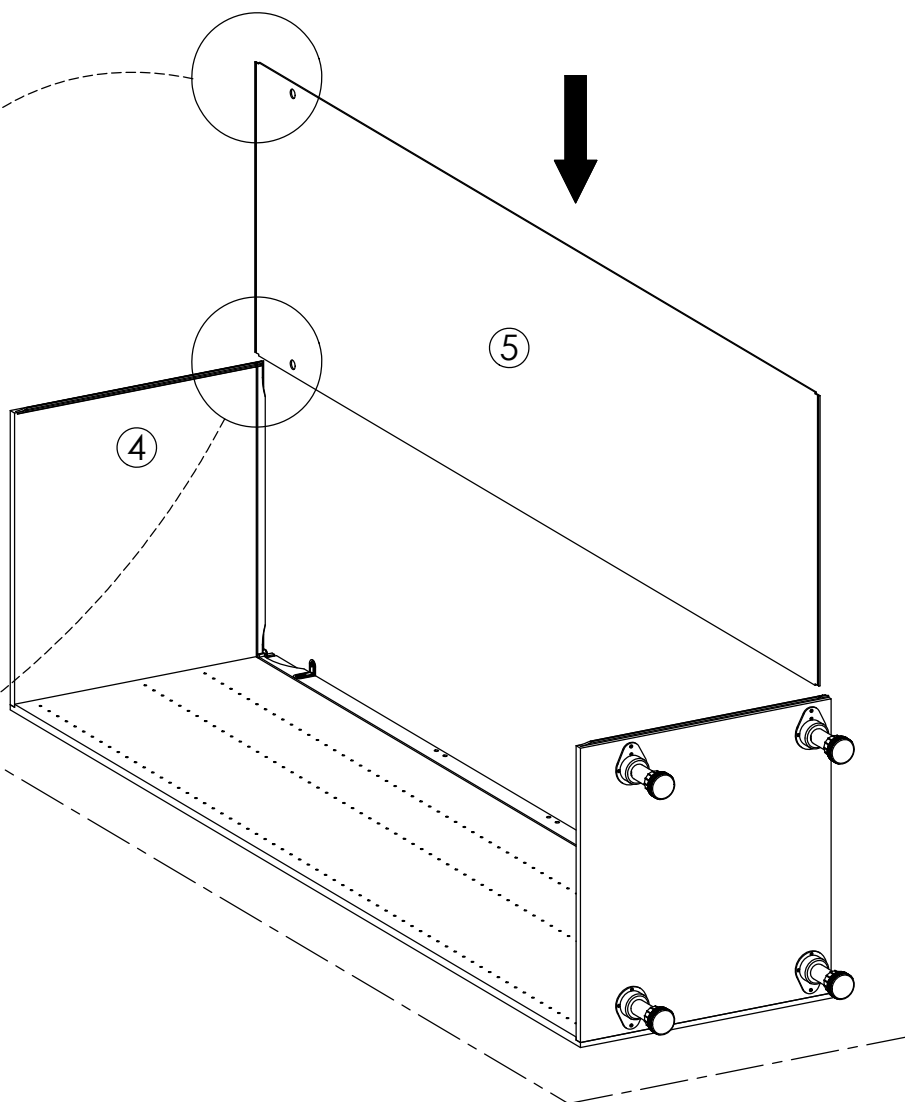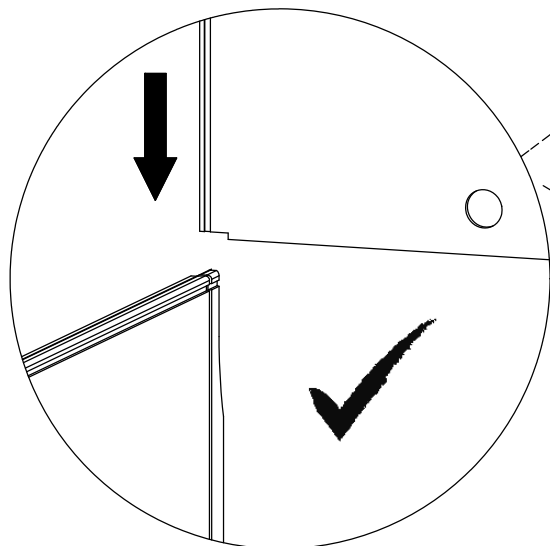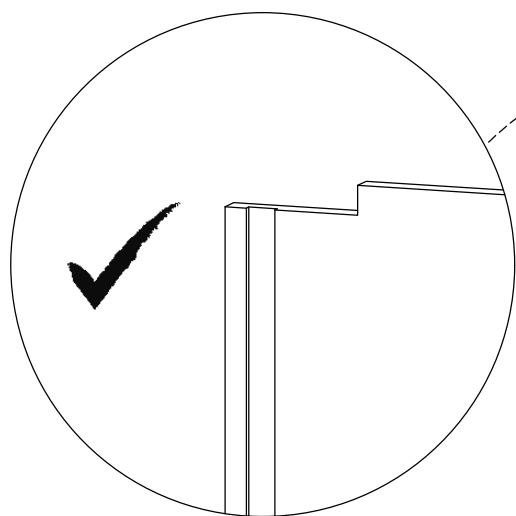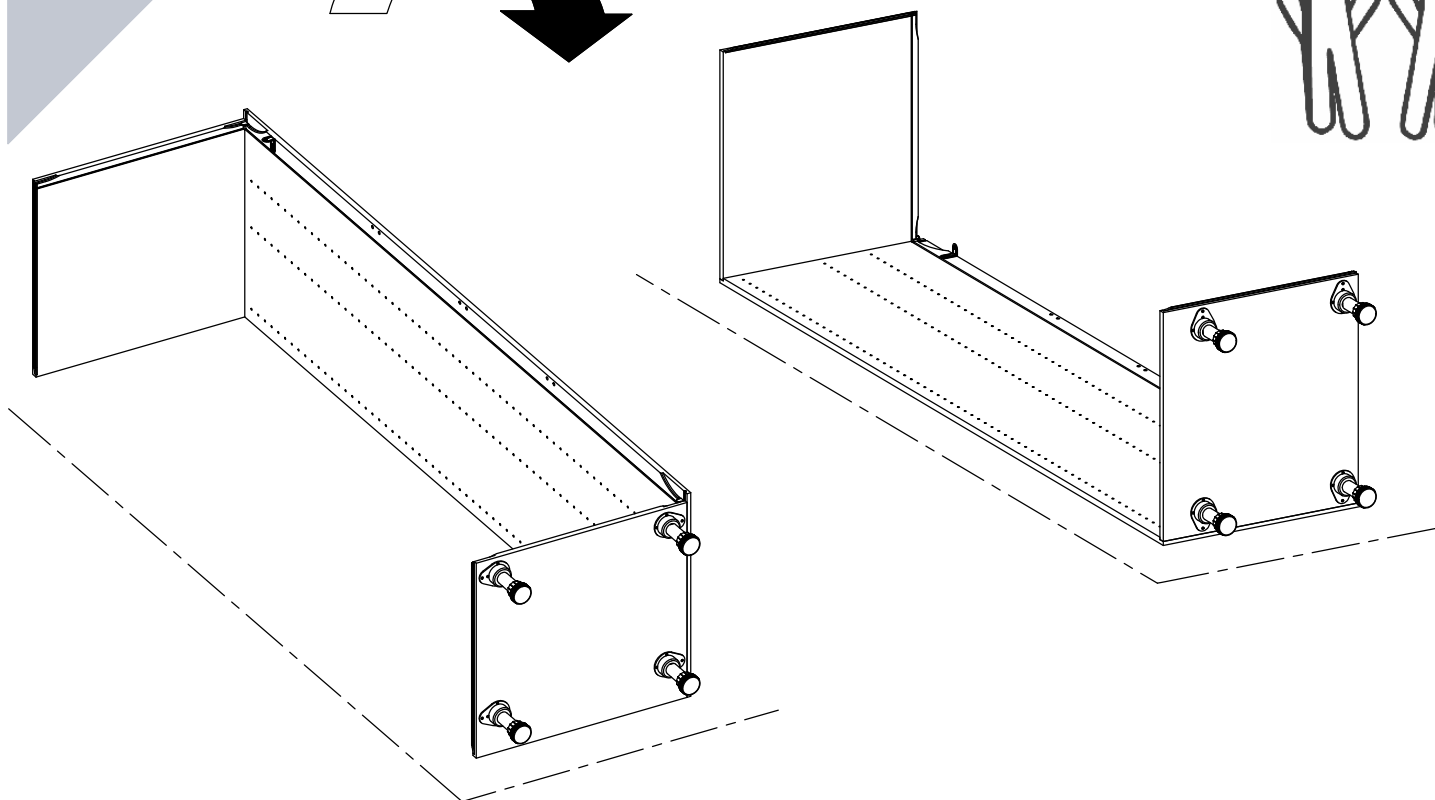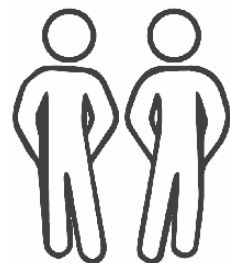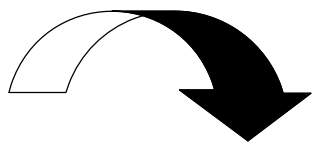

8

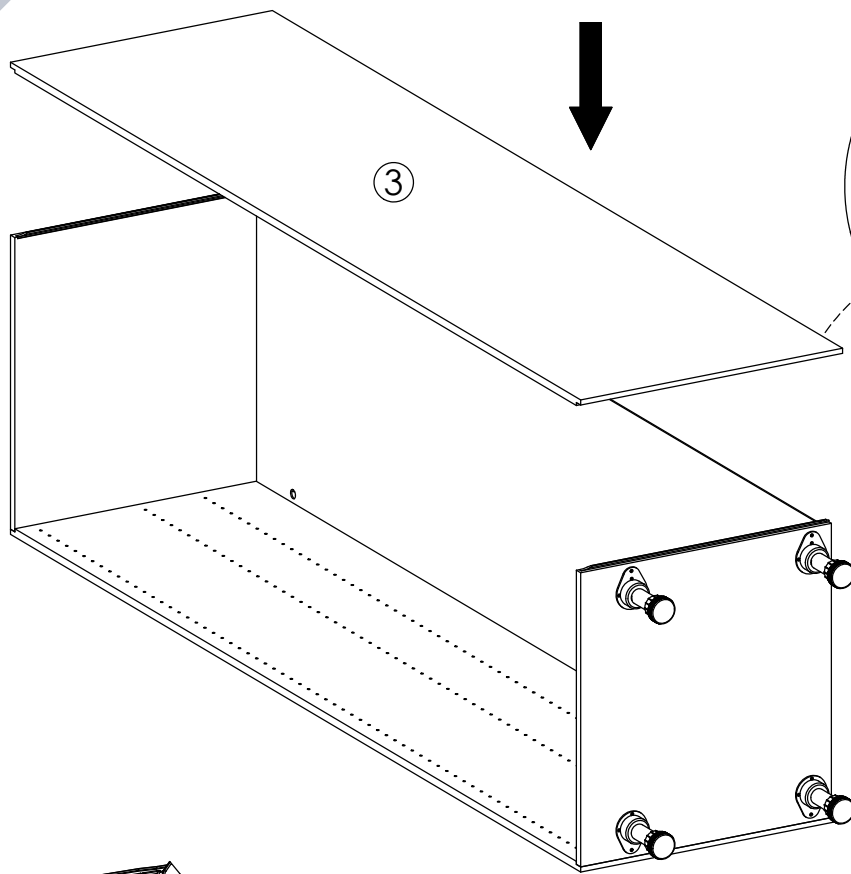

2x

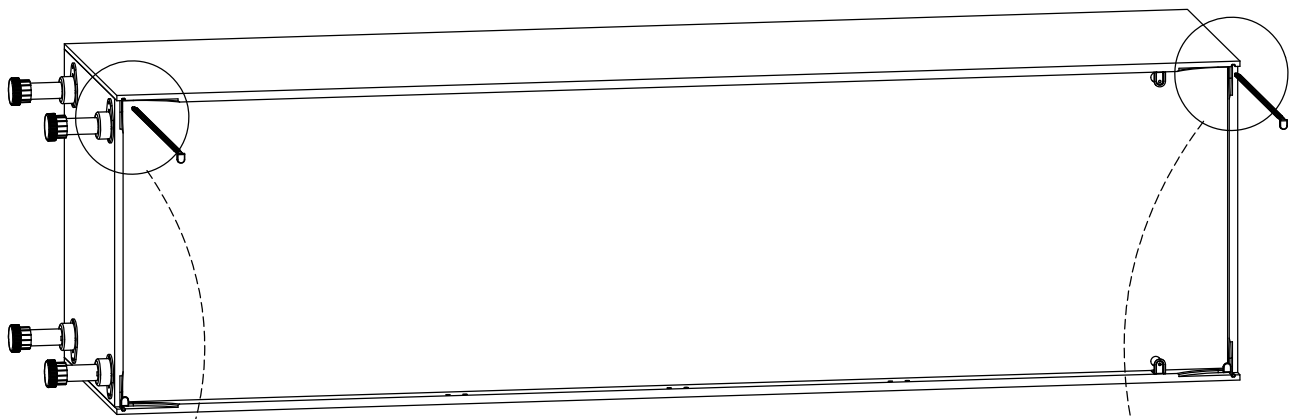


1 EFFECTUER UNE
LÉGÈRE FLEXION






2x






2 POUSSER
LA ZIPETTE

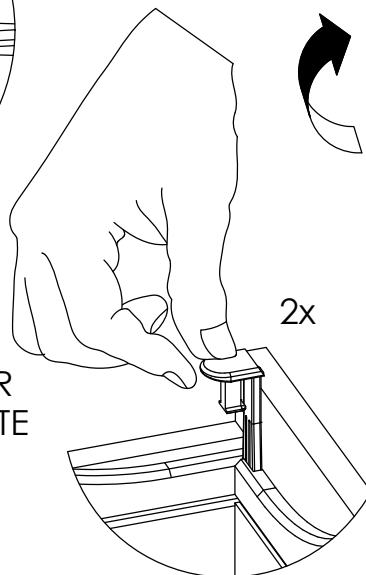

CLIP!

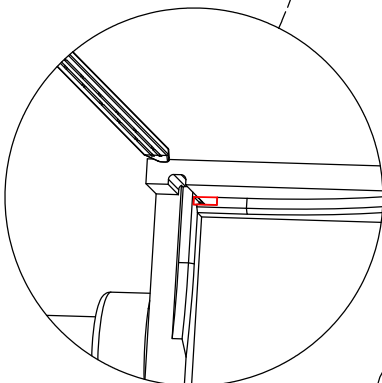
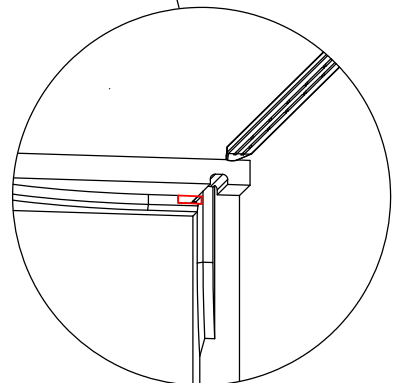
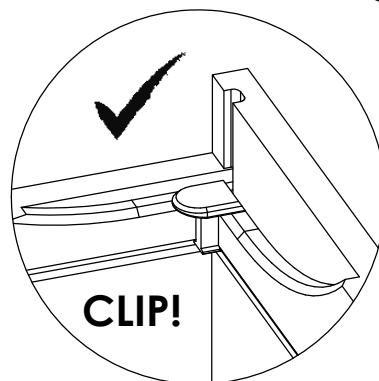


9

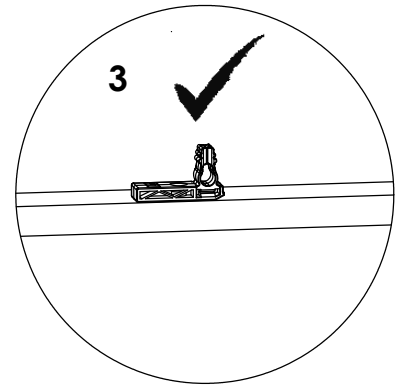
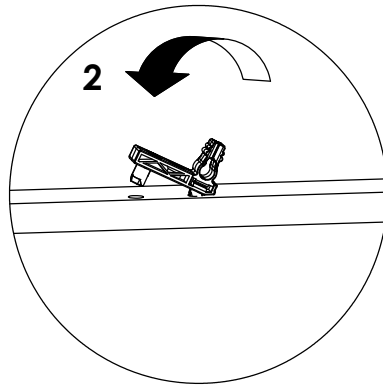
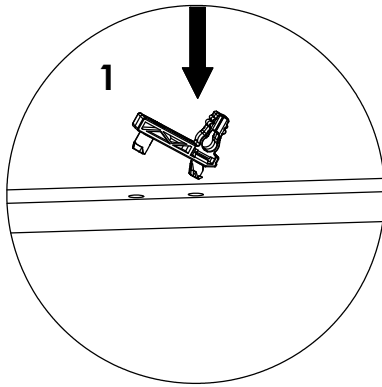
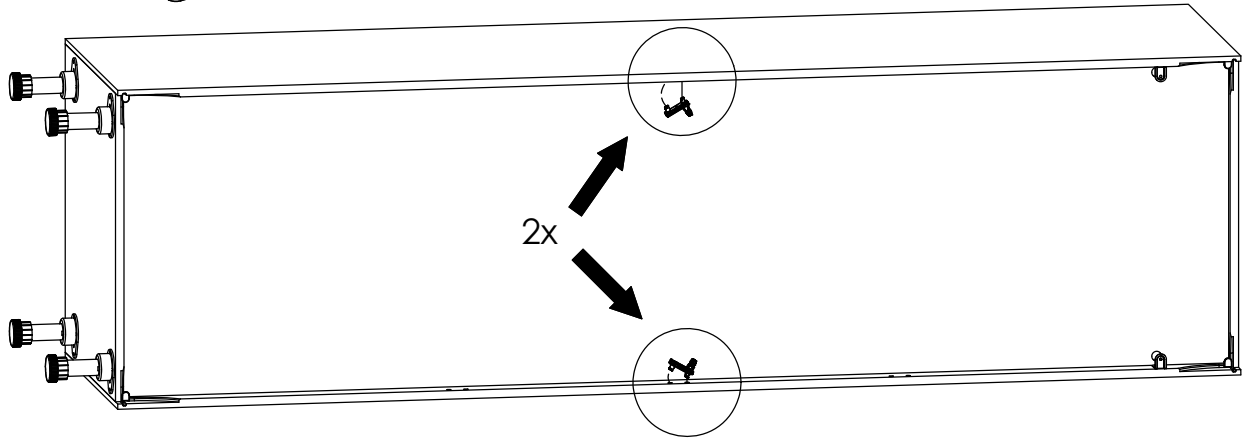
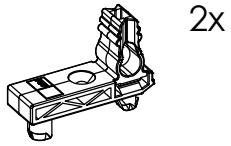


10





1x

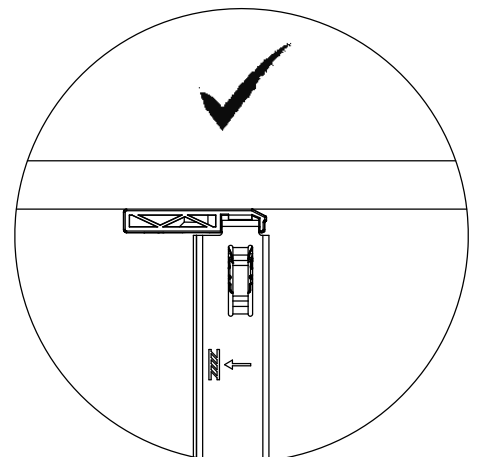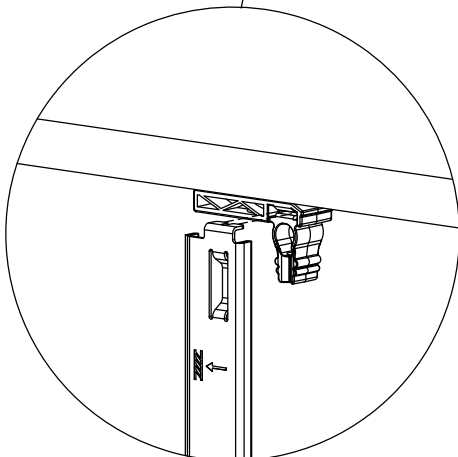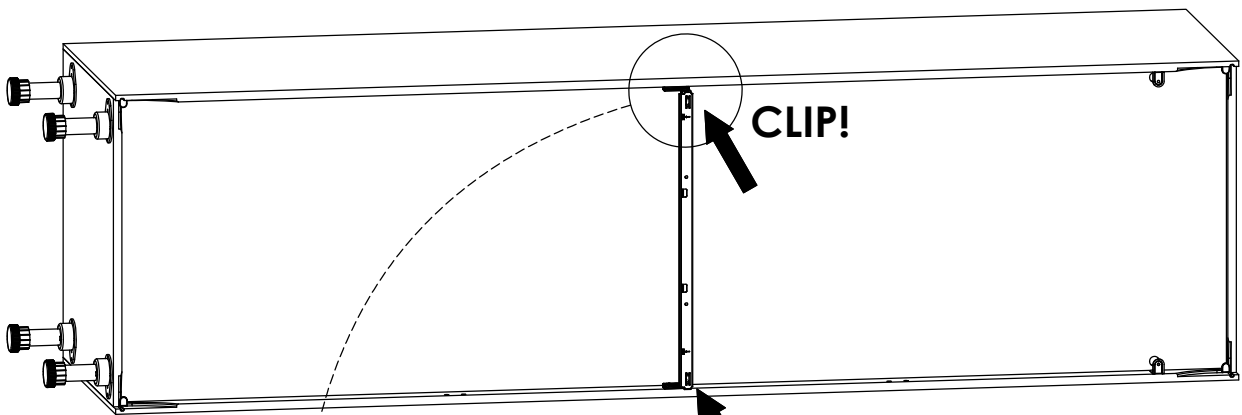

11

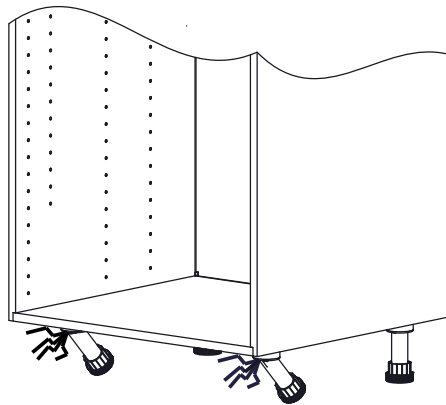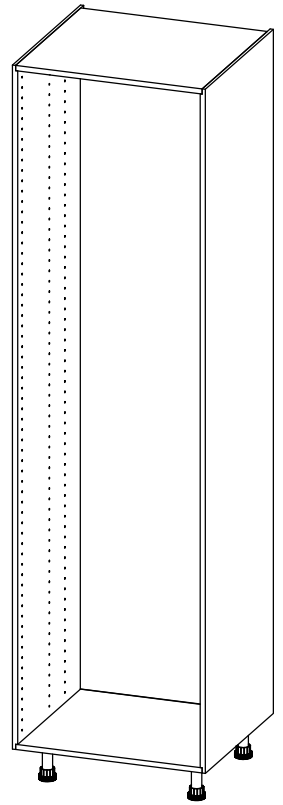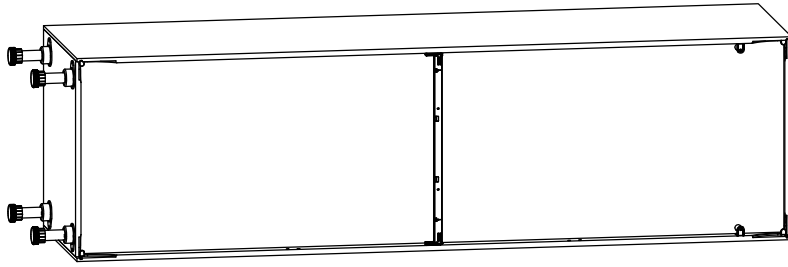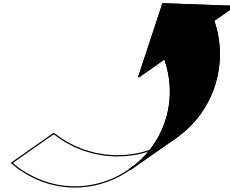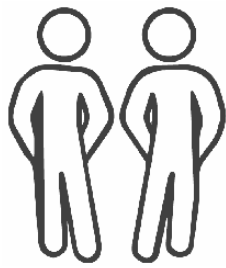


AJUSTER LES COTÉS AVEC LE DESSUS ET LE DESSOUS,
SI NÉCESSAIRE

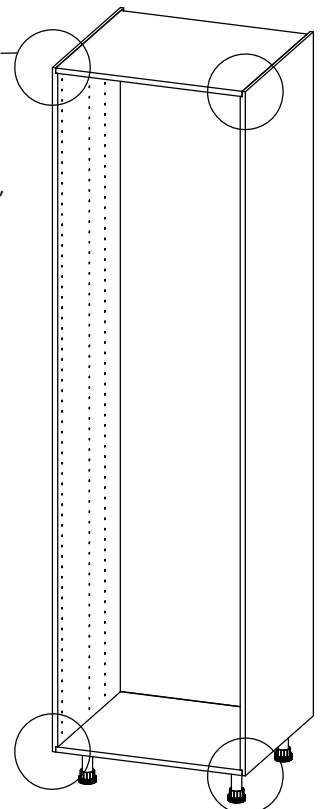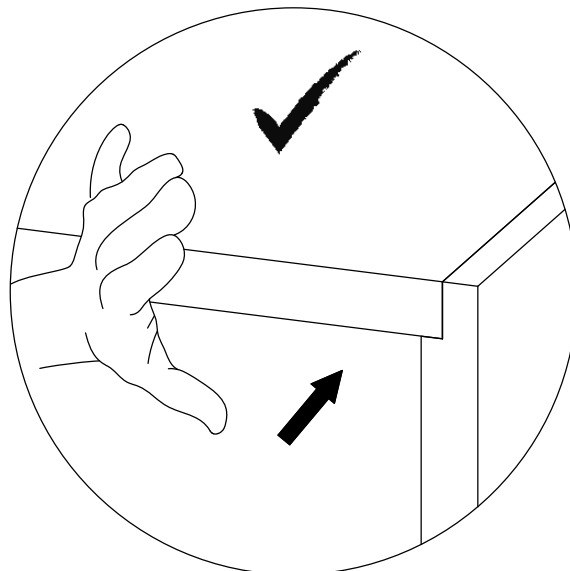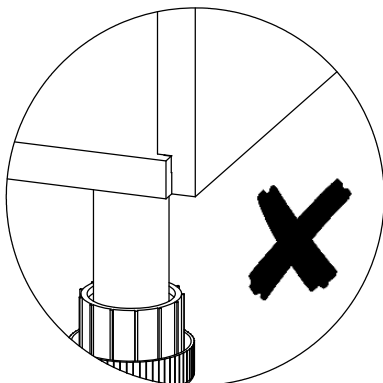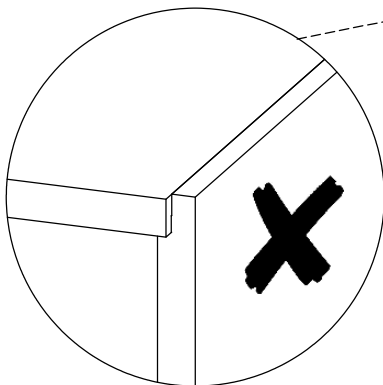



FIXATIONS MURALES NON FOURNIES,

ADAPTER LE MOYEN DE FIXATION
EN FONCTION DE LA NATURE DU MUR.
EN CAS DE DOUTE, VEUILLEZ CONTACTER UN PROFESSIONNEL

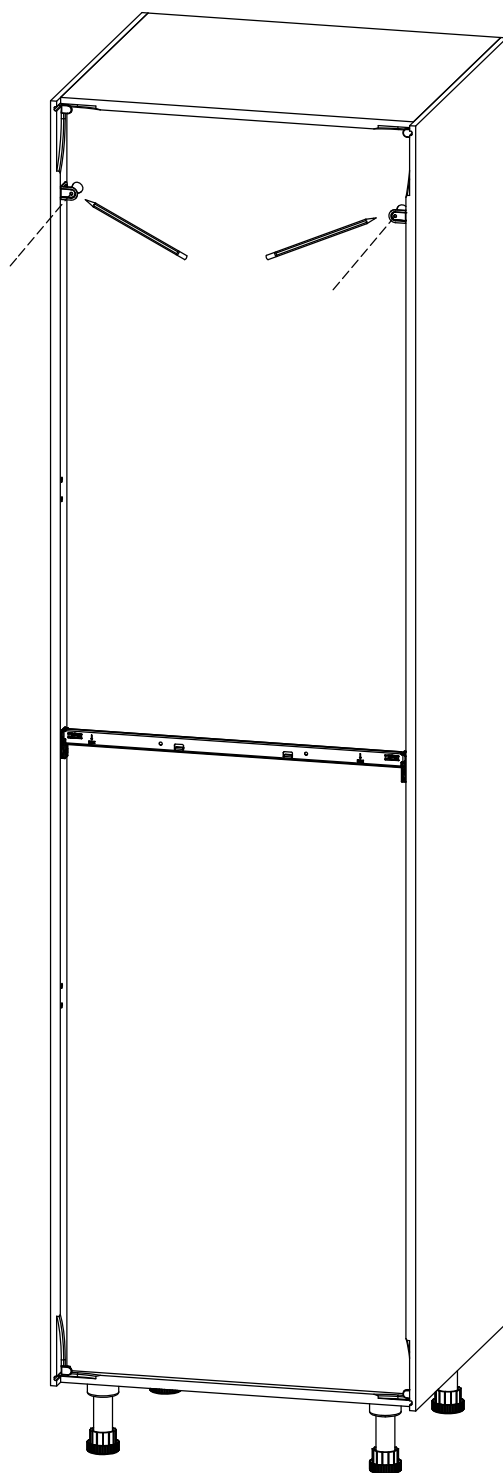






13



8x

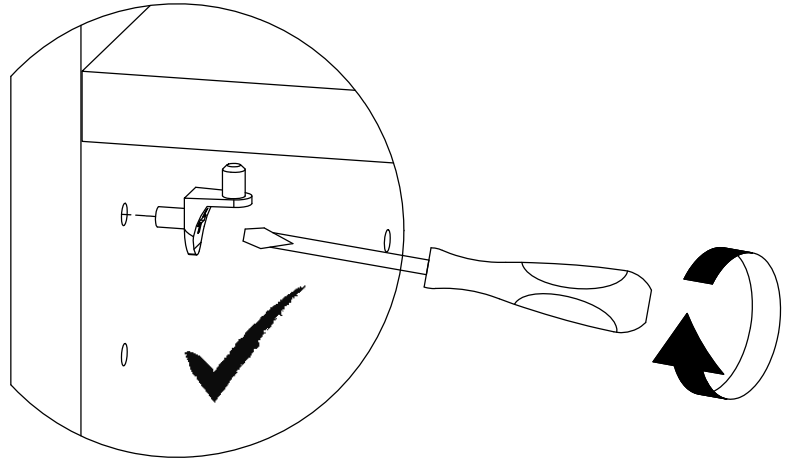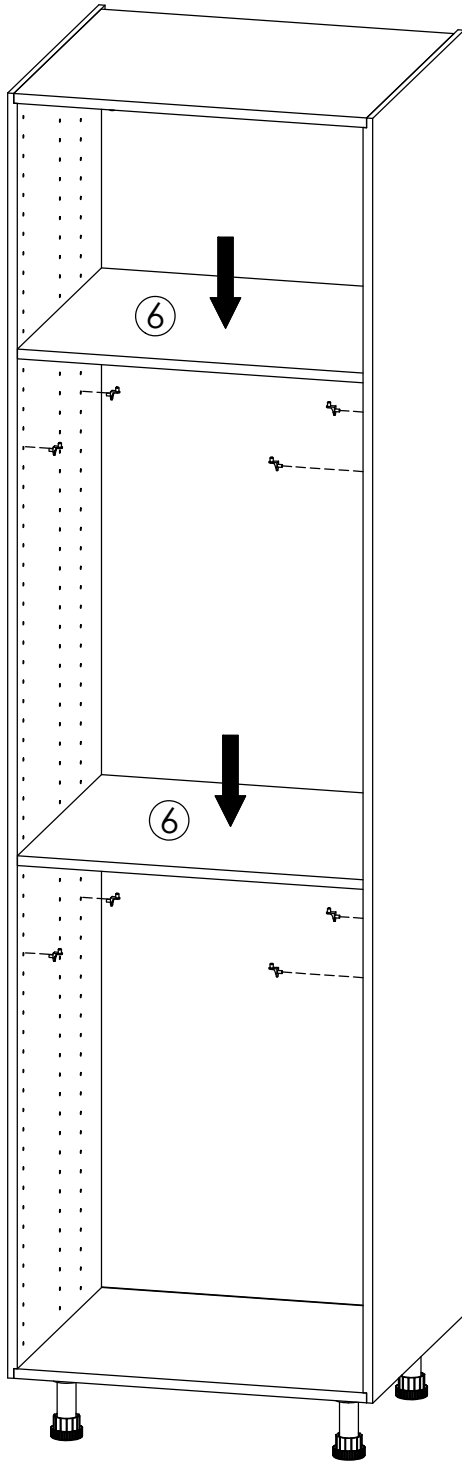

A AJUSTER SELON
LES DIMENSIONS
DE L'EQUIPEMENT

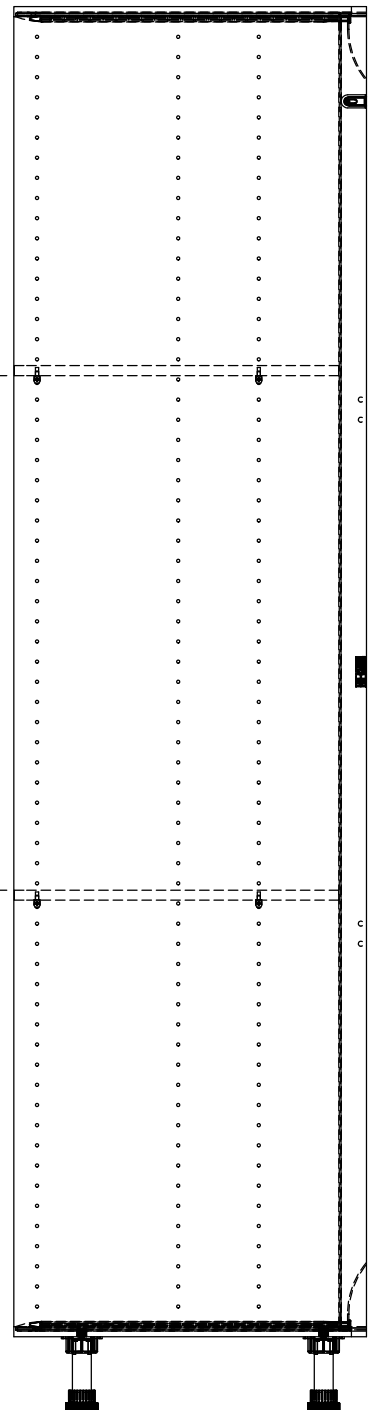

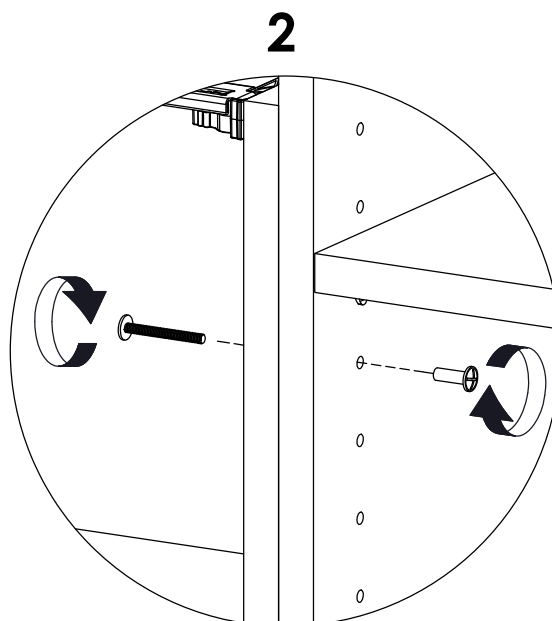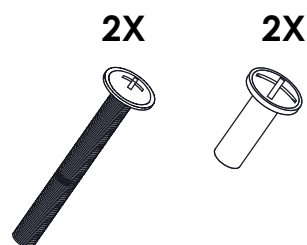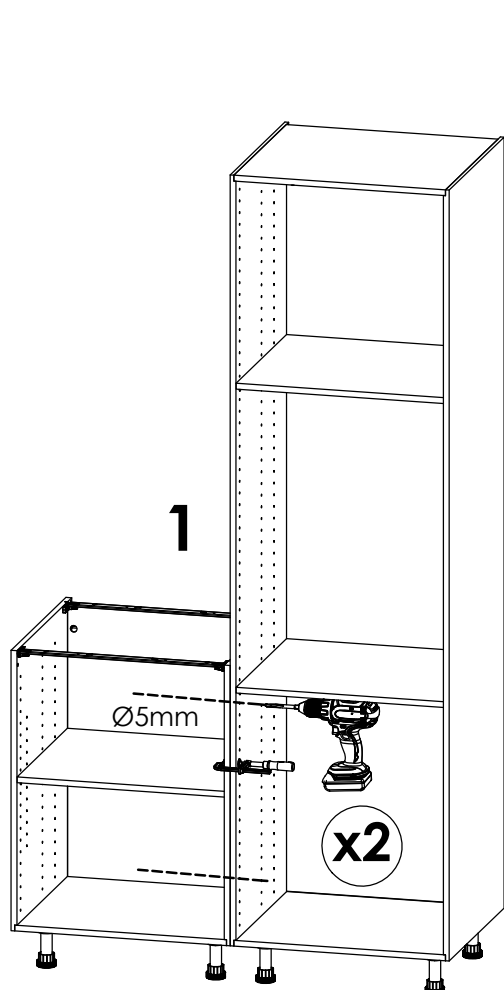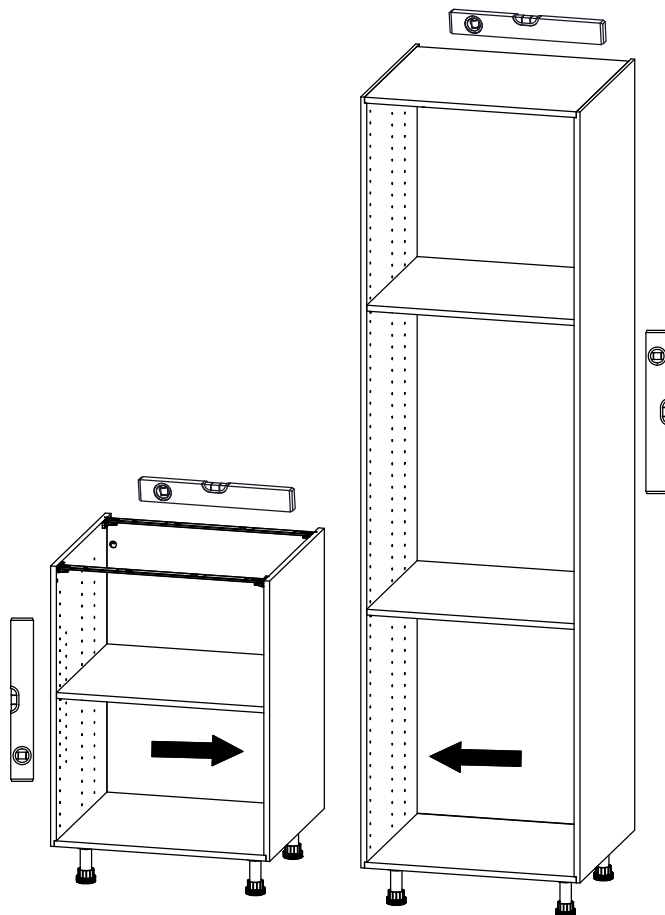

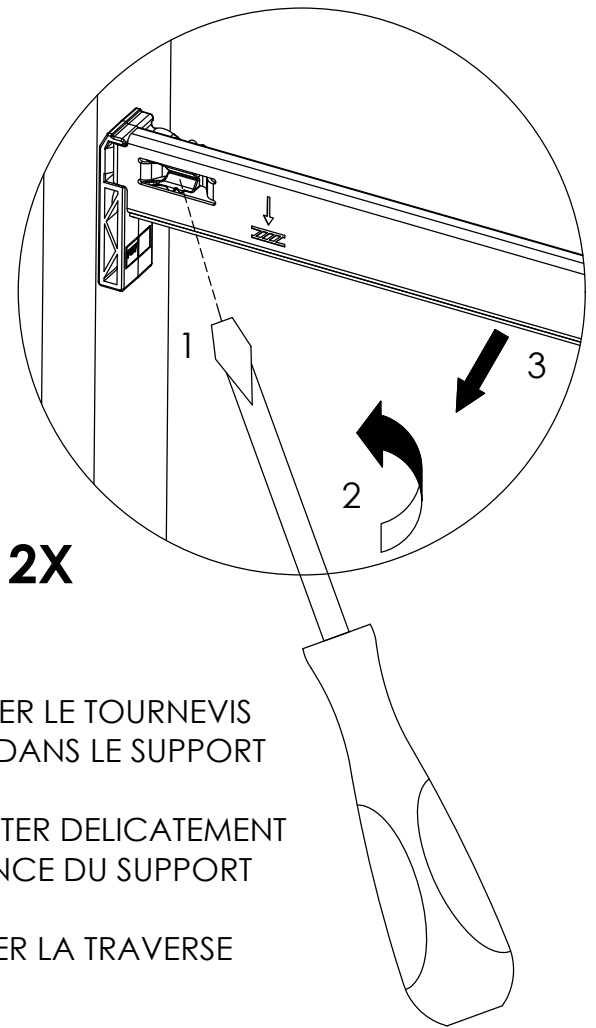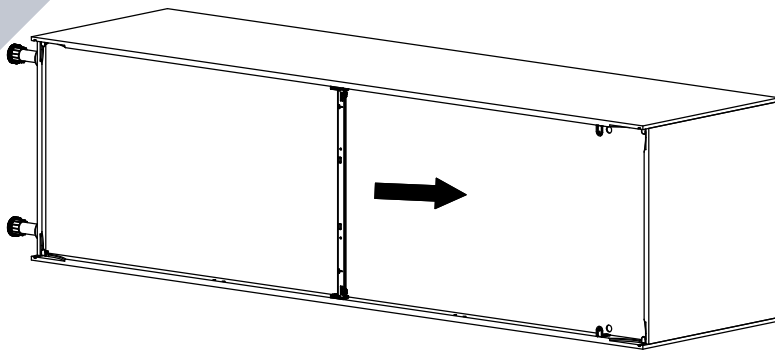

2X

1 INSERER LE TOURNEVIS
PLAT DANS LE SUPPORT

2 ECARTER DELICATEMENT
LA PINCE DU SUPPORT

3 LIBERER LA TRAVERSE

1 INSERER LE TOURNEVIS
PLAT ENTRE LES ELEMENTS

2 ECARTER DELICATEMENT
LA TIGE DE LA ZIPETTE

3 RETIRER LA ZIPETTE

