




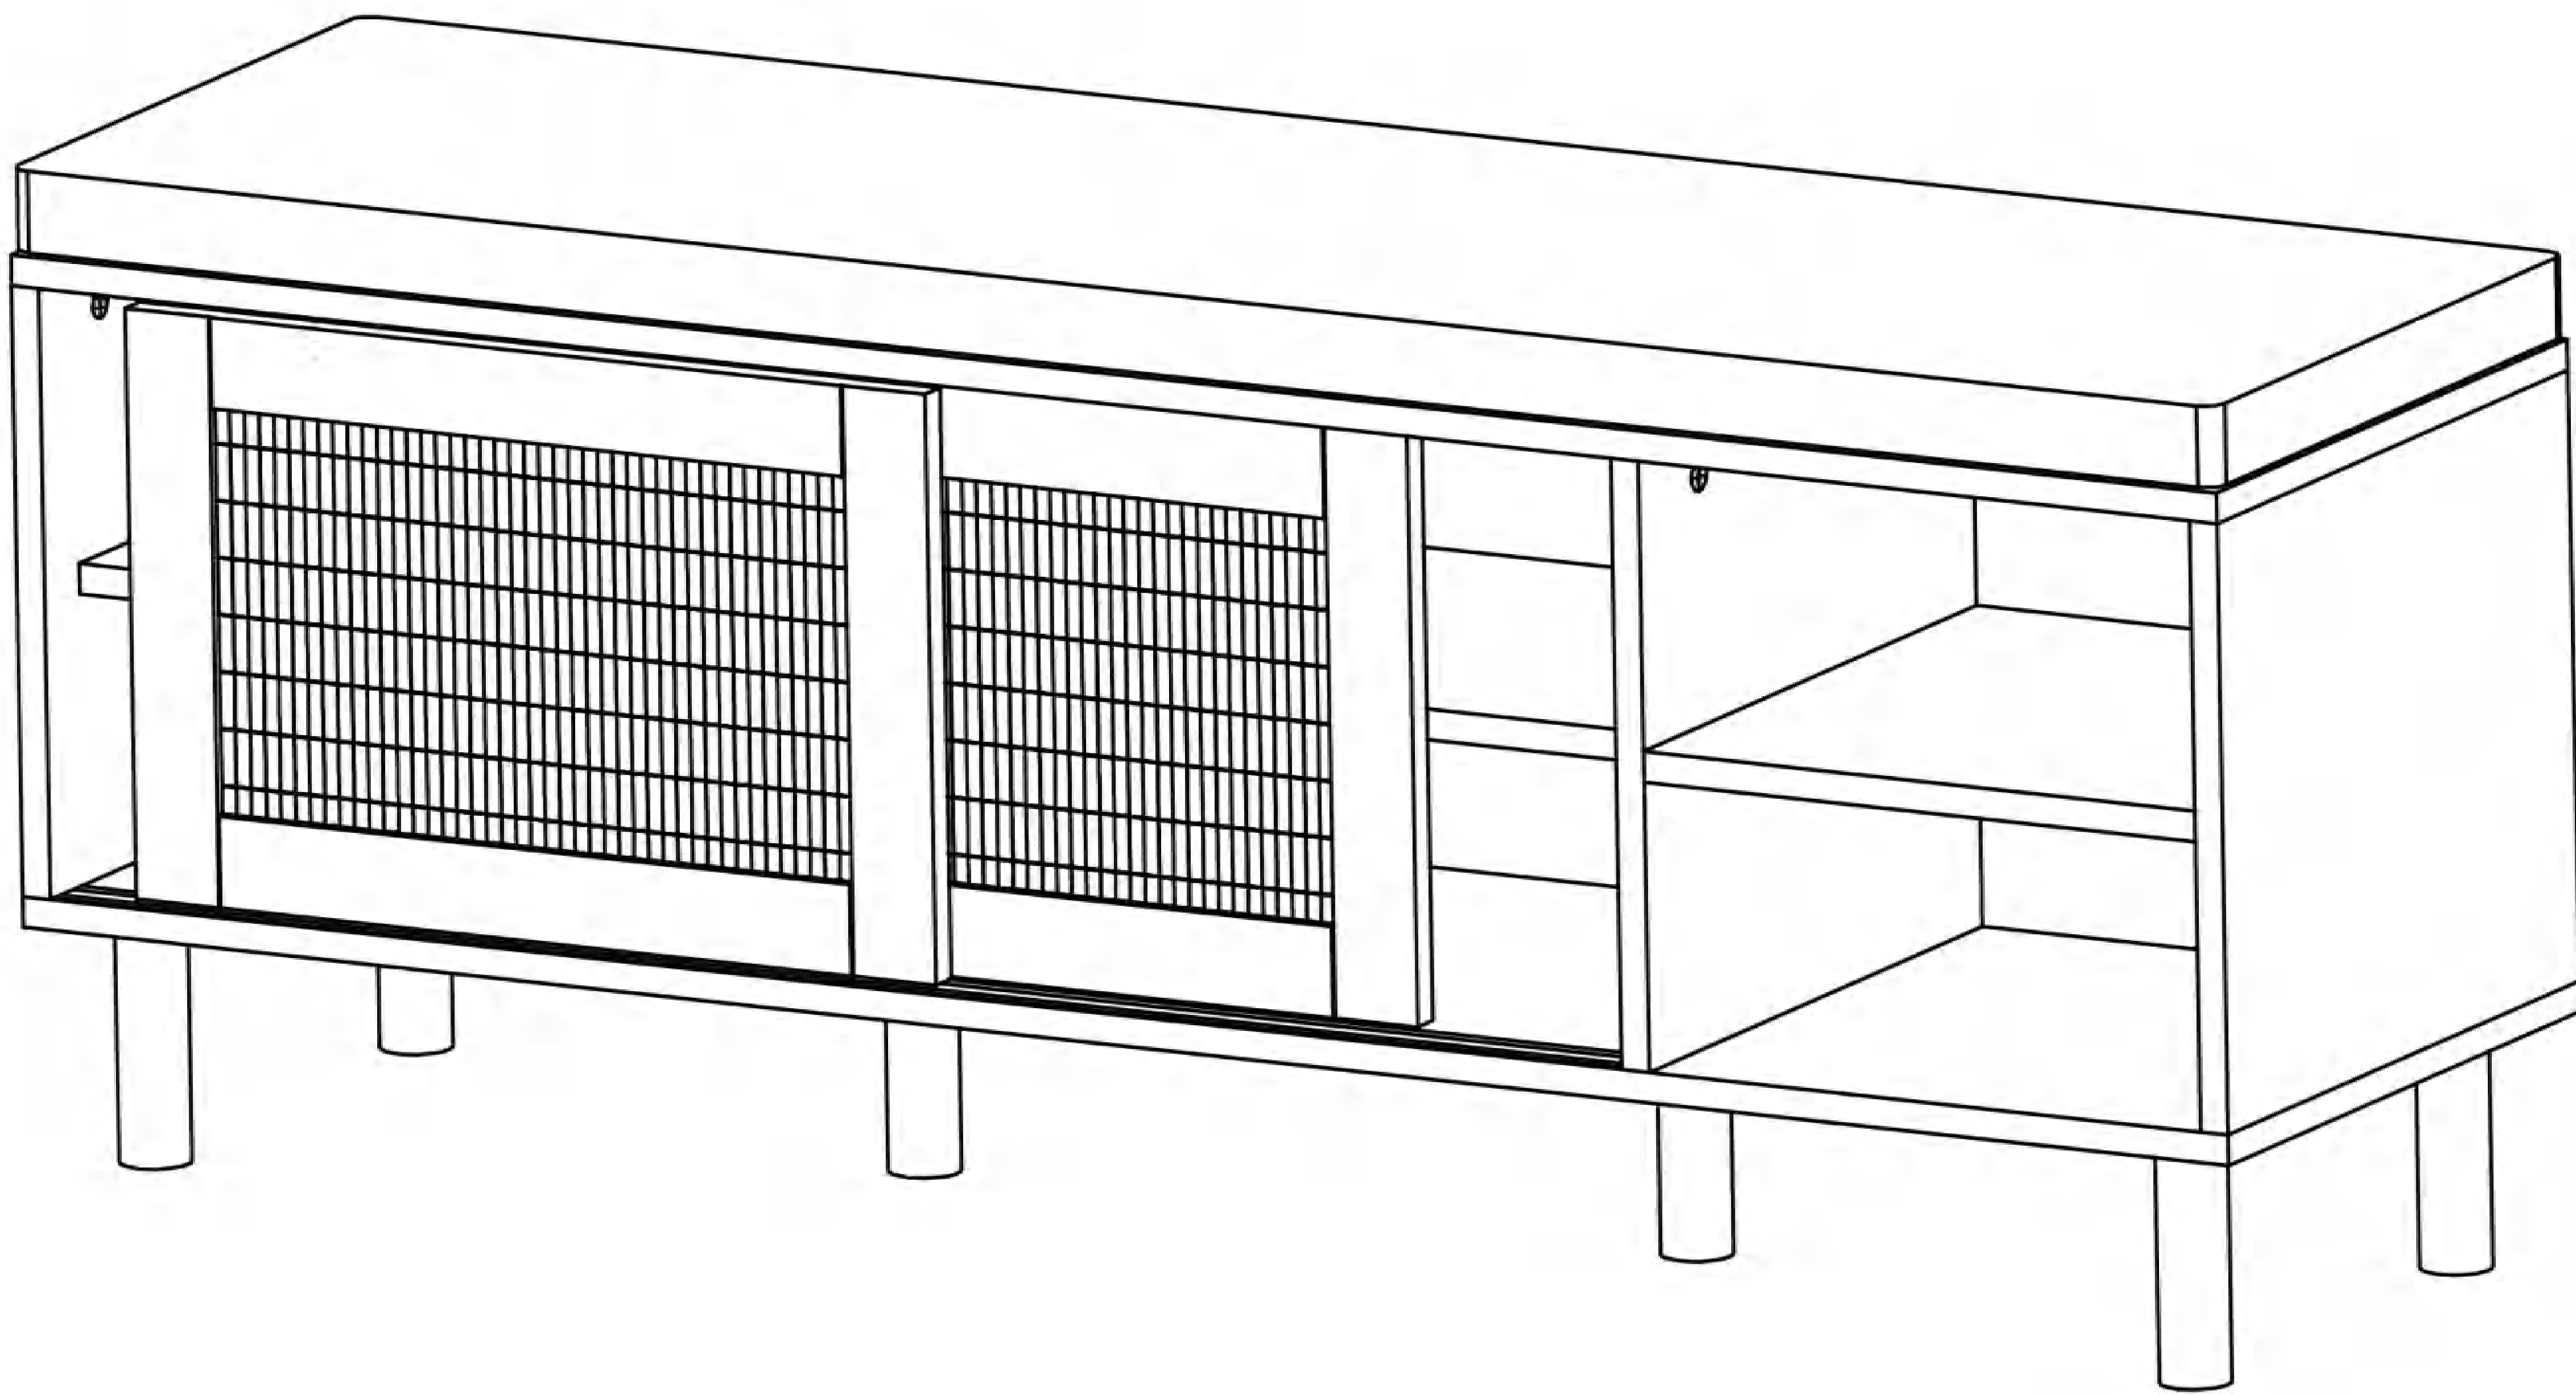


FSR163



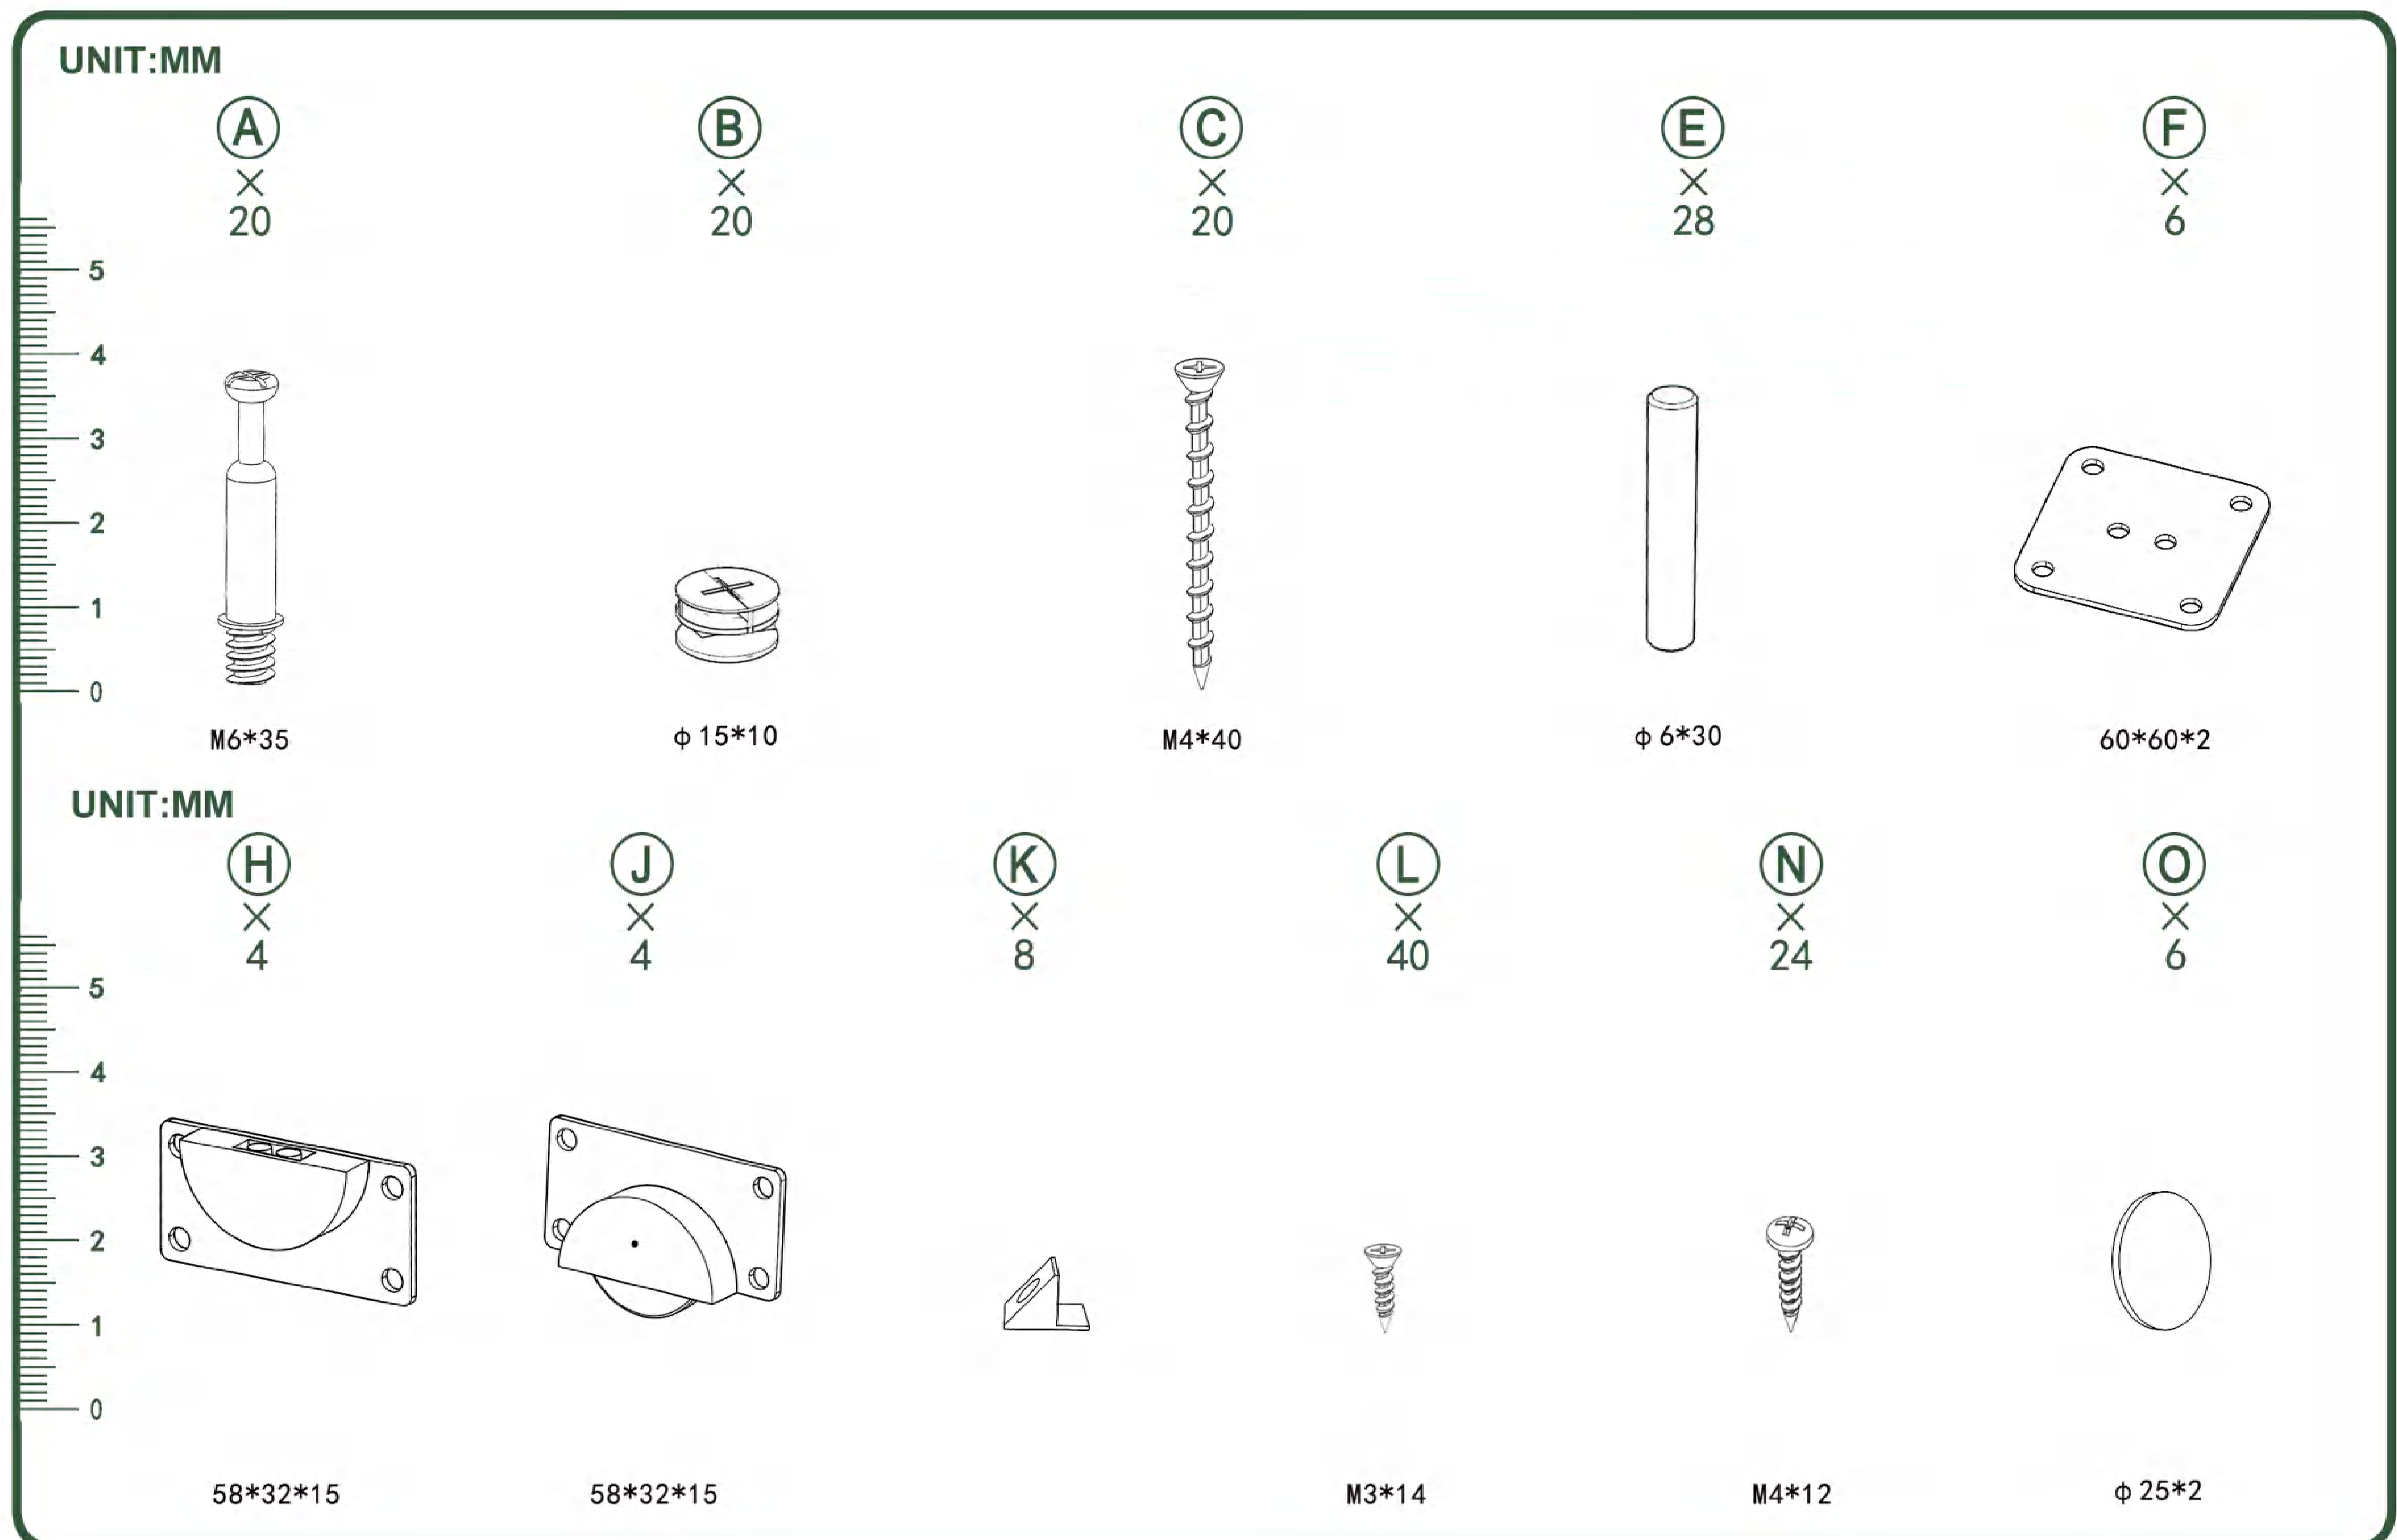


TOOLS:

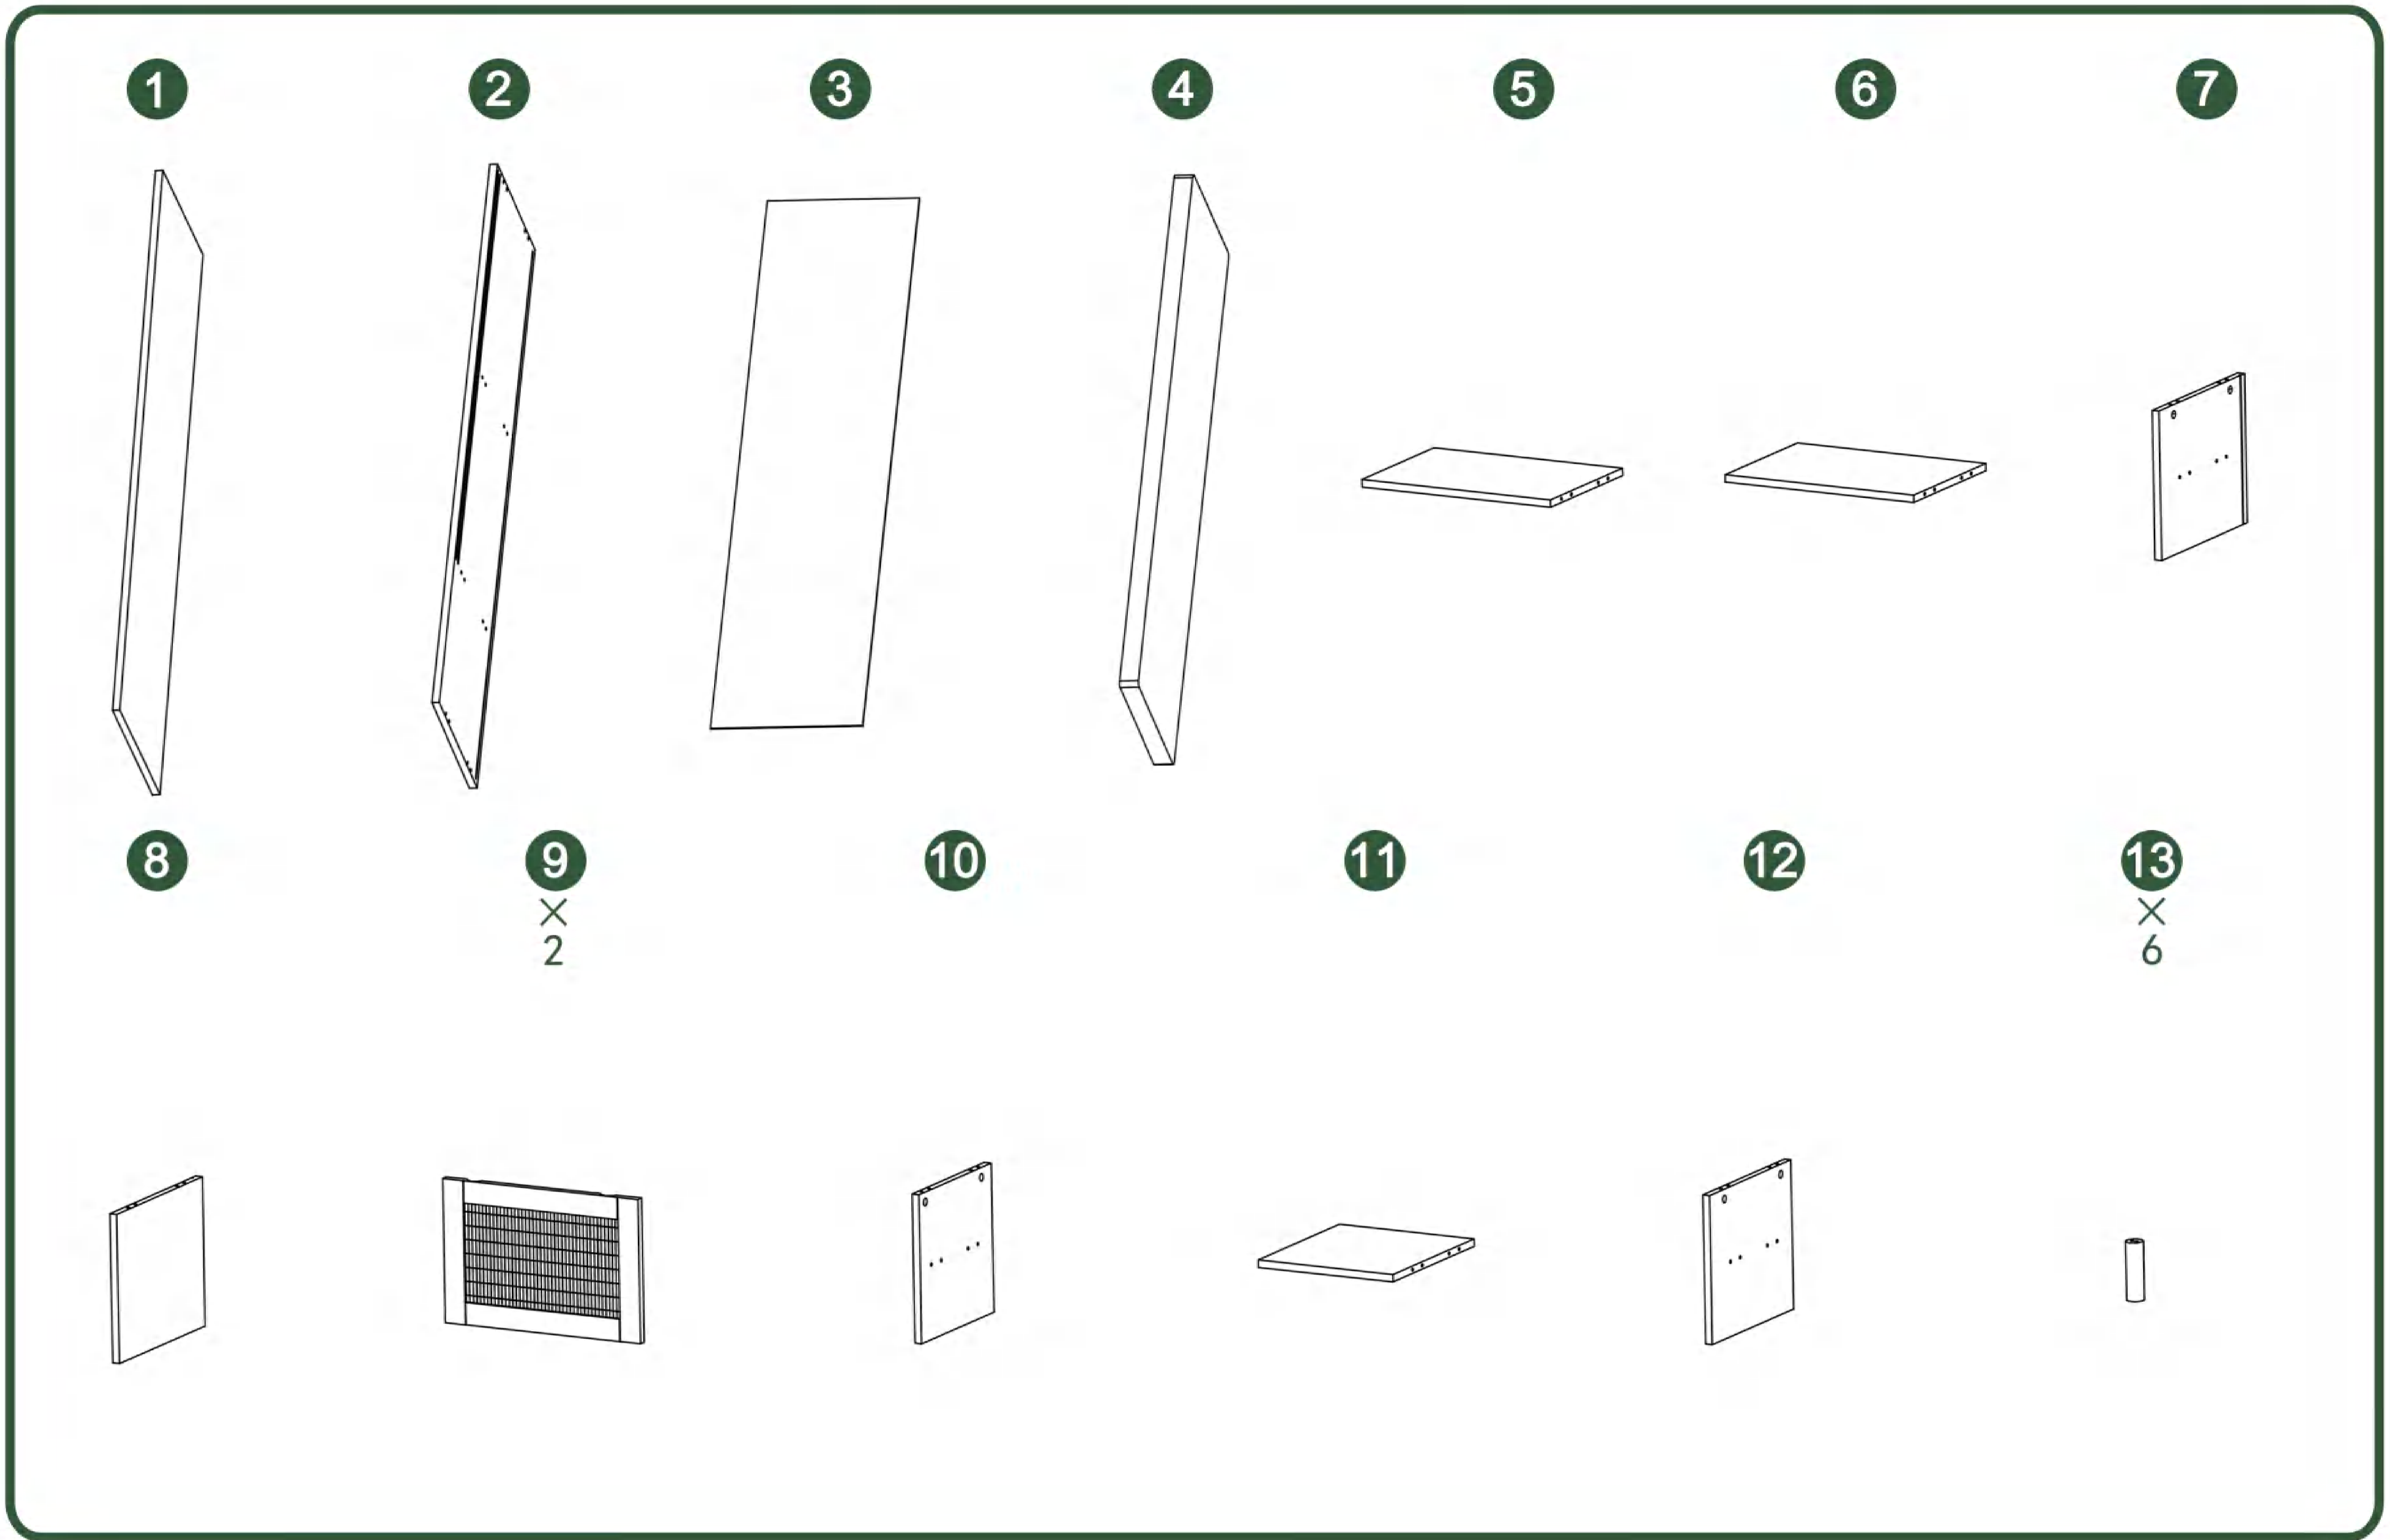


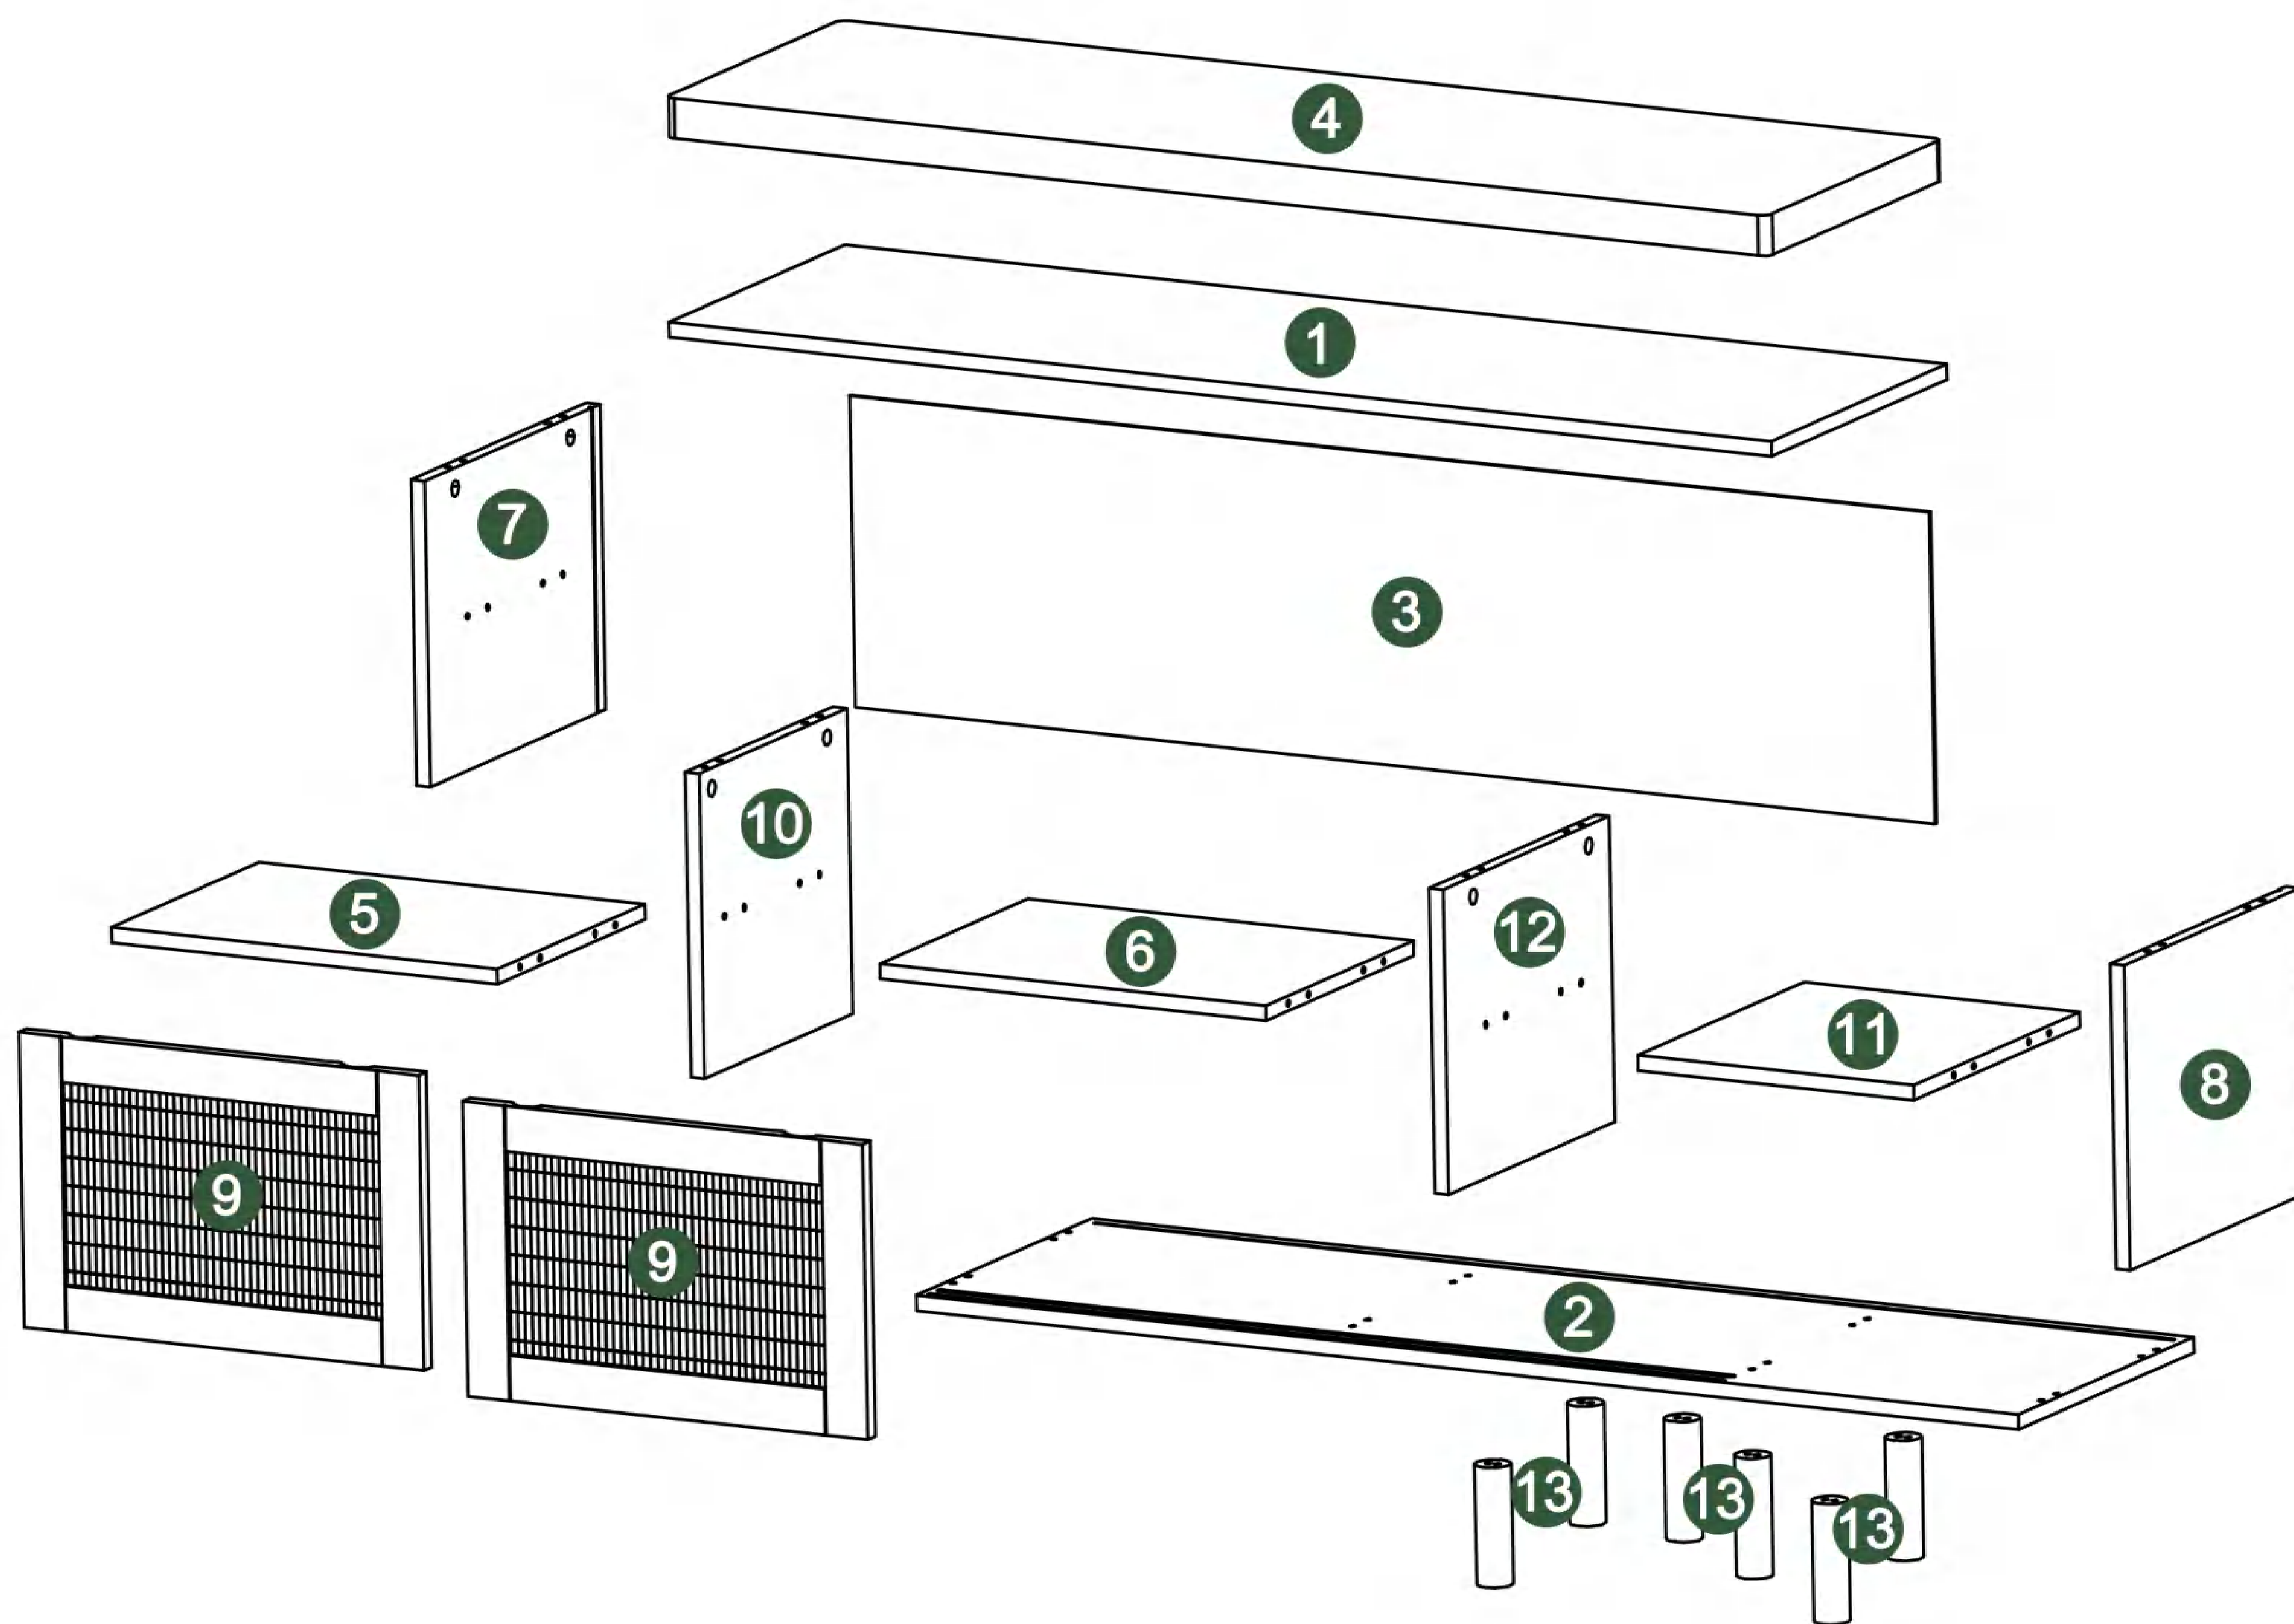


BOLT INSTALLATION AS BELOW:

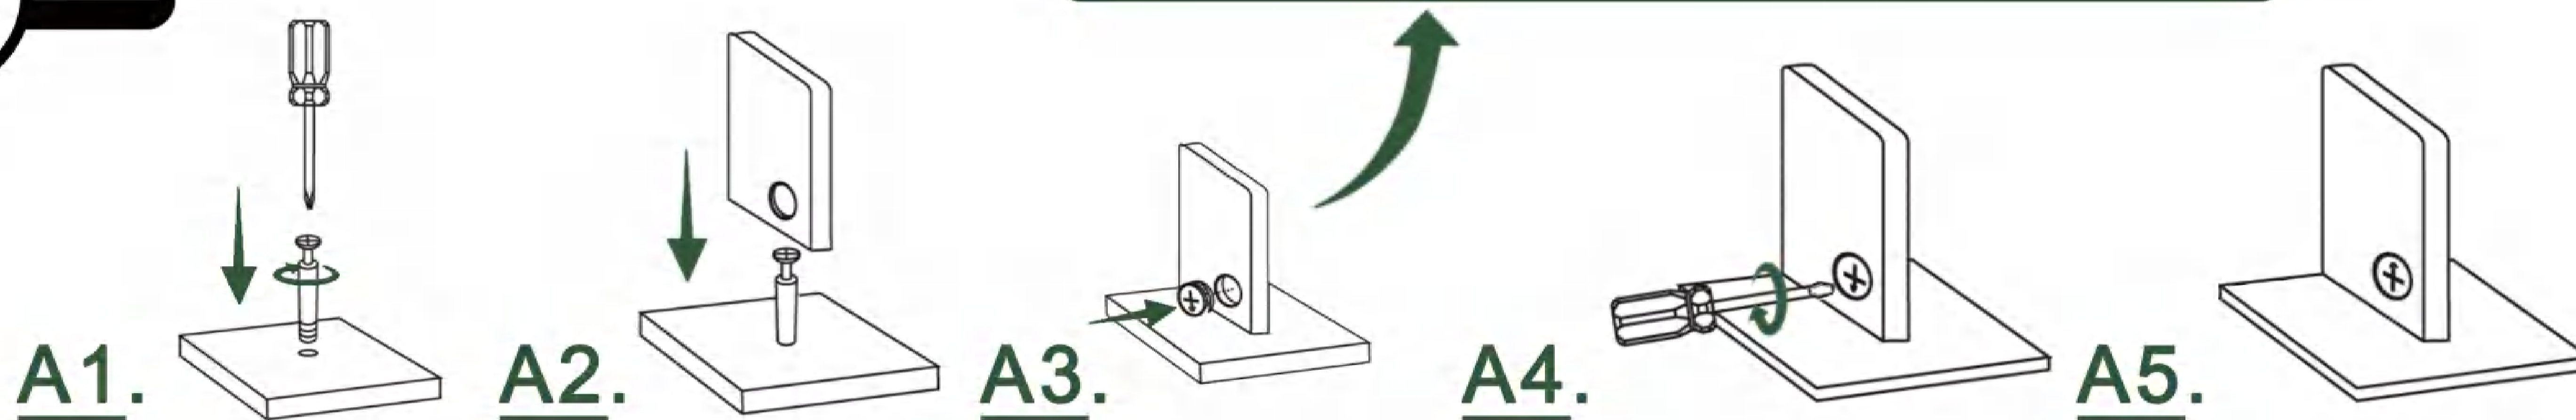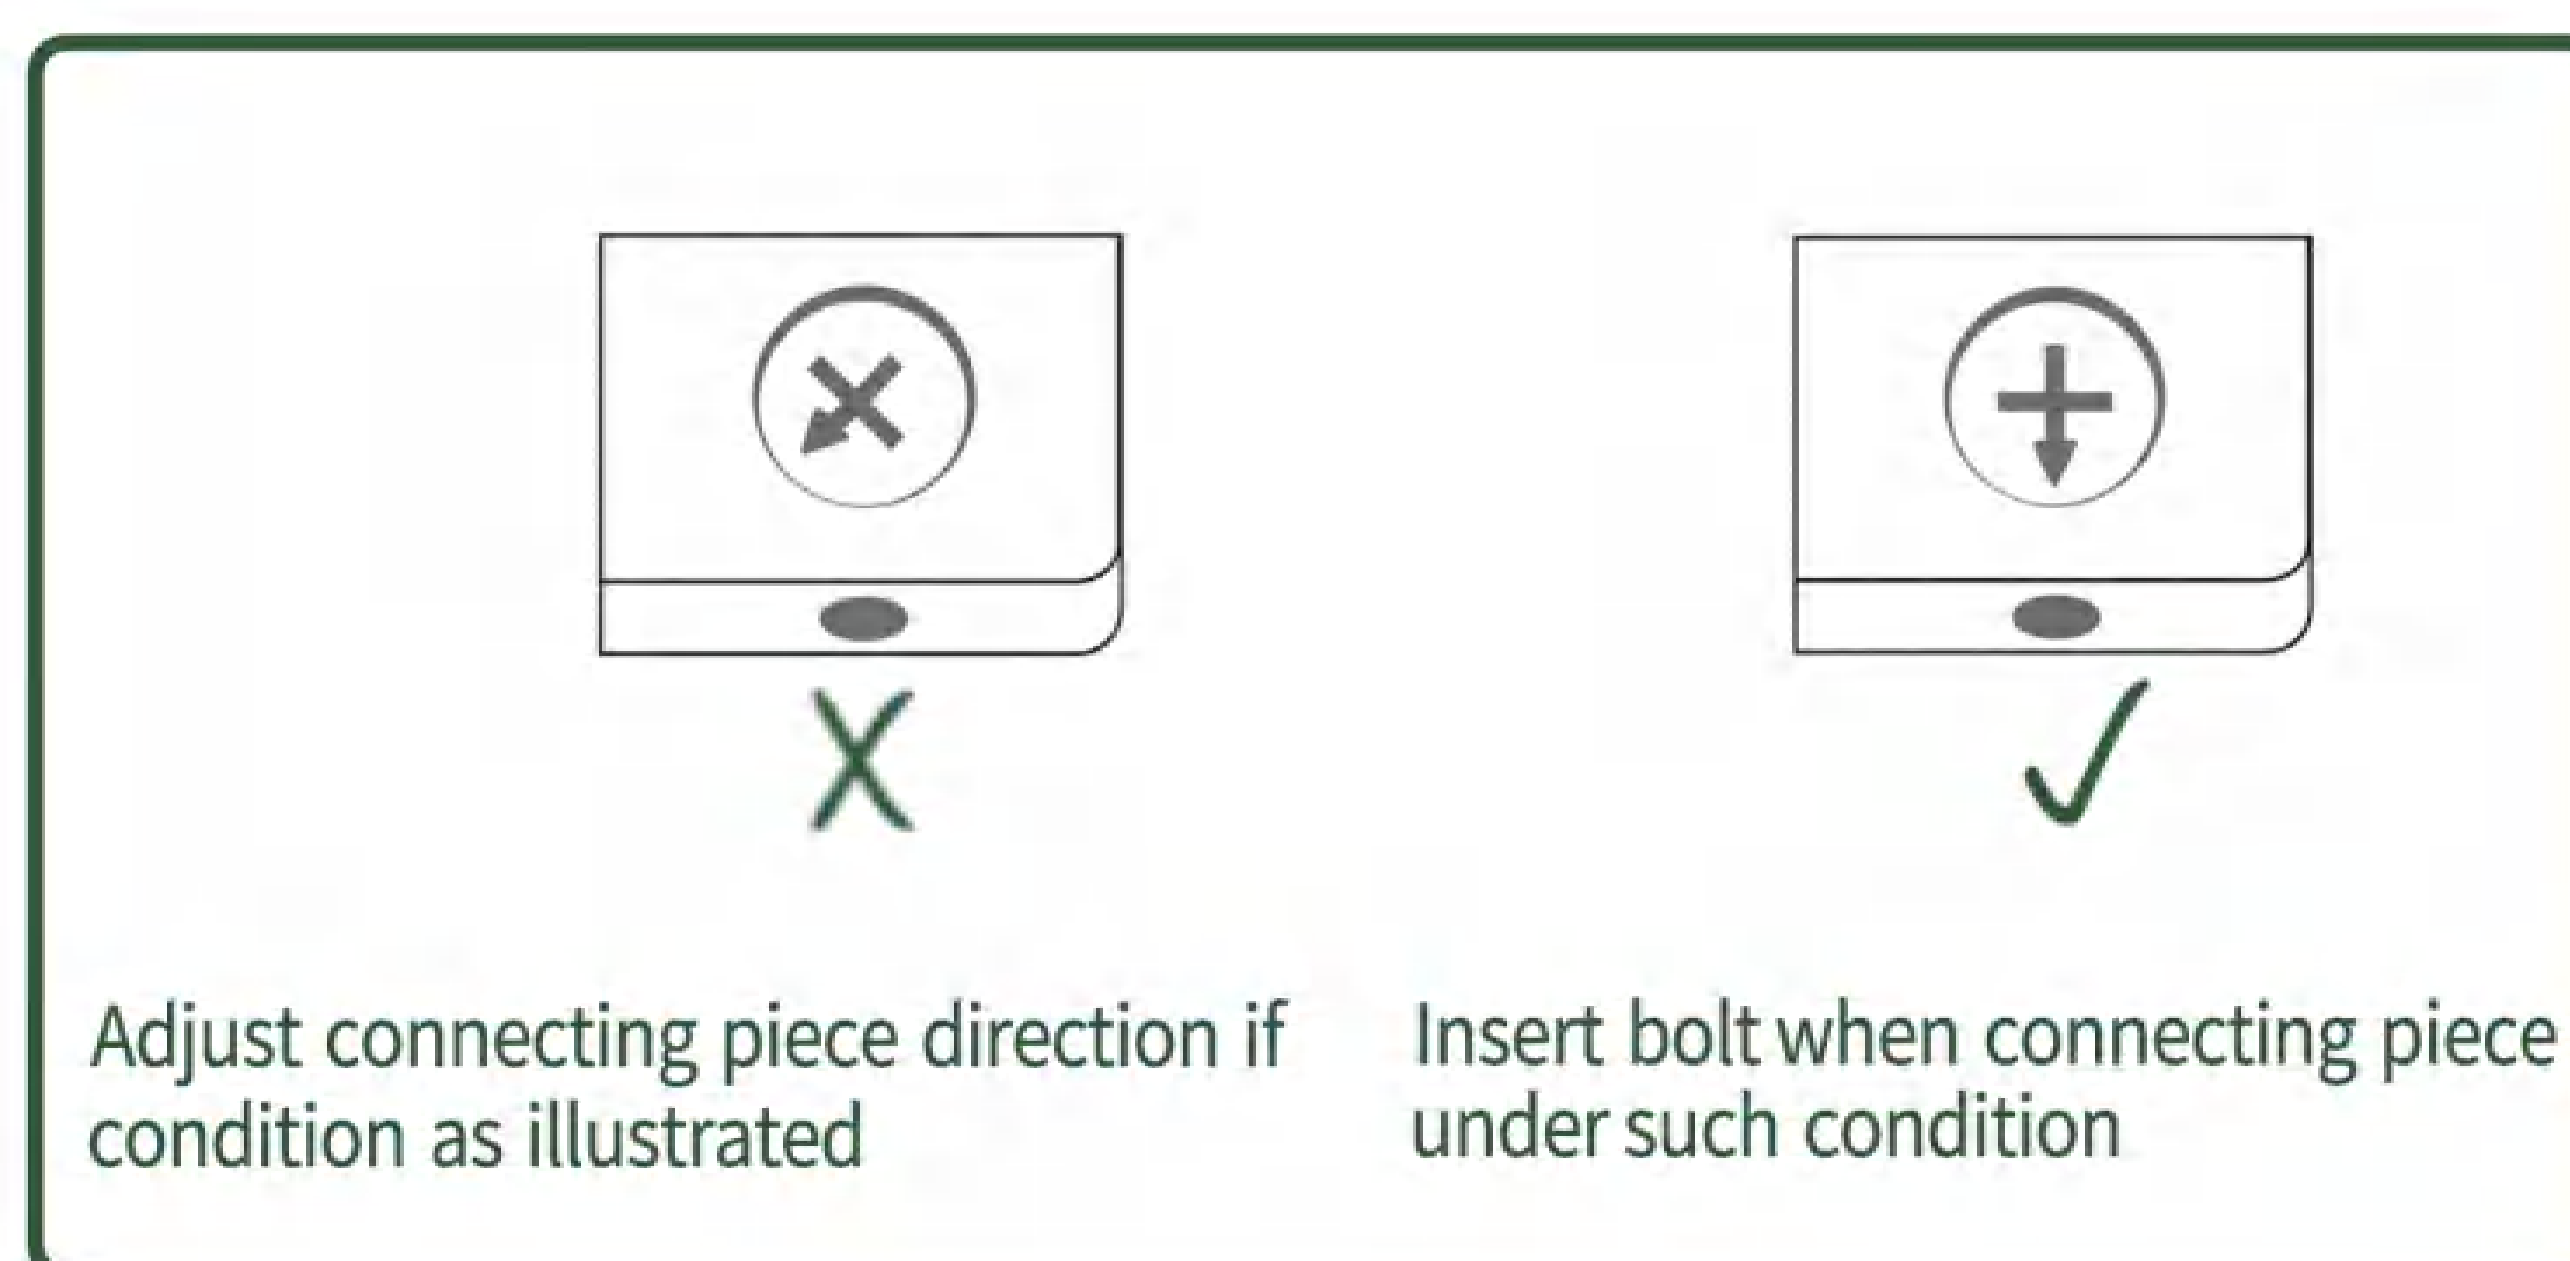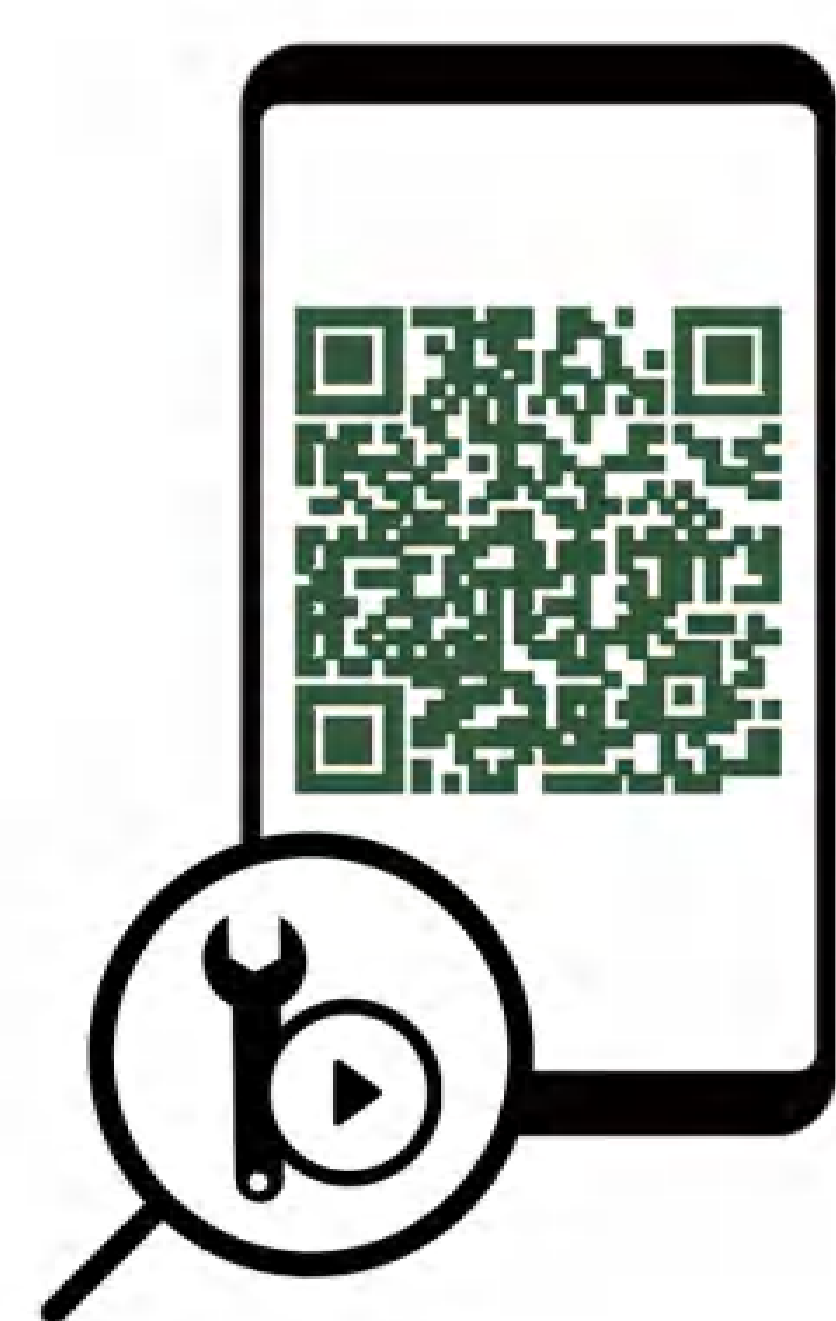


1.

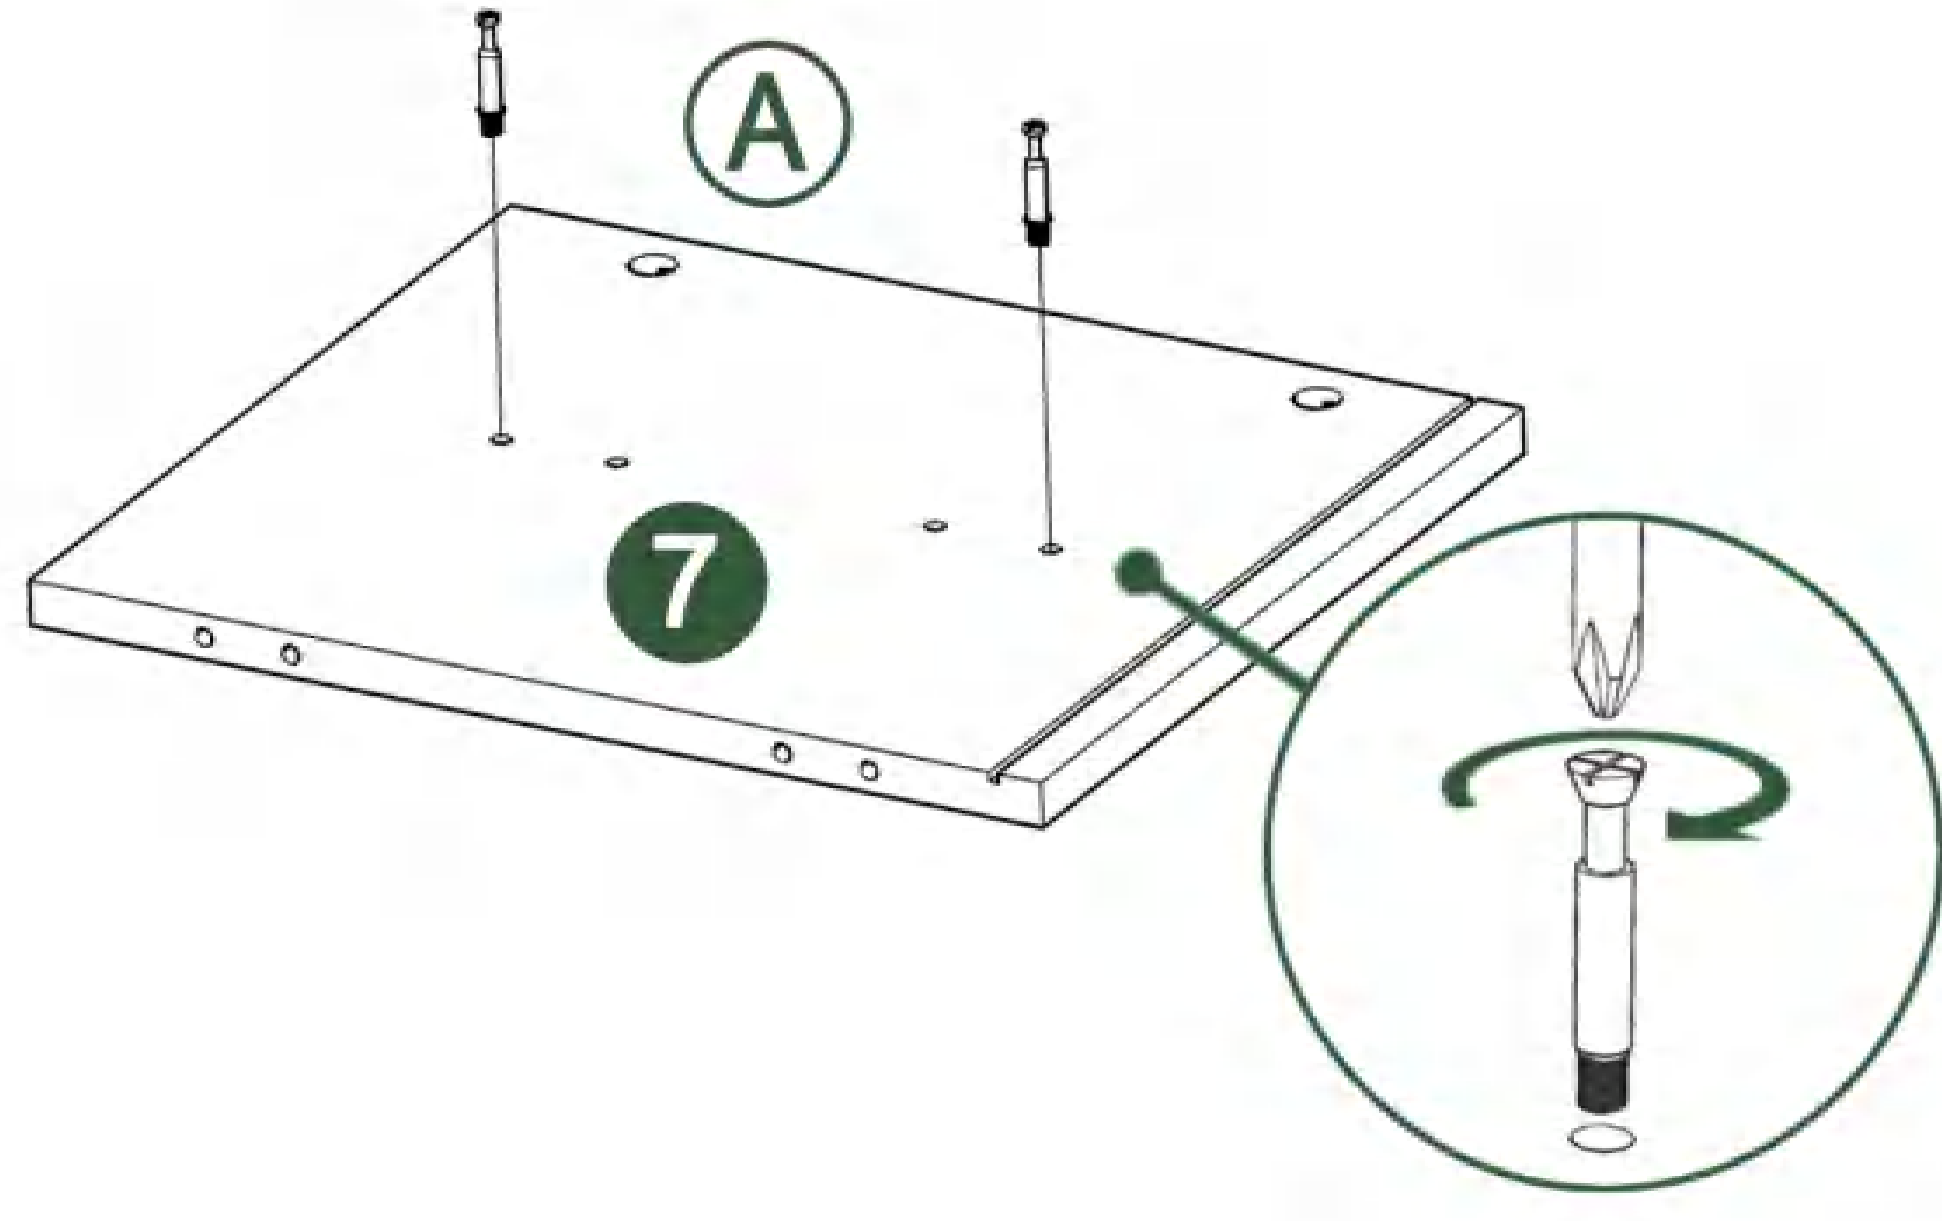


2.

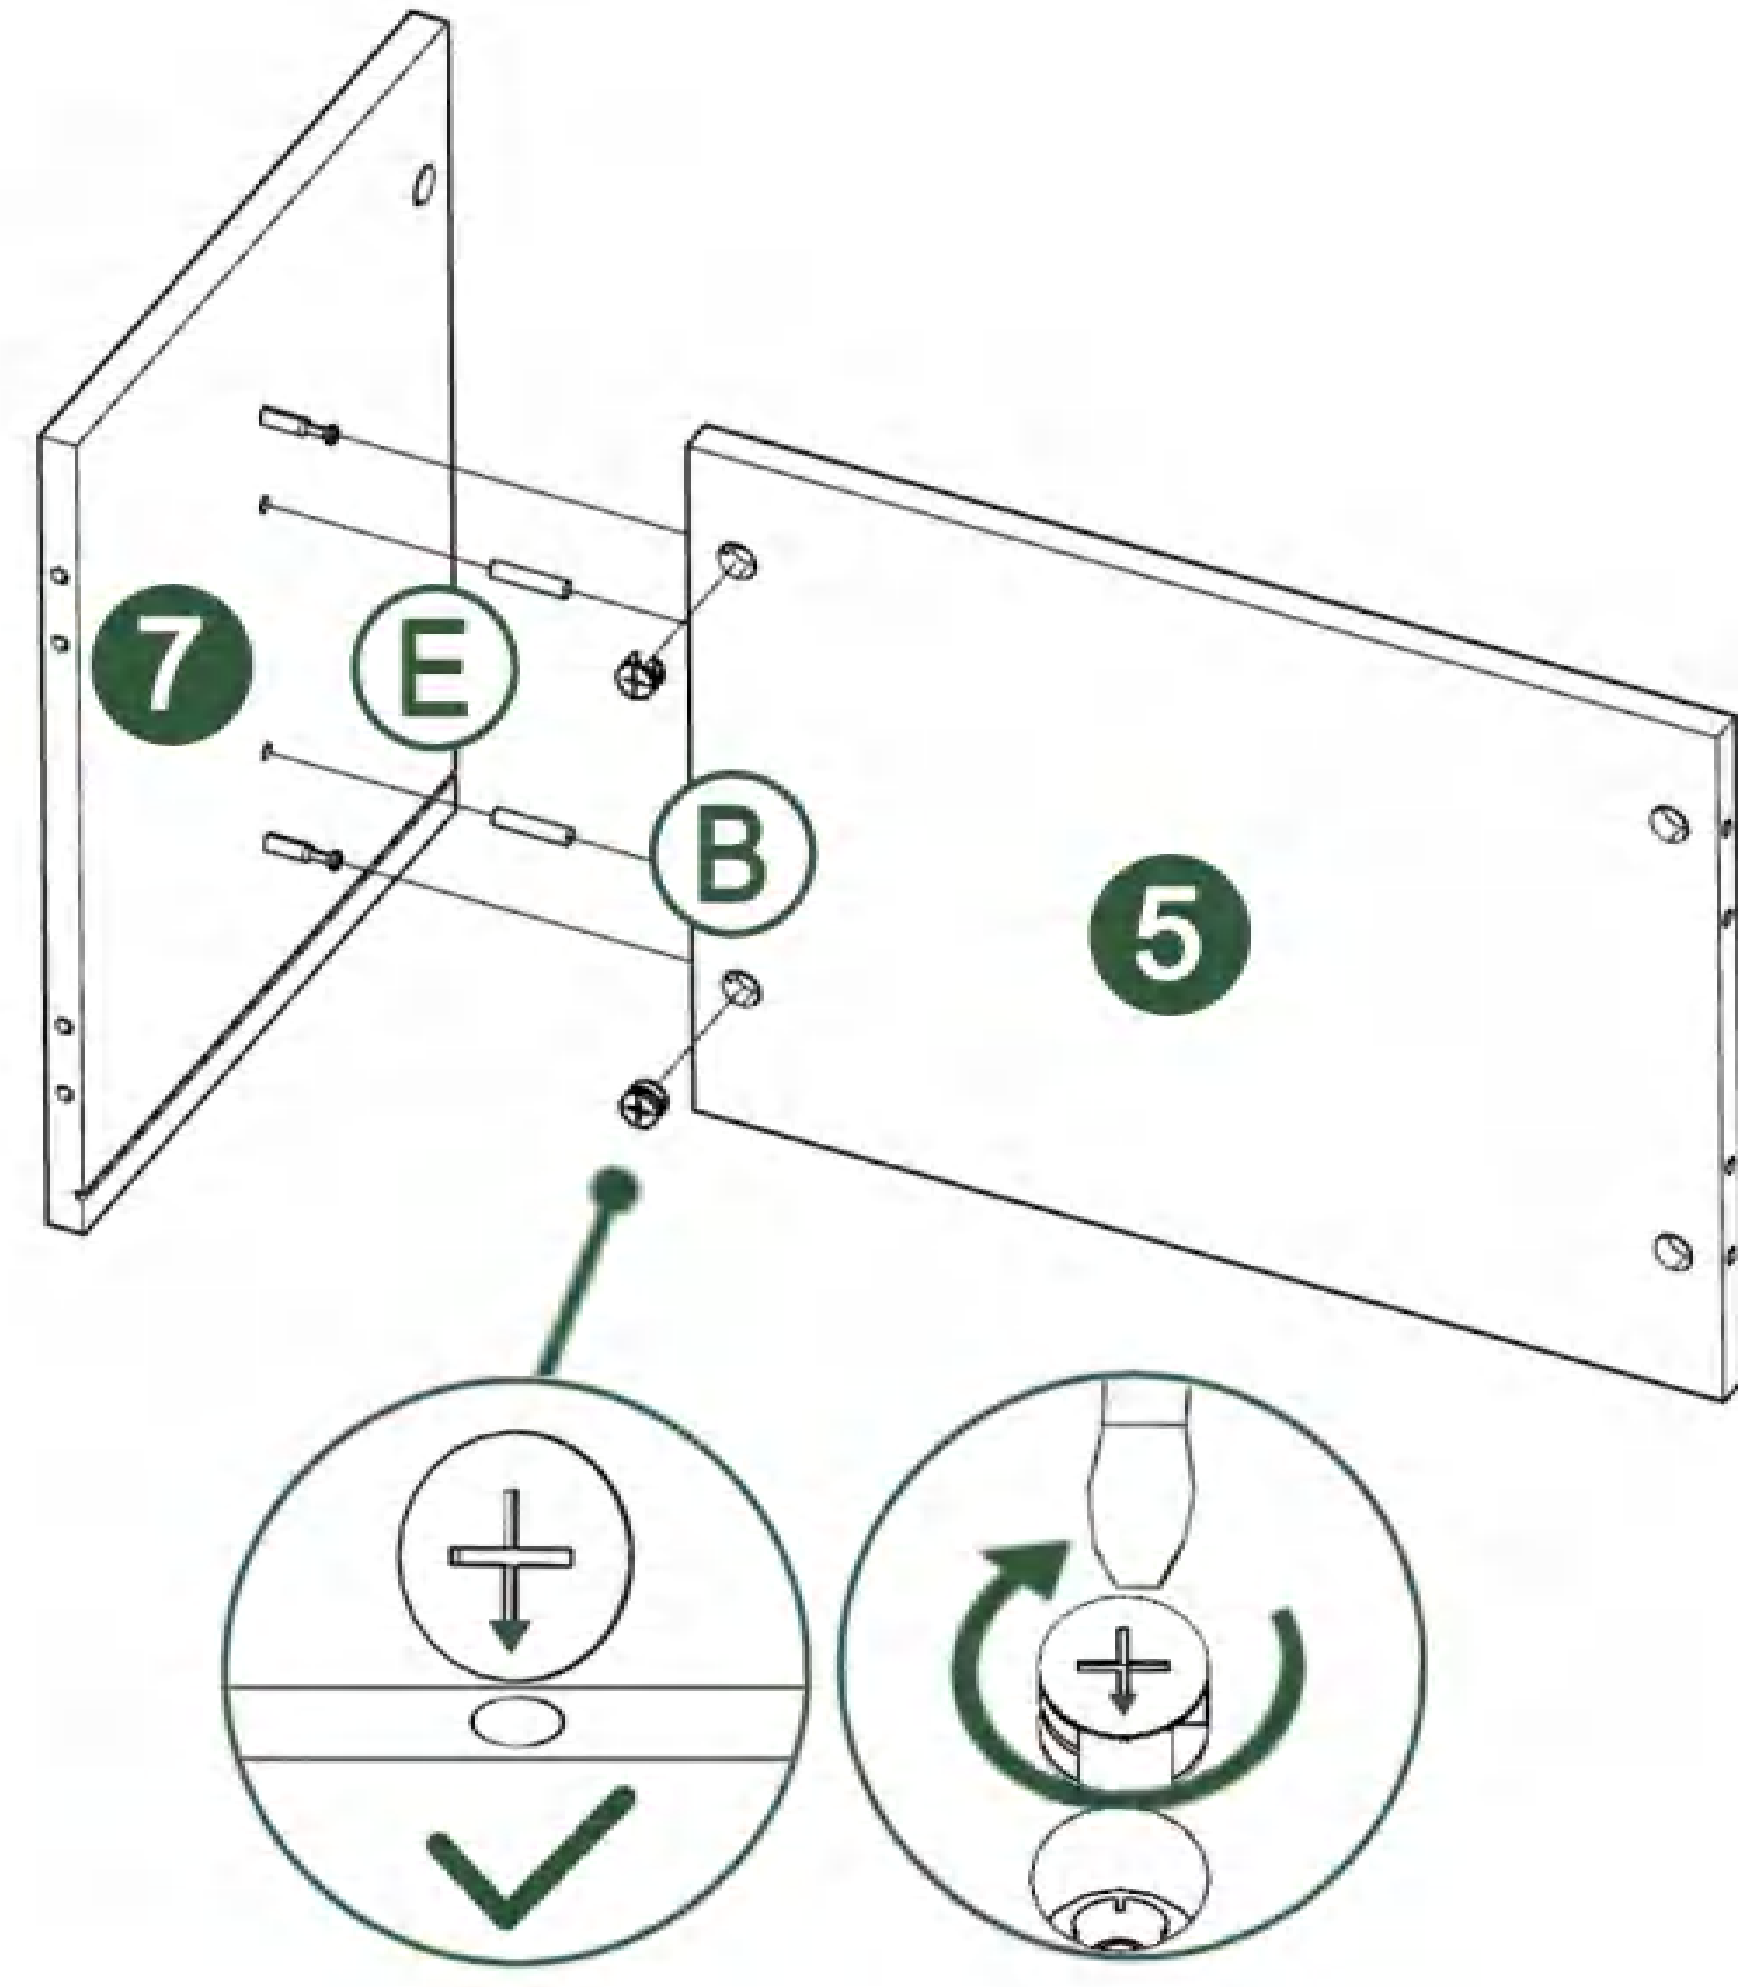


3.

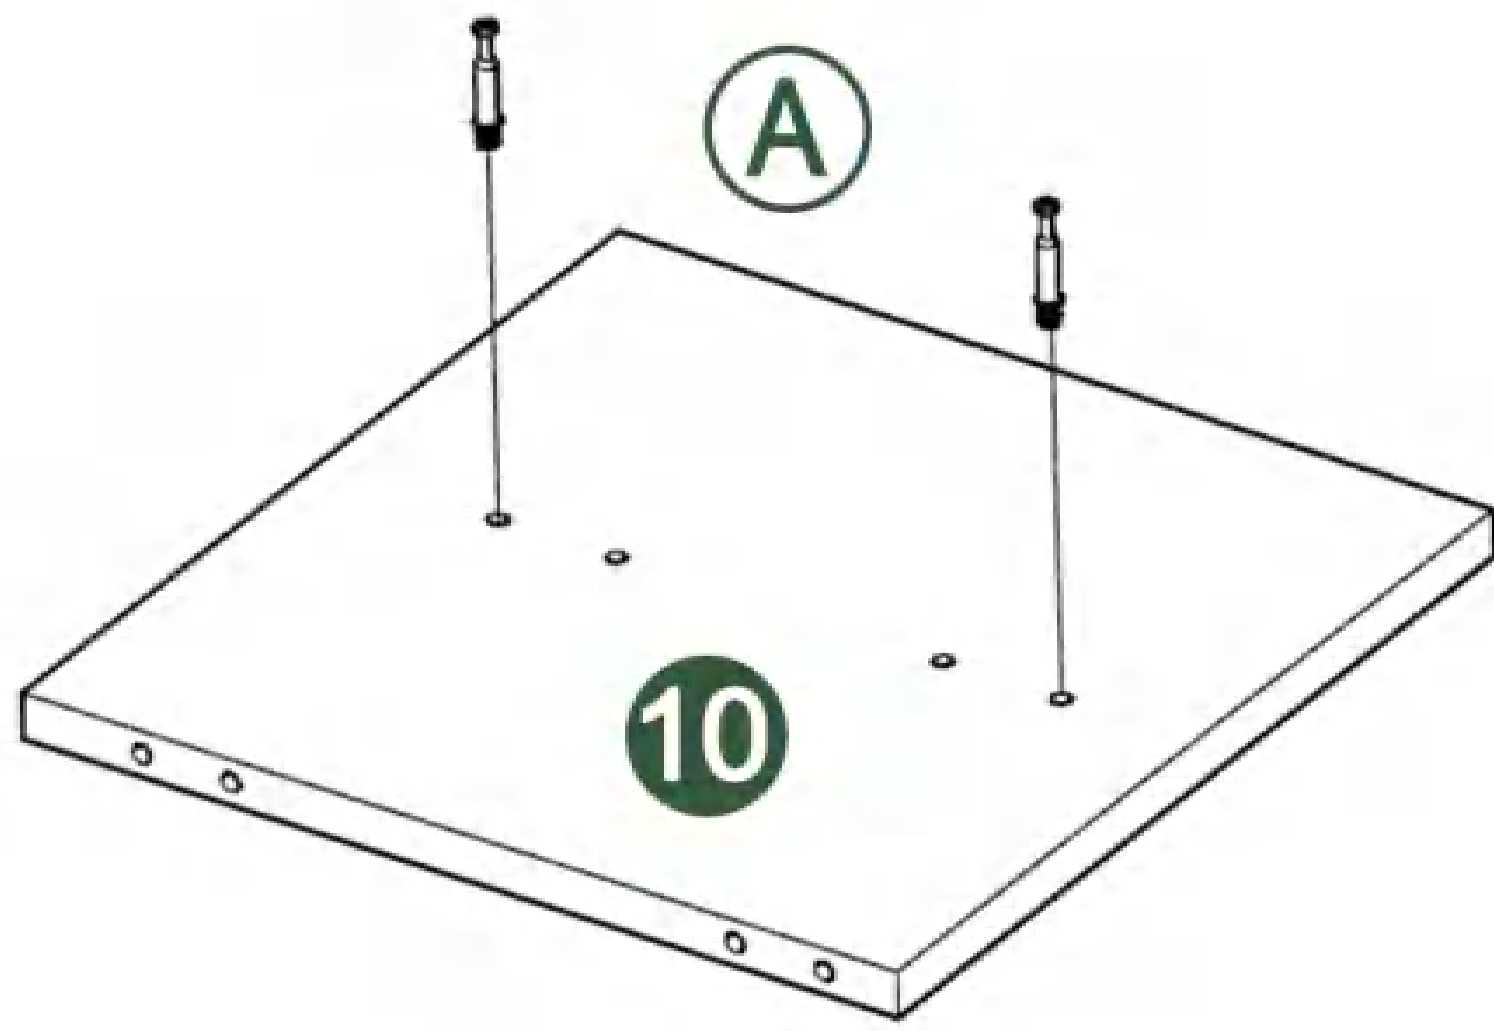


4.

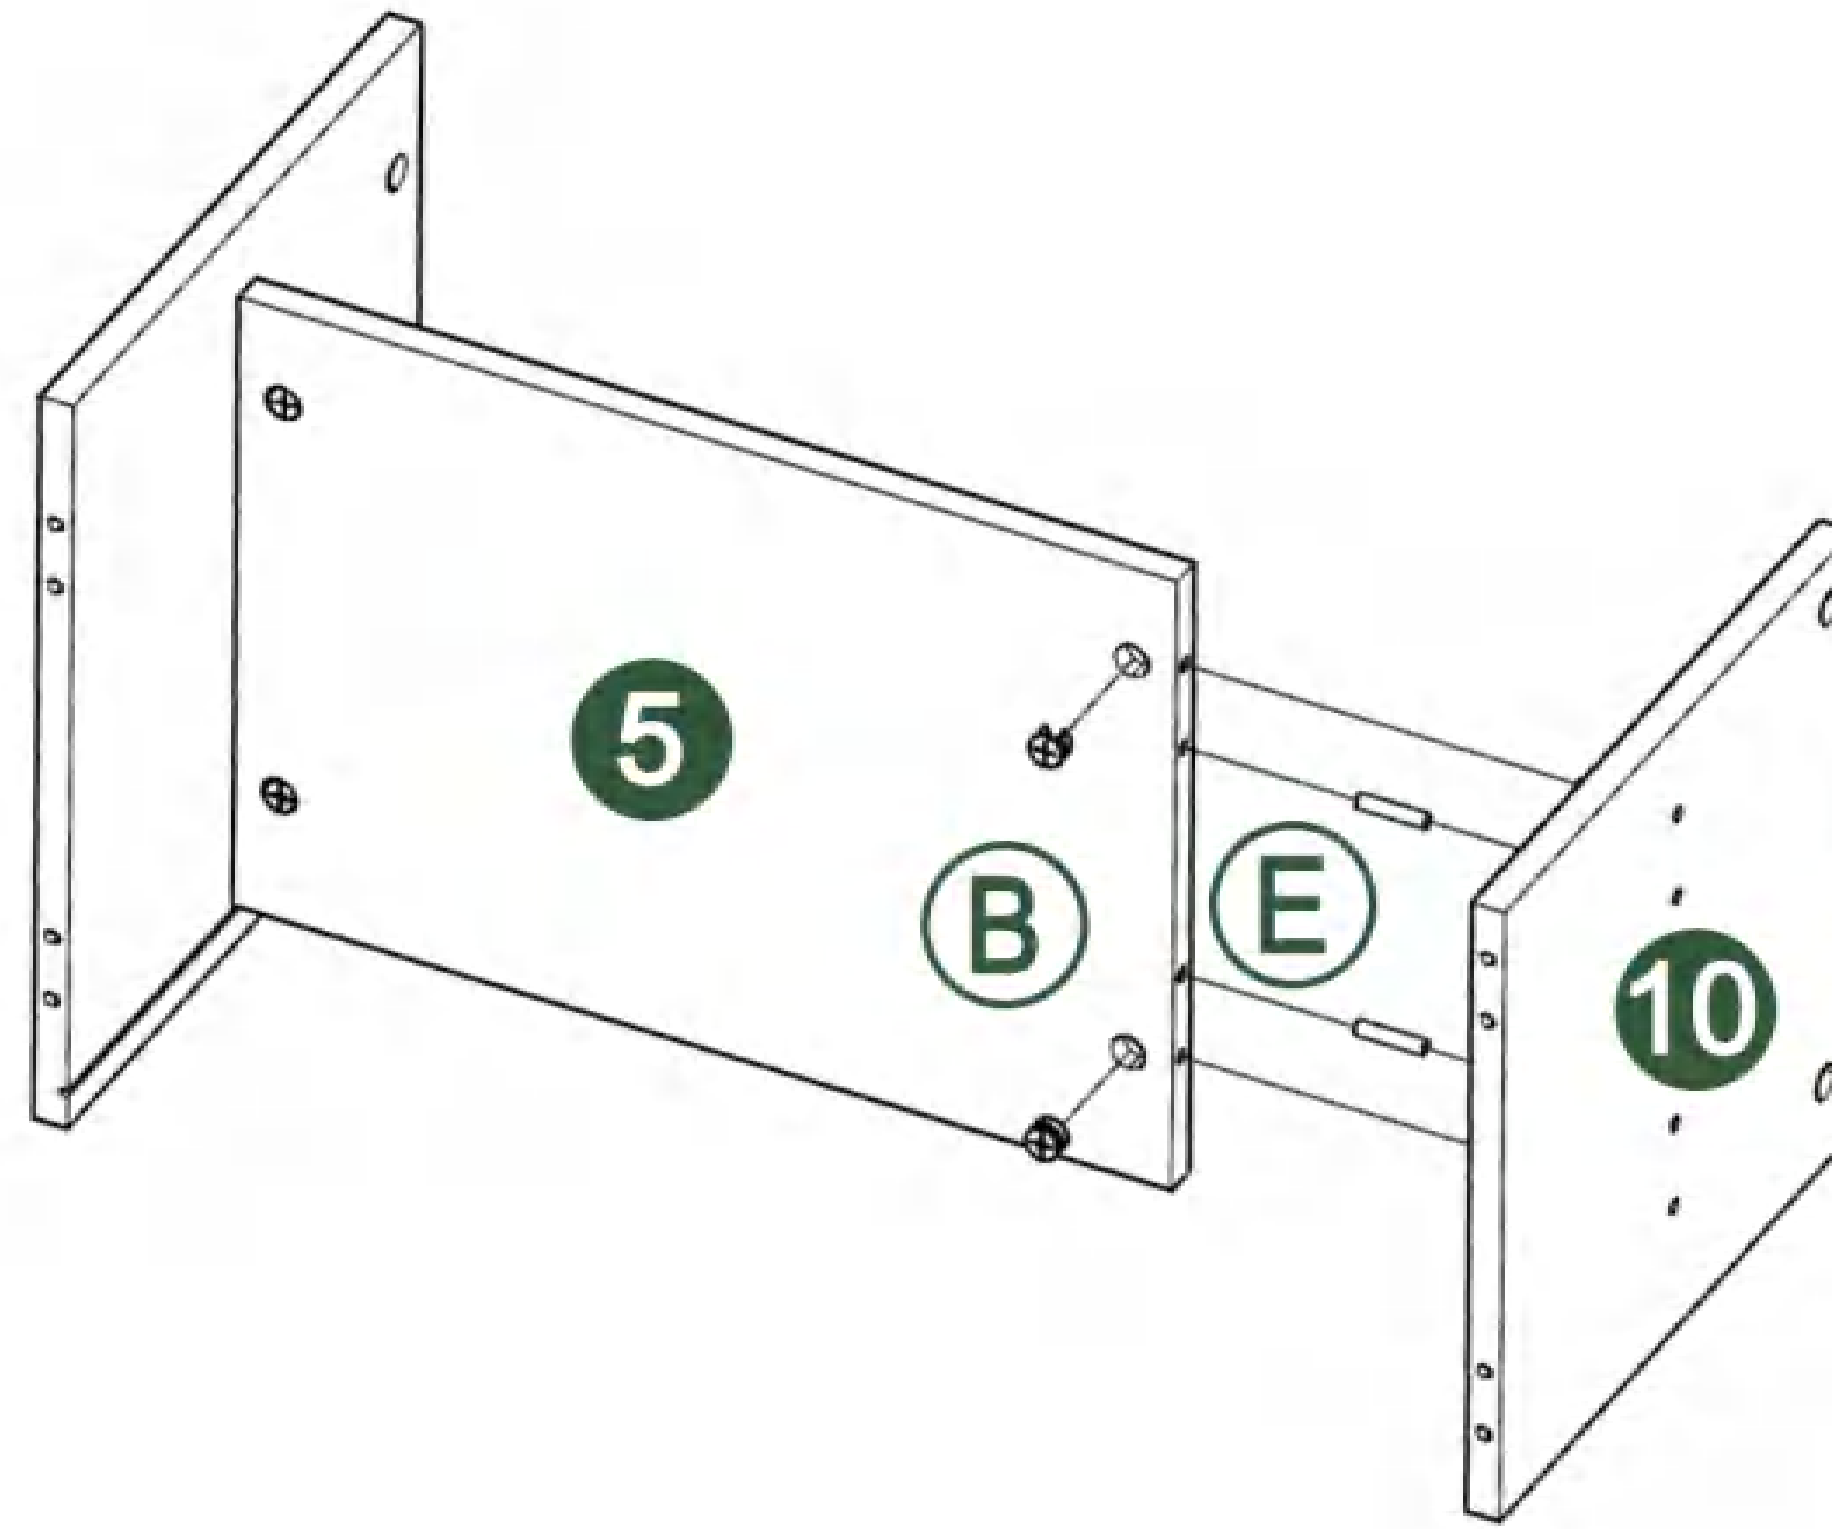


5.

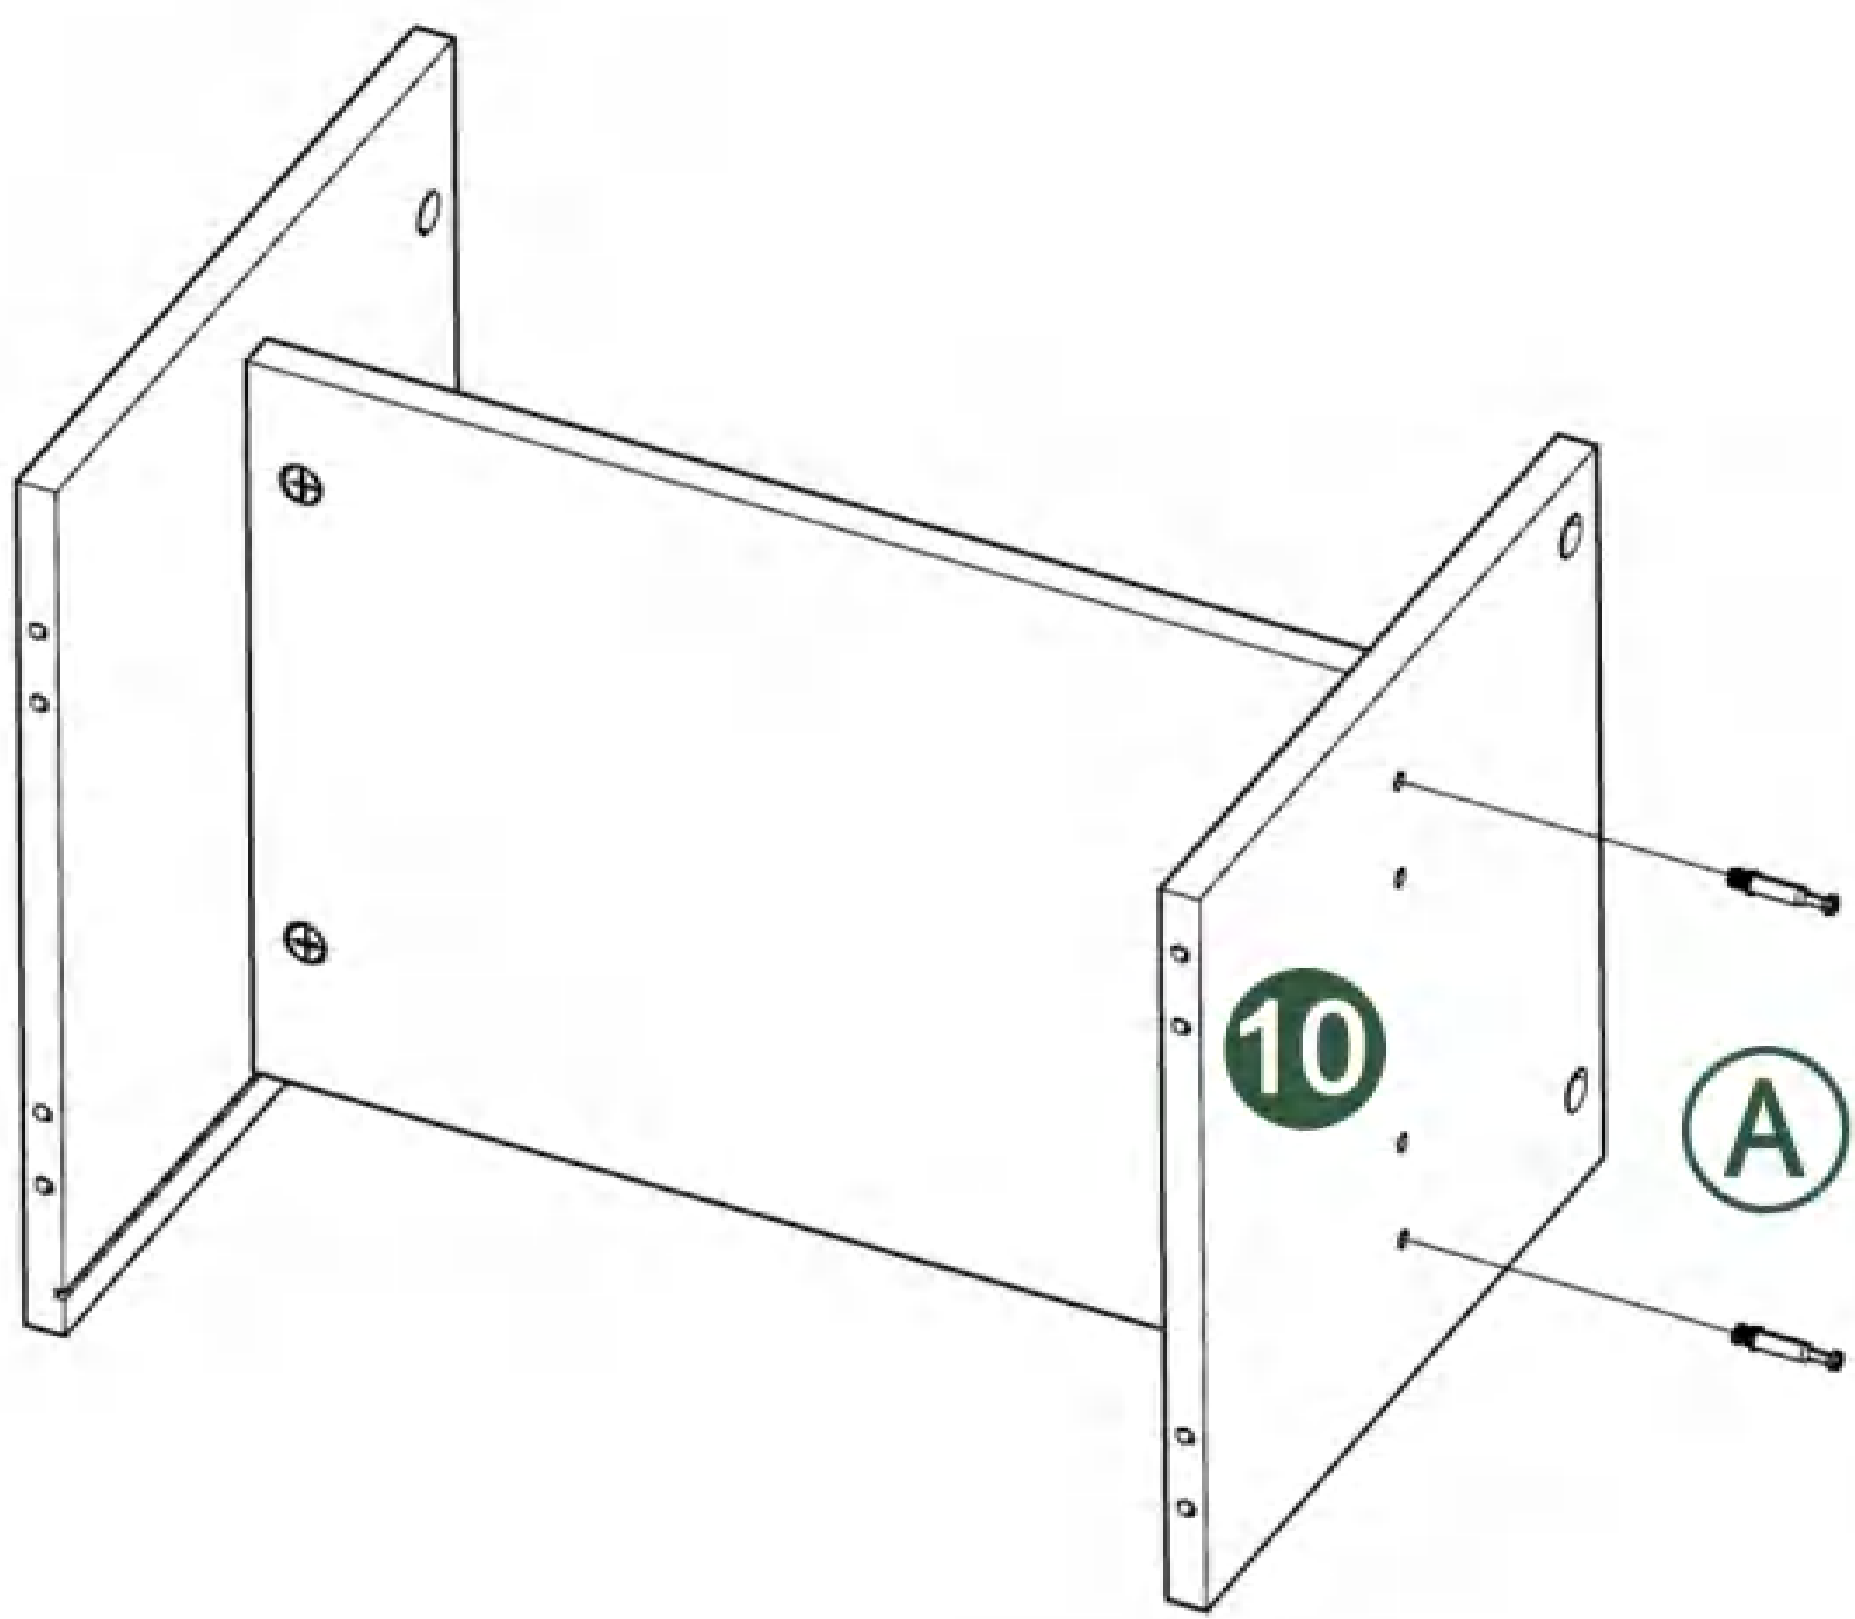


6.

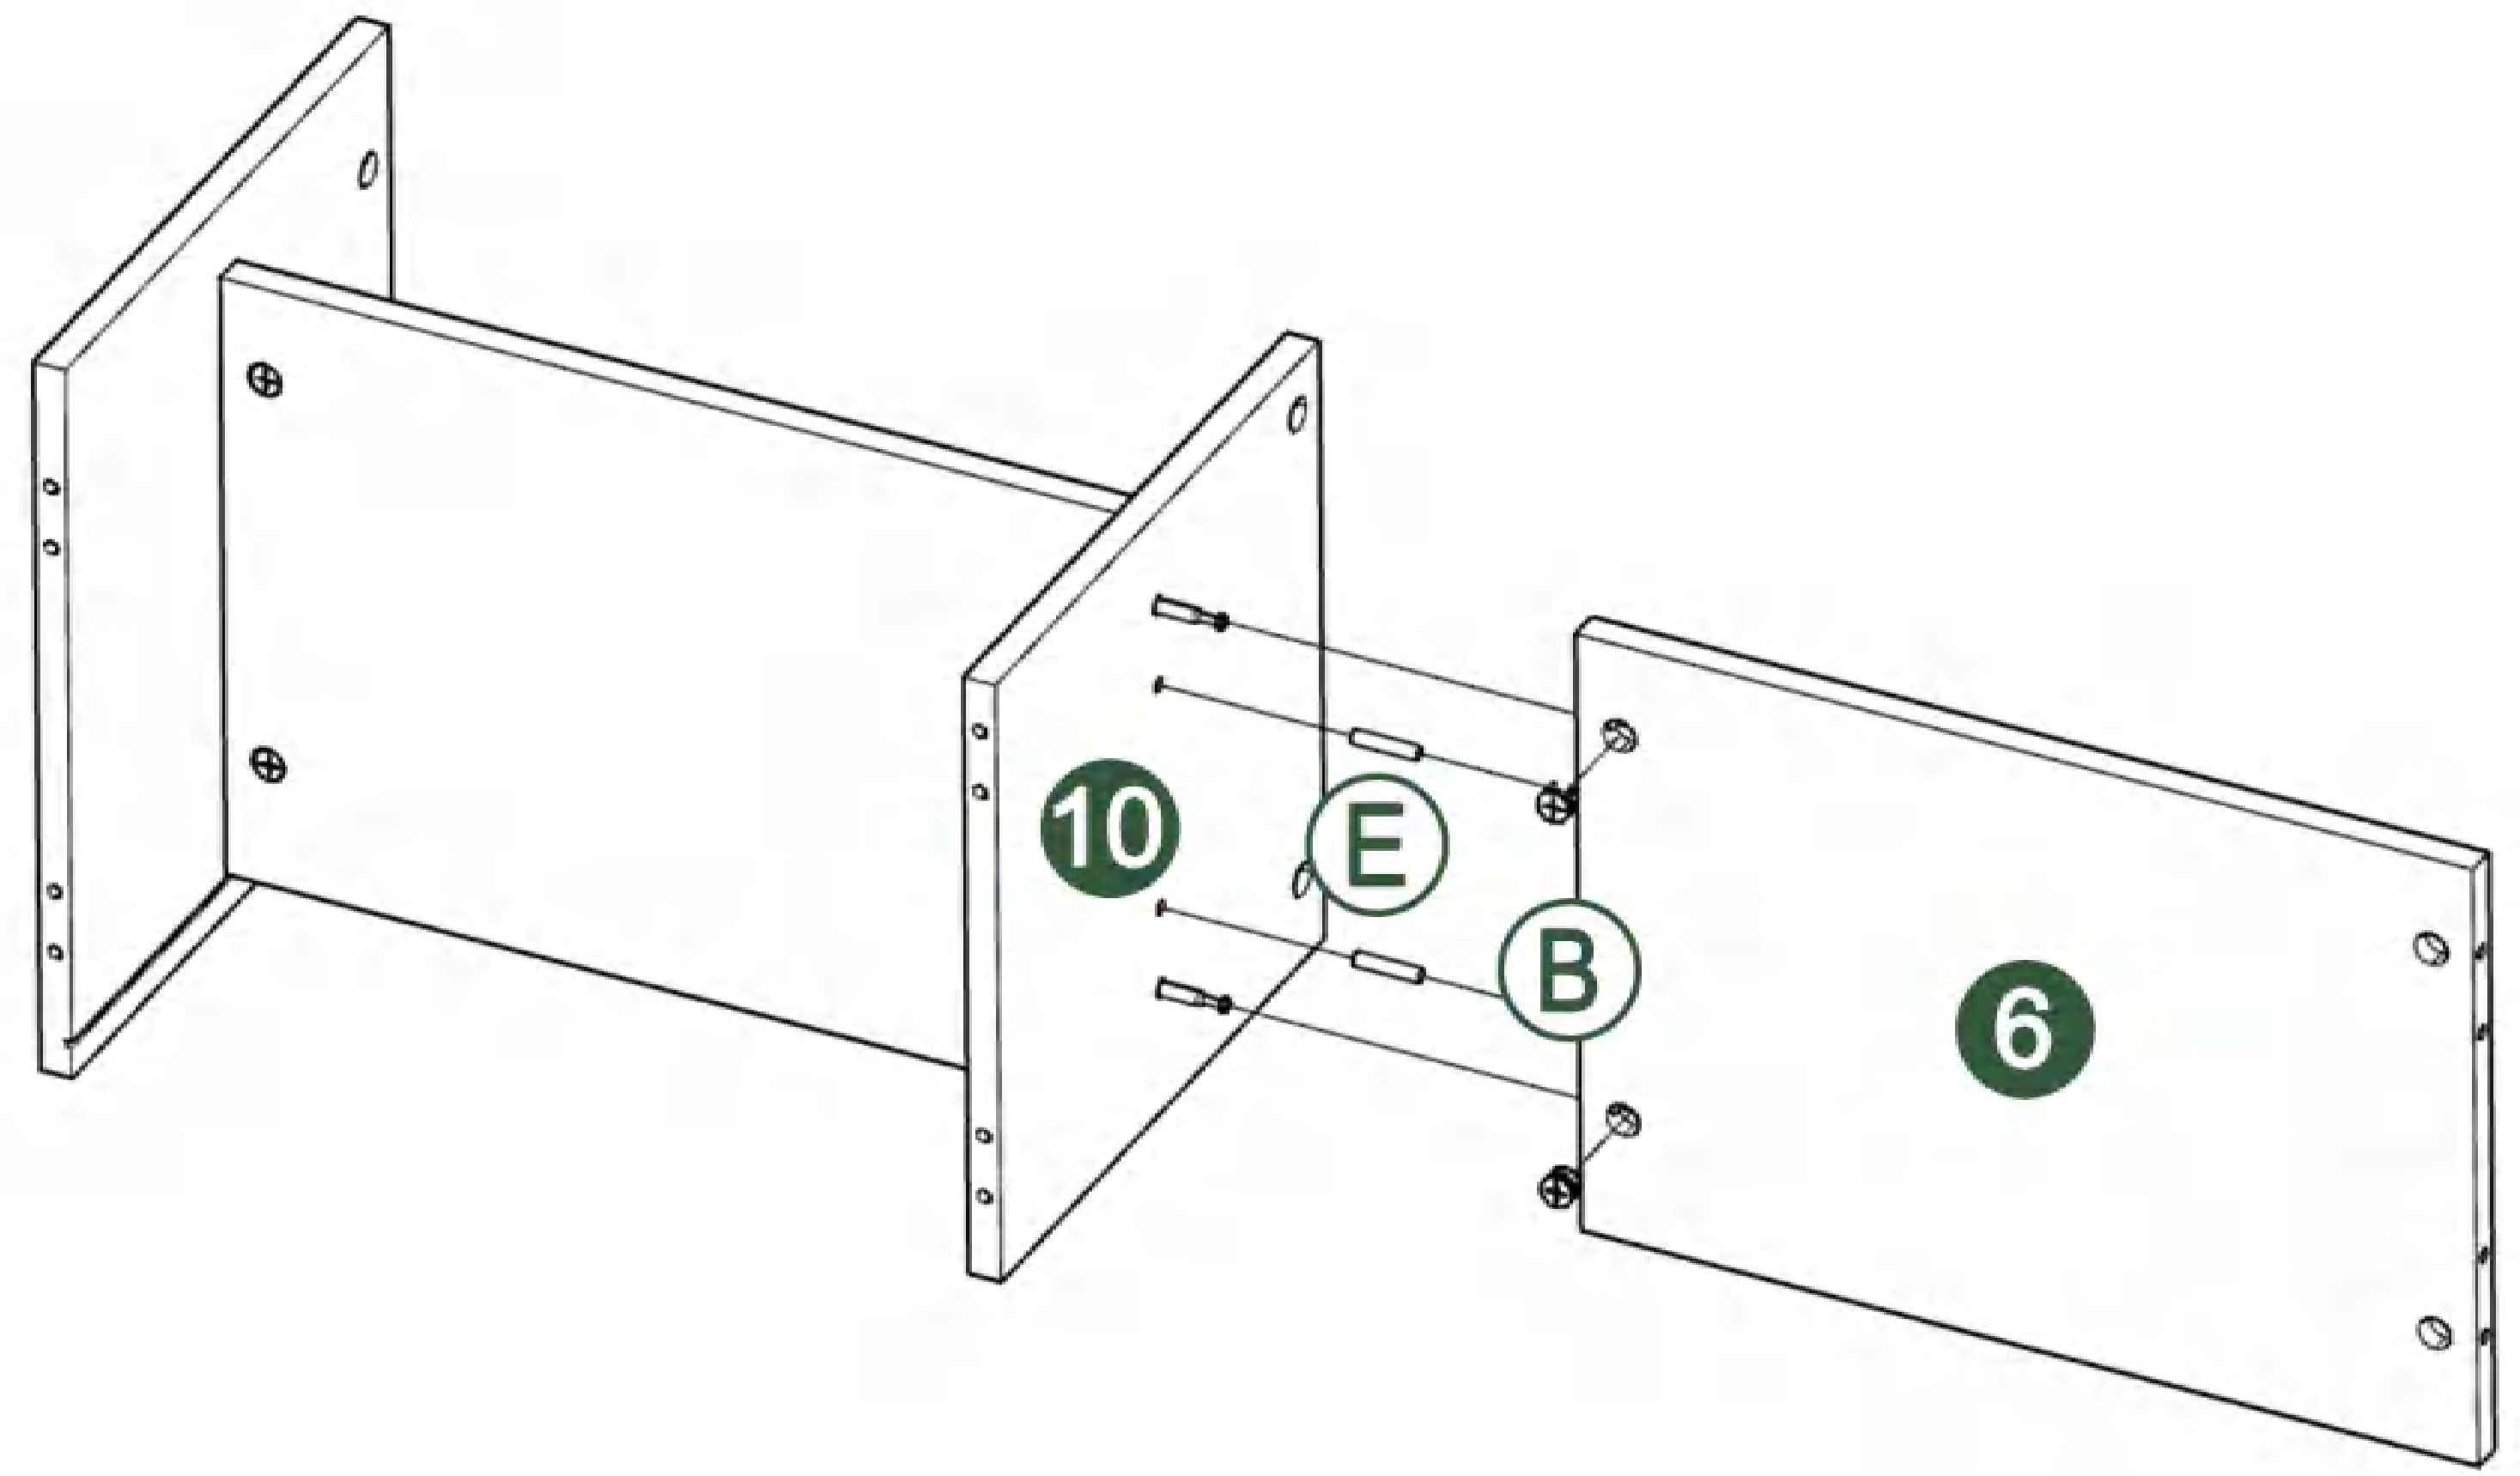


7.

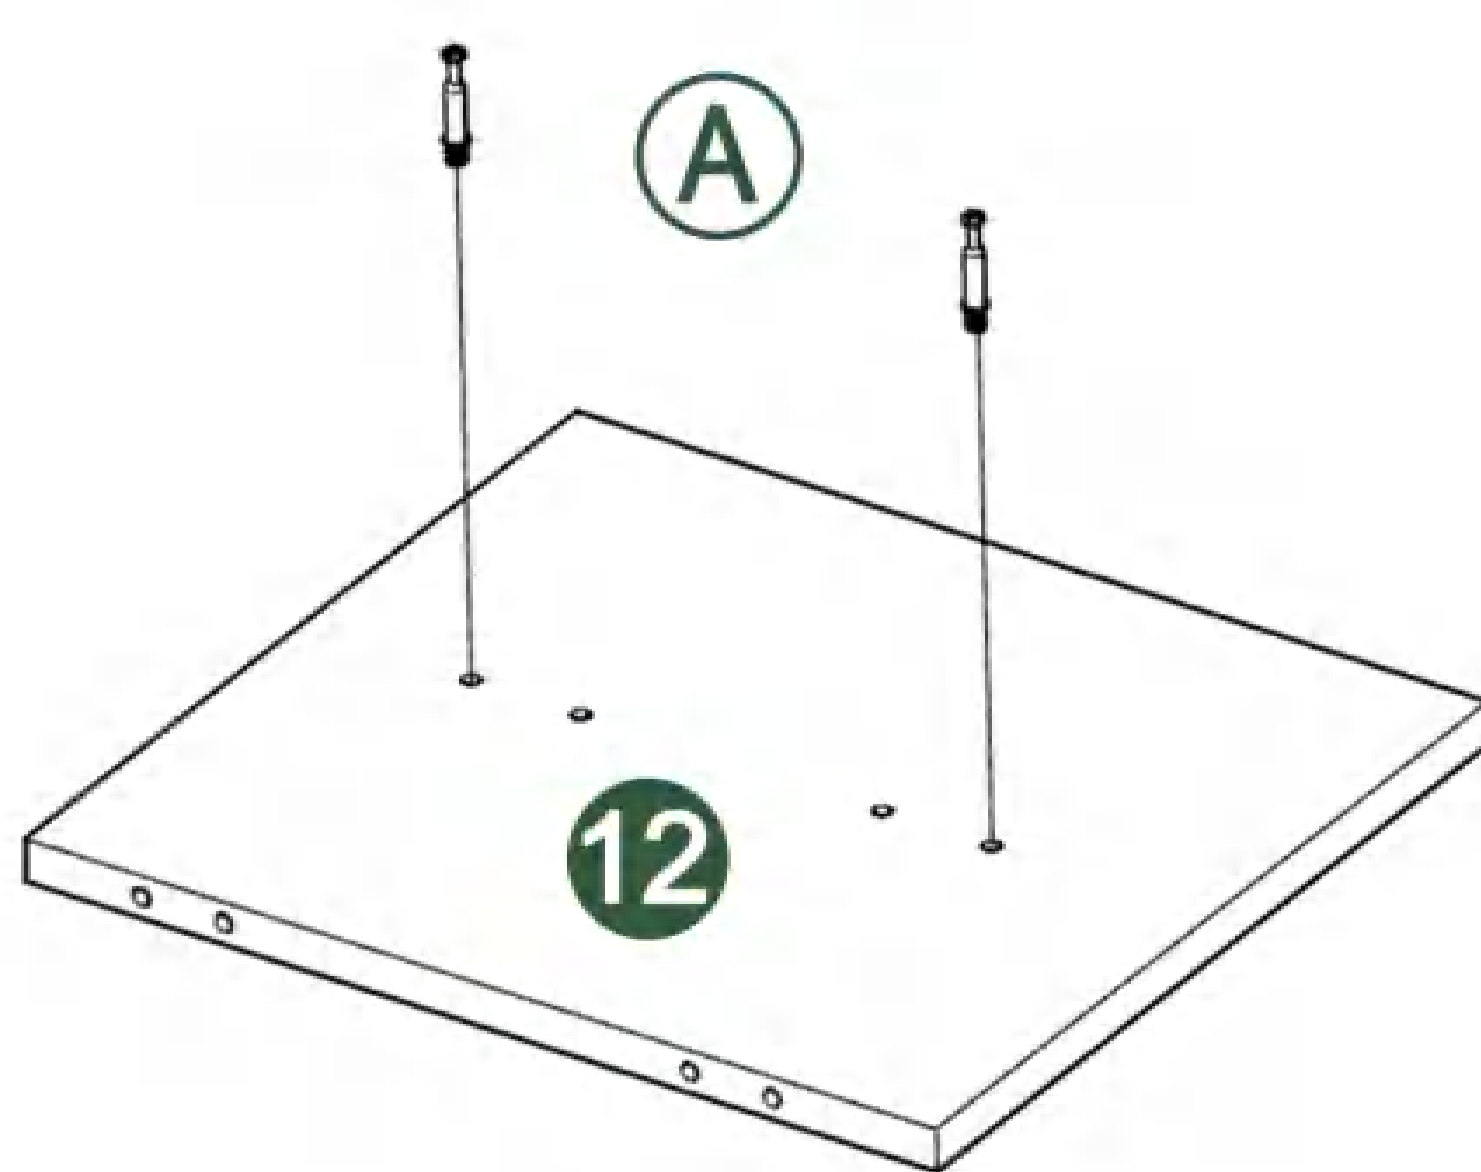


8.

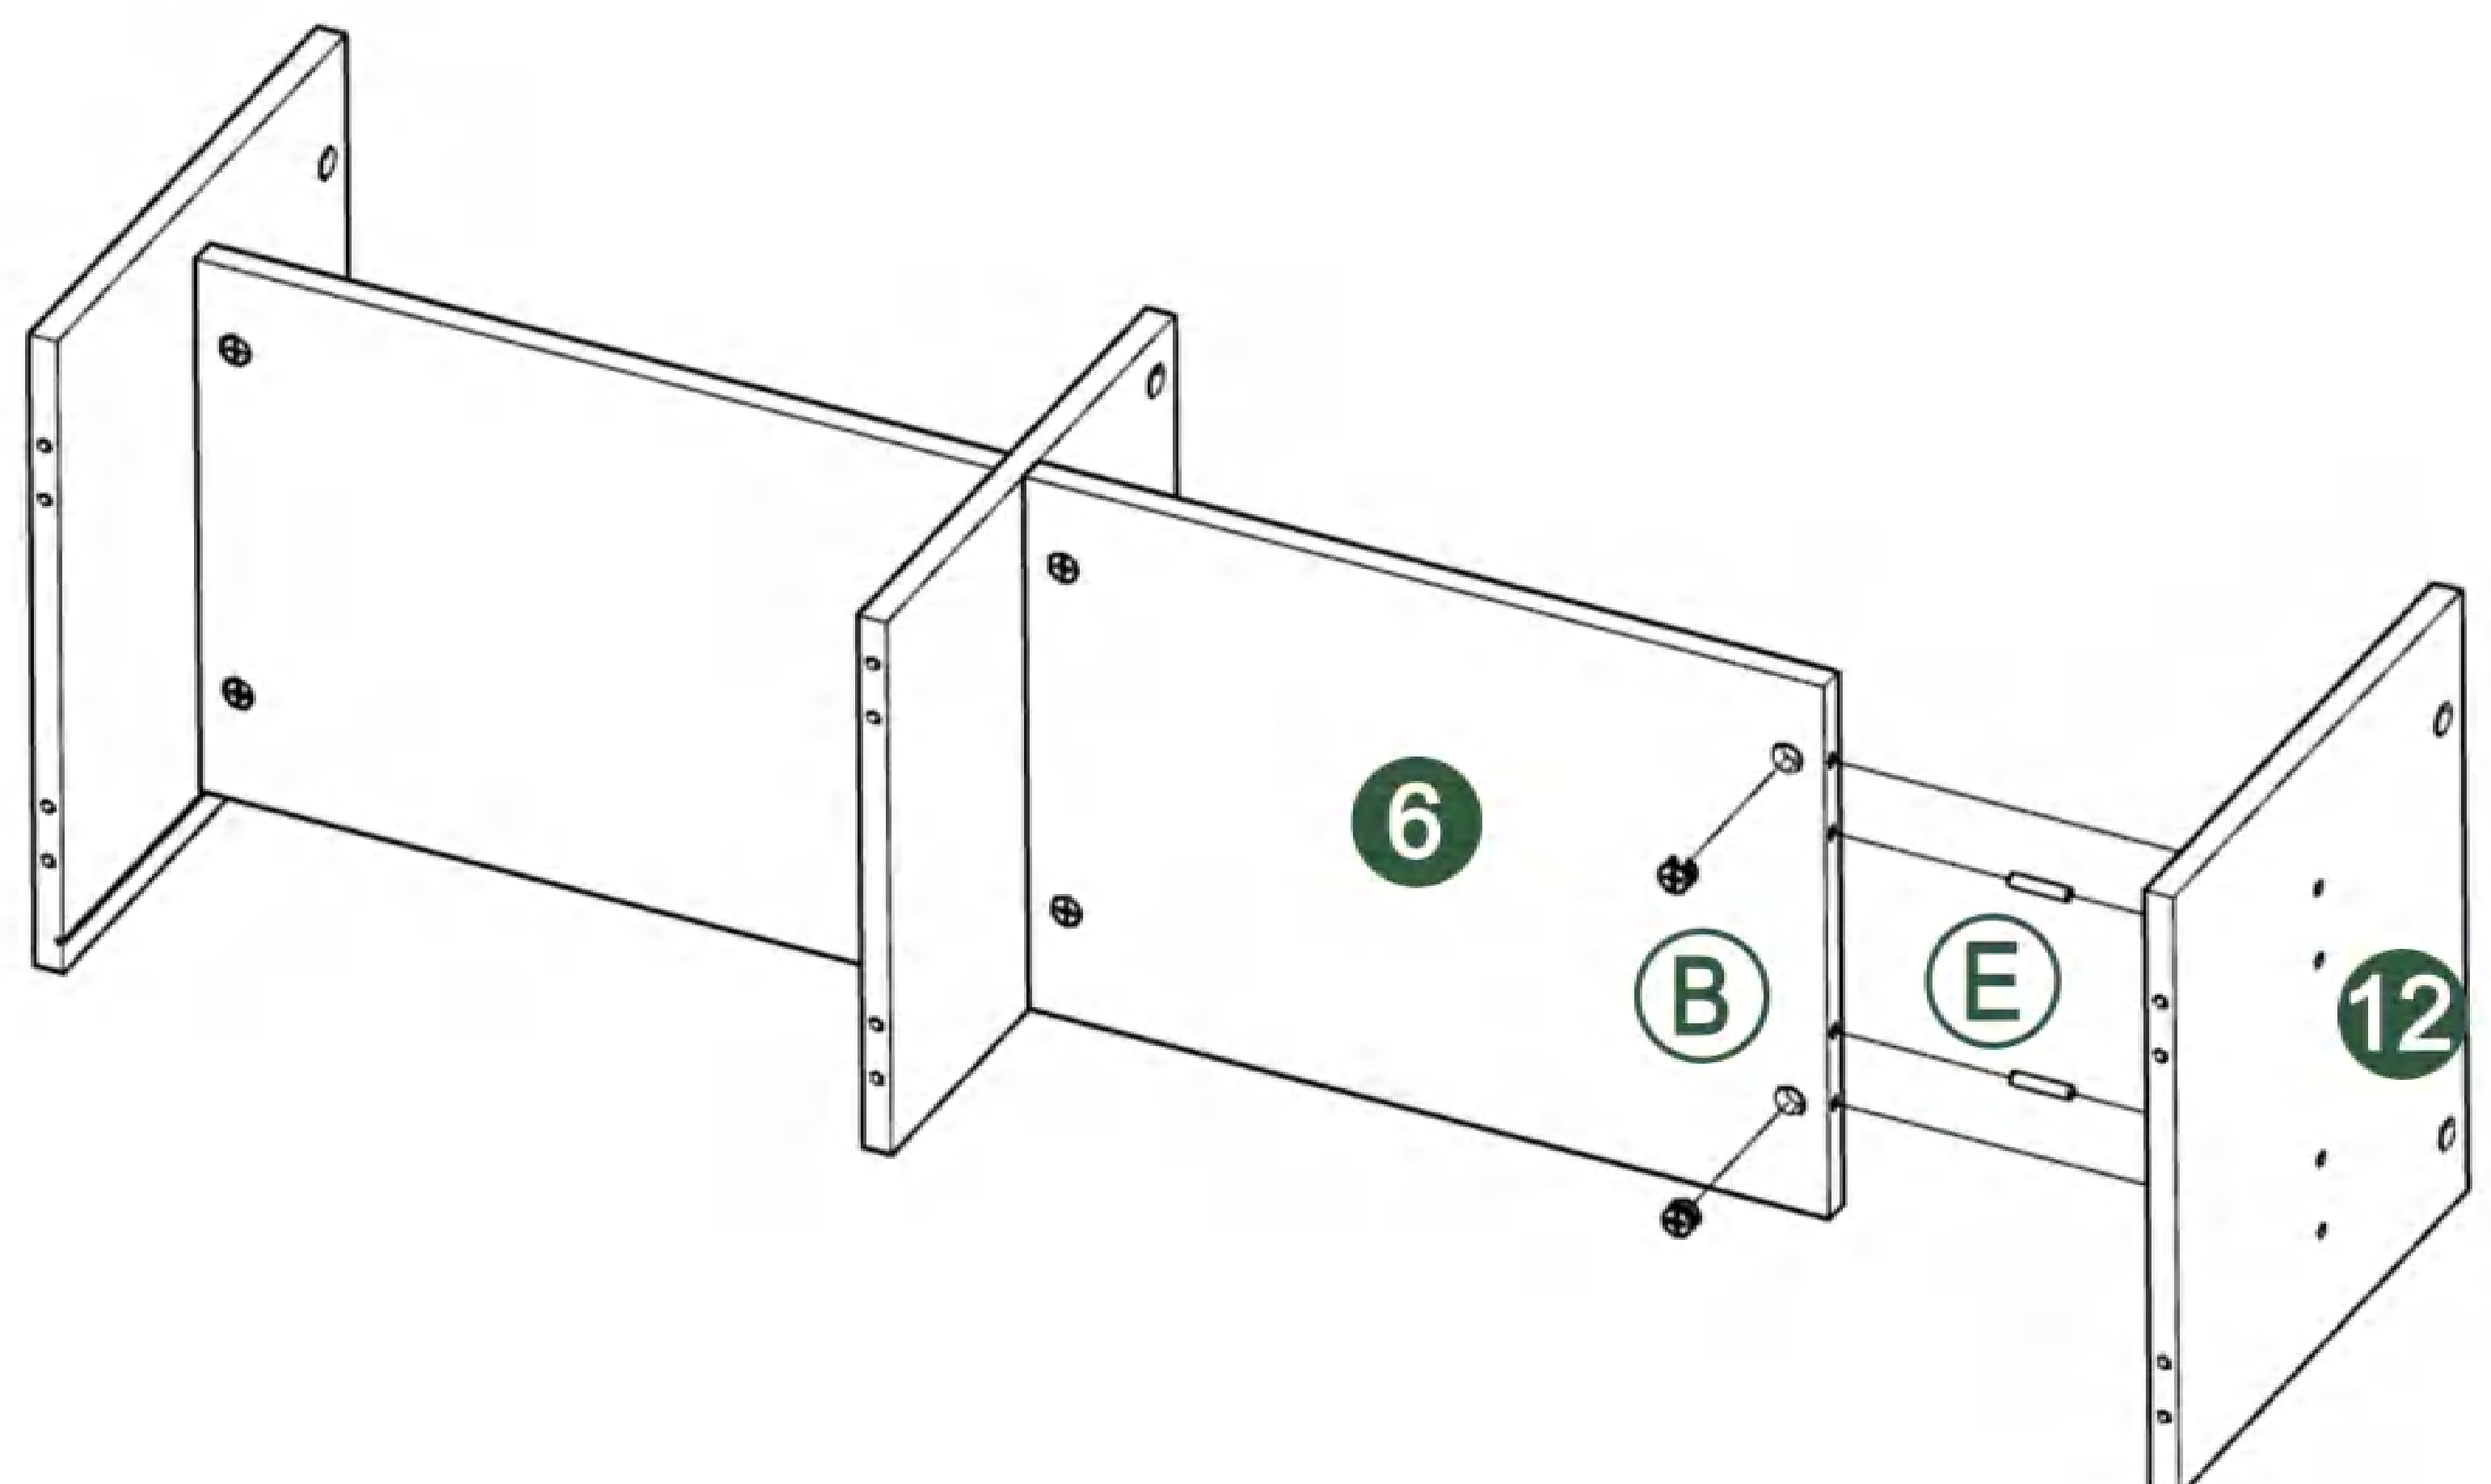


9.

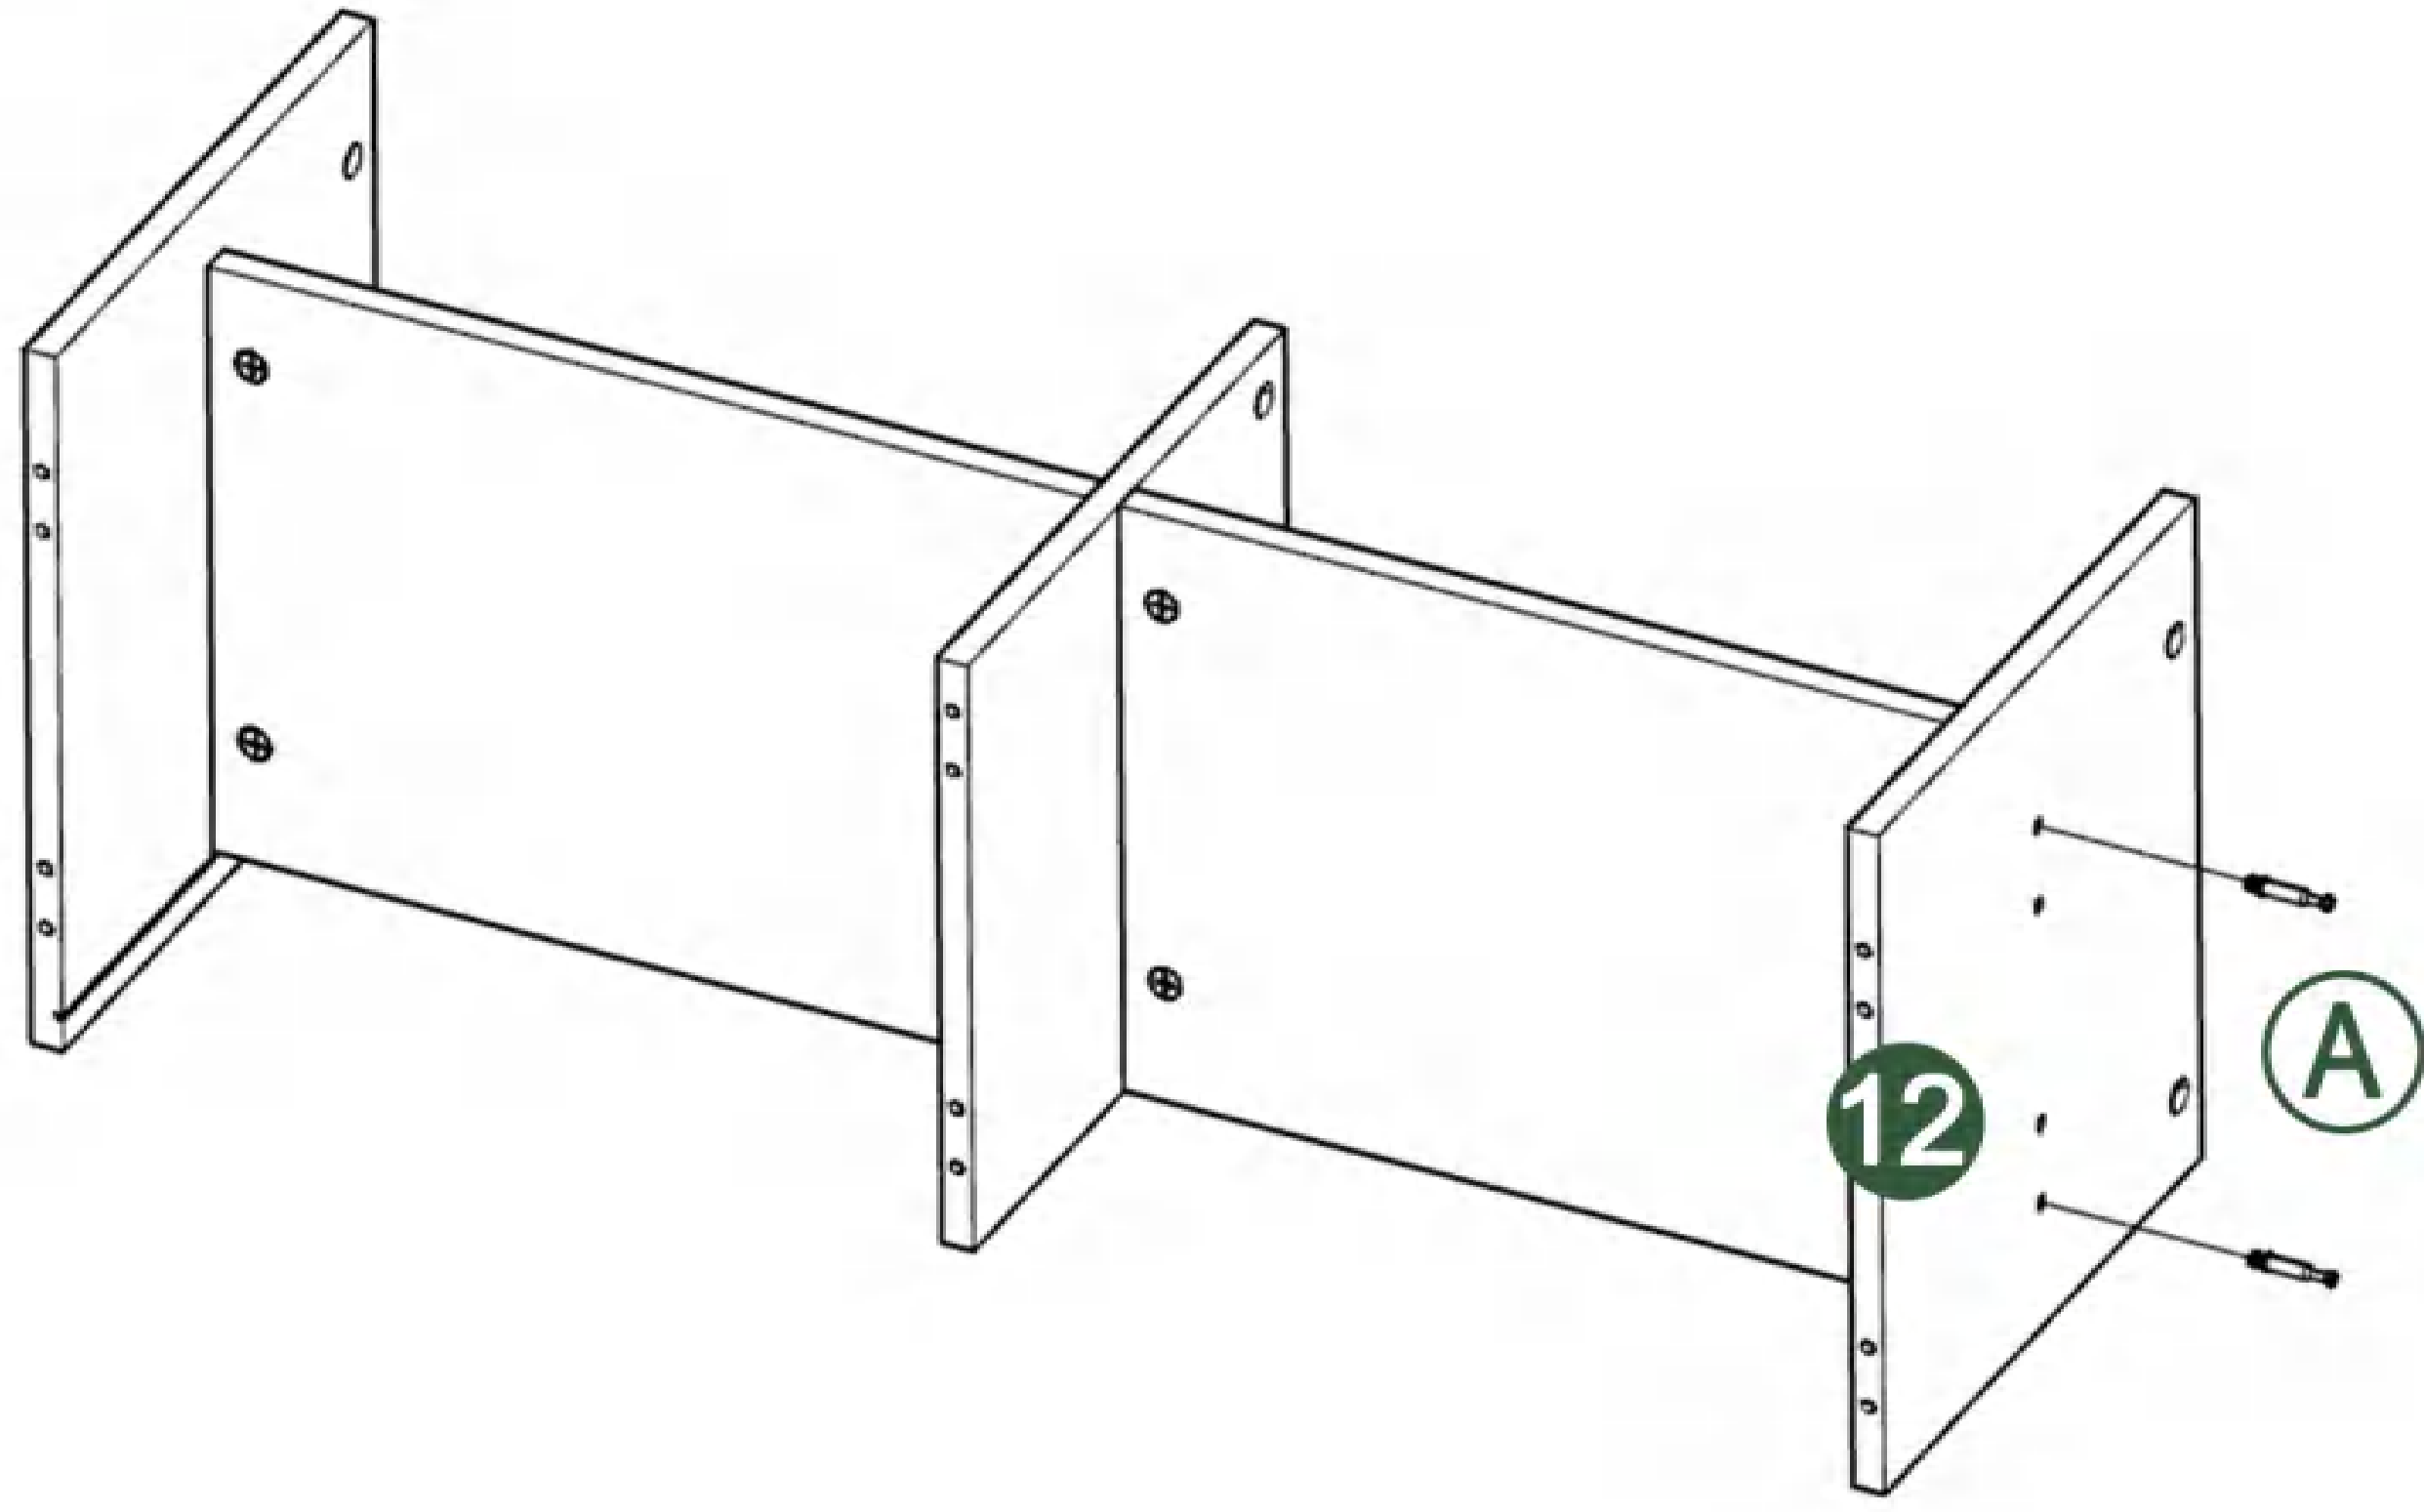


10.

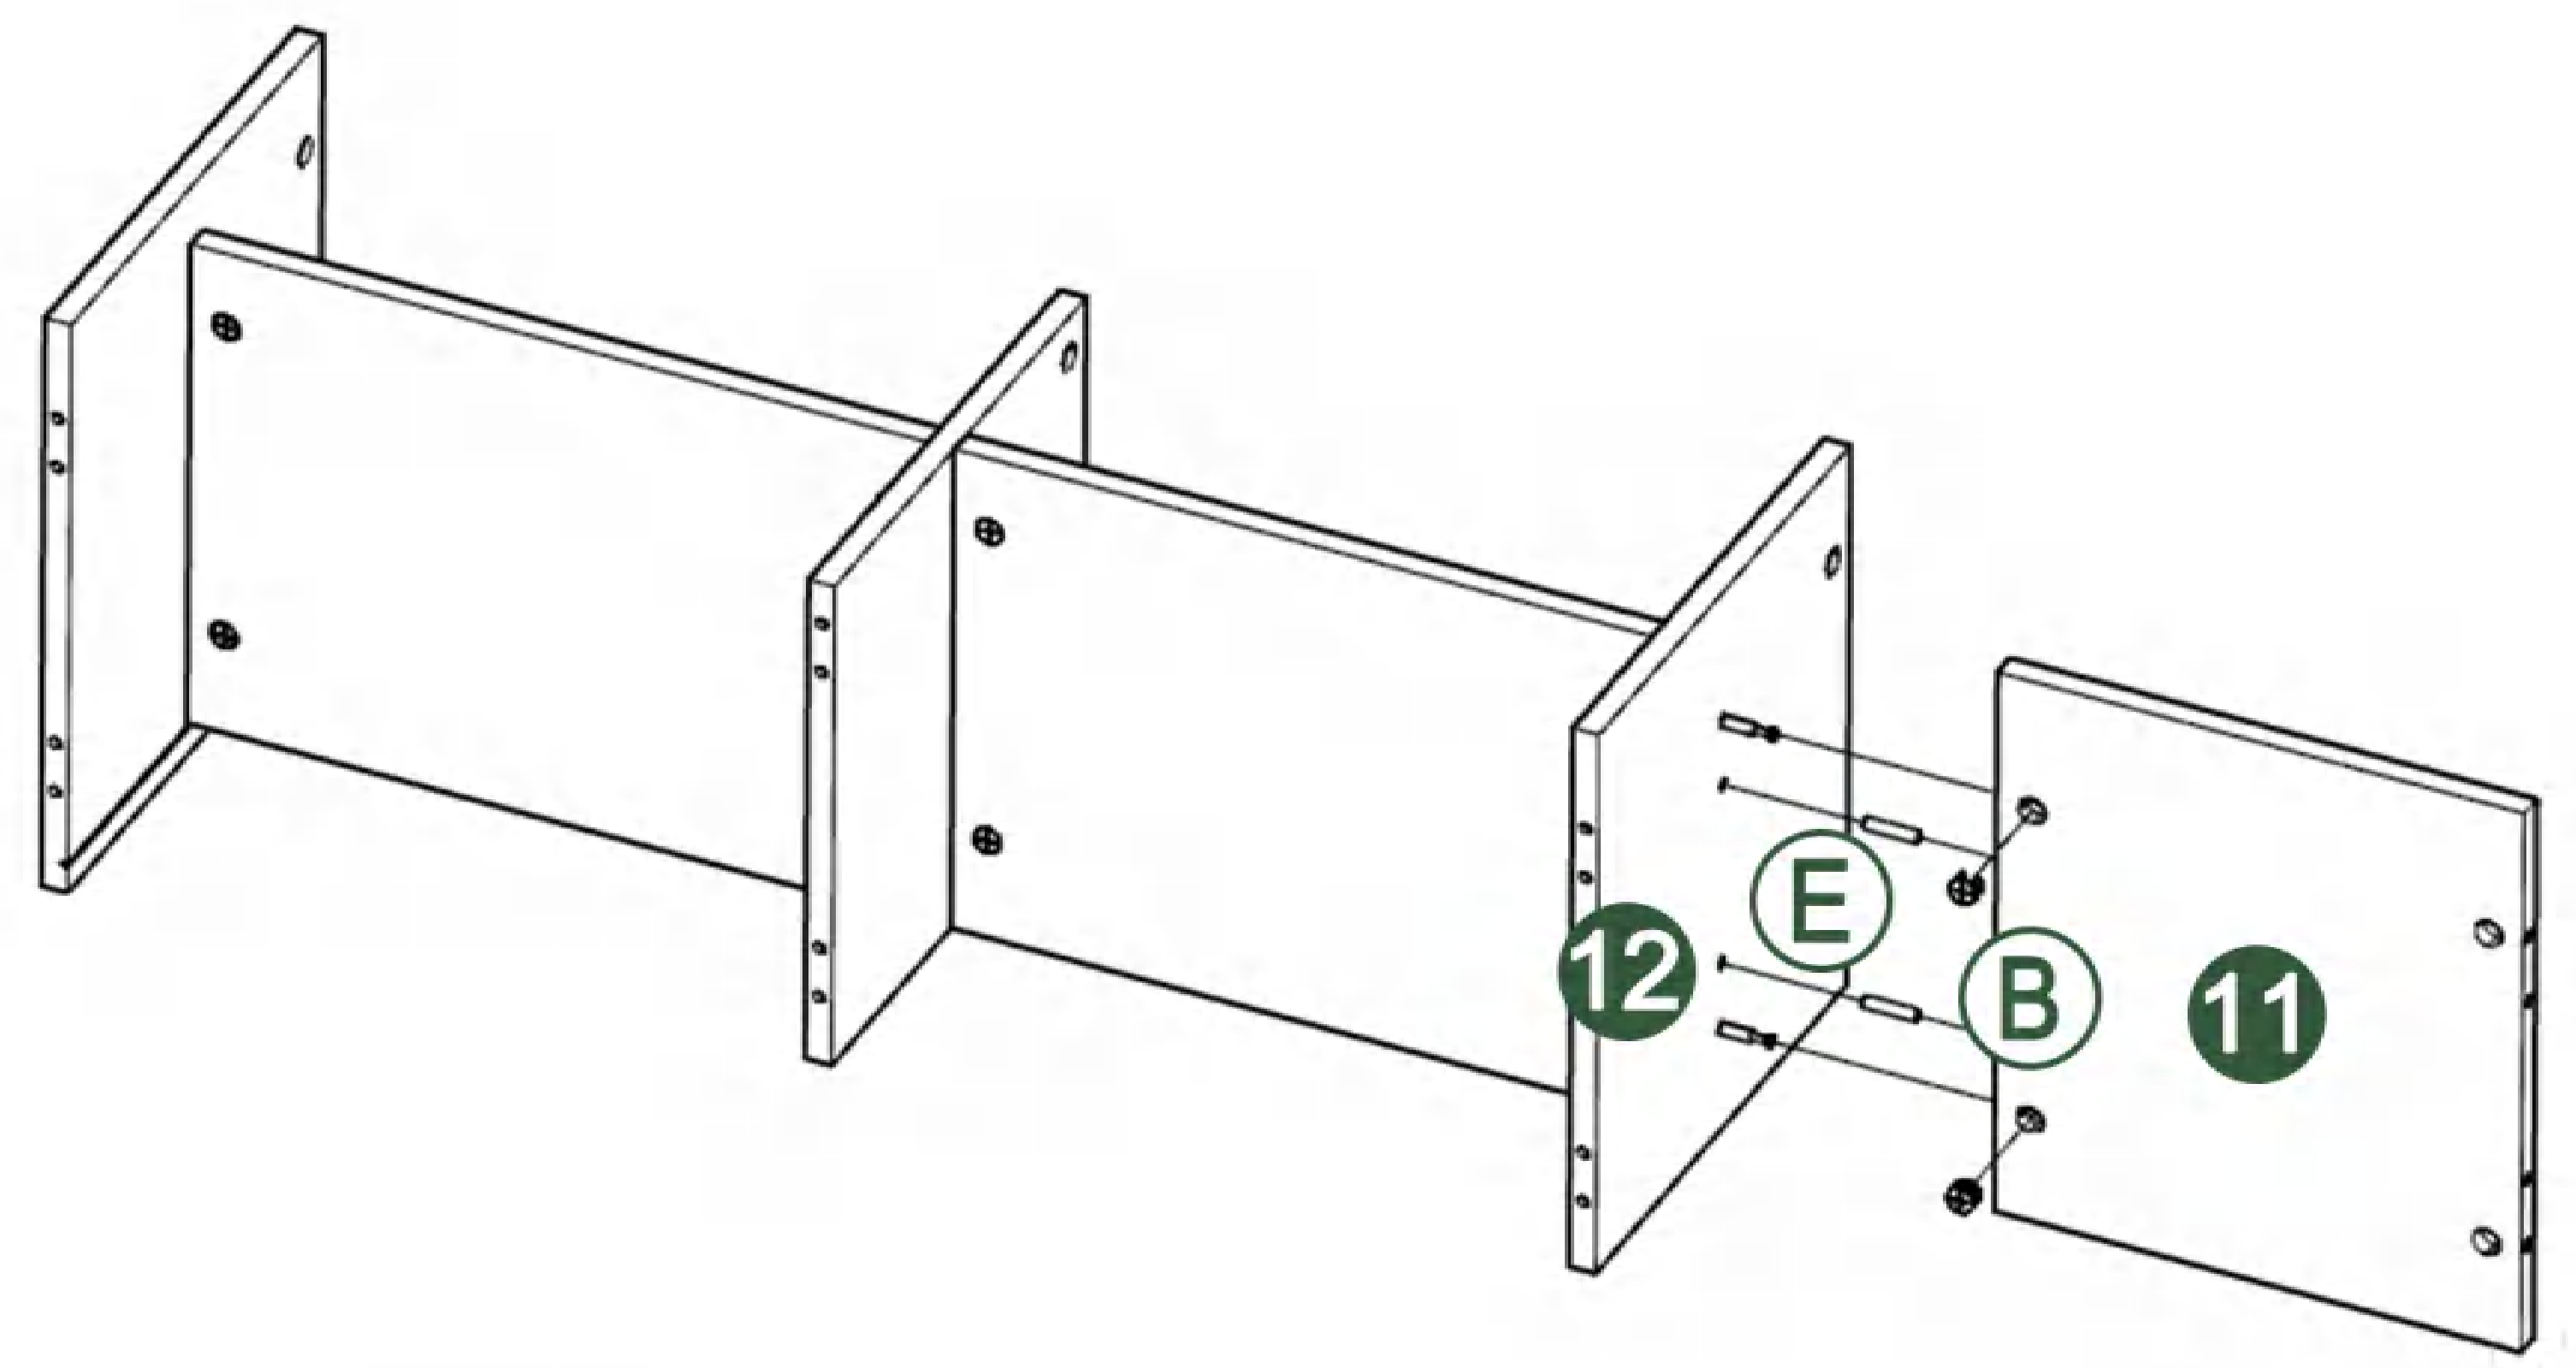


11.

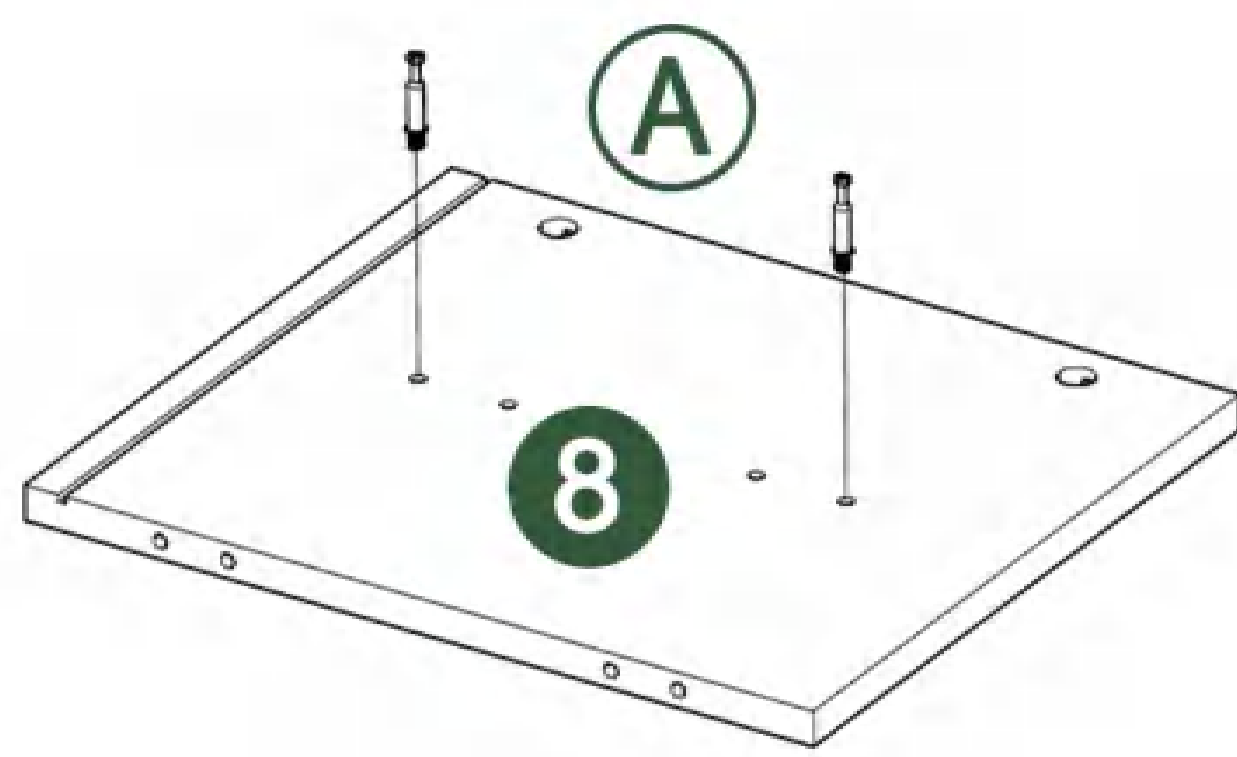


12.

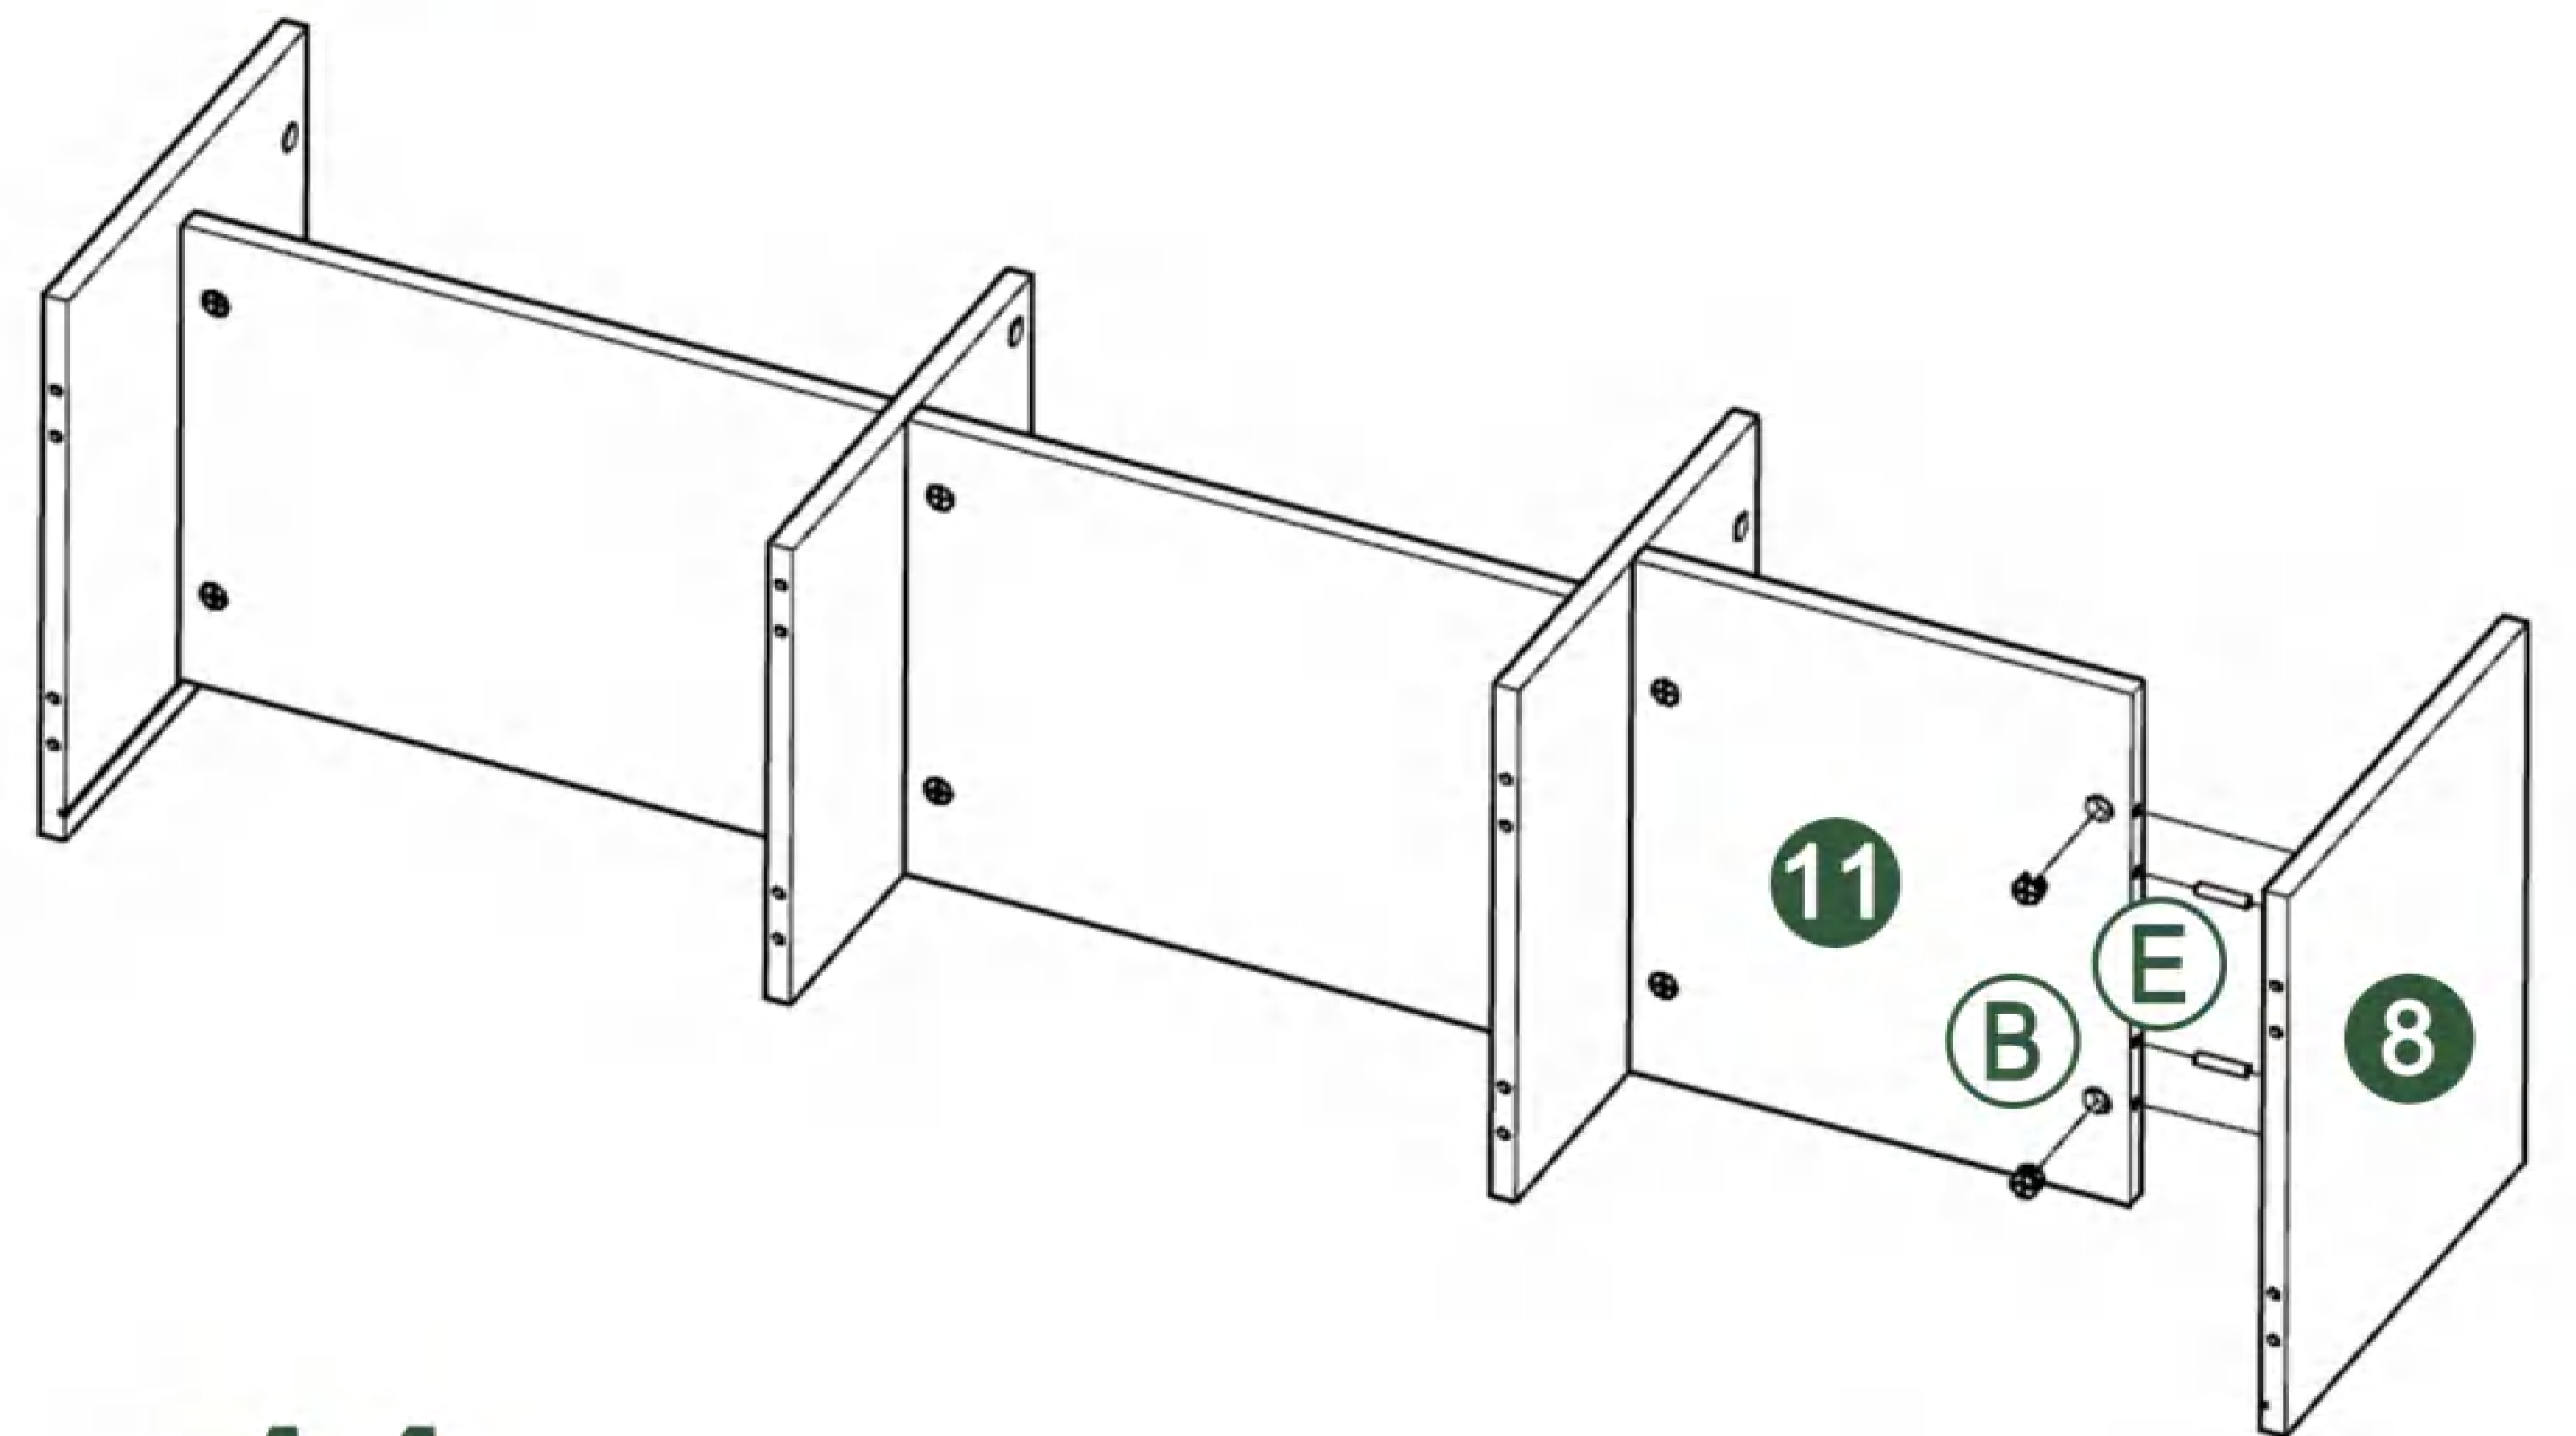


13.

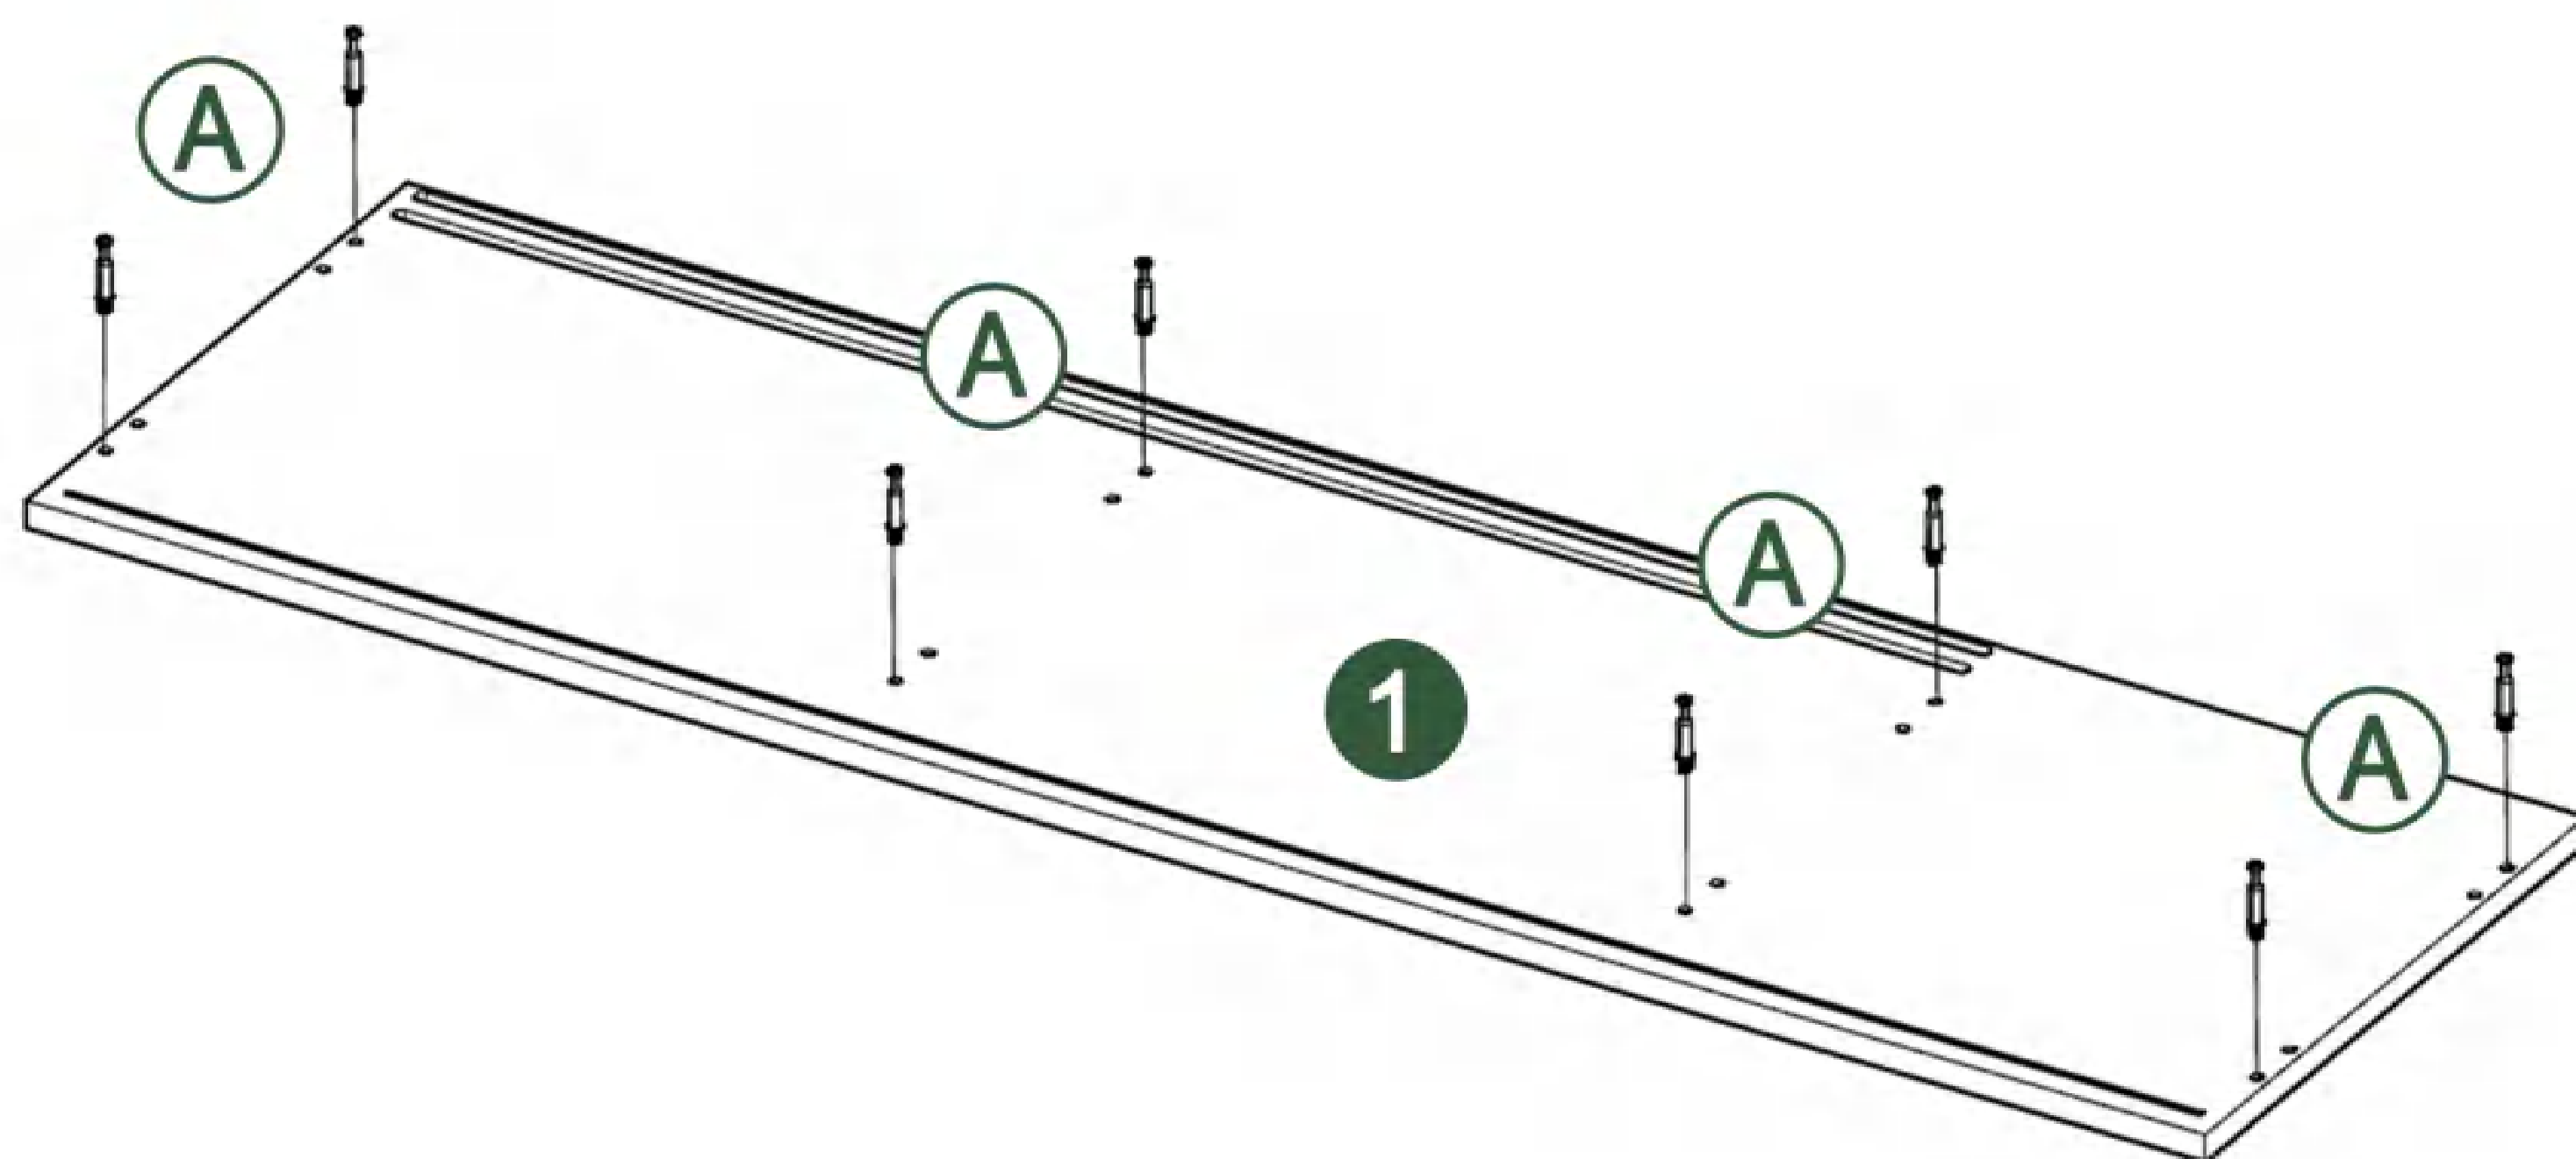


14.

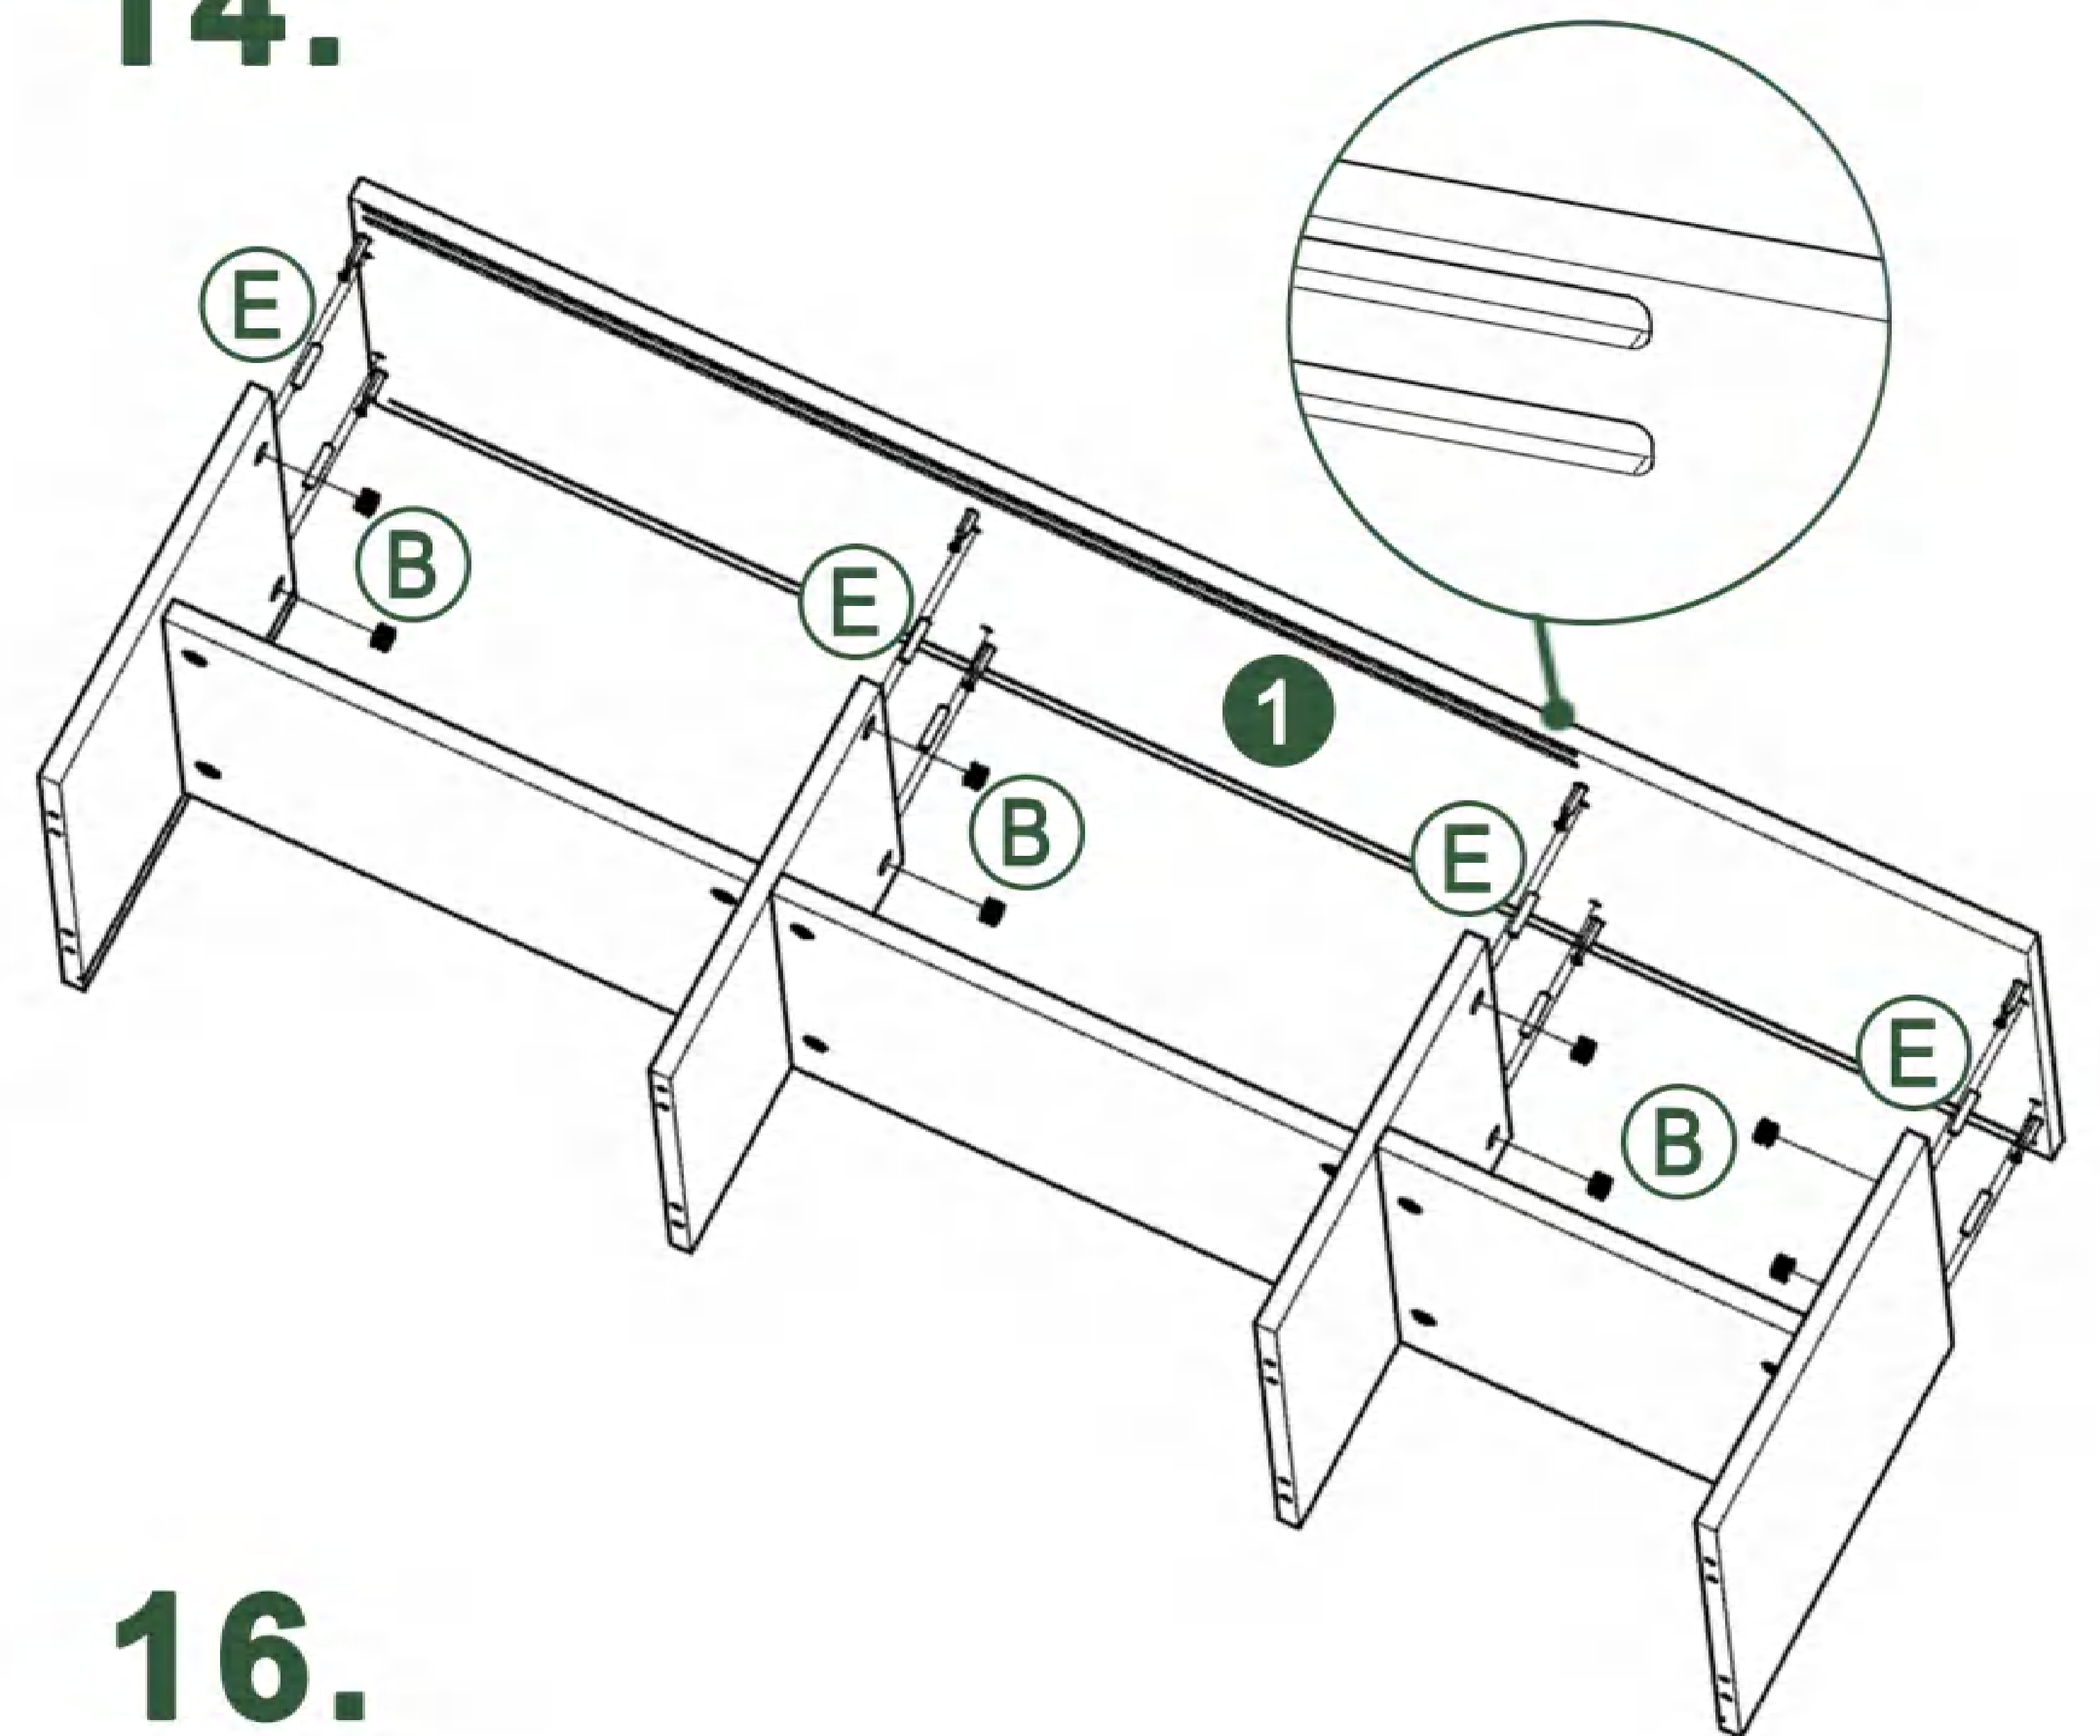


15.

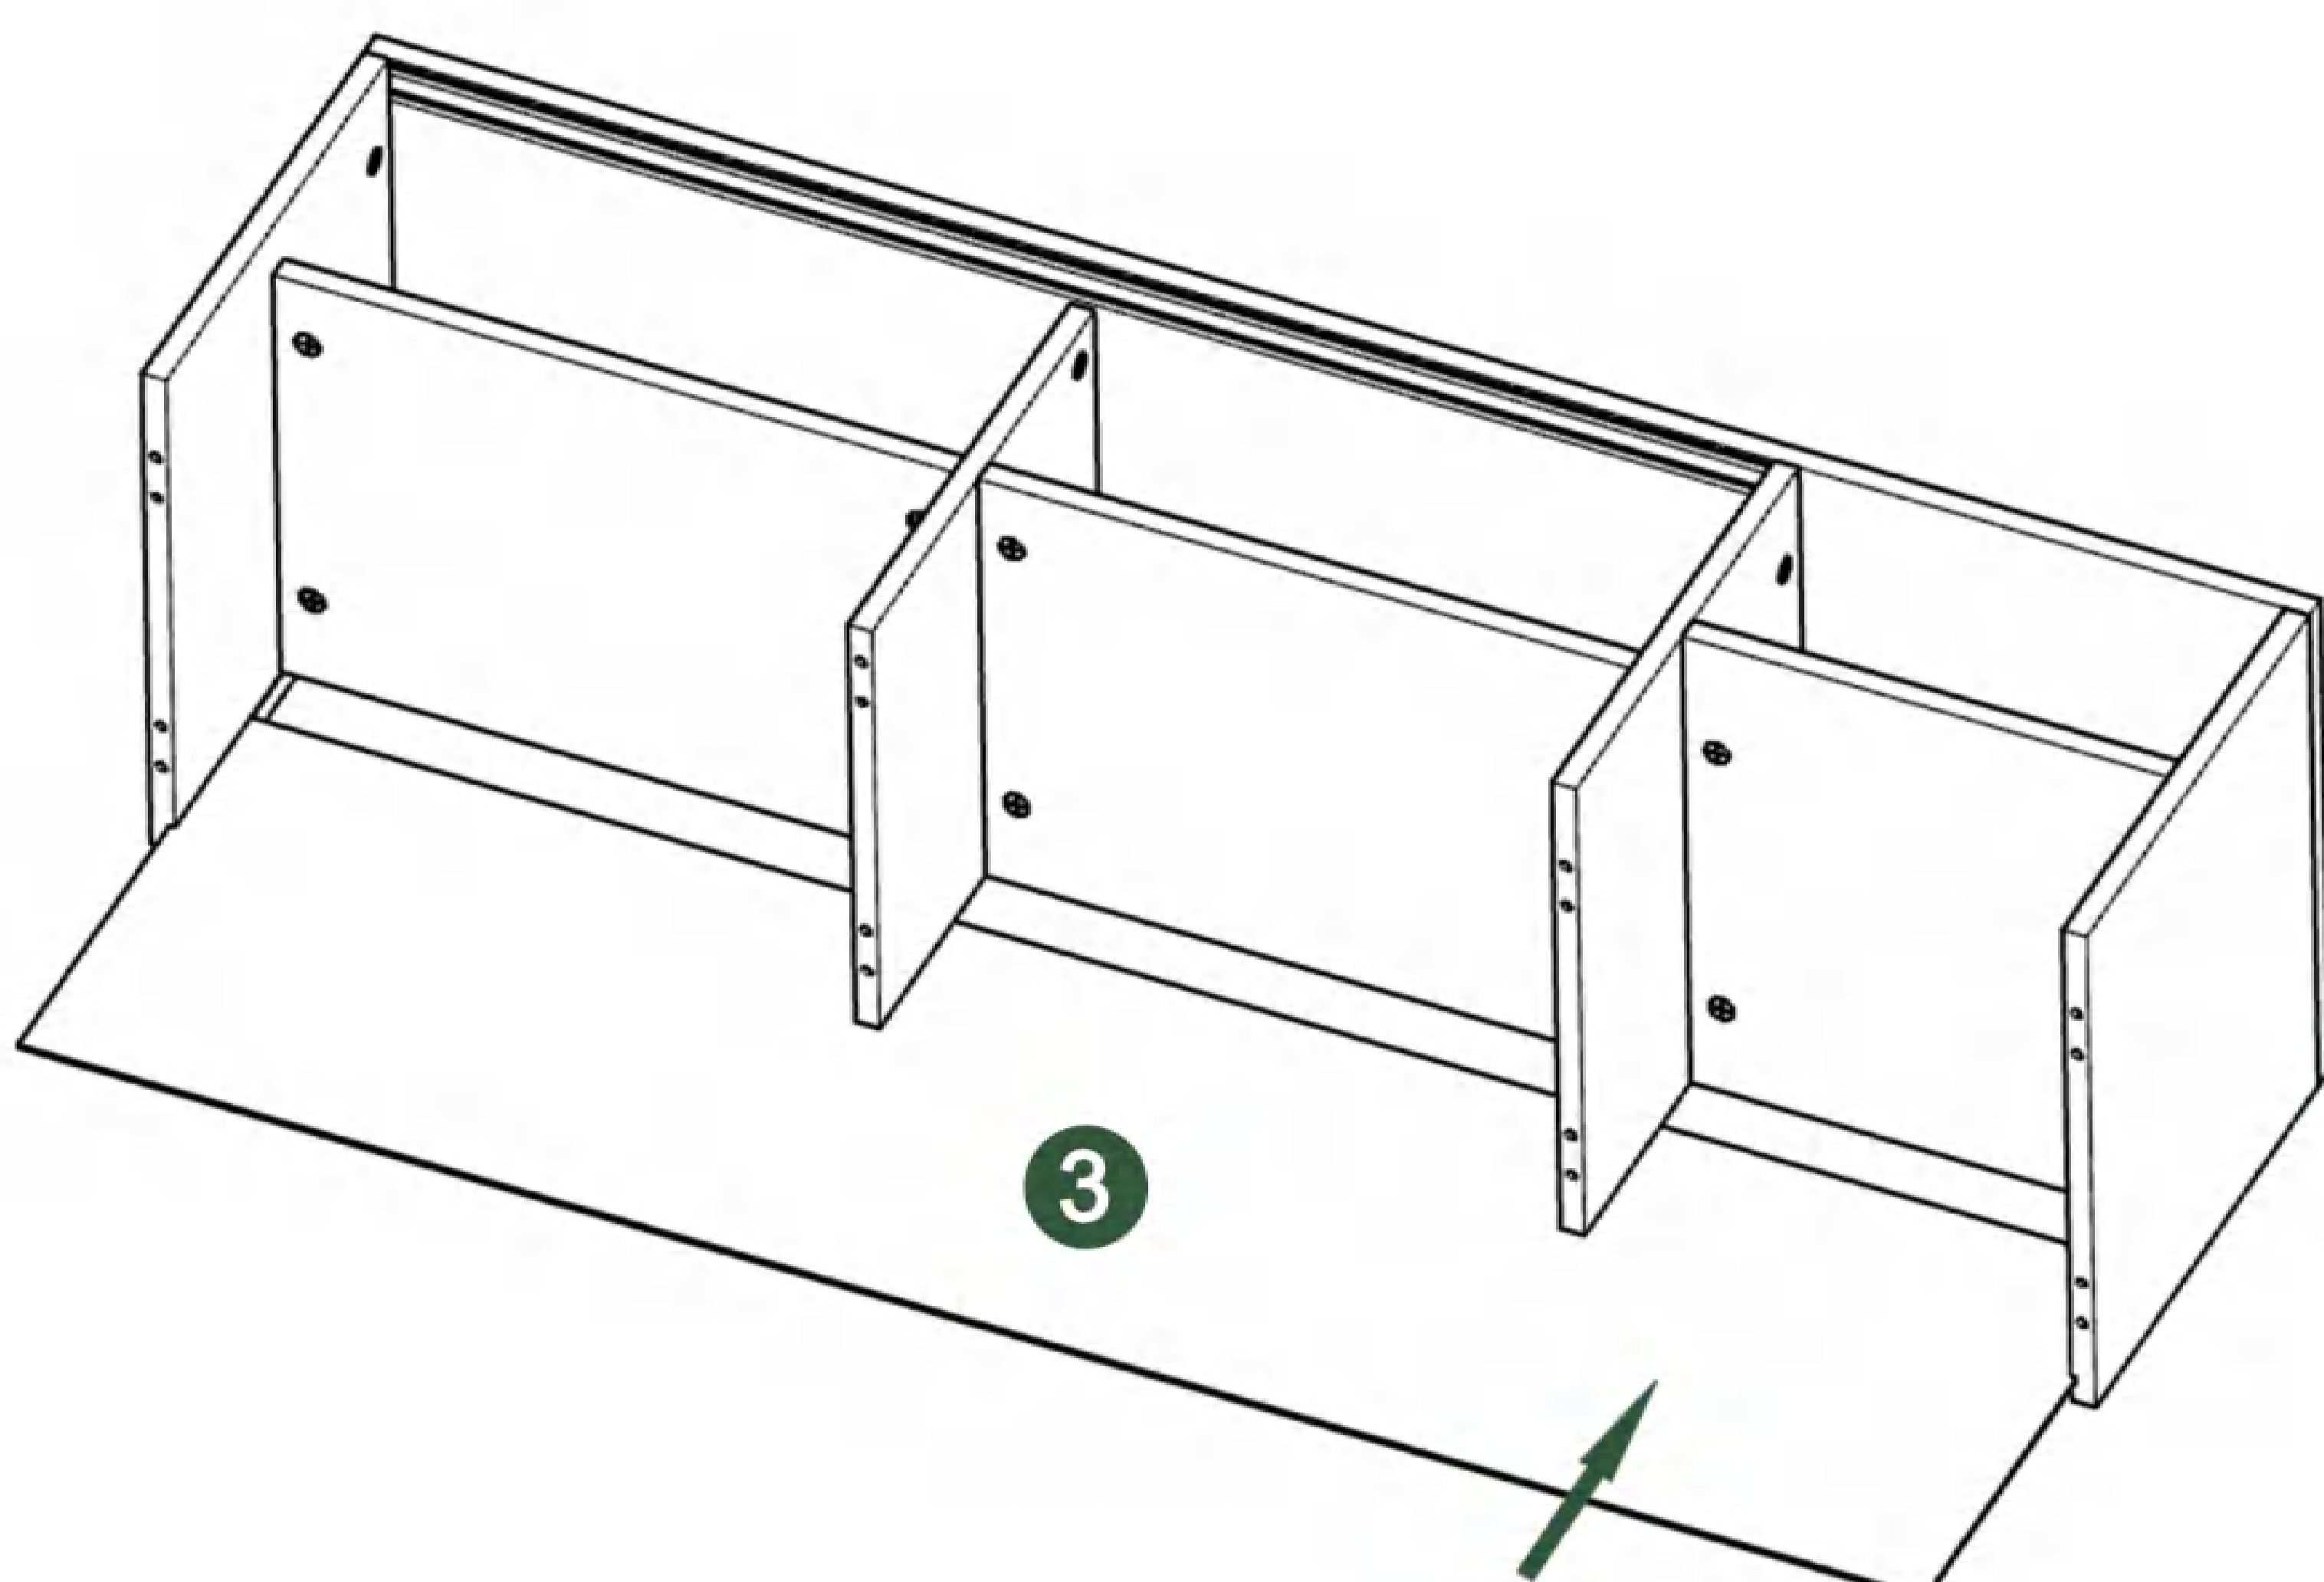


16.

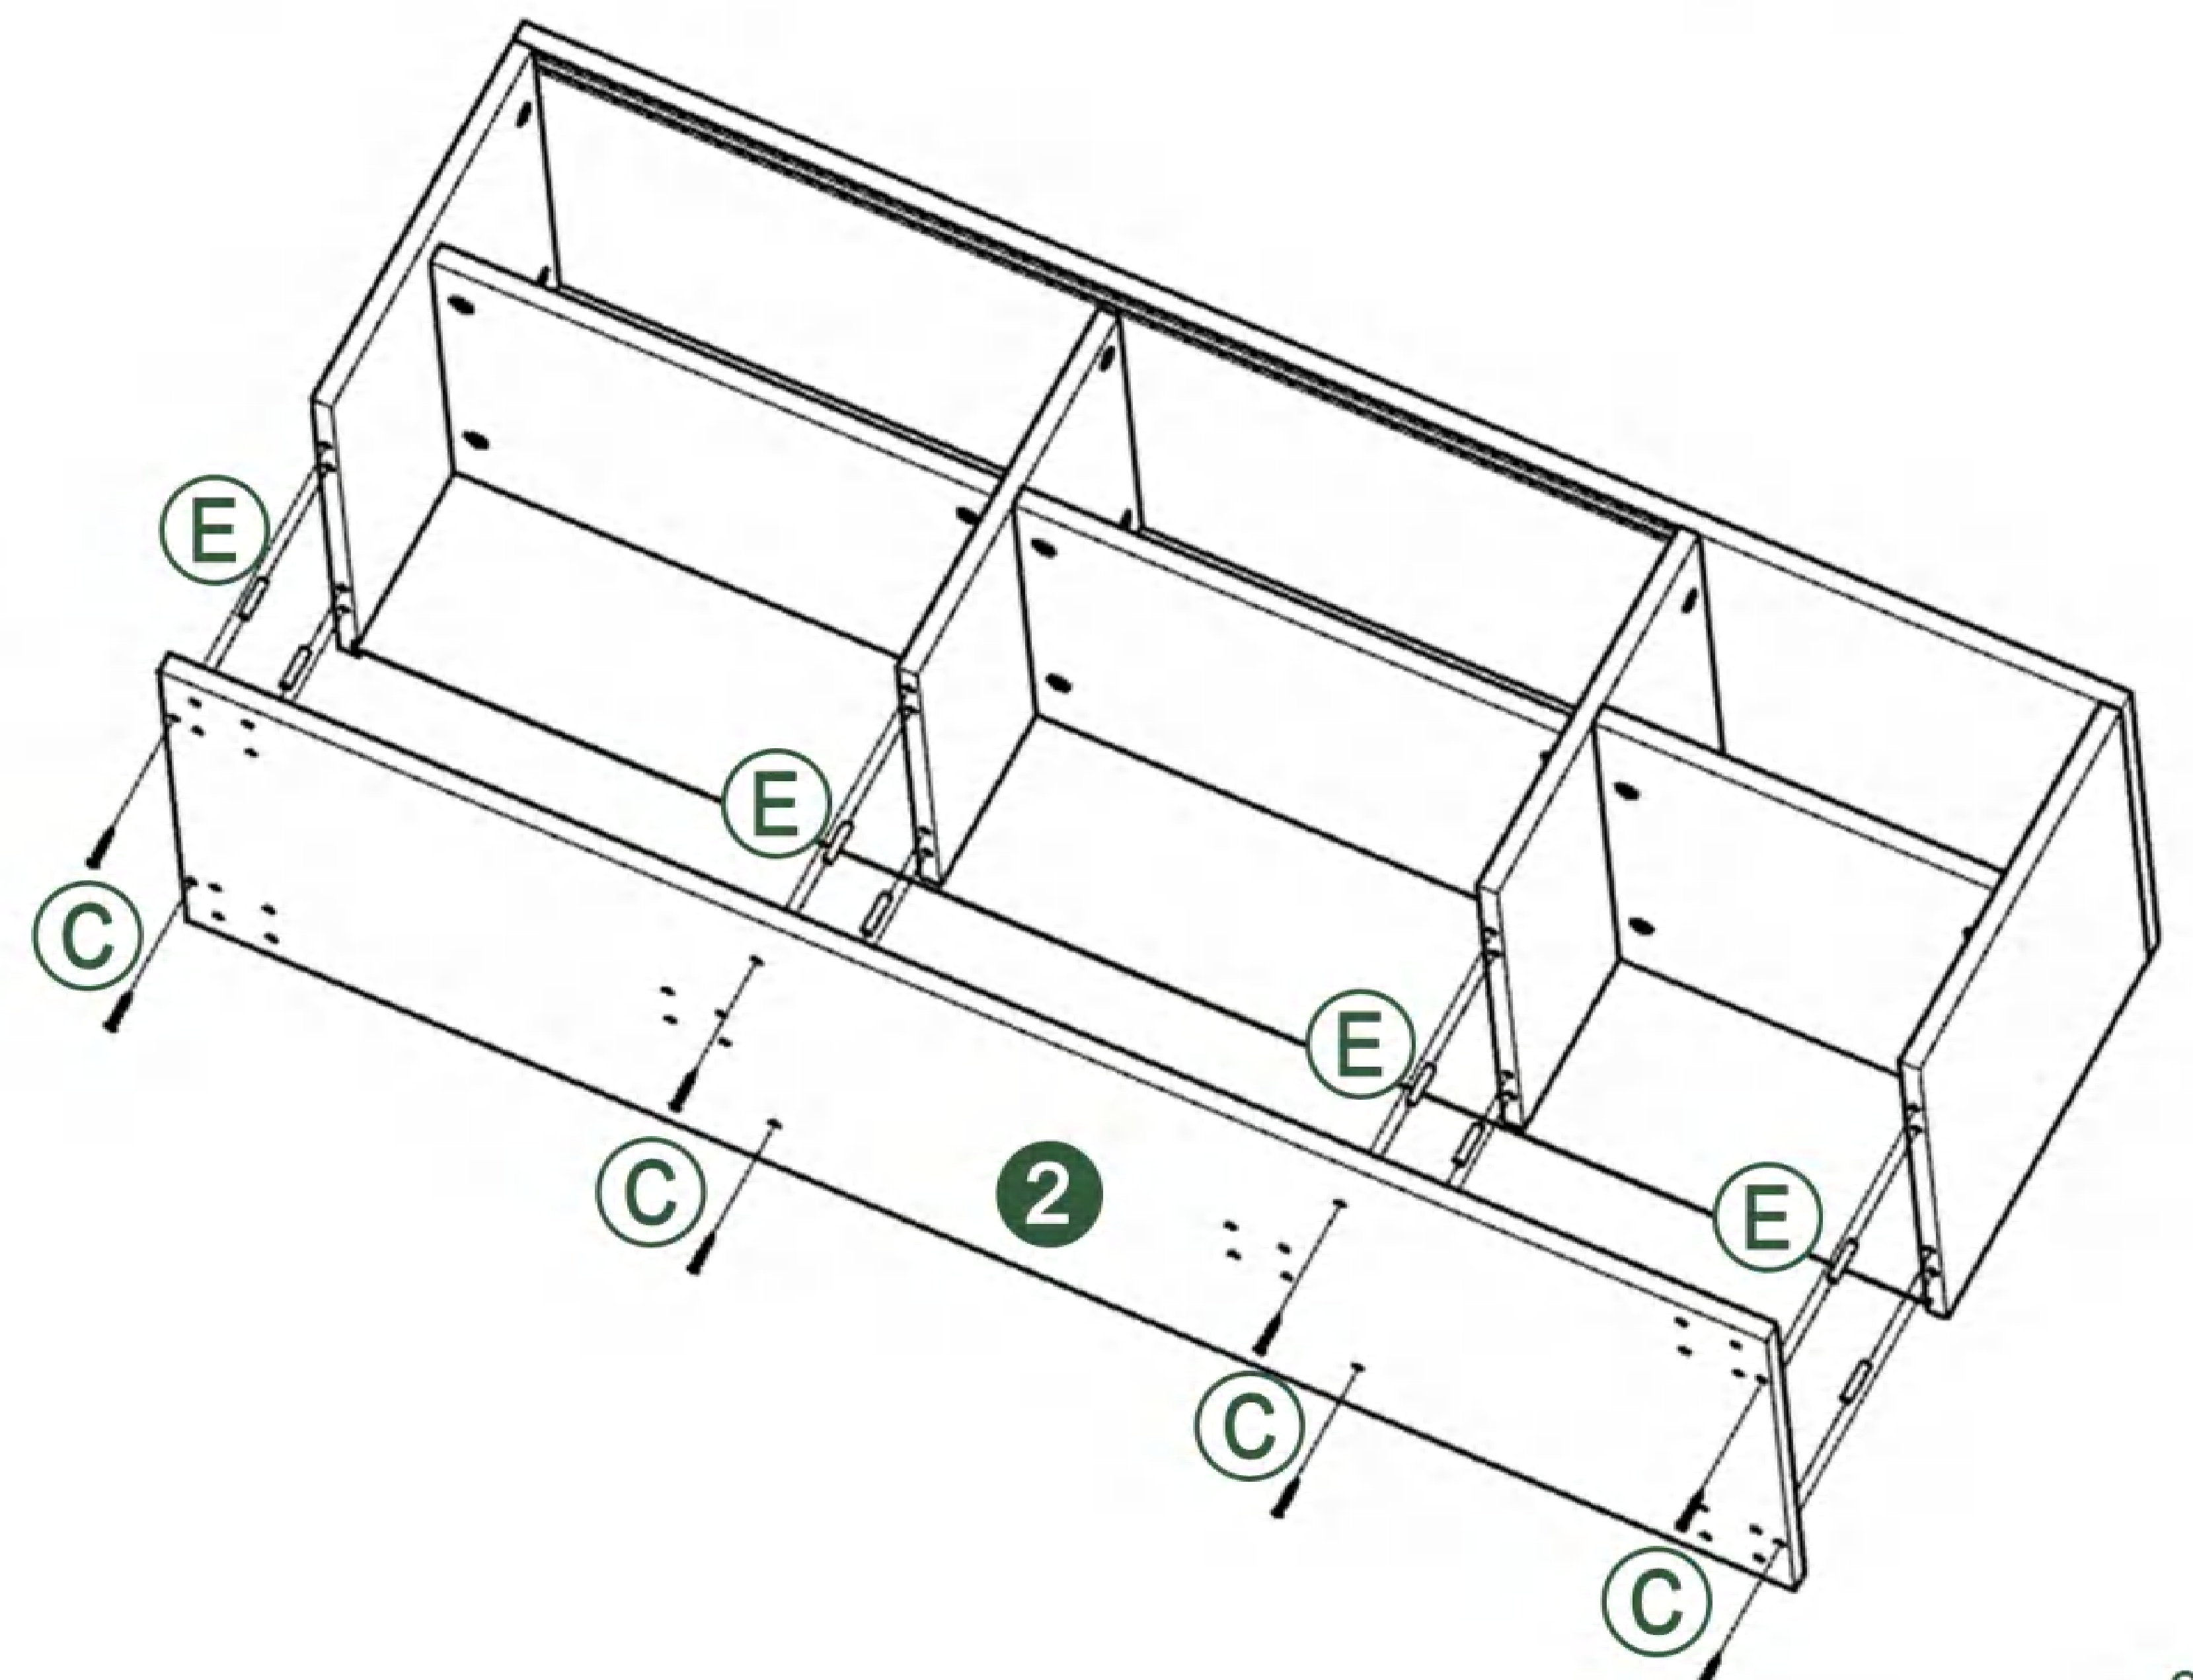


17(X6).

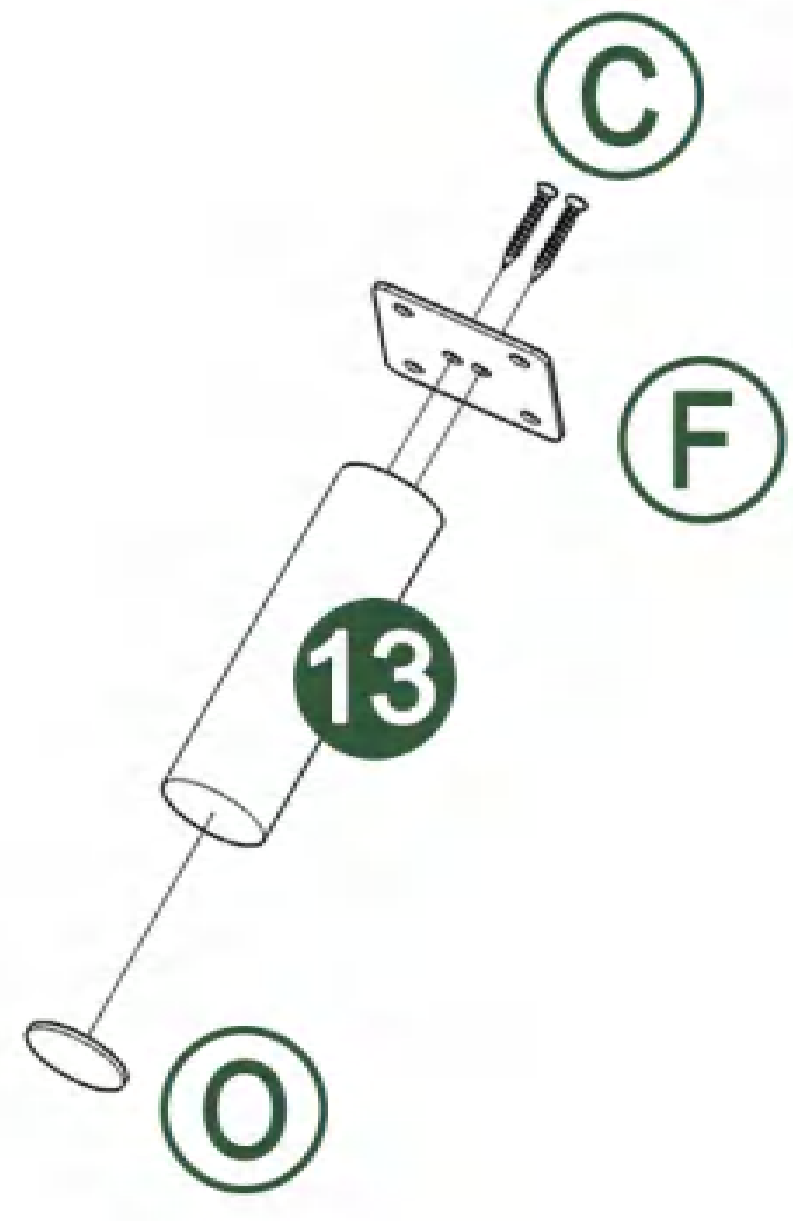


18.

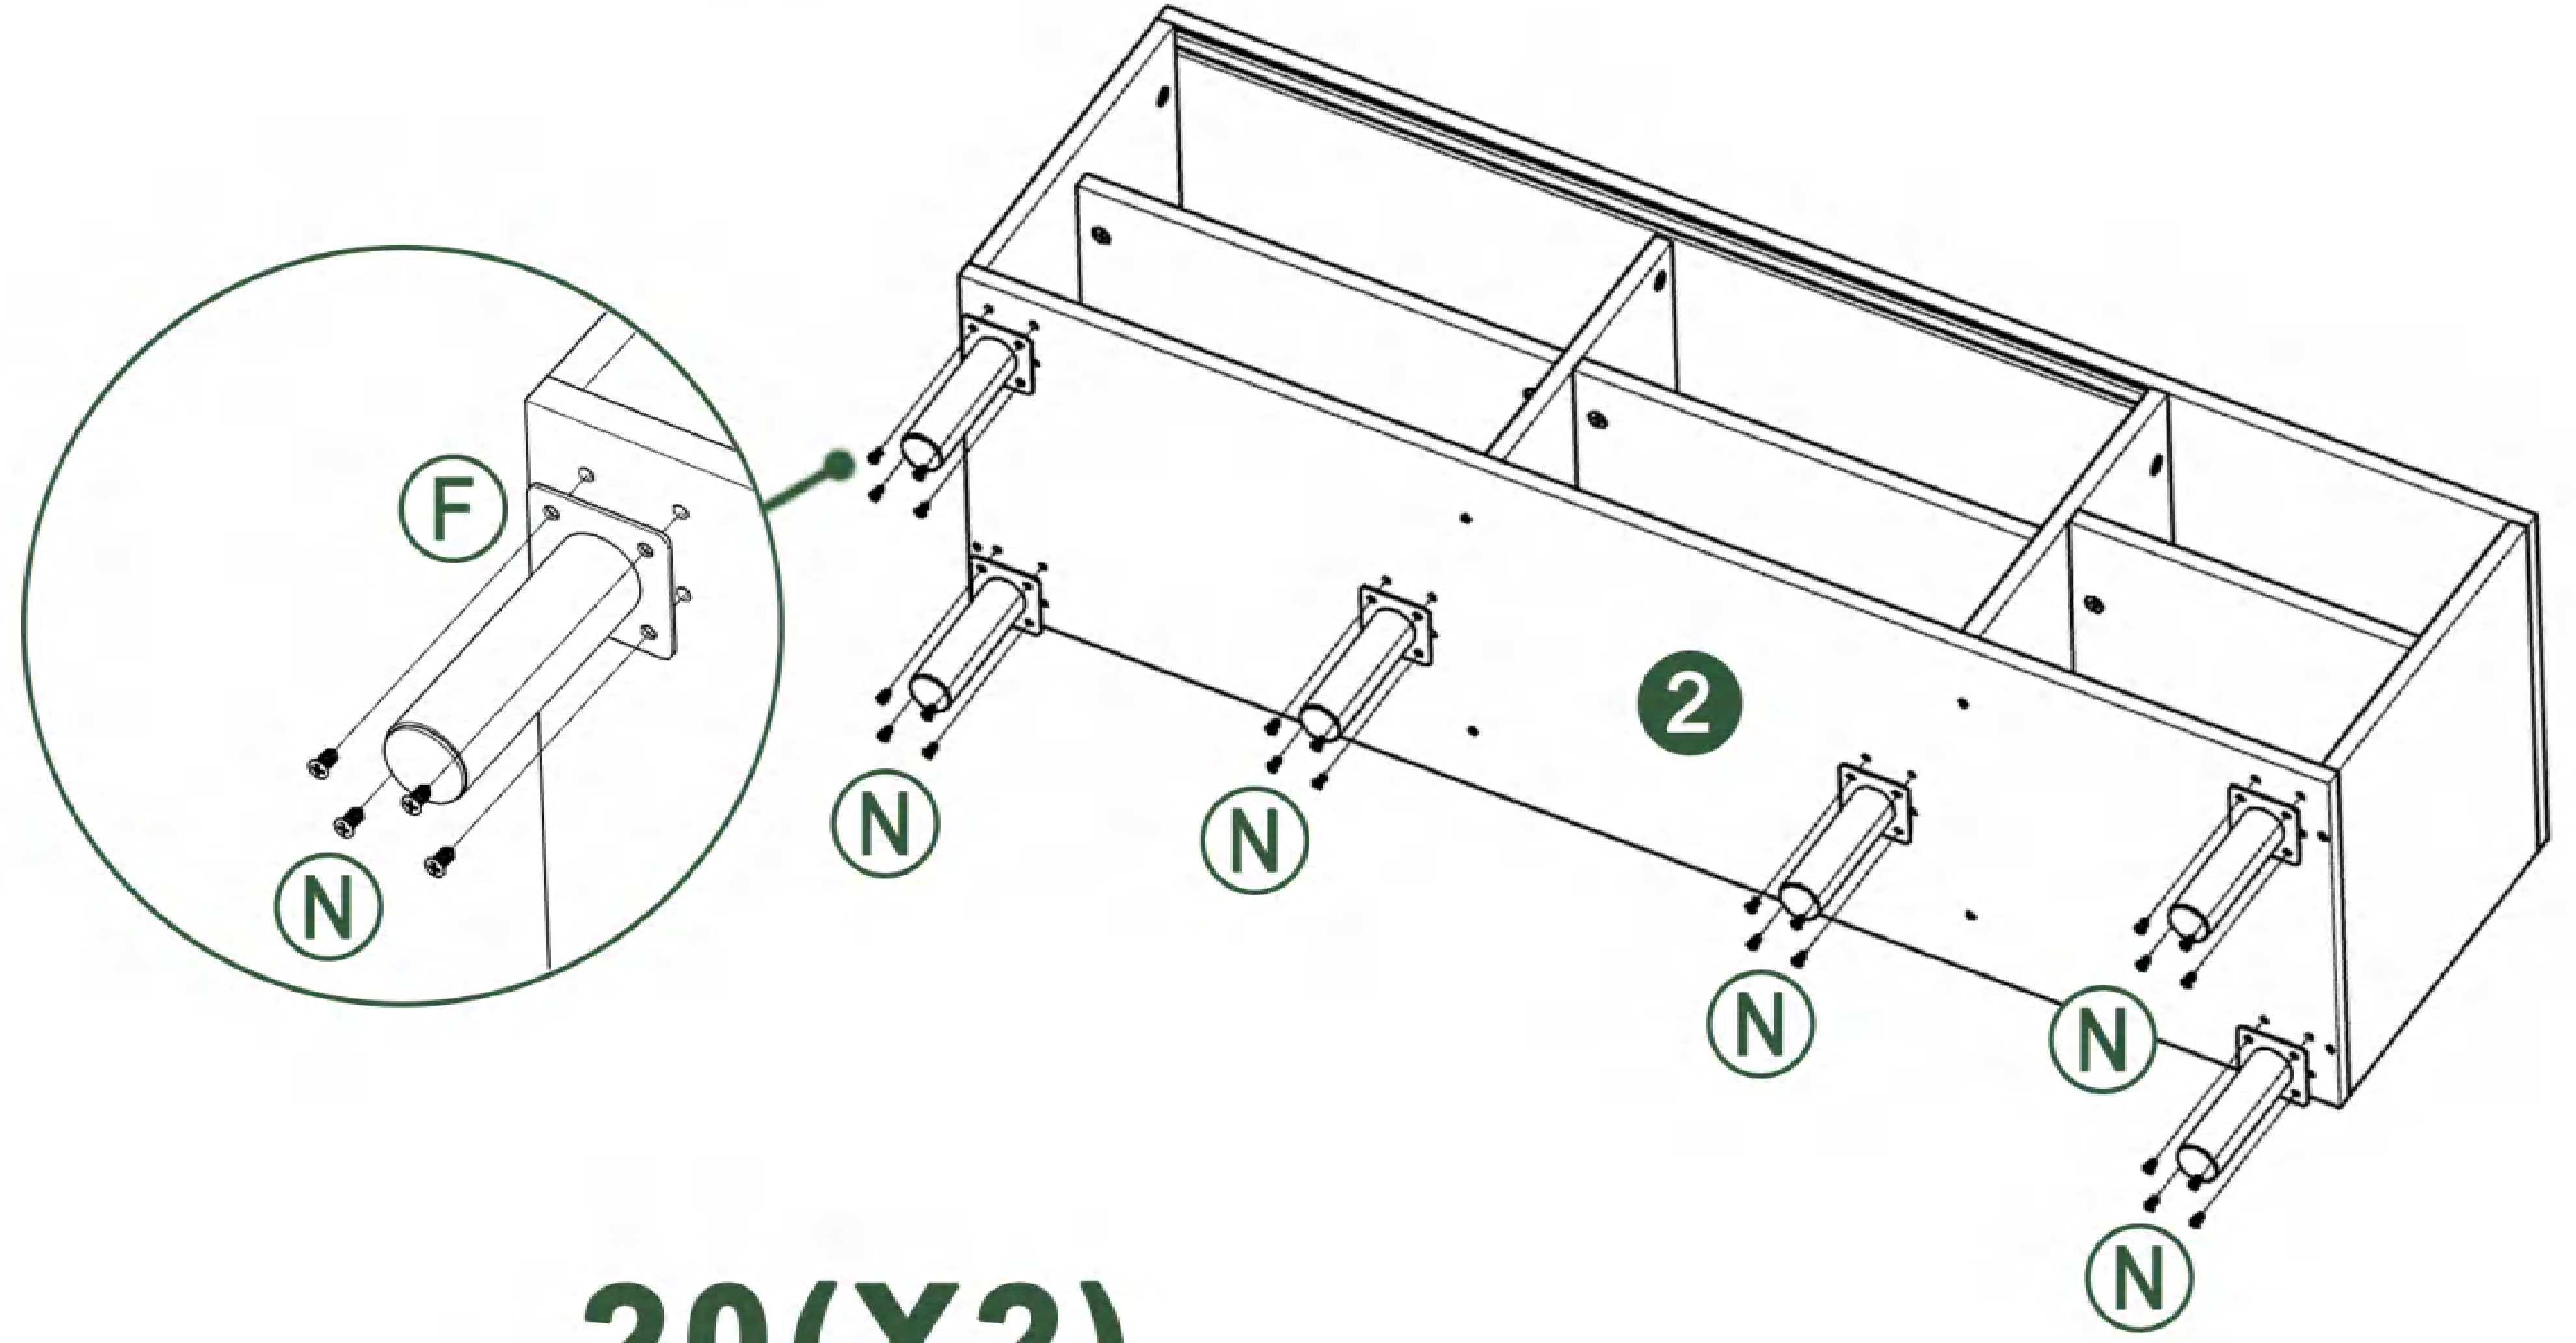


19.

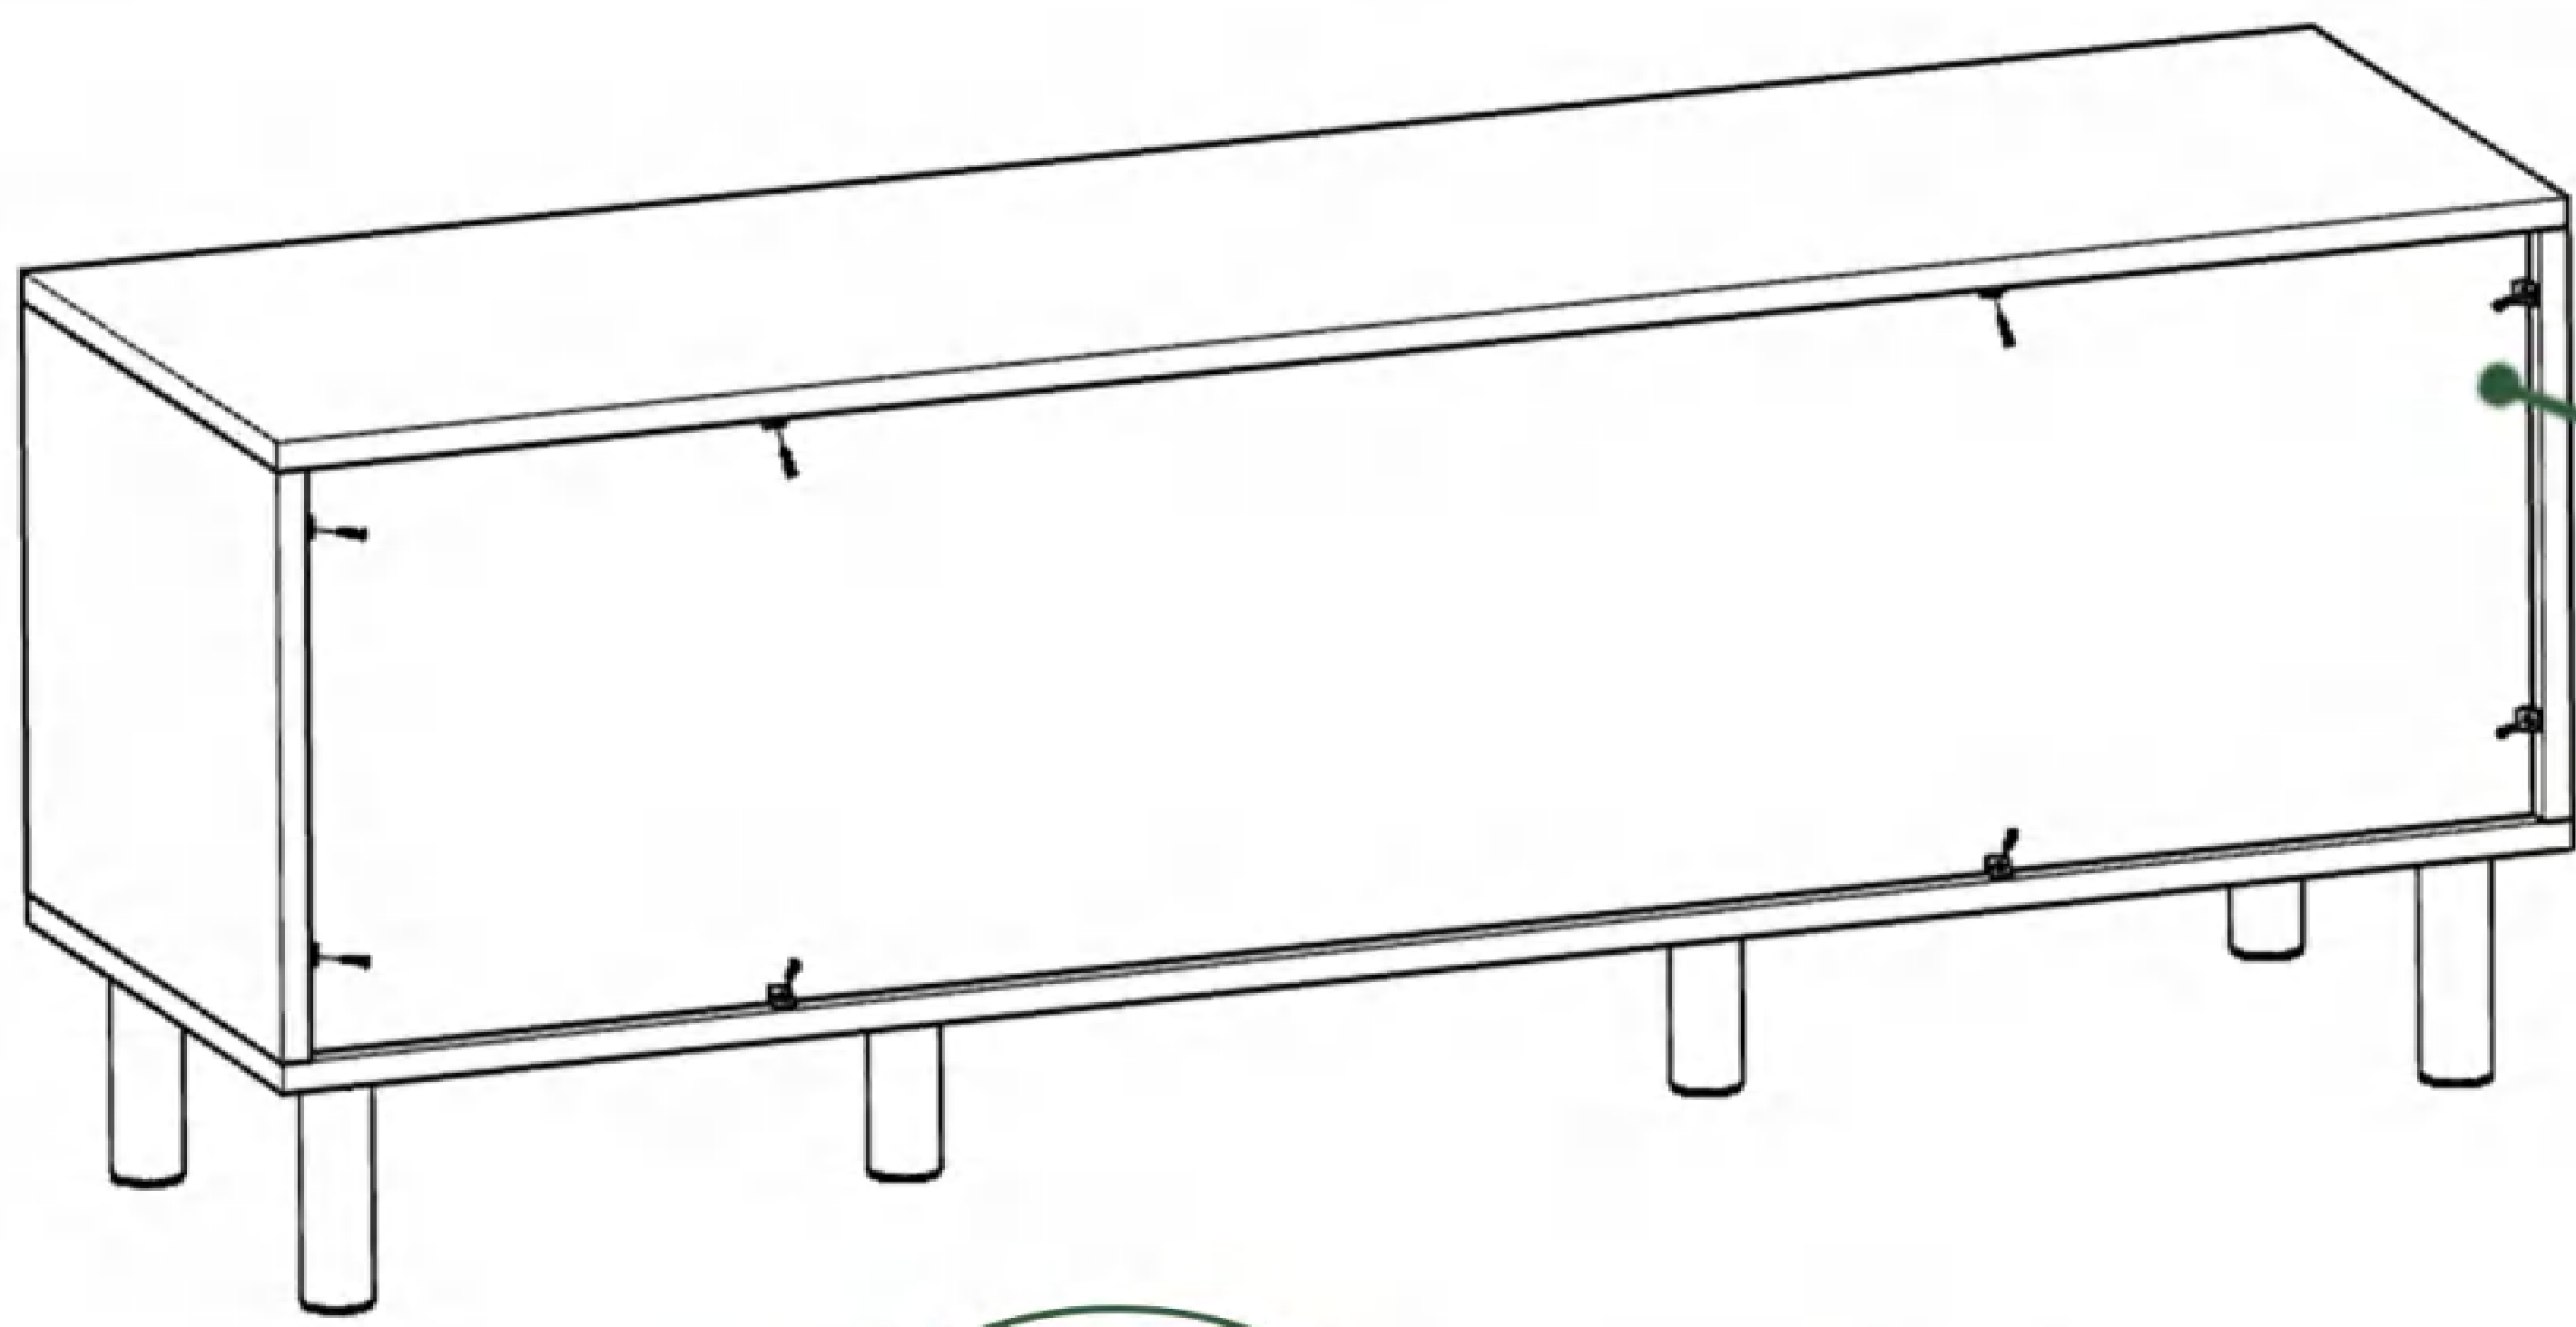


20(X2).

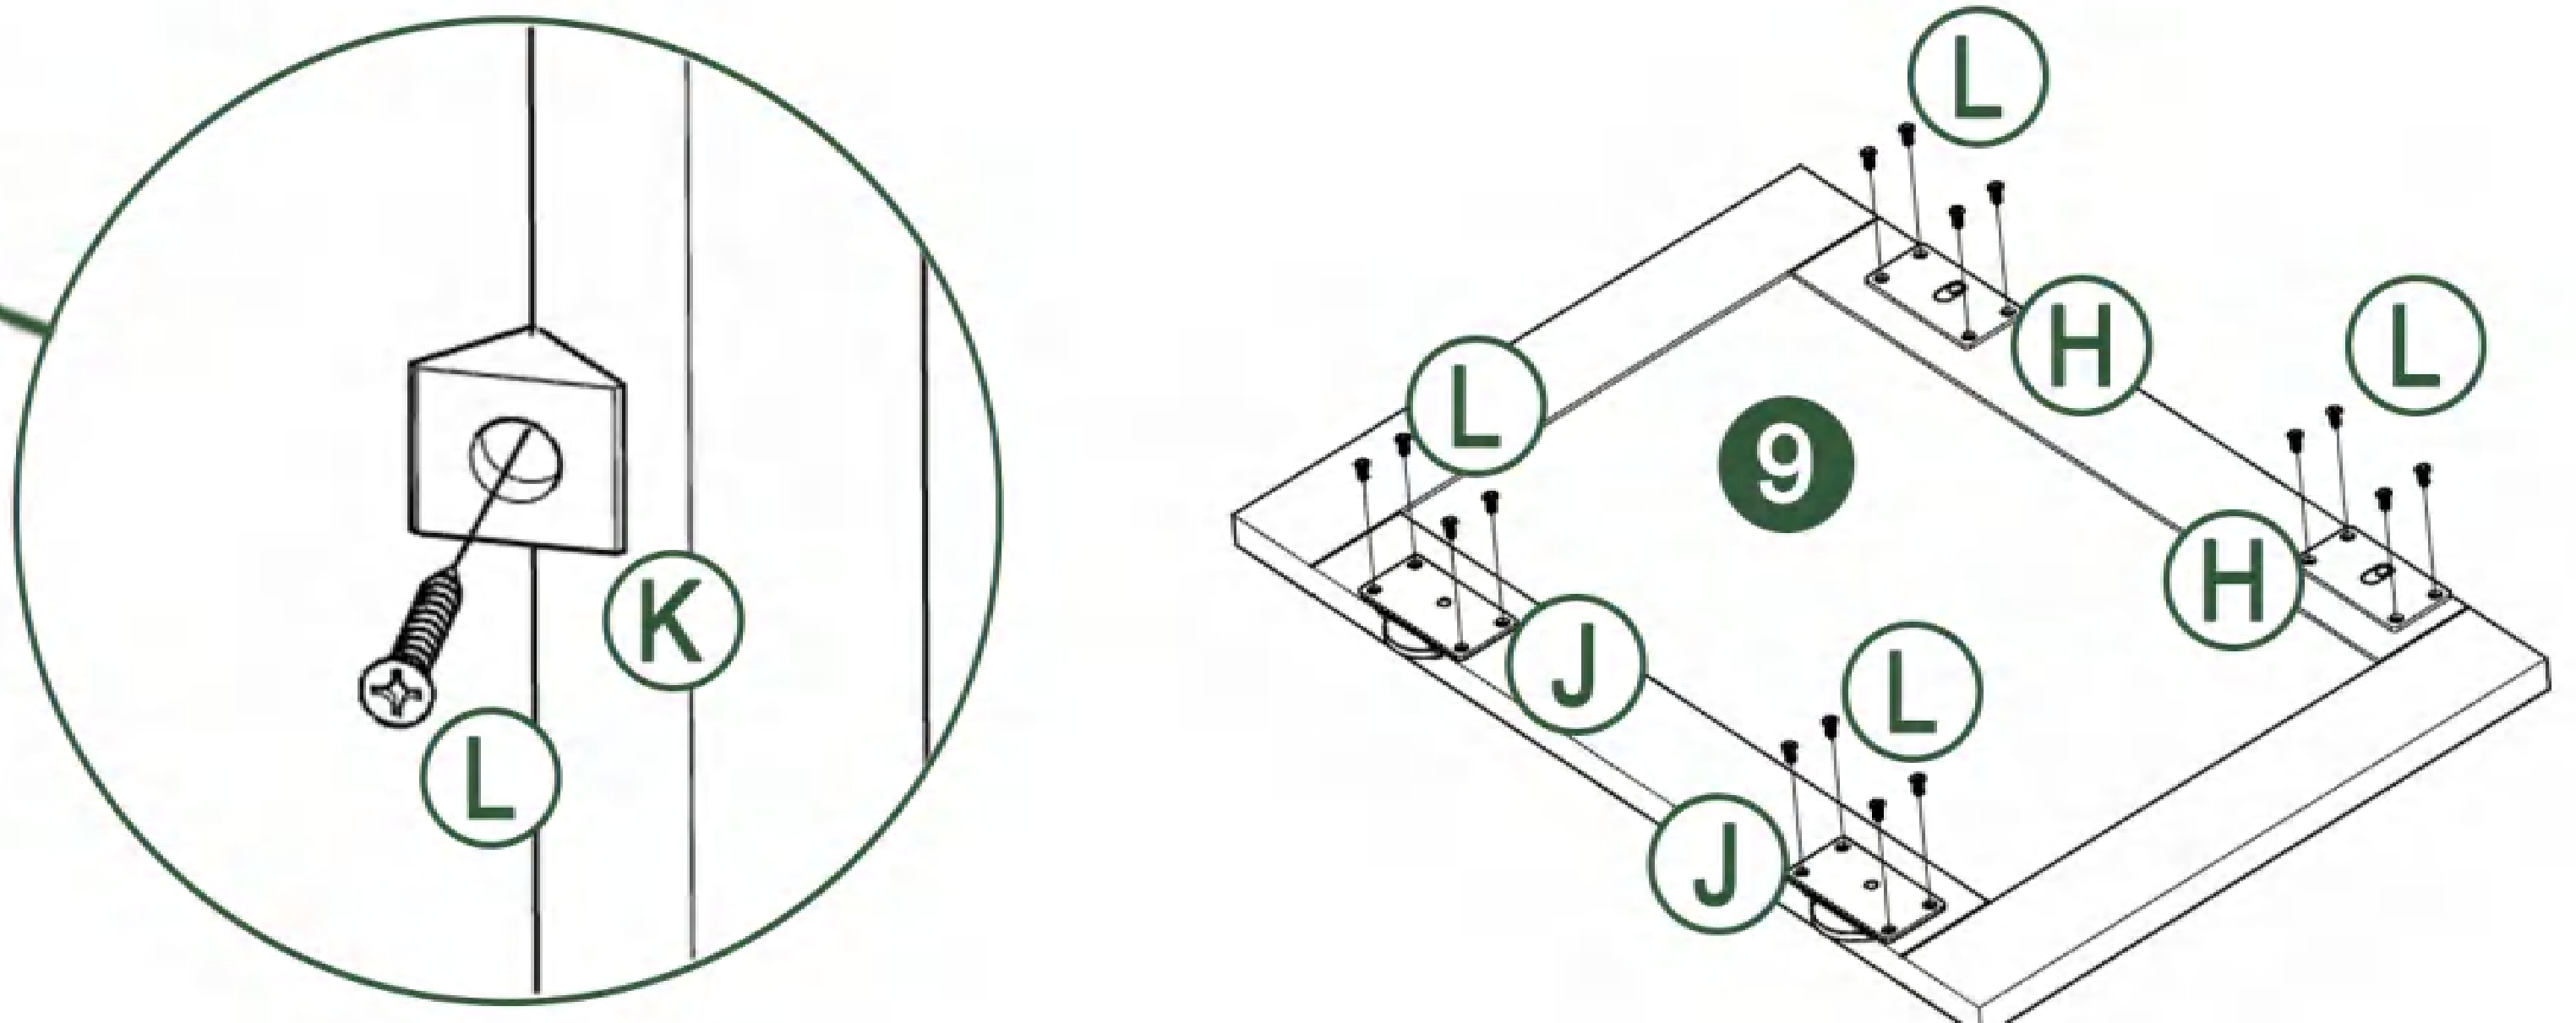


21.

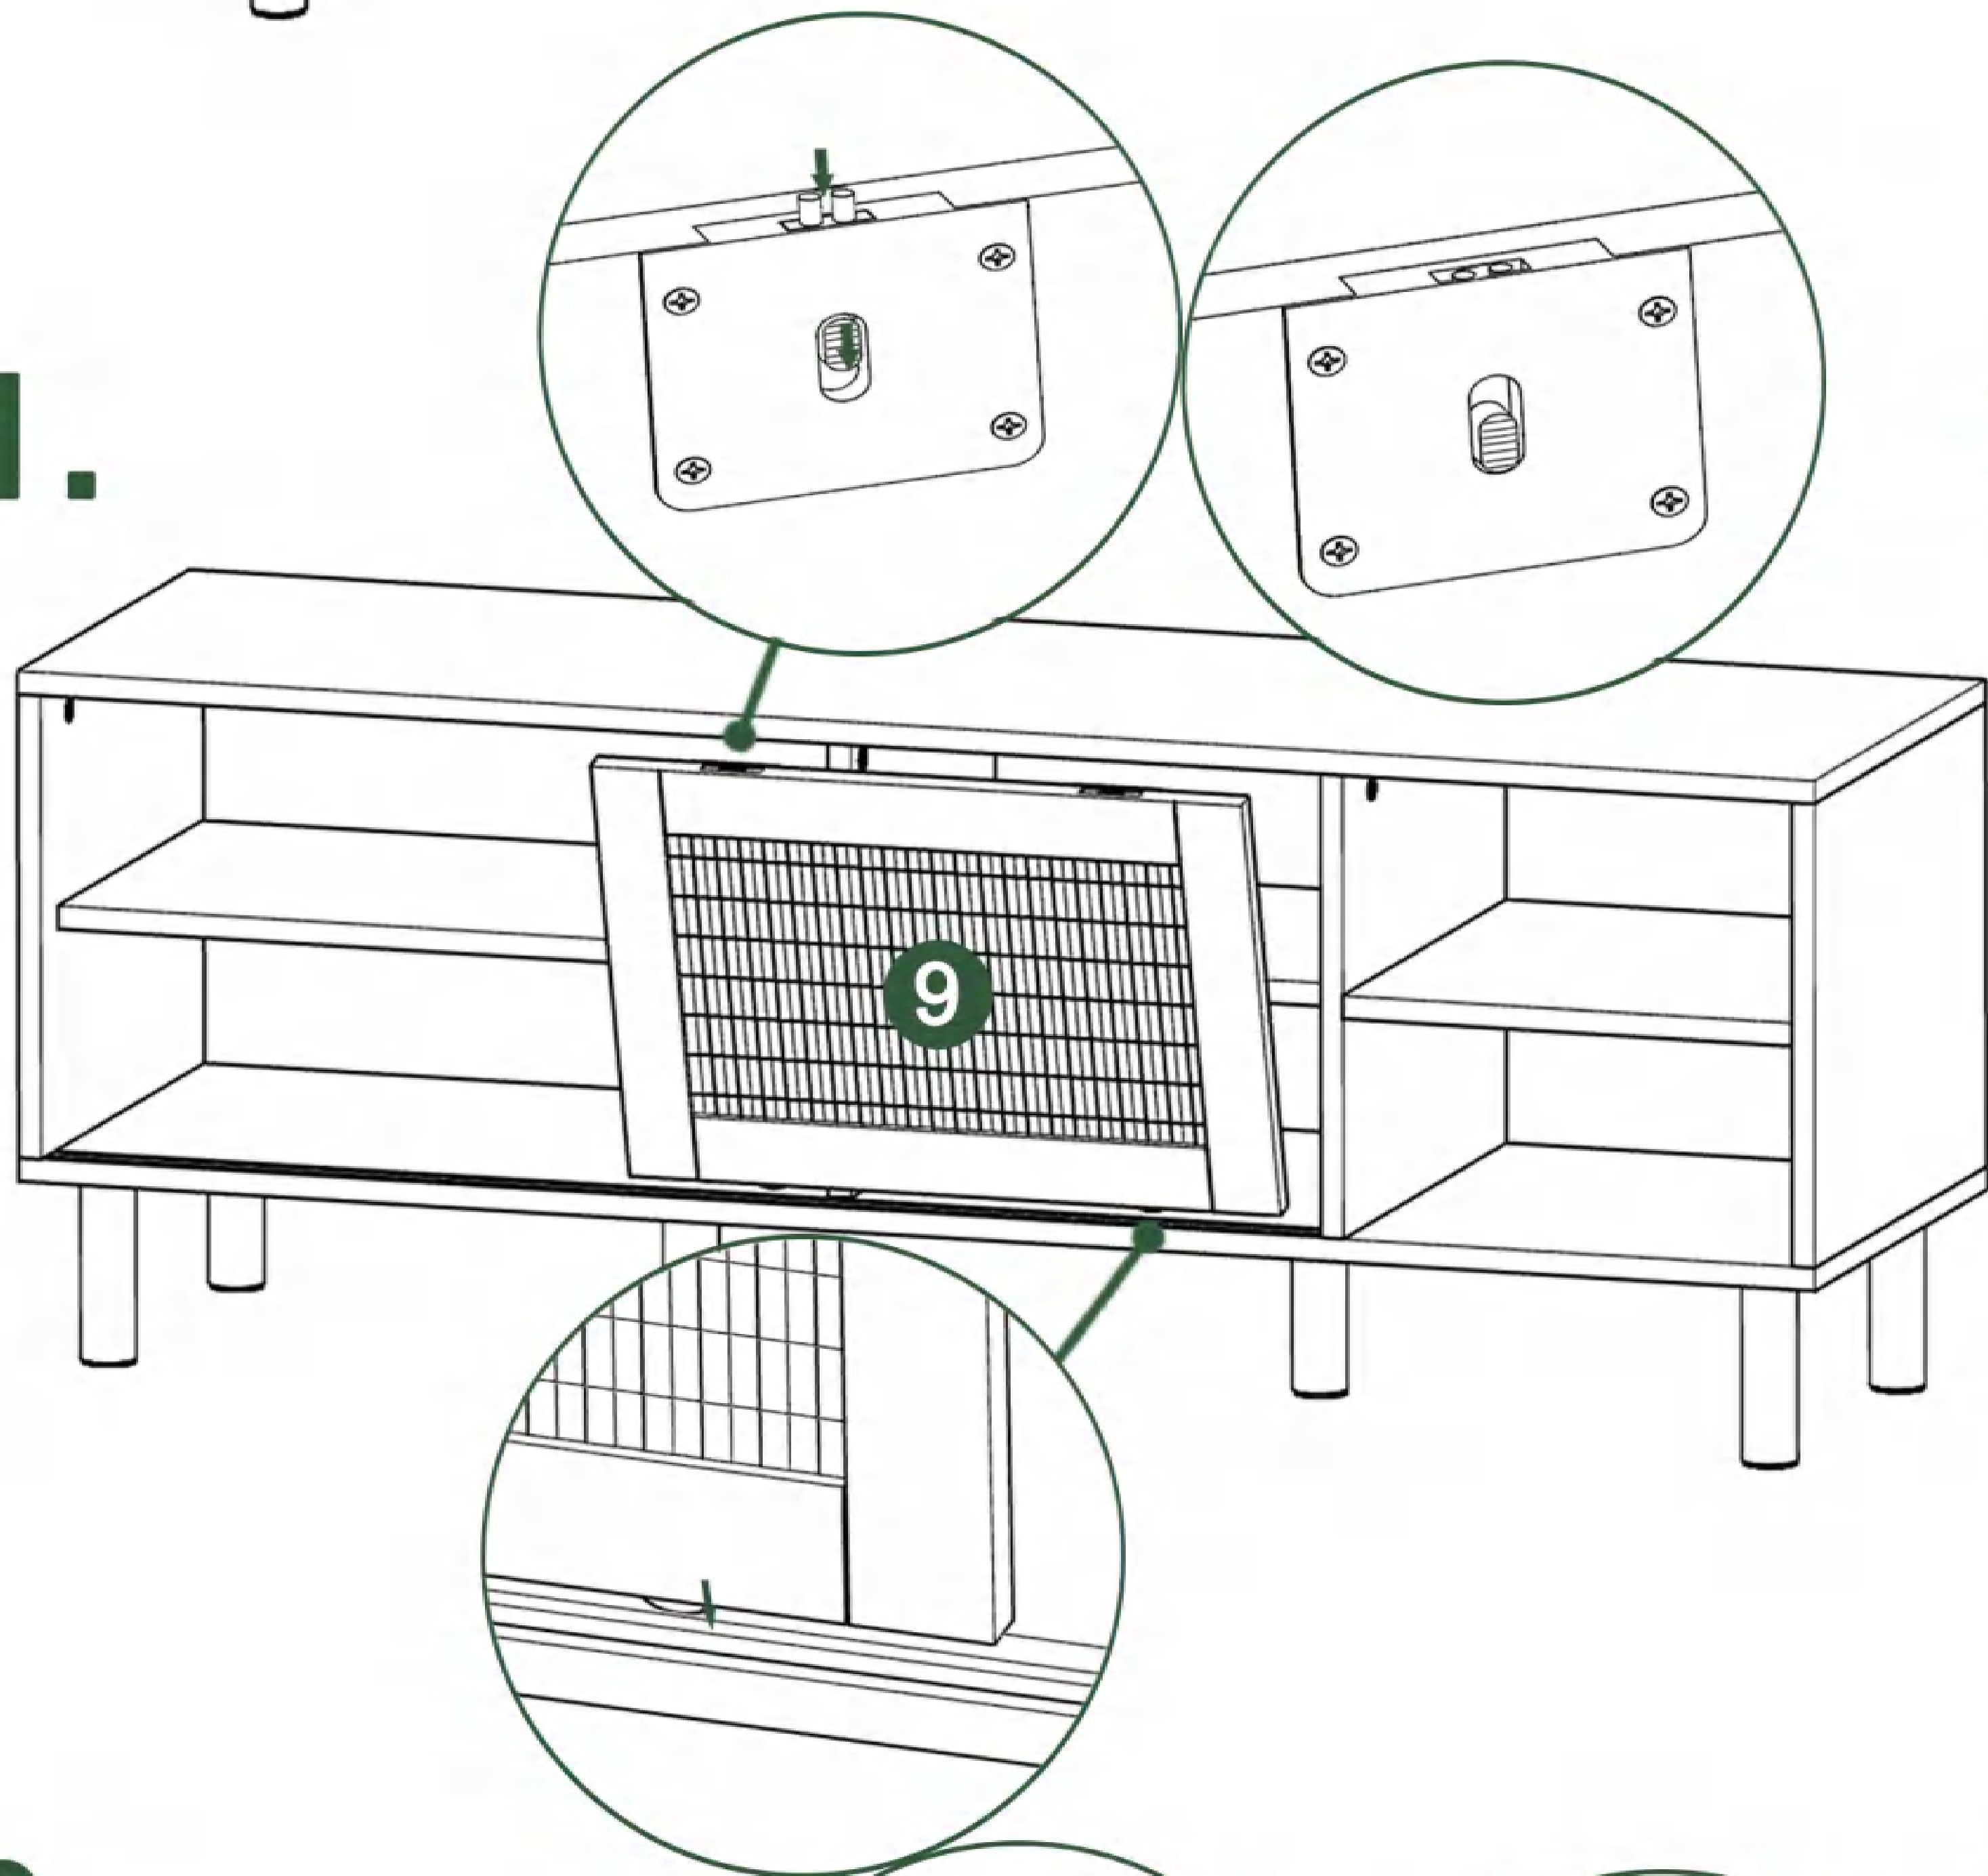


22.

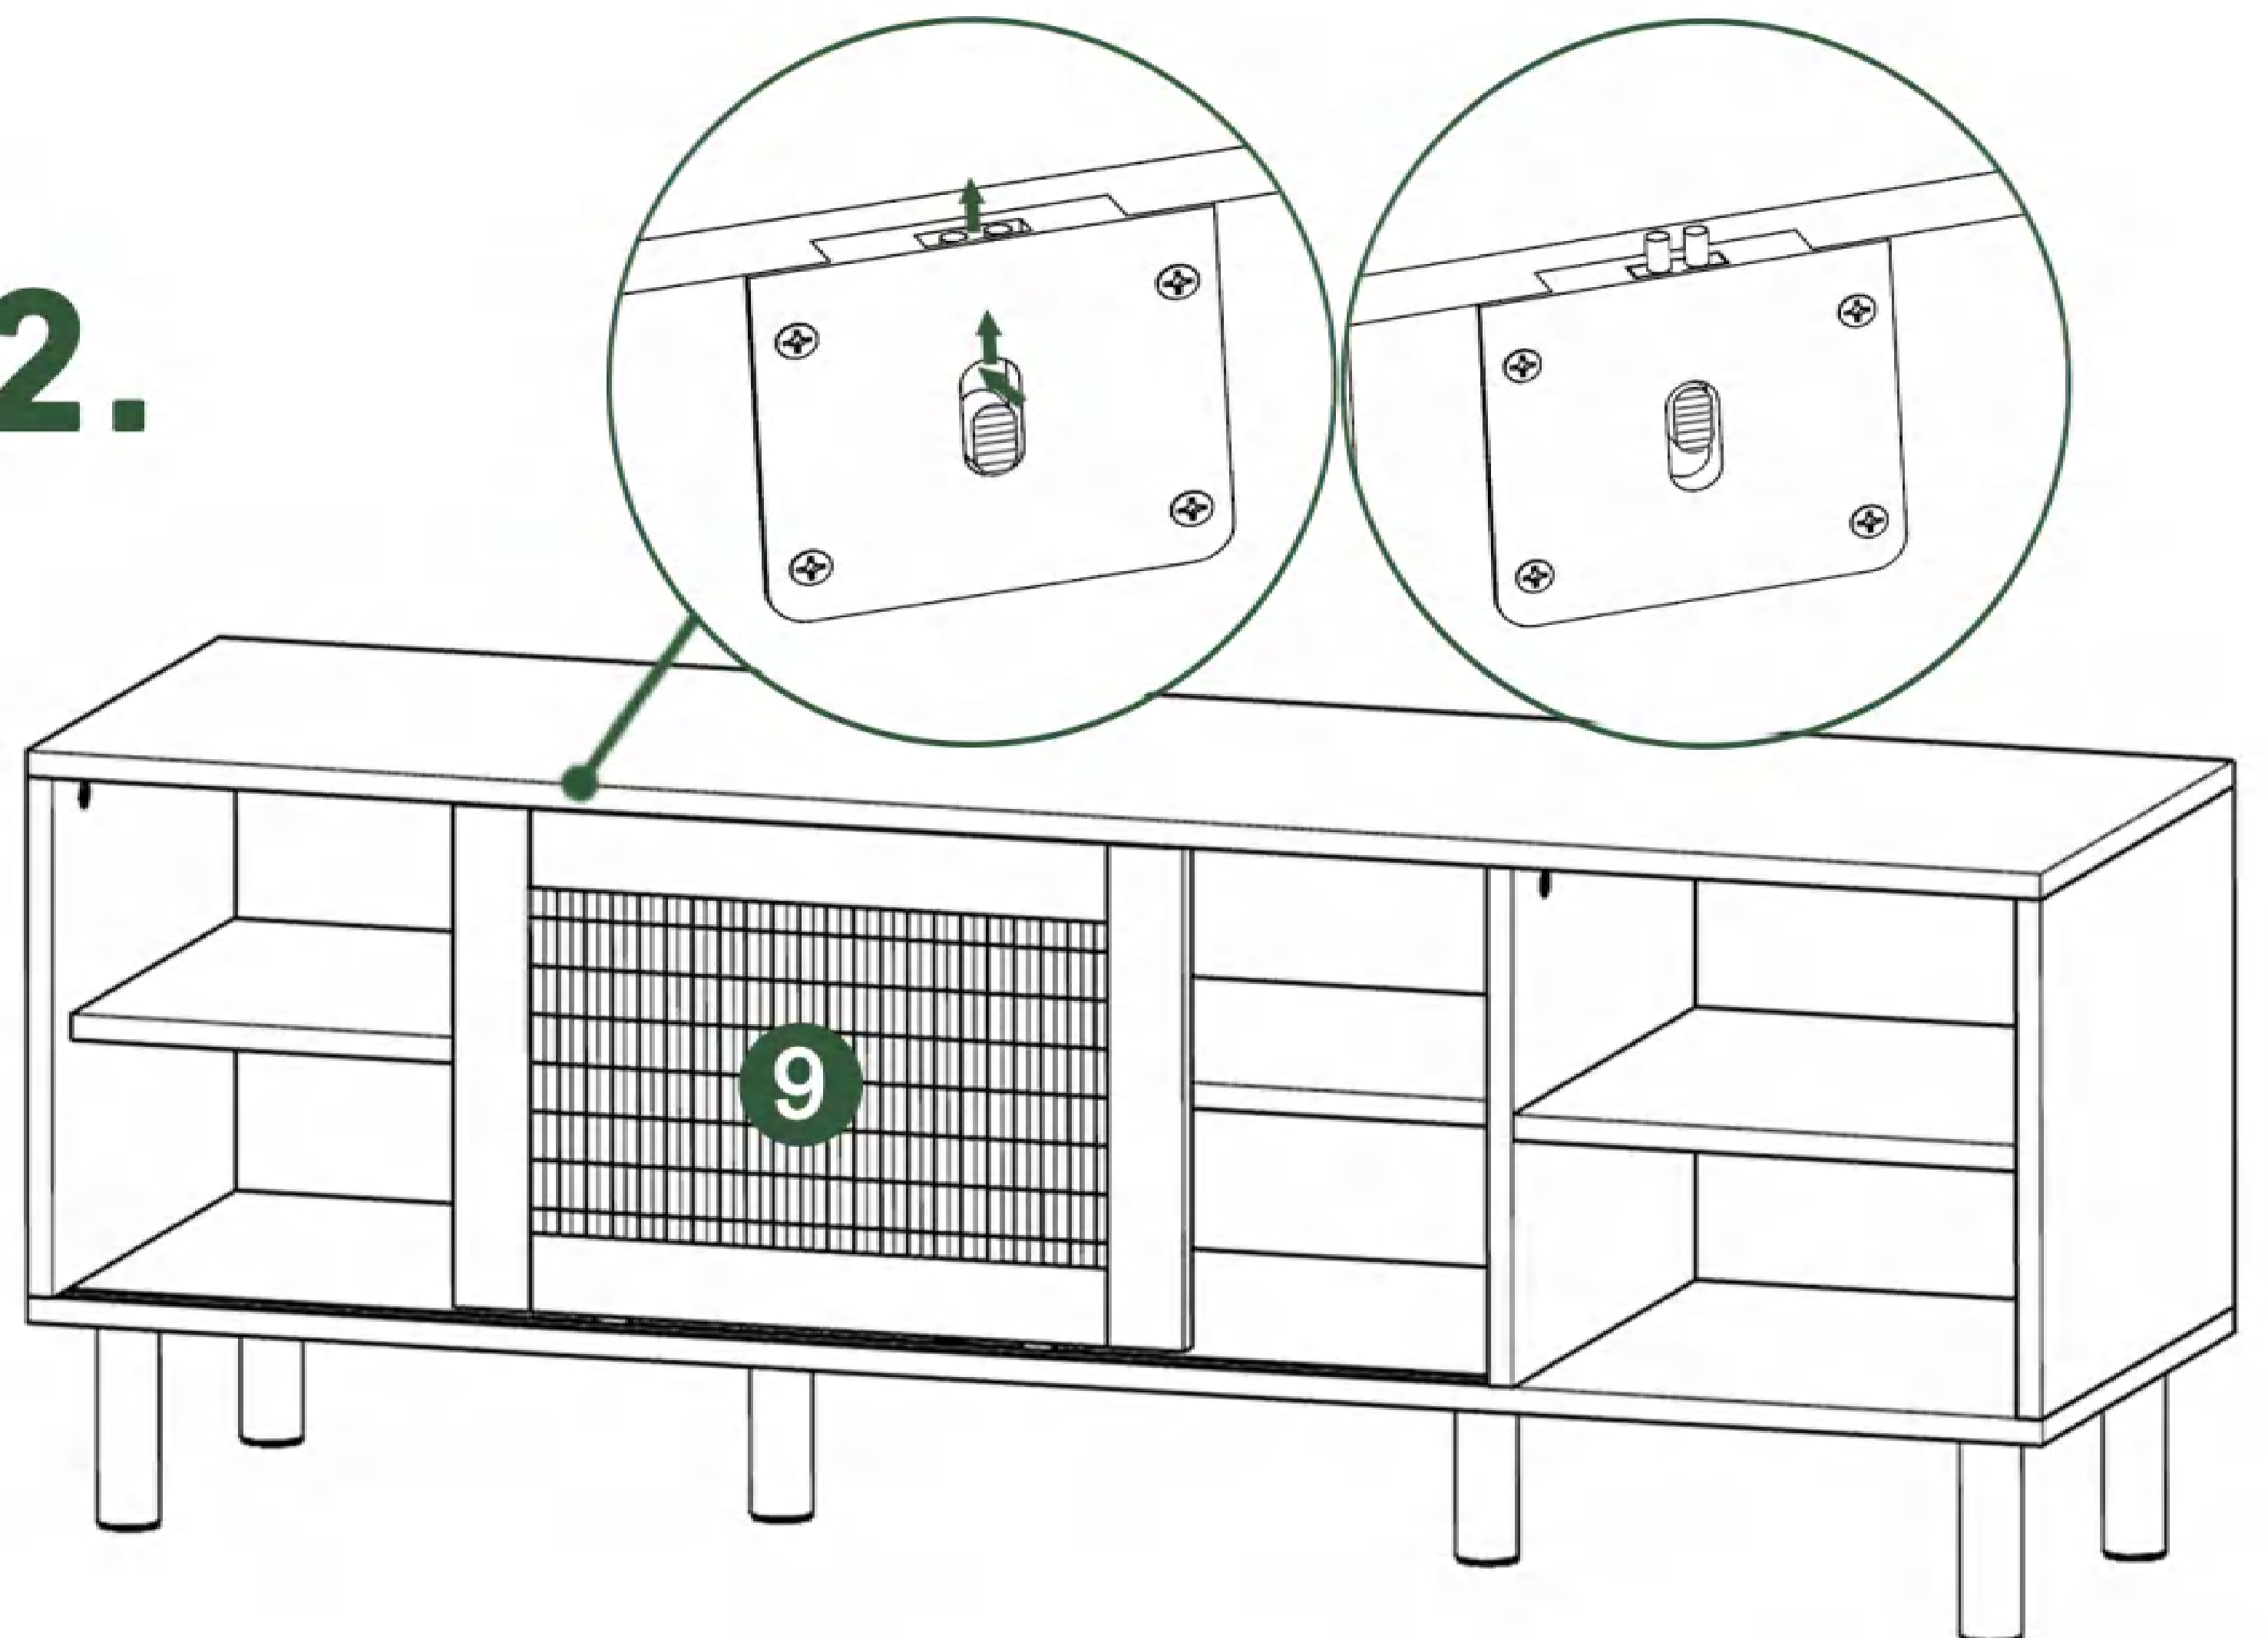


23.

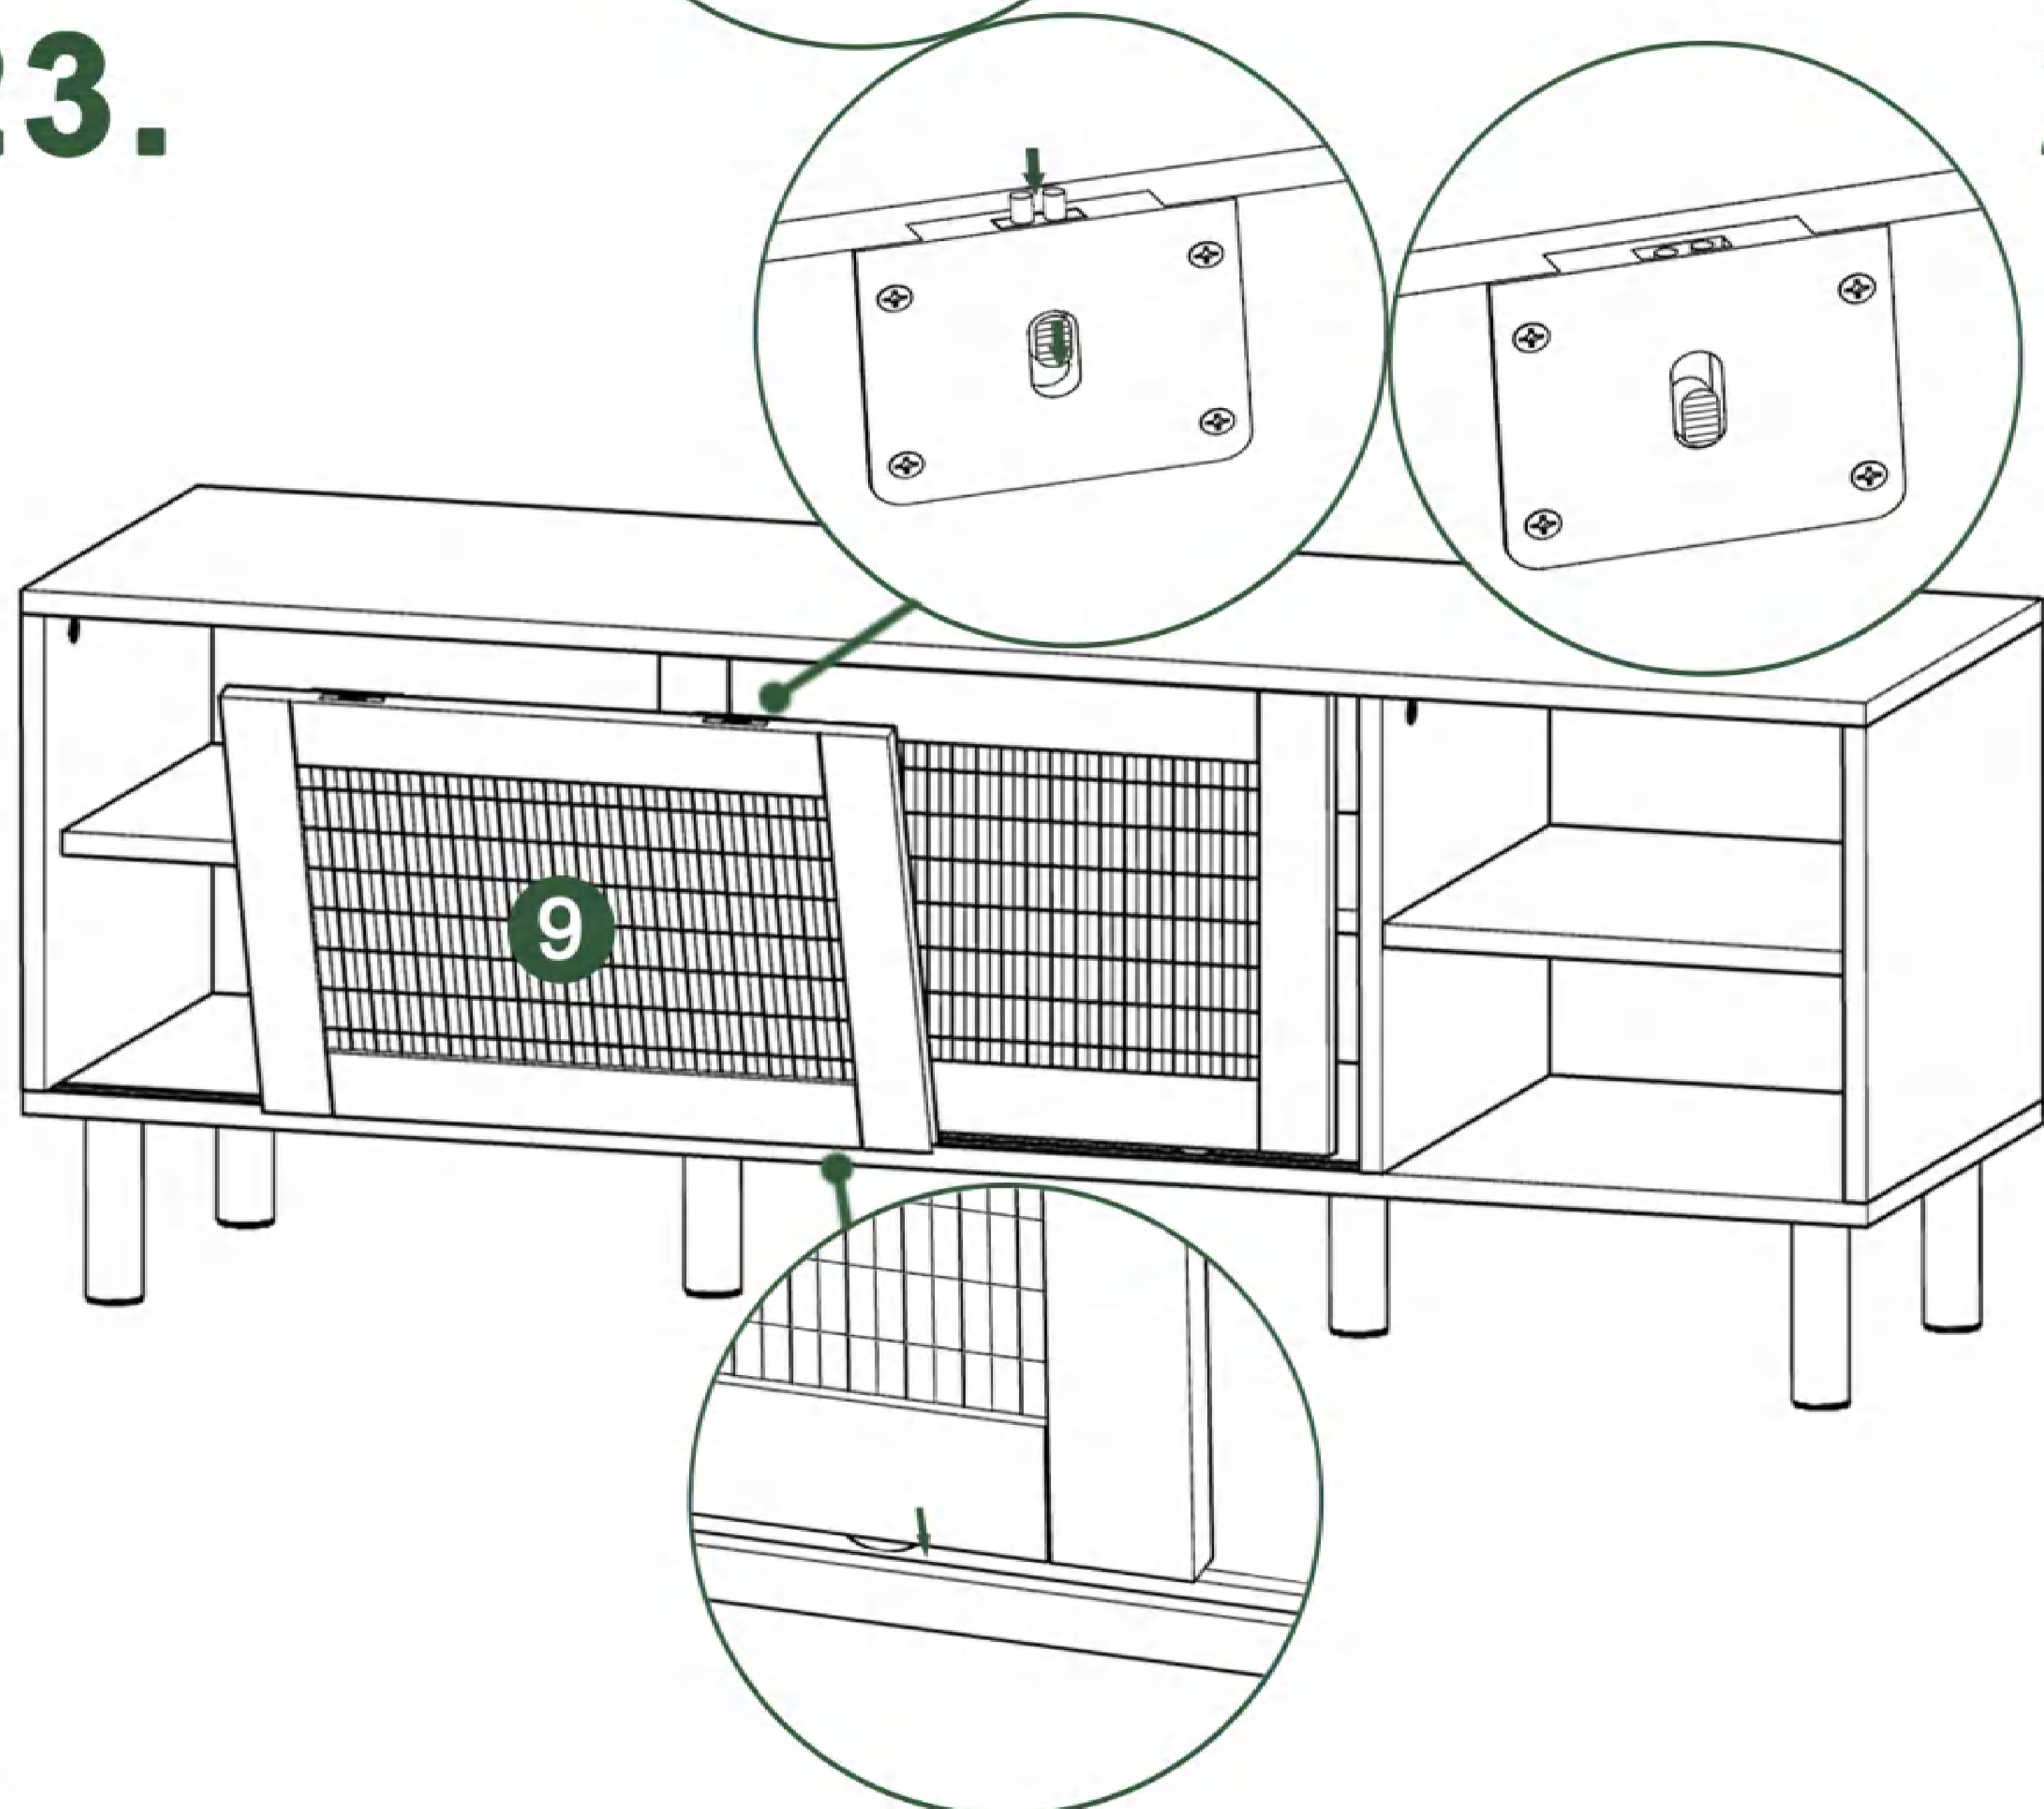


24.

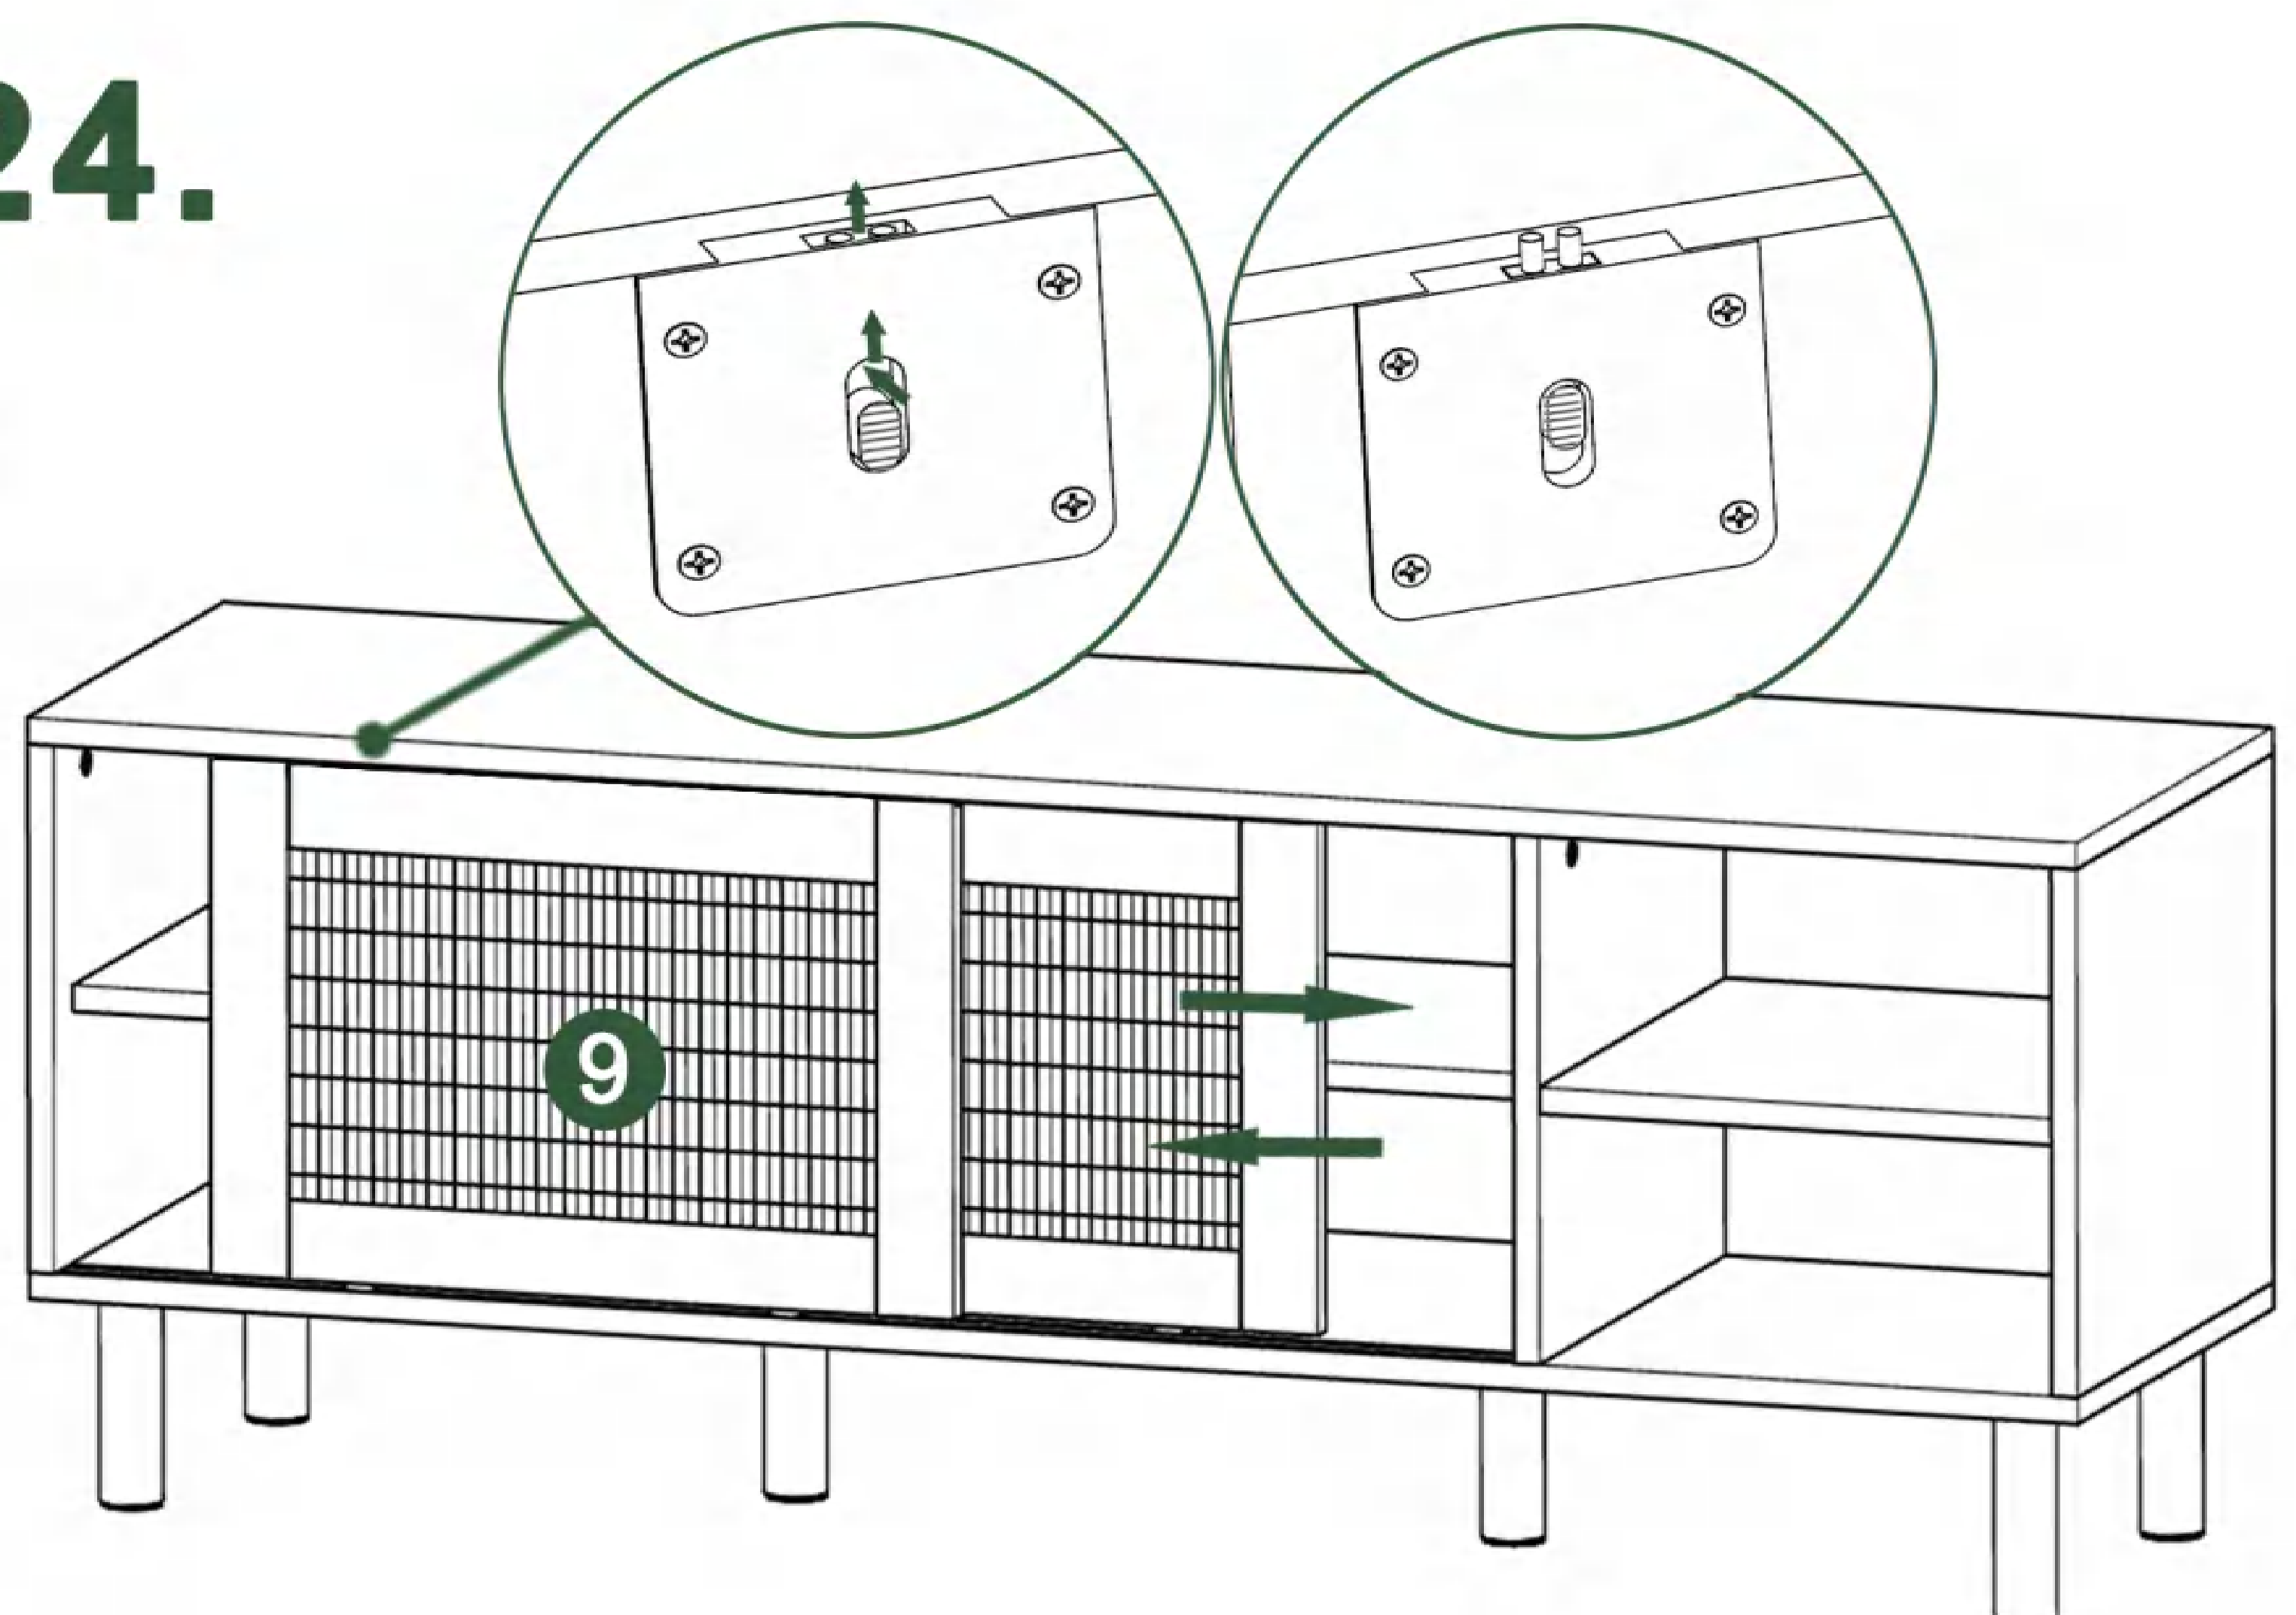

25.

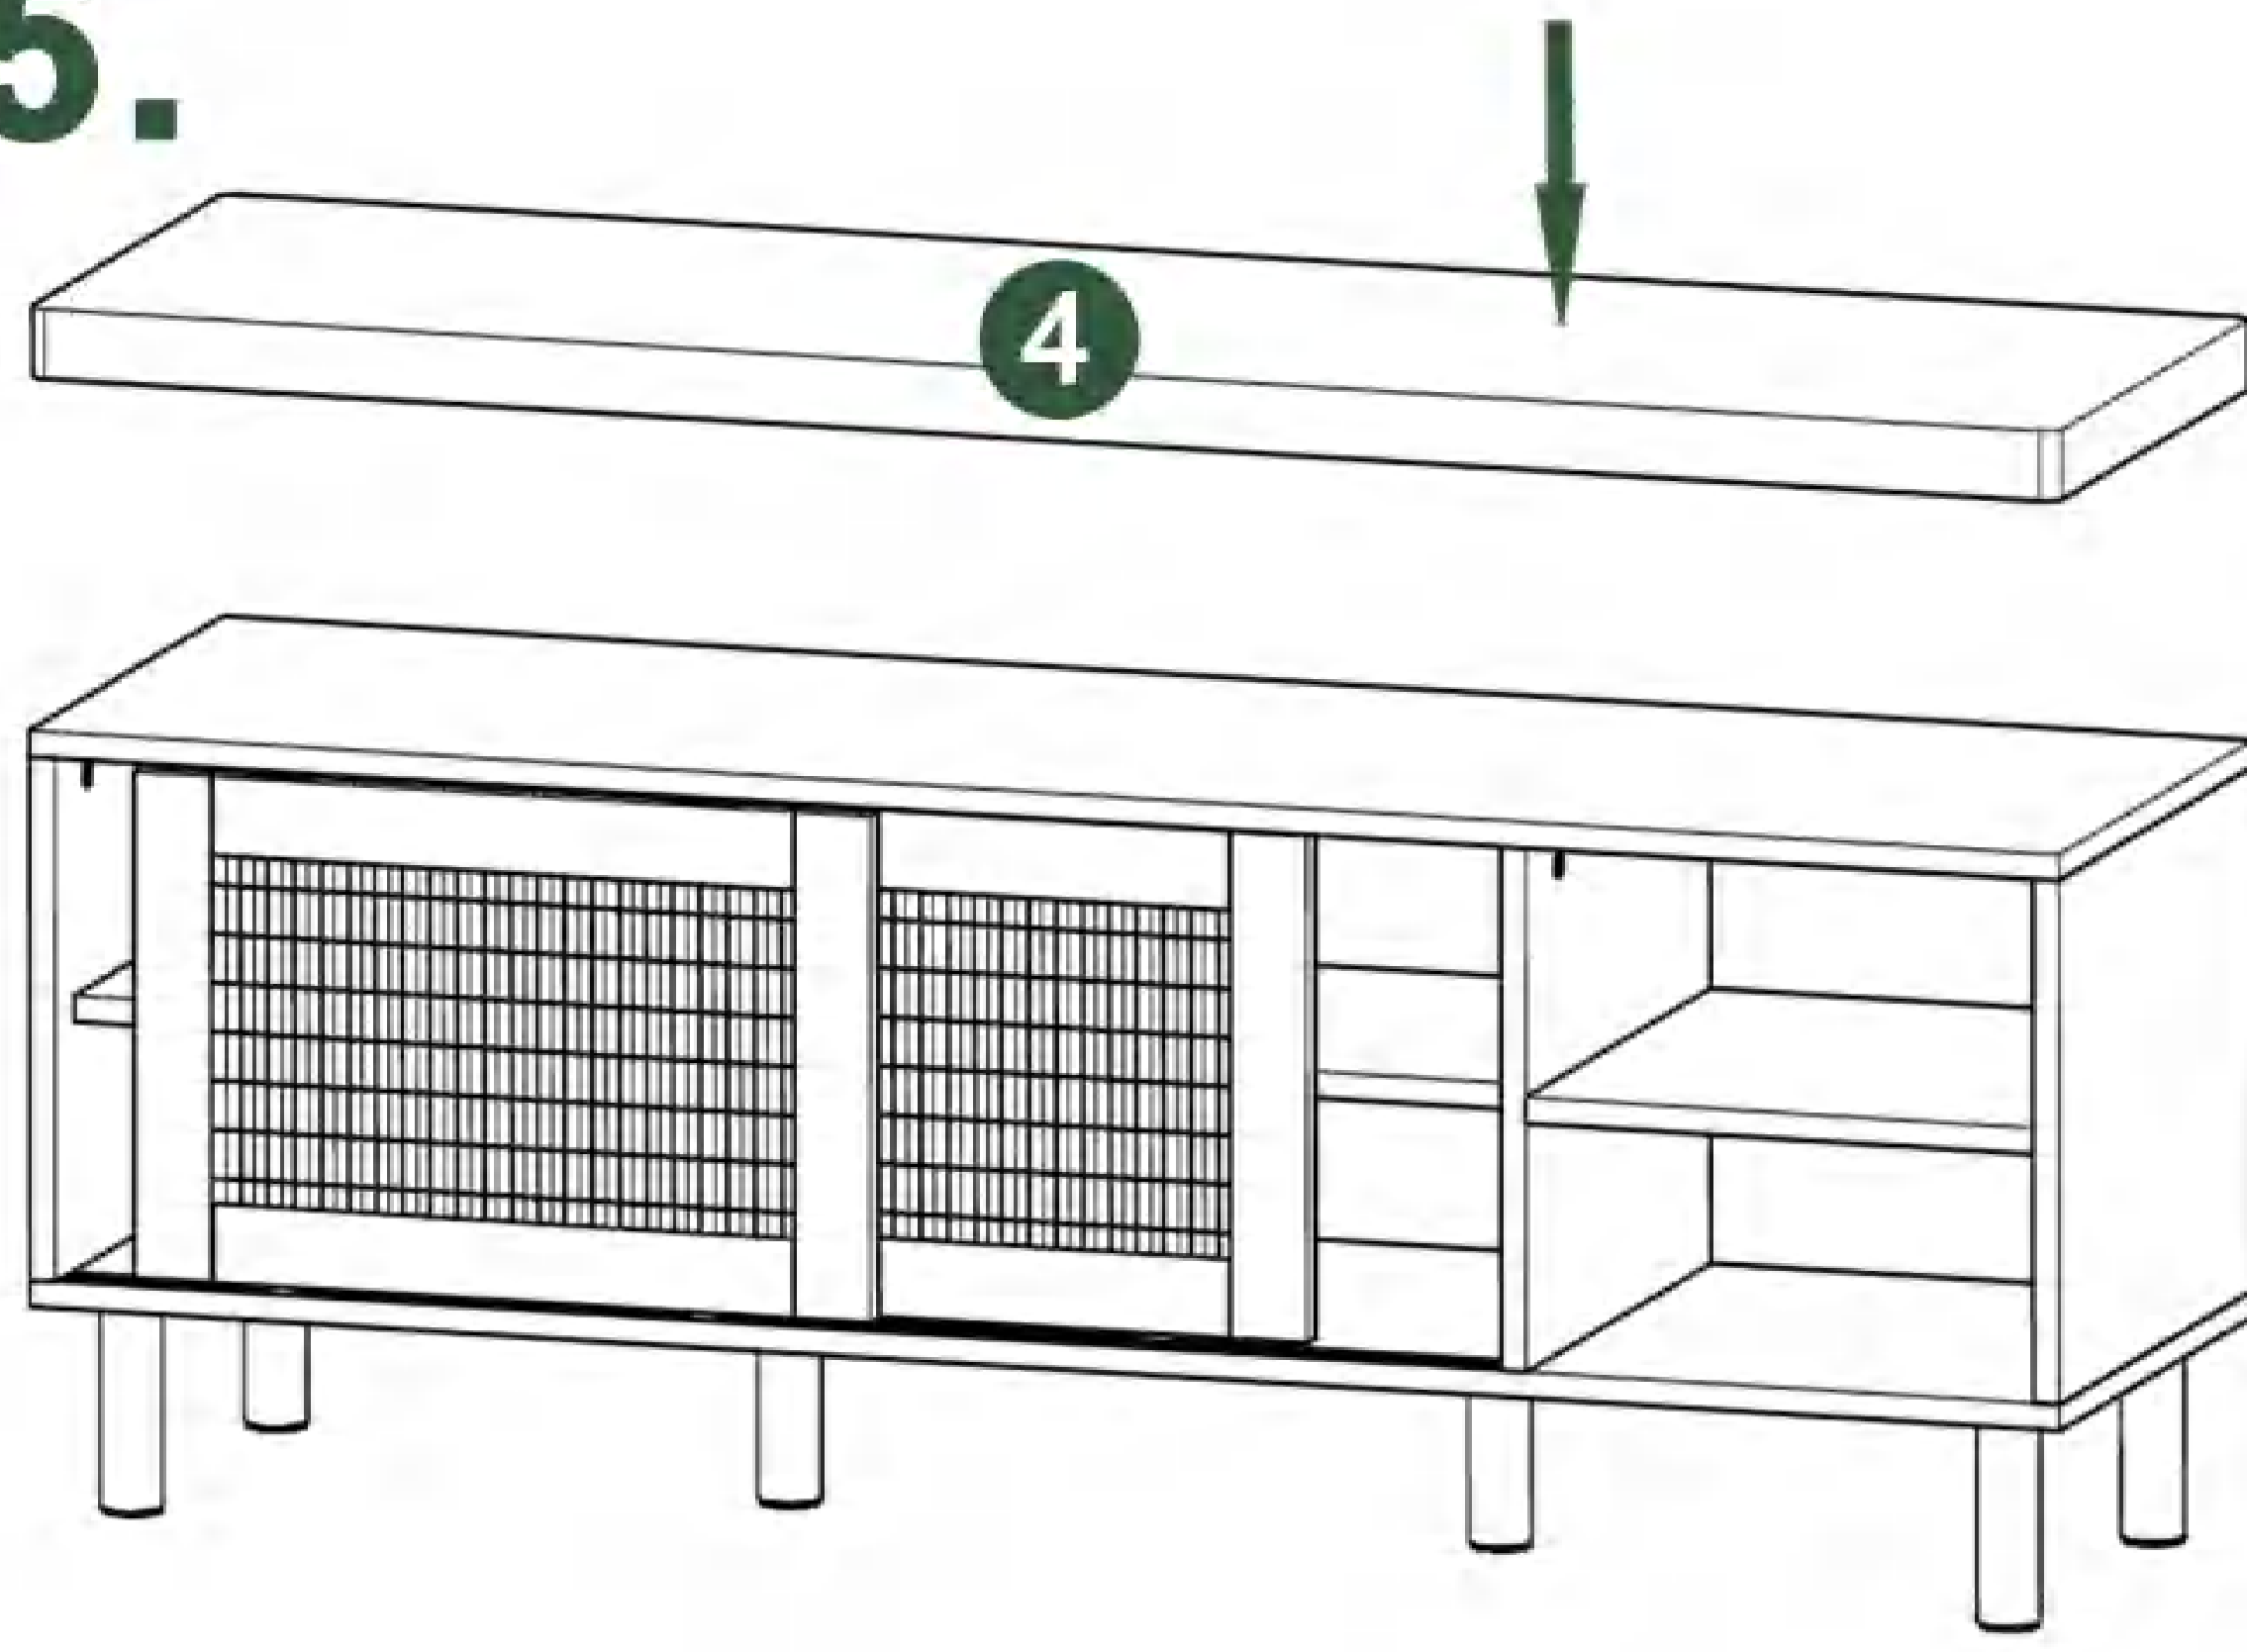

26.

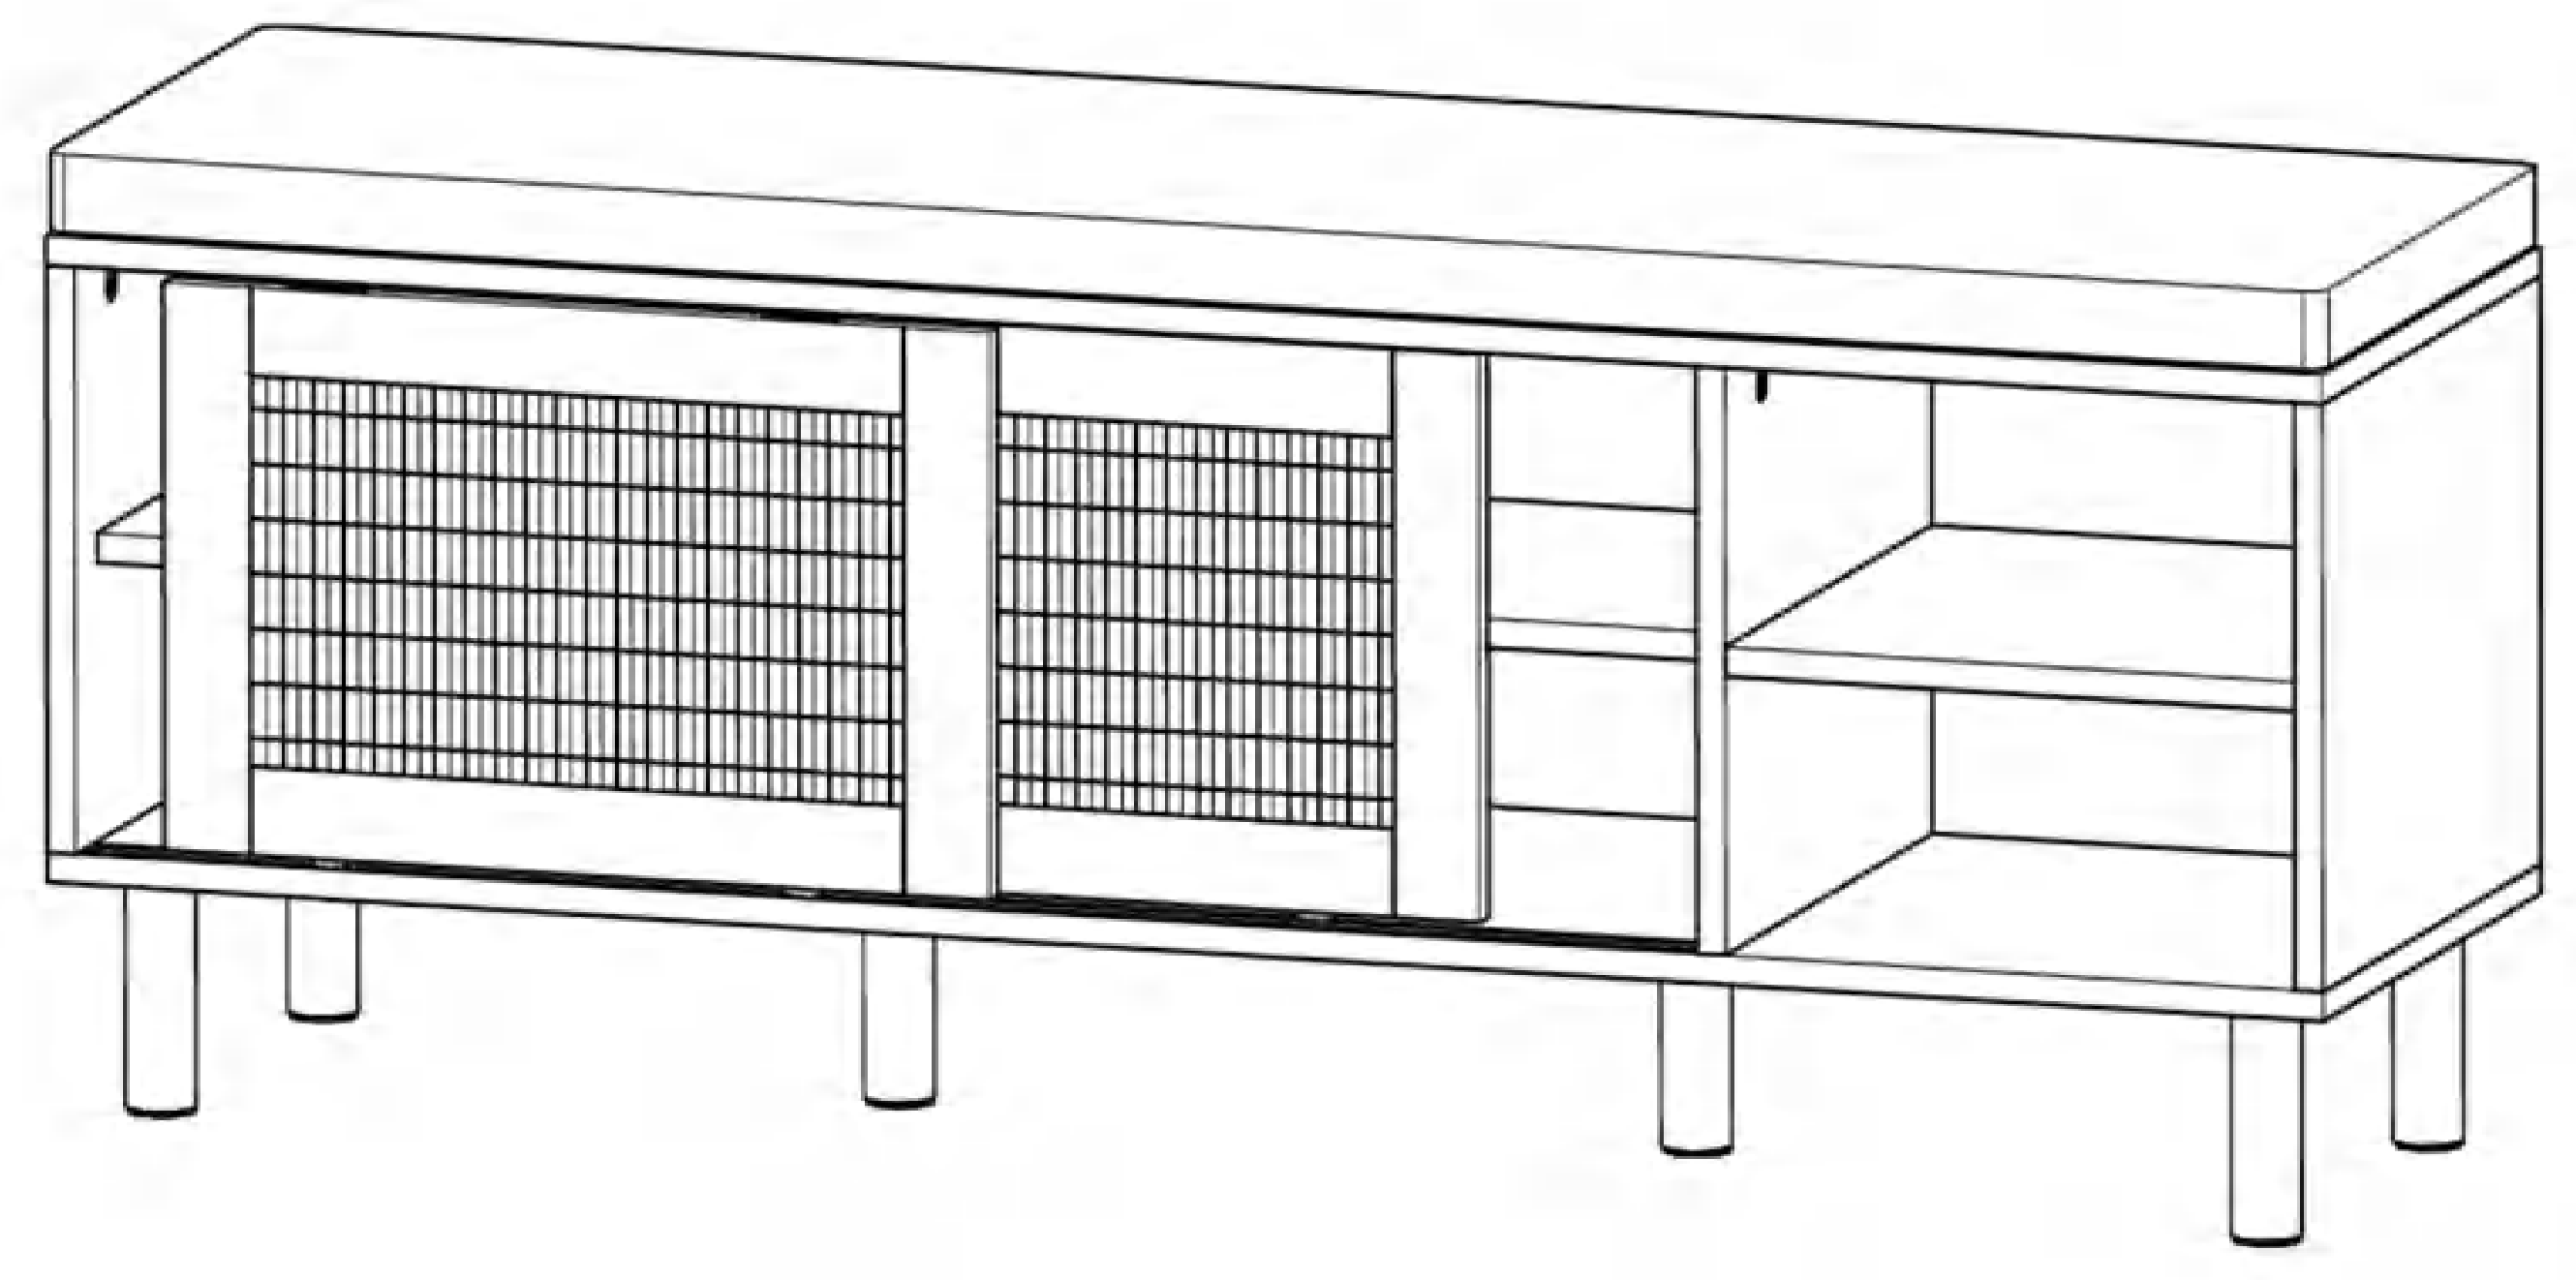

ENJOYING THE
INSTALLATION?



Scan the QR code to
share your review