


Mounted Cat Shelf Installation Instructions

Mounted Cat Shelf










Model: SSGQK-04

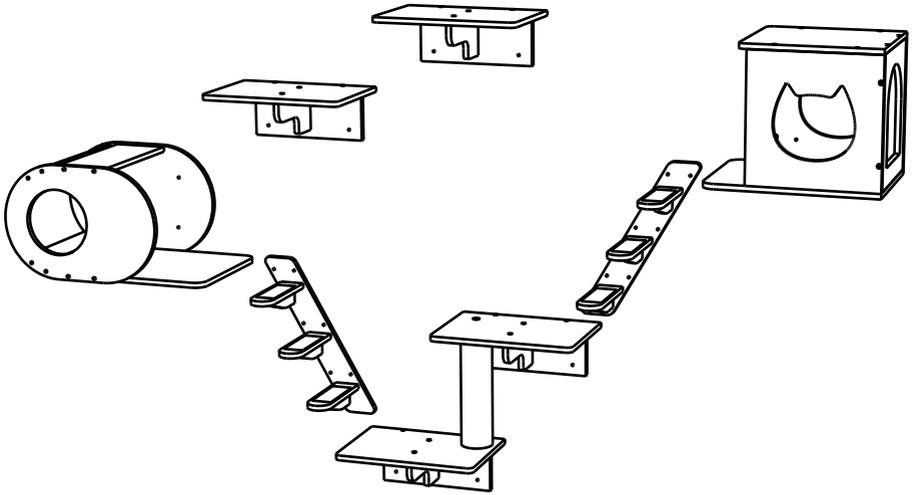

SPECIFICATIONS








Model	SSGQK-04
Color	Nature

COMPONENTS

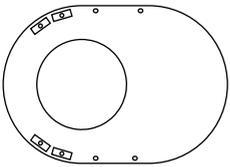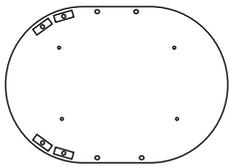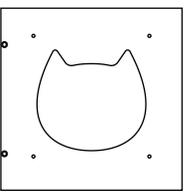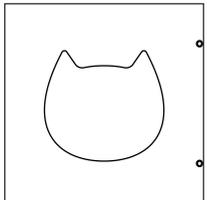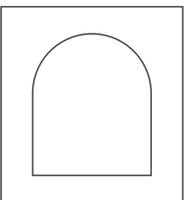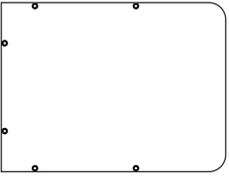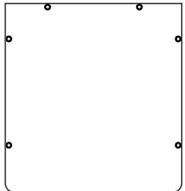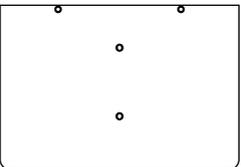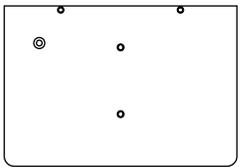 A x 1	 B x 1	 C x 1
 D x 1	 E x 4	 F x 1
 G x 1	 H x 1	 I x 1
 J x 1	 K x 2	 L x 1

* each set of products is equipped with screwdrivers and wrenches

COMPONENTS

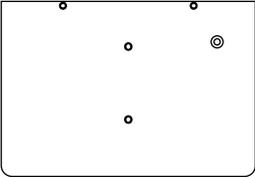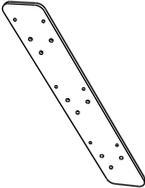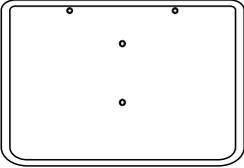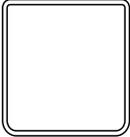 <p>M x 1</p>	 <p>N x 4</p>	 <p>O x 4</p>
<p>(A symmetrical pair)</p>  <p>P x 2</p>	 <p>Q x 6</p>	 <p>R x 1</p>
<p>(Loop-pile mat)</p>  <p>S x 4</p>	<p>(Loop-pile mat)</p>  <p>T x 1</p>	<p>(Loop-pile mat)</p>  <p>U x 1</p>
 <p>V x 36</p>	<p>(M6*40) (M4*70)</p>   <p>W x 82 X x 36</p>	<p>(M8*35)</p>   <p>Y x 2 Z x 2</p>
<p>* each set of products is equipped with screwdrivers and wrenches</p>		

Assembly Instructions

TIPS:

- 1.The number of screws marked above is the actual number used during installation. When the product is shipped, 1~3 more screws of each type will be given as spares.
2. During the use of the product, children are prohibited from approaching without the company of adults.
3. The edge of the product is a bit sharp, and you need to wear gloves for installation; at the same time, it comes with sandpaper, so you can polish the edge again by yourself; without gloves, be careful when touching the running wheel.
- 4.Do not tighten the installation screws at once. Tighten the installation screws twice after all screws are aligned
- 5.It is recommended that two or more people install the device



6.Please use the following tools to install



Tape measure



Scissors



Marker pen



screwdriver



Electric drill

Please mark the position on the wall against the plate, reserve about 30cm distance between the jump platforms, drill the hole and bury the expansion tube
(A 6mm drill bit is used for solid walls and a yellow expansion tube is embedded; a 9mm drill bit is used for hollow walls and a butterfly expansion tube is embedded)


Expansion solenoid



Butterfly solenoid




M4*70

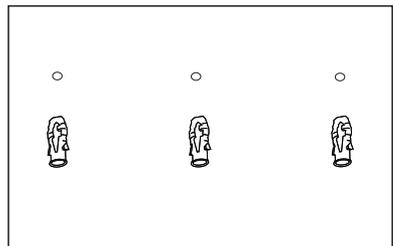


Assembly Instructions

STEP 1


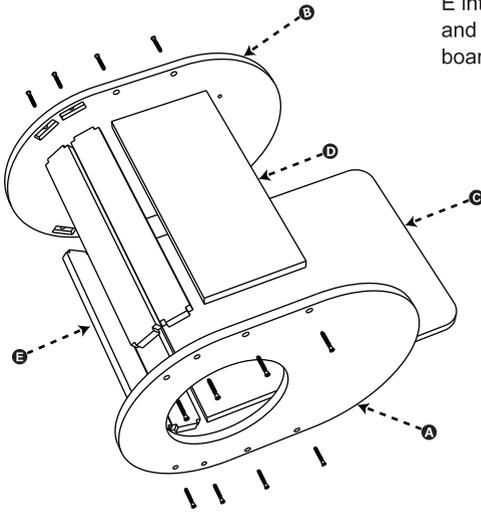


As shown in the figure, insert the wooden stick E into the wooden board A and fix it with screws, and then fix the wooden stick C and the wooden board D with screws on the wooden board A.

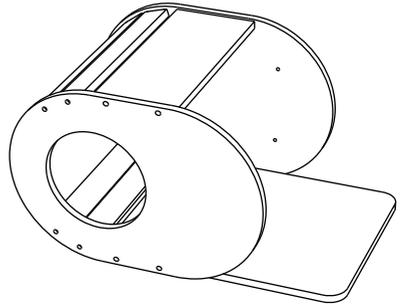

Finally, put the board B on and fix it with screws, and the individual components are installed.


STEP 2

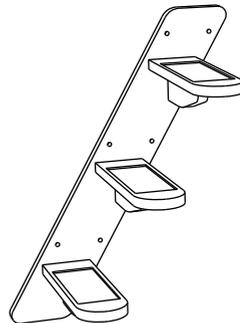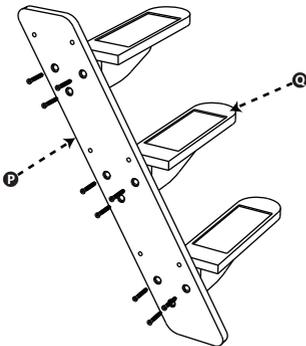


As shown, fix the plank P and part Q together with screws, and repeat this step to install another set of components.

Assembly Instructions

STEP 3

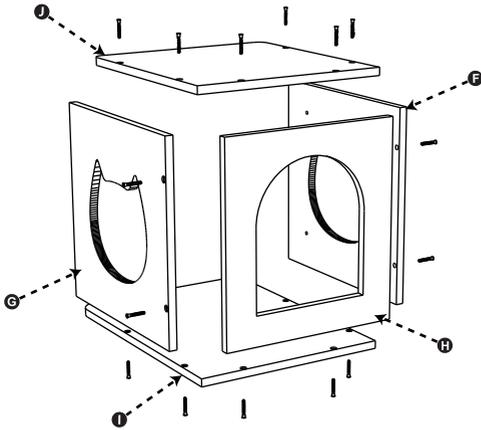


As shown in the figure, first board F, G, H are installed and fixed on board 1 with screws;

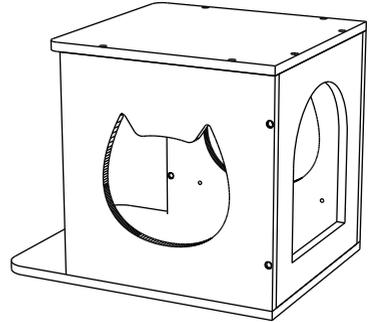


Then put the plank J on and fix it with screws, and the installation of a single component is completed.

STEP 4

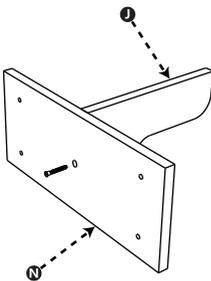


As shown in the figure, first assemble the plank J and plank N together, and then fix the plank K together with screws;

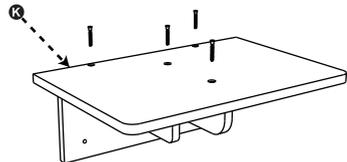

Then repeat this step to install another set of components.

Assembly Instructions

STEP 5

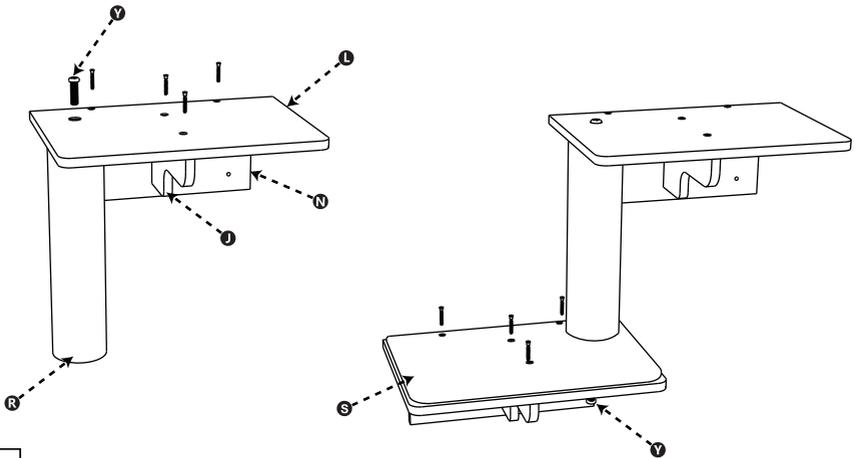


Y x 2



W x 10

As shown in the figure, install the sisal column R and the corresponding component together with screw Y, then paste the adhesive Z on the other component, then paste the mat S, and finally fix it with screws.

STEP 6

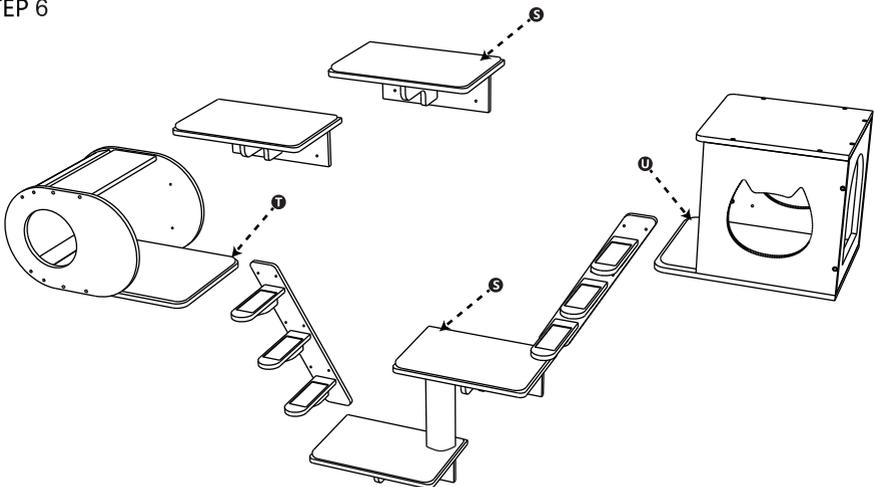

X x 36

As shown in the figure, paste the corresponding mat with adhesive Z, and finally use screw X to fix it on the wall.

(The installation distance of each component should be within 30cm)

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd.Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

EC	REP
-----------	------------

E-CrossStu GmbH.

Mainzer Landstr.69, 60329 Frankfurt am Main.

UK	REP
-----------	------------


YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX.

Estante para gatos montado Ins talación
Instrucciones

Mounted Cat Shelf







Modelo: SSGQK-04

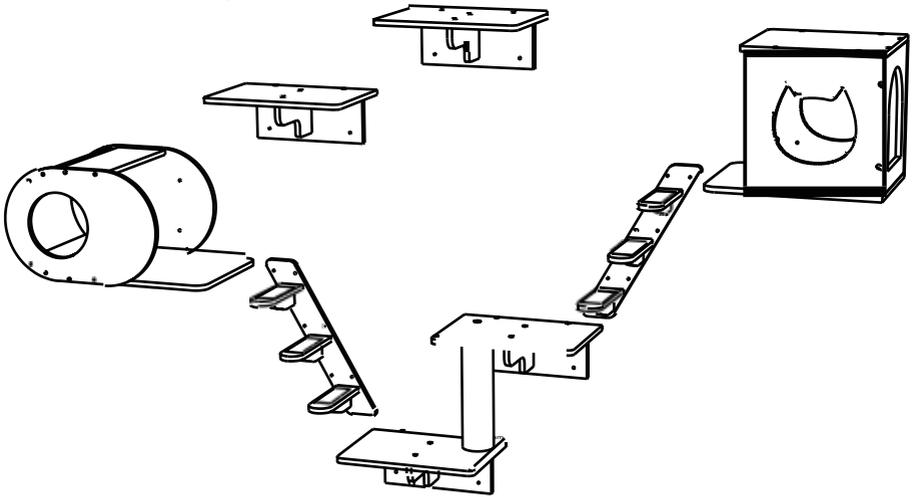





ESPECIFICACIONES

Modelo	SSGQK-04
Color	Naturaleza

COMPONENTES

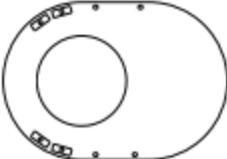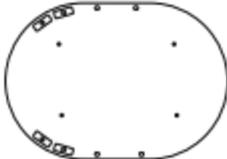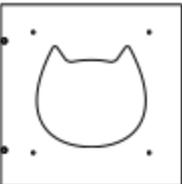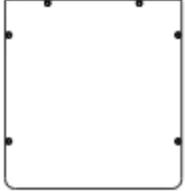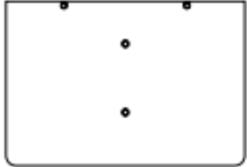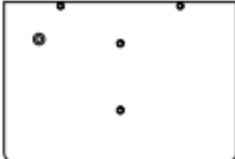 A x 1	 B x 1	 C x 1
 D x 1	 E x 4	 F x 1
 G x 1	 H x 1	 I x 1
 J x 1	 K x 2	 L x 1
* each set of products is equipped with screwdrivers and wrenches		

COMPONENTS

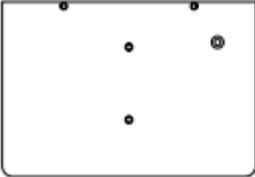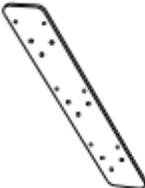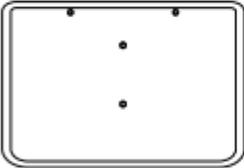 <p>M x 1</p>	 <p>N x 4</p>	 <p>O x 4</p>
<p>(A symmetrical pair)</p>  <p>P x 2</p>	 <p>Q x 6</p>	 <p>R x 1</p>
<p>(Loop-pile mat)</p>  <p>S x 4</p>	<p>(Loop-pile mat)</p>  <p>T x 1</p>	<p>(Loop-pile mat)</p>  <p>U x 1</p>
 <p>V x 36</p>	<p>(M6*40) (M4*70)</p>   <p>W x 82 X x 36</p>	<p>(M8*35)</p>   <p>Y x 2 Z x 2</p>
<p>* each set of products is equipped with screwdrivers and wrenches</p>		

Assembly Instructions

TIPS:

1. The number of screws marked above is the actual number used during installation. When the product is shipped, 1~3 more screws of each type will be given as spares.
2. During the use of the product, children are prohibited from approaching without the company of adults.
3. The edge of the product is a bit sharp, and you need to wear gloves for installation; at the same time, it comes with sandpaper, so you can polish the edge again by yourself; without gloves, be careful when touching the running wheel.
4. Do not tighten the installation screws at once. Tighten the installation screws twice after all screws are aligned
5. It is recommended that two or more people install the device



6. Please use the following tools to install



Tape measure



Scissors



Marker pen



screwdriver



Electric drill

Please mark the position on the wall against the plate, reserve about 30cm distance between the jump platforms, drill the hole and bury the expansion tube
(A 6mm drill bit is used for solid walls and a yellow expansion tube is embedded; a 9mm drill bit is used for hollow walls and a butterfly expansion tube is embedded)


Expansion solenoid



Butterfly solenoid




M4*70

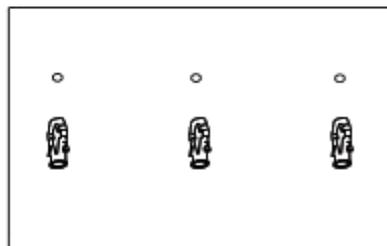


Assembly Instructions

STEP 1


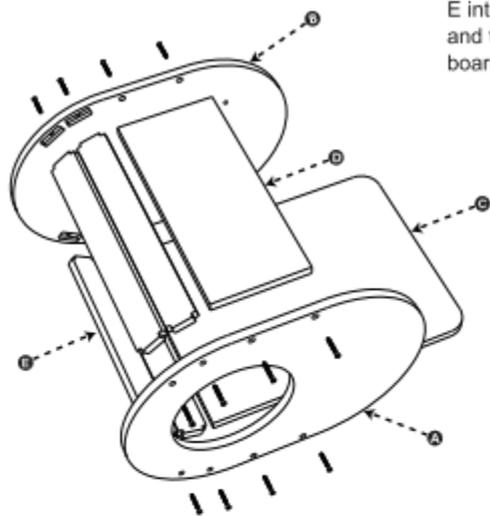


As shown in the figure, insert the wooden stick E into the wooden board A and fix it with screws, and then fix the wooden stick C and the wooden board D with screws on the wooden board A.

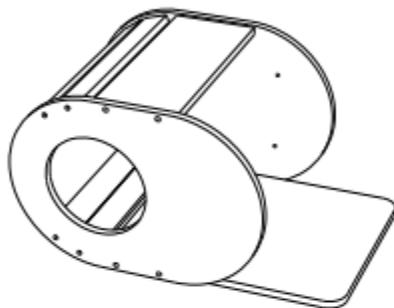

Finally, put the board B on and fix it with screws, and the individual components are installed.


STEP 2

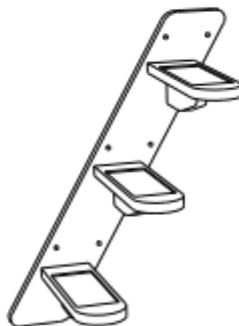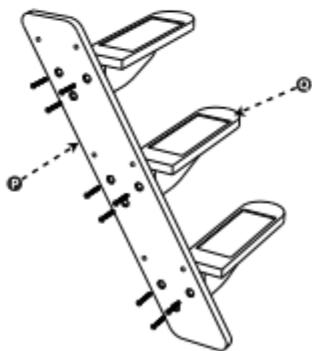


As shown, fix the plank P and part Q together with screws, and repeat this step to install another set of components.

Assembly Instructions

STEP 3

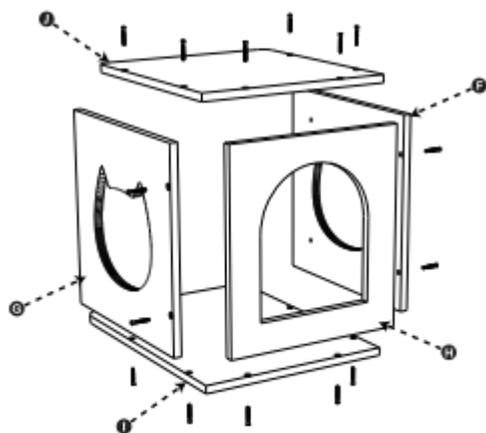


As shown in the figure, first board F, G, H are installed and fixed on board 1 with screws;

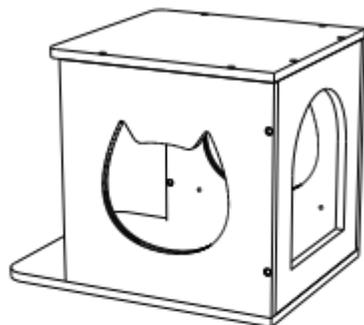


Then put the plank J on and fix it with screws, and the installation of a single component is completed.

STEP 4

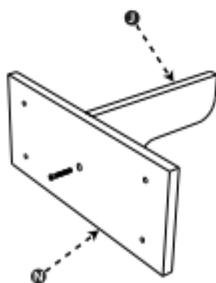


As shown in the figure, first assemble the plank J and plank N together, and then fix the plank K together with screws;

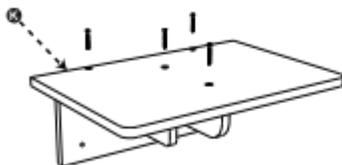

Then repeat this step to install another set of components.


Assembly Instructions

STEP 5

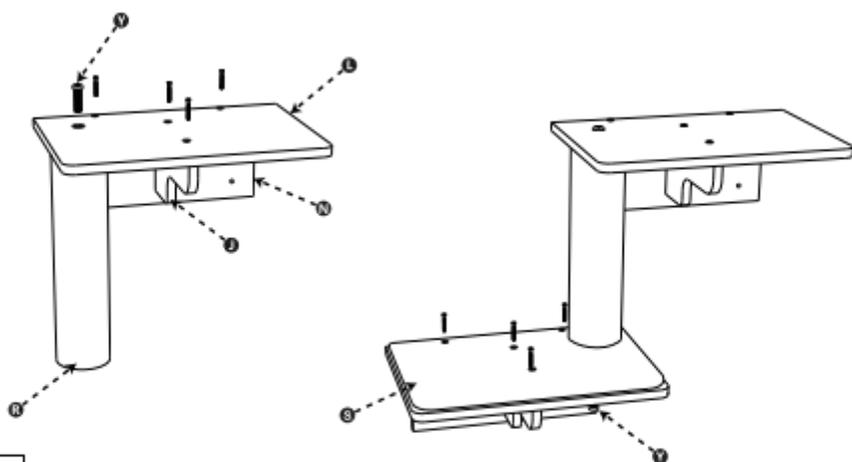

As shown in the figure, install the sisal column R and the corresponding component together with screw Y, then paste the adhesive Z on the other component, then paste the mat S, and finally fix it with screws.

STEP 6

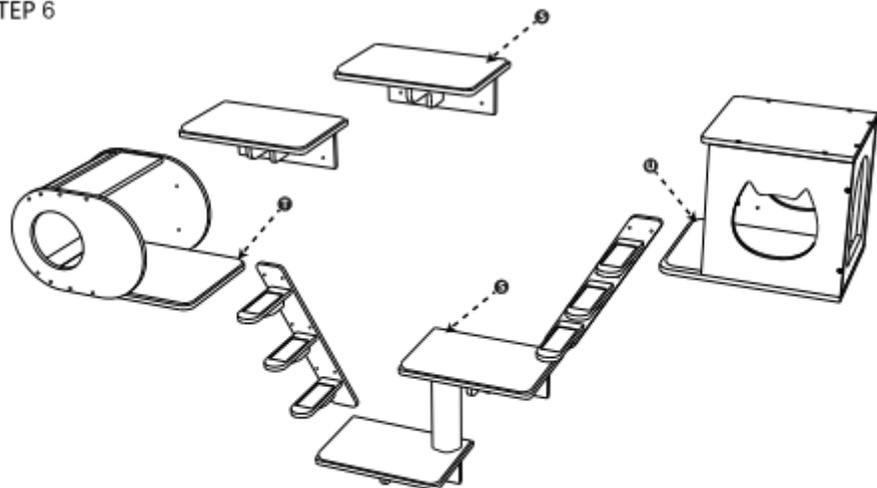

As shown in the figure, paste the corresponding mat with adhesive Z, and finally use screw X to fix it on the wall.

(The installation distance of each component should be within 30cm)

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd.Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730



E-CrossStu GmbH.

Mainzer Landstr.69, 60329 Frankfurt am Main.




YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX.

Mensola per gatti montata Installazione Istruzioni

Mounted Cat Shelf








Modello: SSGQK-04

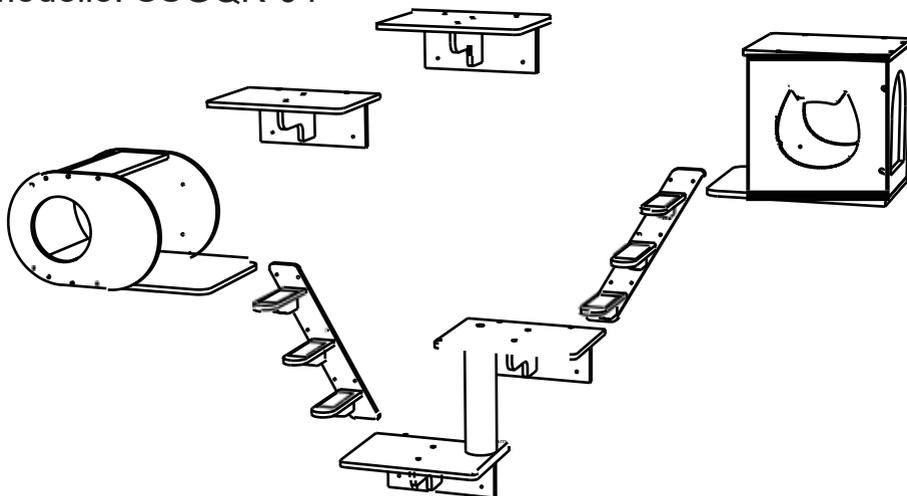







SPECIFICHE

Modello	SSGQK-04
Colore	Natura

COMPONENTI

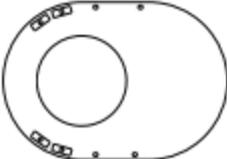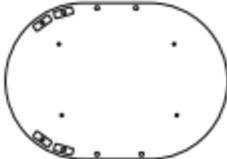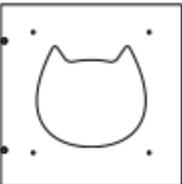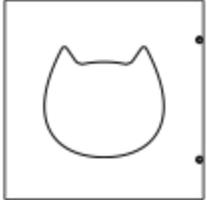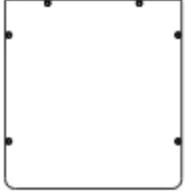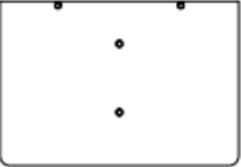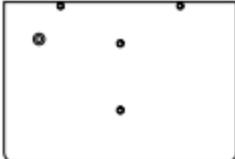 A x 1	 B x 1	 C x 1
 D x 1	 E x 4	 F x 1
 G x 1	 H x 1	 I x 1
 J x 1	 K x 2	 L x 1
<p>* each set of products is equipped with screwdrivers and wrenches</p>		

COMPONENTS

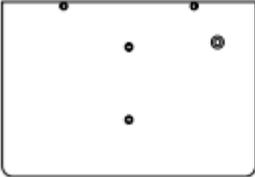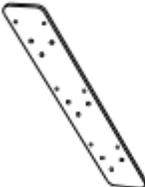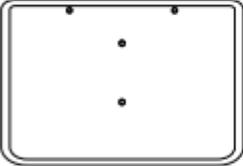 <p>M x 1</p>	 <p>N x 4</p>	 <p>O x 4</p>
<p>(A symmetrical pair)</p>  <p>P x 2</p>	 <p>Q x 6</p>	 <p>R x 1</p>
<p>(Loop-pile mat)</p>  <p>S x 4</p>	<p>(Loop-pile mat)</p>  <p>T x 1</p>	<p>(Loop-pile mat)</p>  <p>U x 1</p>
 <p>V x 36</p>	<p>(M6*40) (M4*70)</p>   <p>W x 82 X x 36</p>	<p>(M8*35)</p>   <p>Y x 2 Z x 2</p>
<p>* each set of products is equipped with screwdrivers and wrenches</p>		

Assembly Instructions

TIPS:

1. The number of screws marked above is the actual number used during installation. When the product is shipped, 1~3 more screws of each type will be given as spares.
2. During the use of the product, children are prohibited from approaching without the company of adults.
3. The edge of the product is a bit sharp, and you need to wear gloves for installation; at the same time, it comes with sandpaper, so you can polish the edge again by yourself; without gloves, be careful when touching the running wheel.
4. Do not tighten the installation screws at once. Tighten the installation screws twice after all screws are aligned
5. It is recommended that two or more people install the device



6. Please use the following tools to install



Tape measure



Scissors



Marker pen



screwdriver



Electric drill

Please mark the position on the wall against the plate, reserve about 30cm distance between the jump platforms, drill the hole and bury the expansion tube
(A 6mm drill bit is used for solid walls and a yellow expansion tube is embedded; a 9mm drill bit is used for hollow walls and a butterfly expansion tube is embedded)


Expansion solenoid



Butterfly solenoid




M4*70

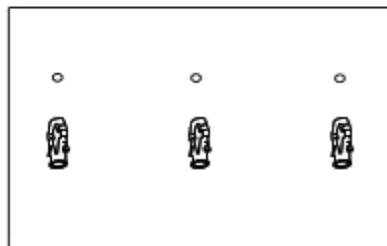


Assembly Instructions

STEP 1


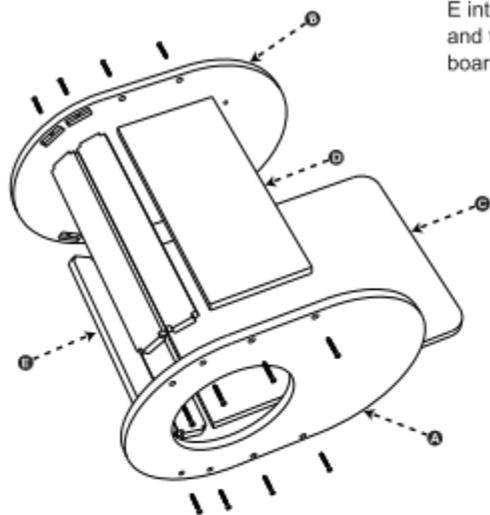


As shown in the figure, insert the wooden stick E into the wooden board A and fix it with screws, and then fix the wooden stick C and the wooden board D with screws on the wooden board A.

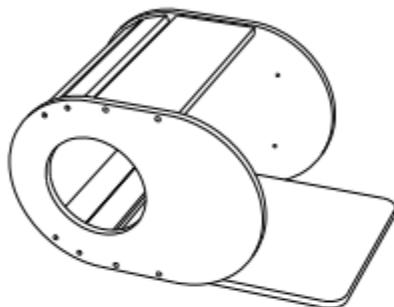

Finally, put the board B on and fix it with screws, and the individual components are installed.


STEP 2

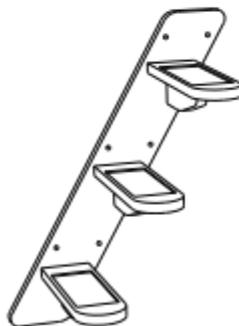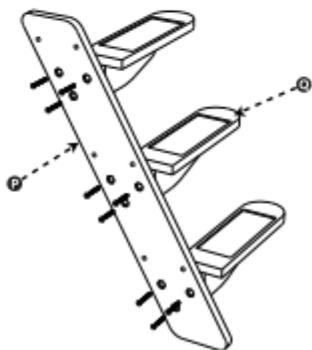


As shown, fix the plank P and part Q together with screws, and repeat this step to install another set of components.

Assembly Instructions

STEP 3

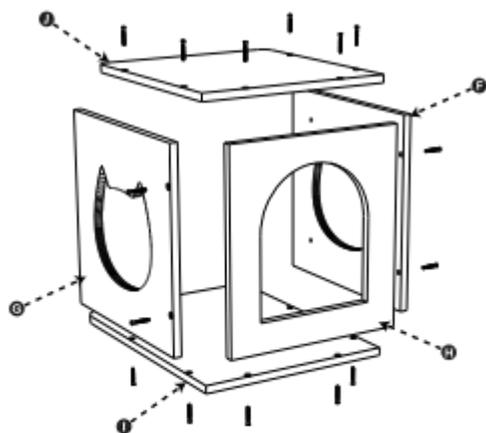


As shown in the figure, first board F, G, H are installed and fixed on board 1 with screws;

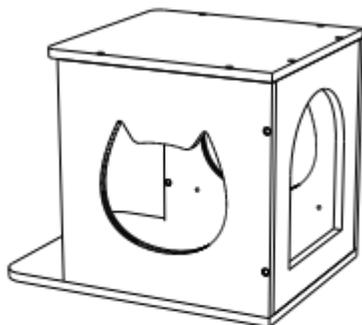


Then put the plank J on and fix it with screws, and the installation of a single component is completed.

STEP 4

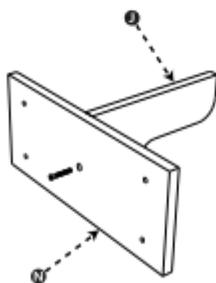


As shown in the figure, first assemble the plank J and plank N together, and then fix the plank K together with screws;

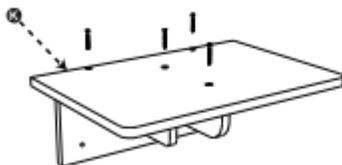

Then repeat this step to install another set of components.


Assembly Instructions

STEP 5

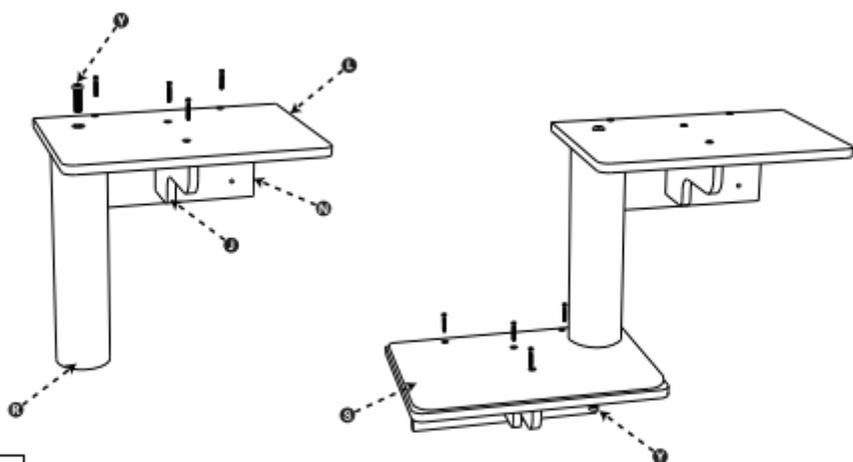

As shown in the figure, install the sisal column R and the corresponding component together with screw Y, then paste the adhesive Z on the other component, then paste the mat S, and finally fix it with screws.

STEP 6

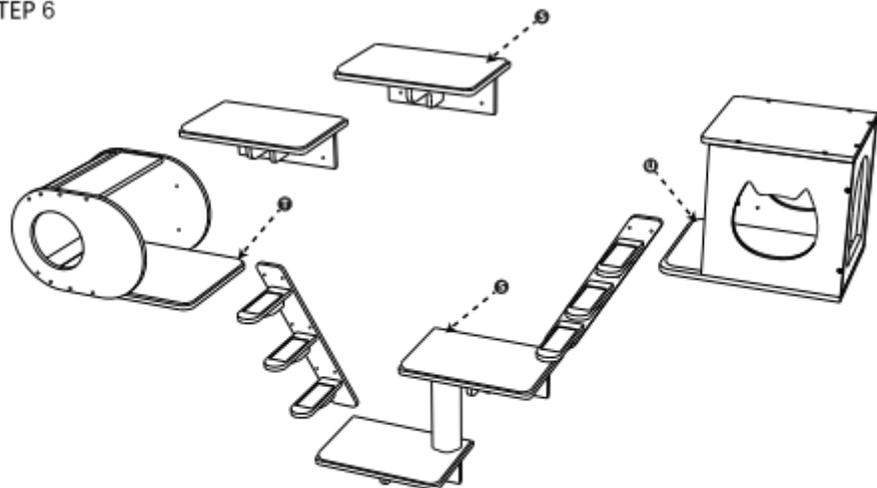

As shown in the figure, paste the corresponding mat with adhesive Z, and finally use screw X to fix it on the wall.

(The installation distance of each component should be within 30cm)

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd.Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730



E-CrossStu GmbH.

Mainzer Landstr.69, 60329 Frankfurt am Main.




YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX.

Zamontowana półka dla kota Instalacja Instrukcje

Mounted Cat Shelf







Model: SSGQK-04

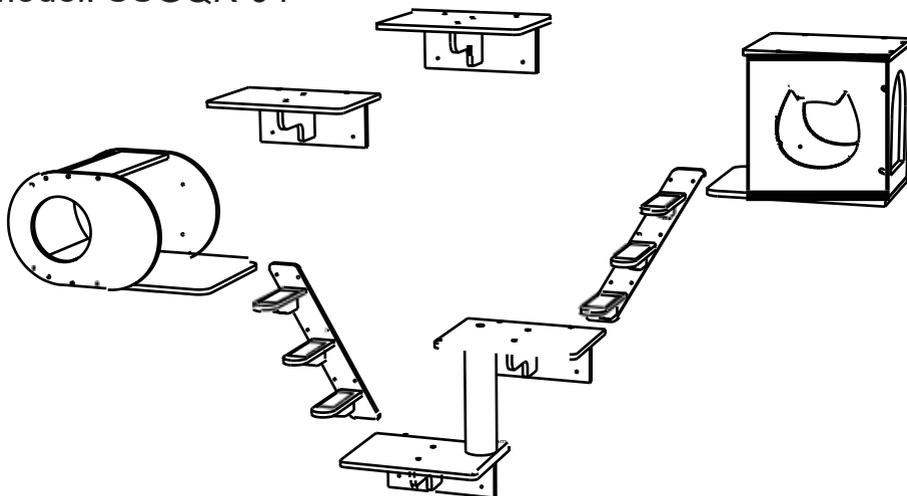






SPECYFIKACJE

Model	SSGQK-04
Kolor	Natura

SKŁADNIKI

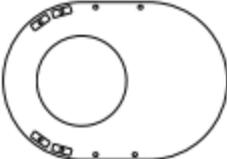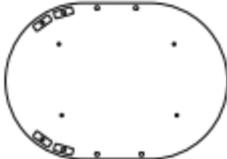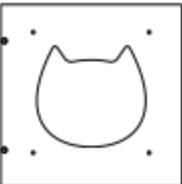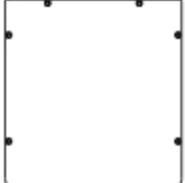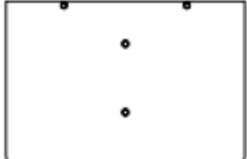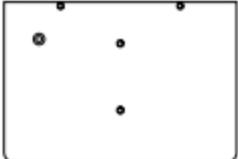 A x 1	 B x 1	 C x 1
 D x 1	 E x 4	 F x 1
 G x 1	 H x 1	 I x 1
 J x 1	 K x 2	 L x 1
<p>* each set of products is equipped with screwdrivers and wrenches</p>		

COMPONENTS

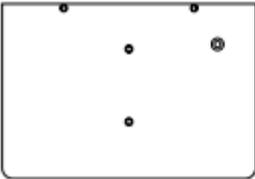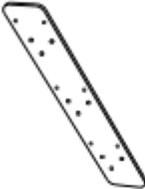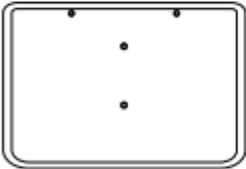 <p>M x 1</p>	 <p>N x 4</p>	 <p>O x 4</p>
<p>(A symmetrical pair)</p>  <p>P x 2</p>	 <p>Q x 6</p>	 <p>R x 1</p>
<p>(Loop-pile mat)</p>  <p>S x 4</p>	<p>(Loop-pile mat)</p>  <p>T x 1</p>	<p>(Loop-pile mat)</p>  <p>U x 1</p>
 <p>V x 36</p>	<p>(M6*40) (M4*70)</p>   <p>W x 82 X x 36</p>	<p>(M8*35)</p>   <p>Y x 2 Z x 2</p>
<p>* each set of products is equipped with screwdrivers and wrenches</p>		

Assembly Instructions

TIPS:

1. The number of screws marked above is the actual number used during installation. When the product is shipped, 1~3 more screws of each type will be given as spares.
2. During the use of the product, children are prohibited from approaching without the company of adults.
3. The edge of the product is a bit sharp, and you need to wear gloves for installation; at the same time, it comes with sandpaper, so you can polish the edge again by yourself; without gloves, be careful when touching the running wheel.
4. Do not tighten the installation screws at once. Tighten the installation screws twice after all screws are aligned
5. It is recommended that two or more people install the device



6. Please use the following tools to install



Tape measure



Scissors



Marker pen



screwdriver



Electric drill

Please mark the position on the wall against the plate, reserve about 30cm distance between the jump platforms, drill the hole and bury the expansion tube
(A 6mm drill bit is used for solid walls and a yellow expansion tube is embedded; a 9mm drill bit is used for hollow walls and a butterfly expansion tube is embedded)


Expansion solenoid



Butterfly solenoid




M4*70

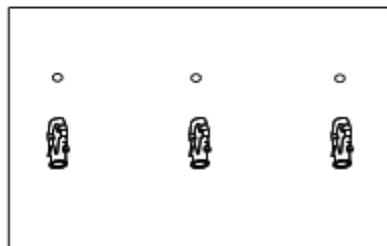


Assembly Instructions

STEP 1


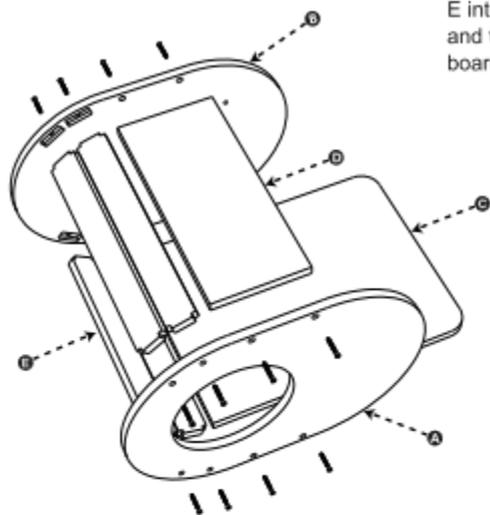


As shown in the figure, insert the wooden stick E into the wooden board A and fix it with screws, and then fix the wooden stick C and the wooden board D with screws on the wooden board A.

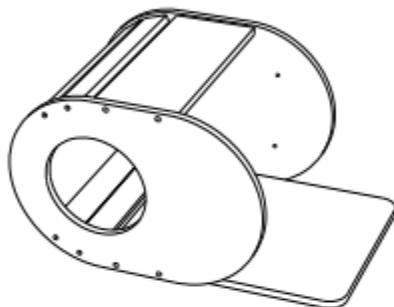

Finally, put the board B on and fix it with screws, and the individual components are installed.


STEP 2

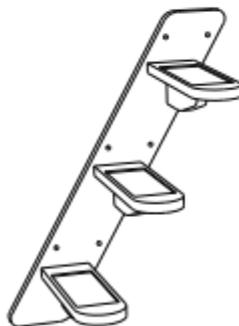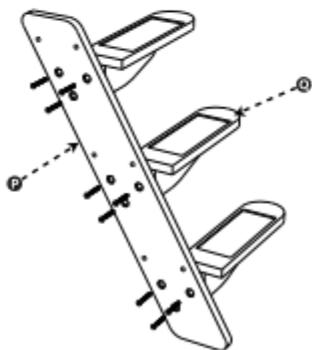


As shown, fix the plank P and part Q together with screws, and repeat this step to install another set of components.

Assembly Instructions

STEP 3

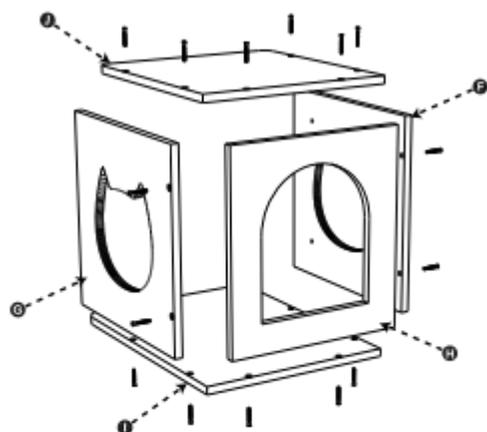


As shown in the figure, first board F, G, H are installed and fixed on board 1 with screws;

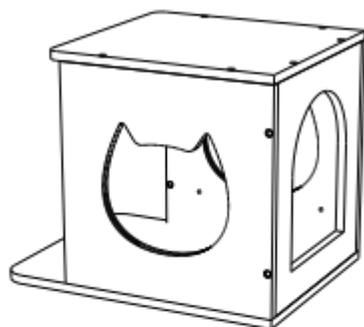


Then put the plank J on and fix it with screws, and the installation of a single component is completed.

STEP 4

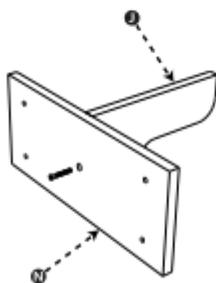


As shown in the figure, first assemble the plank J and plank N together, and then fix the plank K together with screws;

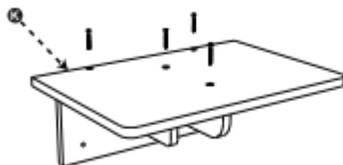

Then repeat this step to install another set of components.


Assembly Instructions

STEP 5

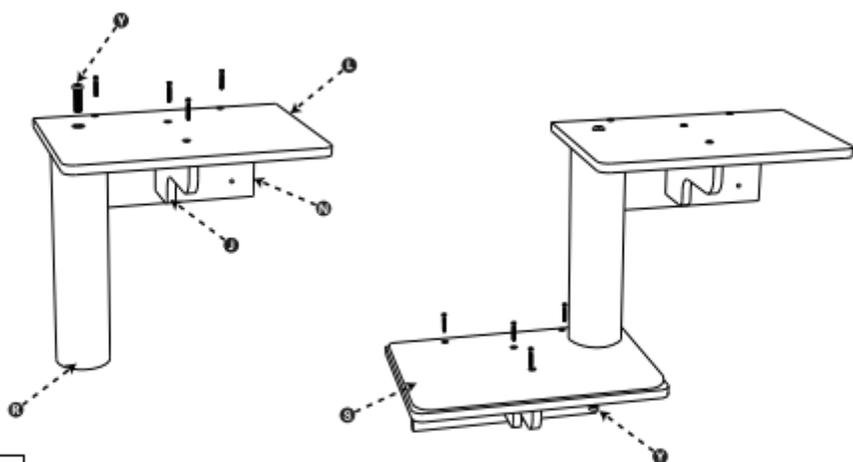

As shown in the figure, install the sisal column R and the corresponding component together with screw Y, then paste the adhesive Z on the other component, then paste the mat S, and finally fix it with screws.

STEP 6

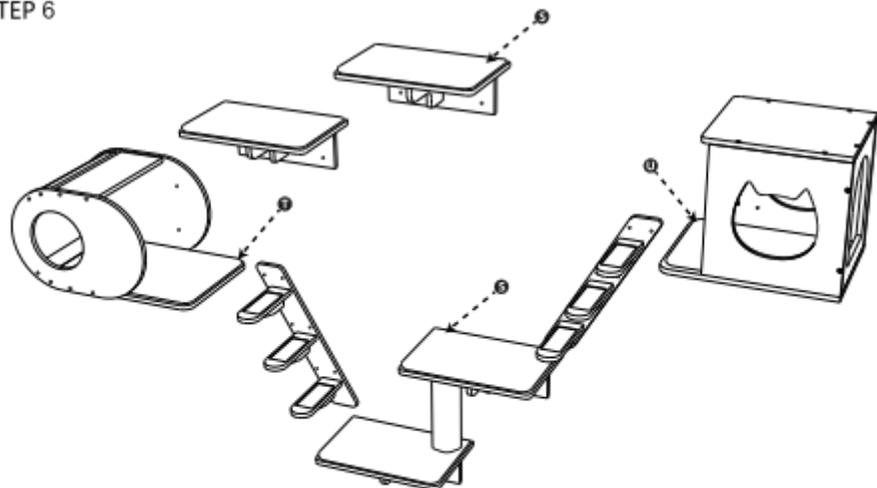

As shown in the figure, paste the corresponding mat with adhesive Z, and finally use screw X to fix it on the wall.

(The installation distance of each component should be within 30cm)

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd.Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730



E-CrossStu GmbH.

Mainzer Landstr.69, 60329 Frankfurt am Main.




YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX.

Montiertes Katzenregal Installation Anweisungen

Mounted Cat Shelf








Modell: SSGQK-04

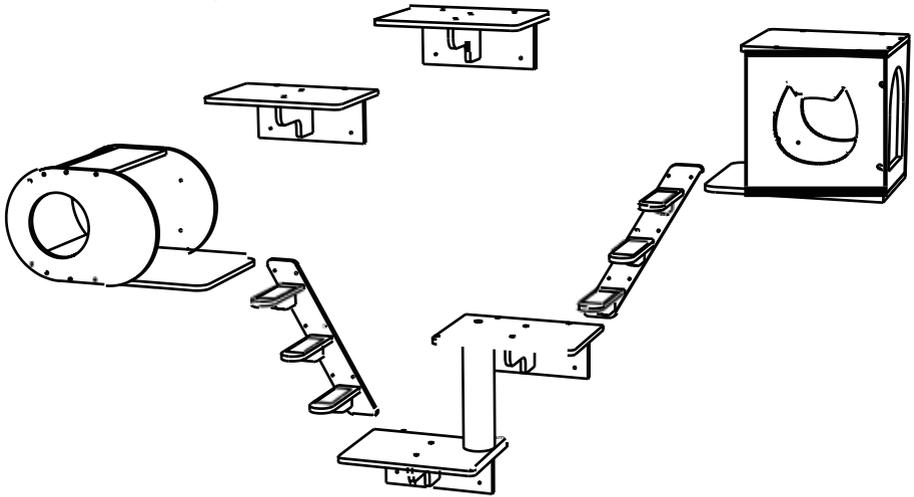






SPEZIFIKATIONEN

Modell	SSGQK-04
Farbe	Natur

KOMPONENTEN

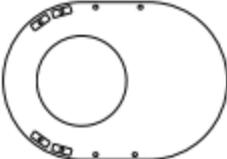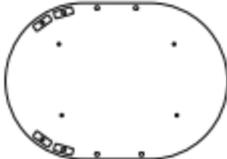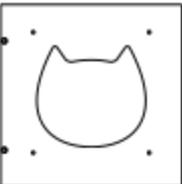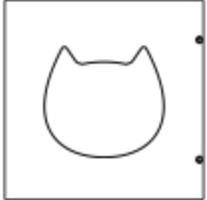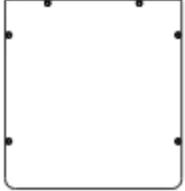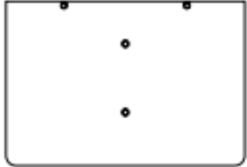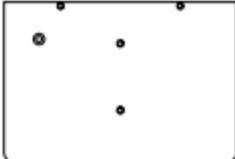 A x 1	 B x 1	 C x 1
 D x 1	 E x 4	 F x 1
 G x 1	 H x 1	 I x 1
 J x 1	 K x 2	 L x 1
* each set of products is equipped with screwdrivers and wrenches		

COMPONENTS

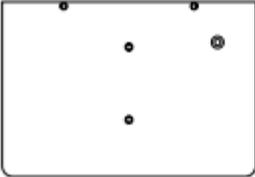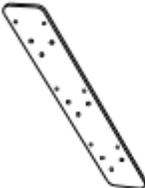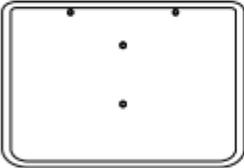 <p>M x 1</p>	 <p>N x 4</p>	 <p>O x 4</p>
<p>(A symmetrical pair)</p>  <p>P x 2</p>	 <p>Q x 6</p>	 <p>R x 1</p>
<p>(Loop-pile mat)</p>  <p>S x 4</p>	<p>(Loop-pile mat)</p>  <p>T x 1</p>	<p>(Loop-pile mat)</p>  <p>U x 1</p>
 <p>V x 36</p>	<p>(M6*40) (M4*70)</p>   <p>W x 82 X x 36</p>	<p>(M8*35)</p>   <p>Y x 2 Z x 2</p>
<p>* each set of products is equipped with screwdrivers and wrenches</p>		

Assembly Instructions

TIPS:

1. The number of screws marked above is the actual number used during installation. When the product is shipped, 1~3 more screws of each type will be given as spares.
2. During the use of the product, children are prohibited from approaching without the company of adults.
3. The edge of the product is a bit sharp, and you need to wear gloves for installation; at the same time, it comes with sandpaper, so you can polish the edge again by yourself; without gloves, be careful when touching the running wheel.
4. Do not tighten the installation screws at once. Tighten the installation screws twice after all screws are aligned
5. It is recommended that two or more people install the device



6. Please use the following tools to install



Tape measure



Scissors



Marker pen



screwdriver



Electric drill

Please mark the position on the wall against the plate, reserve about 30cm distance between the jump platforms, drill the hole and bury the expansion tube
(A 6mm drill bit is used for solid walls and a yellow expansion tube is embedded; a 9mm drill bit is used for hollow walls and a butterfly expansion tube is embedded)


Expansion solenoid



Butterfly solenoid




M4*70

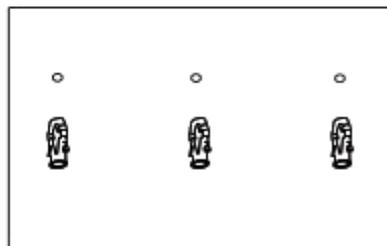


Assembly Instructions

STEP 1


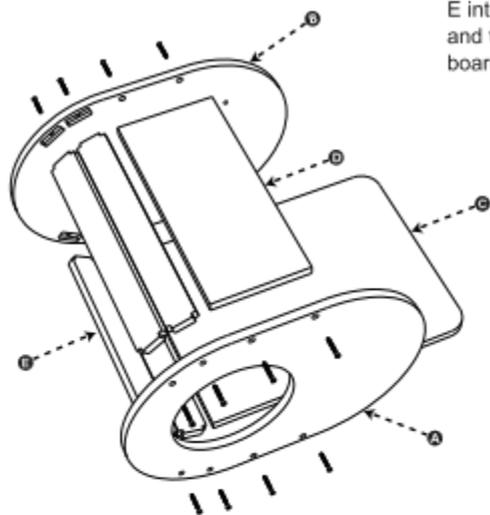


As shown in the figure, insert the wooden stick E into the wooden board A and fix it with screws, and then fix the wooden stick C and the wooden board D with screws on the wooden board A.

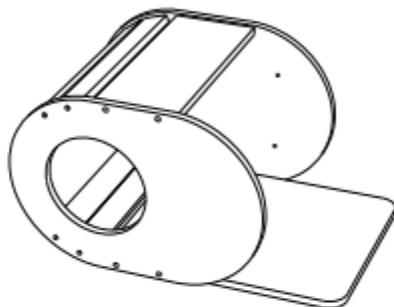

Finally, put the board B on and fix it with screws, and the individual components are installed.


STEP 2

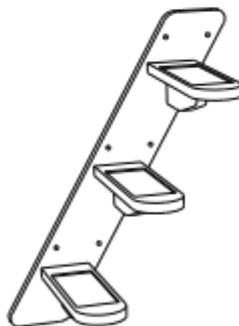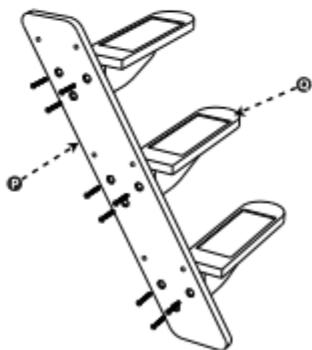


As shown, fix the plank P and part Q together with screws, and repeat this step to install another set of components.

Assembly Instructions

STEP 3

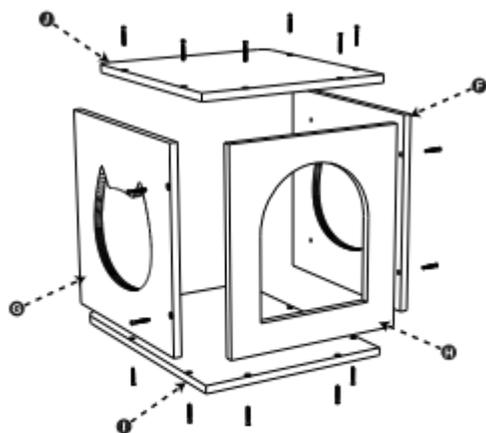


As shown in the figure, first board F, G, H are installed and fixed on board 1 with screws;

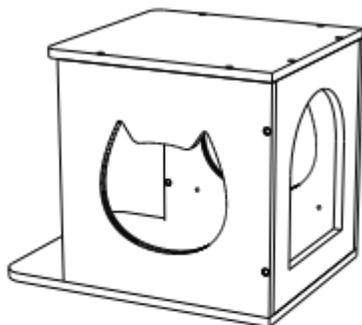


Then put the plank J on and fix it with screws, and the installation of a single component is completed.

STEP 4

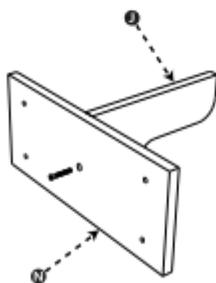


As shown in the figure, first assemble the plank J and plank N together, and then fix the plank K together with screws;

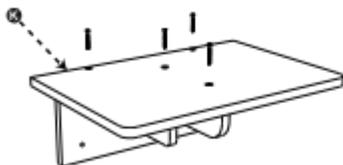

Then repeat this step to install another set of components.


Assembly Instructions

STEP 5

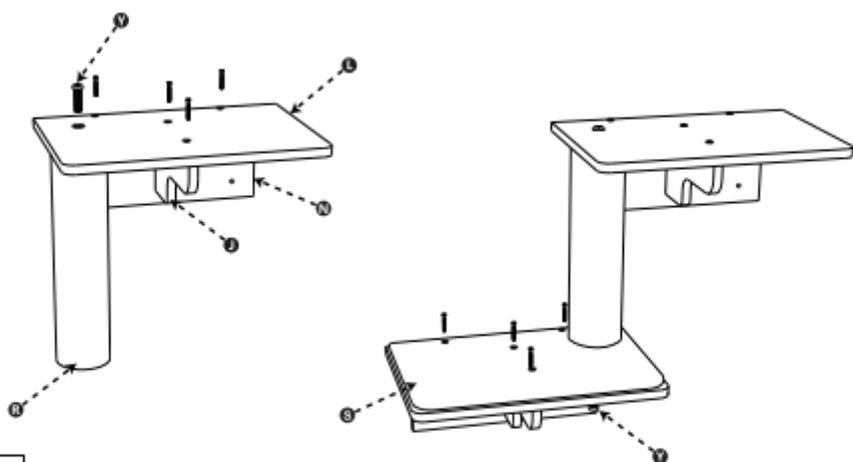

As shown in the figure, install the sisal column R and the corresponding component together with screw Y, then paste the adhesive Z on the other component, then paste the mat S, and finally fix it with screws.

STEP 6

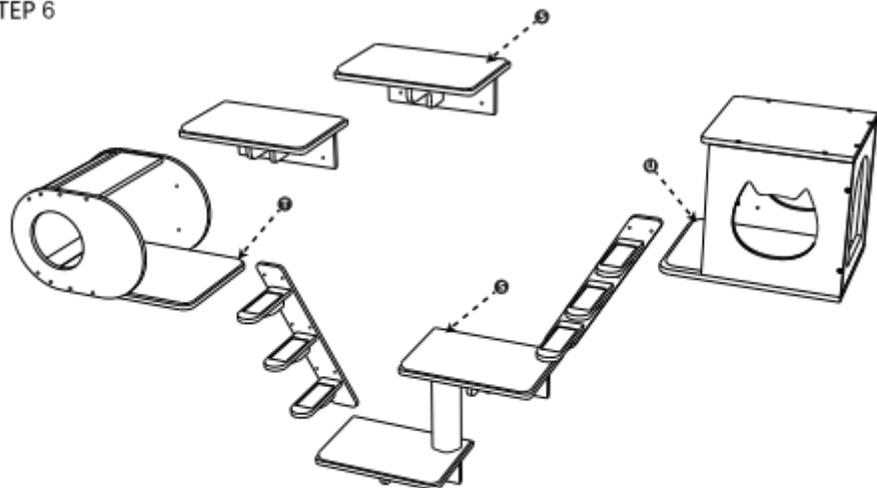

As shown in the figure, paste the corresponding mat with adhesive Z, and finally use screw X to fix it on the wall.

(The installation distance of each component should be within 30cm)

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd.Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730



E-CrossStu GmbH.

Mainzer Landstr.69, 60329 Frankfurt am Main.




YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX.

Étagère pour chat montée Installation Instructions

Mounted Cat Shelf







Modèle : SSGQK-04

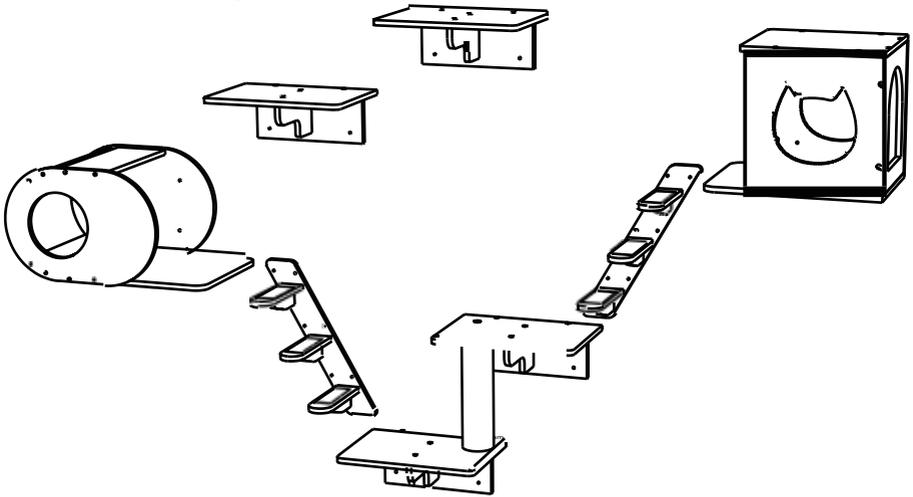





CARACTÉRISTIQUES

Modèle	SSGQK-04
Couleur	Nature

COMPOSANTS

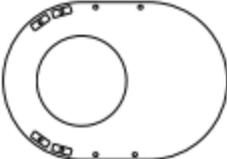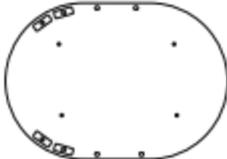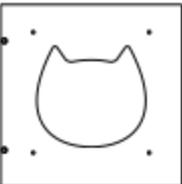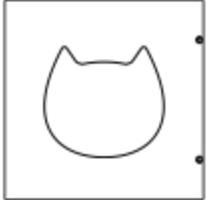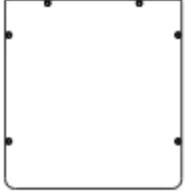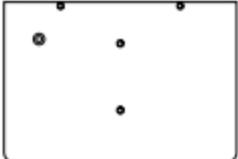 A x 1	 B x 1	 C x 1
 D x 1	 E x 4	 F x 1
 G x 1	 H x 1	 I x 1
 J x 1	 K x 2	 L x 1
<p>* each set of products is equipped with screwdrivers and wrenches</p>		

COMPONENTS

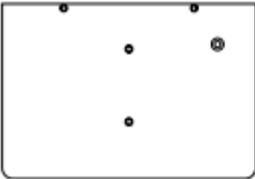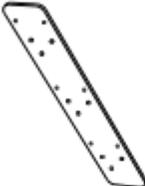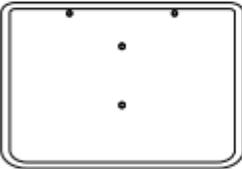 <p>M x 1</p>	 <p>N x 4</p>	 <p>O x 4</p>
<p>(A symmetrical pair)</p>  <p>P x 2</p>	 <p>Q x 6</p>	 <p>R x 1</p>
<p>(Loop-pile mat)</p>  <p>S x 4</p>	<p>(Loop-pile mat)</p>  <p>T x 1</p>	<p>(Loop-pile mat)</p>  <p>U x 1</p>
 <p>V x 36</p>	<p>(M6*40) (M4*70)</p>   <p>W x 82 X x 36</p>	<p>(M8*35)</p>   <p>Y x 2 Z x 2</p>
<p>* each set of products is equipped with screwdrivers and wrenches</p>		

Assembly Instructions

TIPS:

1. The number of screws marked above is the actual number used during installation. When the product is shipped, 1~3 more screws of each type will be given as spares.
2. During the use of the product, children are prohibited from approaching without the company of adults.
3. The edge of the product is a bit sharp, and you need to wear gloves for installation; at the same time, it comes with sandpaper, so you can polish the edge again by yourself; without gloves, be careful when touching the running wheel.
4. Do not tighten the installation screws at once. Tighten the installation screws twice after all screws are aligned
5. It is recommended that two or more people install the device



6. Please use the following tools to install



Tape measure



Scissors



Marker pen



screwdriver



Electric drill

Please mark the position on the wall against the plate, reserve about 30cm distance between the jump platforms, drill the hole and bury the expansion tube
(A 6mm drill bit is used for solid walls and a yellow expansion tube is embedded; a 9mm drill bit is used for hollow walls and a butterfly expansion tube is embedded)


Expansion solenoid



Butterfly solenoid




M4*70

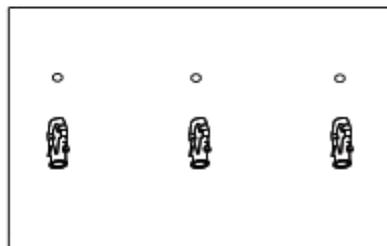


Assembly Instructions

STEP 1


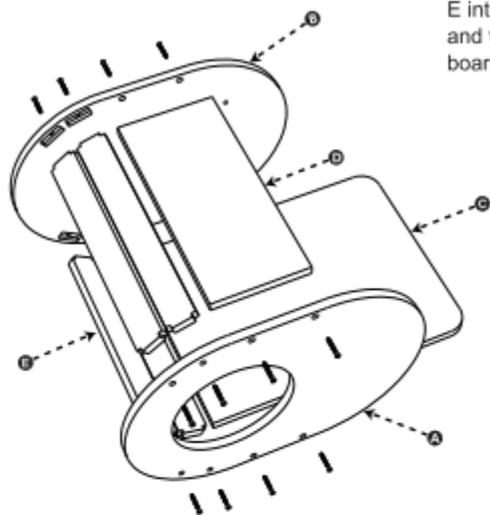


As shown in the figure, insert the wooden stick E into the wooden board A and fix it with screws, and then fix the wooden stick C and the wooden board D with screws on the wooden board A.

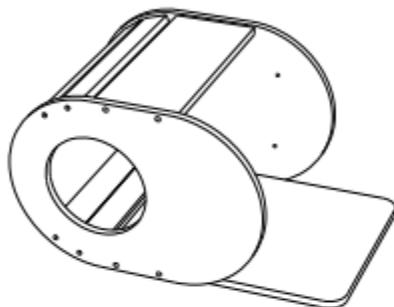

Finally, put the board B on and fix it with screws, and the individual components are installed.


STEP 2

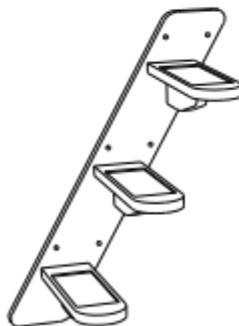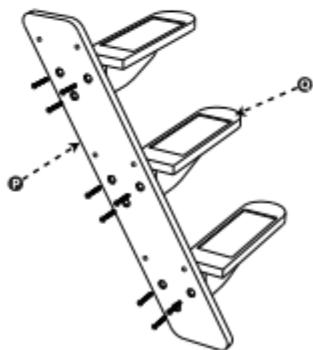


As shown, fix the plank P and part Q together with screws, and repeat this step to install another set of components.

Assembly Instructions

STEP 3

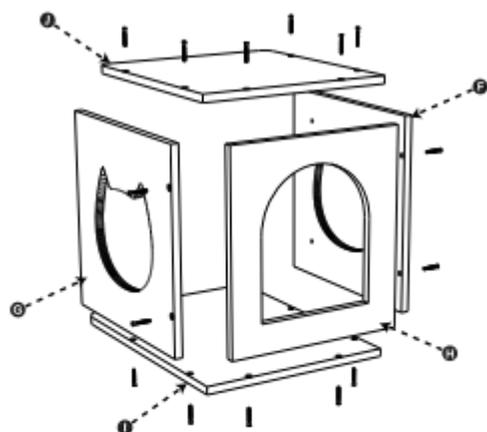


As shown in the figure, first board F, G, H are installed and fixed on board 1 with screws;

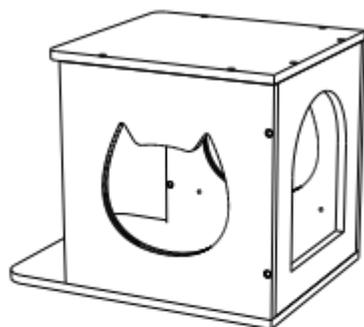


Then put the plank J on and fix it with screws, and the installation of a single component is completed.

STEP 4

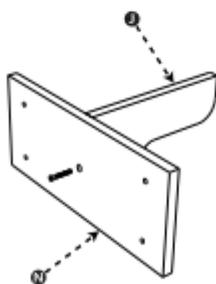


As shown in the figure, first assemble the plank J and plank N together, and then fix the plank K together with screws;

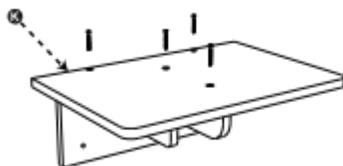

Then repeat this step to install another set of components.

Assembly Instructions

STEP 5

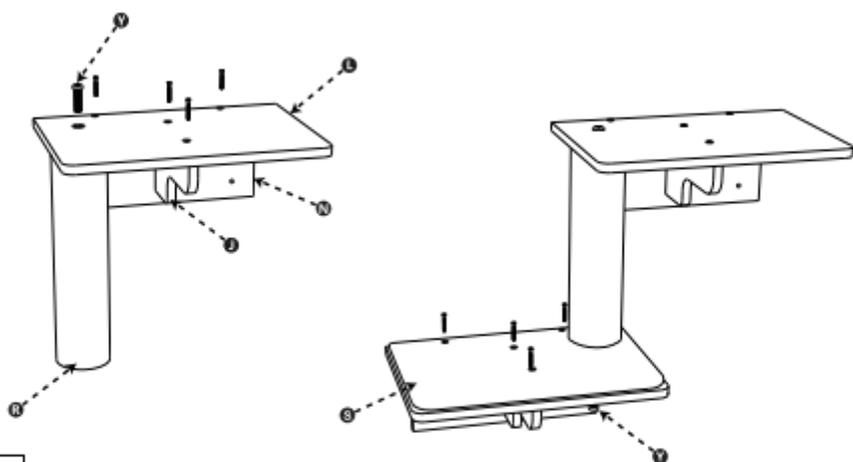


Y x 2



W x 10

As shown in the figure, install the sisal column R and the corresponding component together with screw Y, then paste the adhesive Z on the other component, then paste the mat S, and finally fix it with screws.

STEP 6

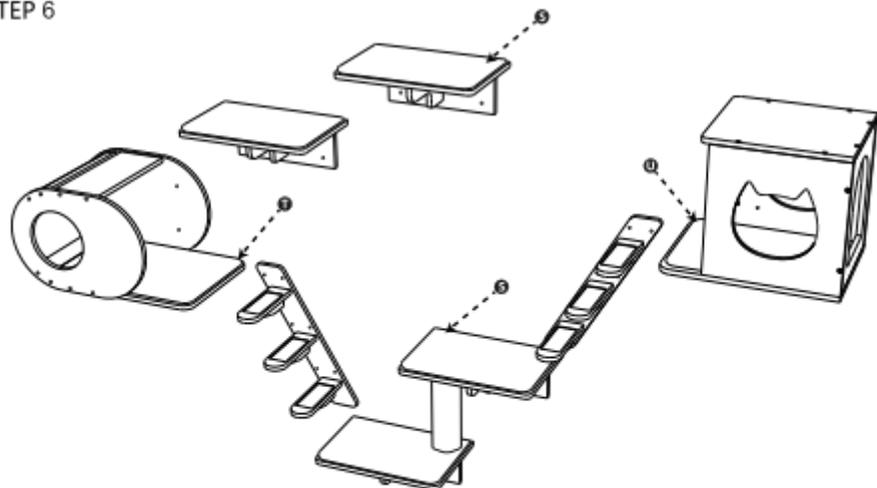

X x 36

As shown in the figure, paste the corresponding mat with adhesive Z, and finally use screw X to fix it on the wall.

(The installation distance of each component should be within 30cm)

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd.Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730



E-CrossStu GmbH.

Mainzer Landstr.69, 60329 Frankfurt am Main.




YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX.

Gemonteerde kattenplank Ins tallatie Instructies

Mounted Cat Shelf






Model: SSGQK-04

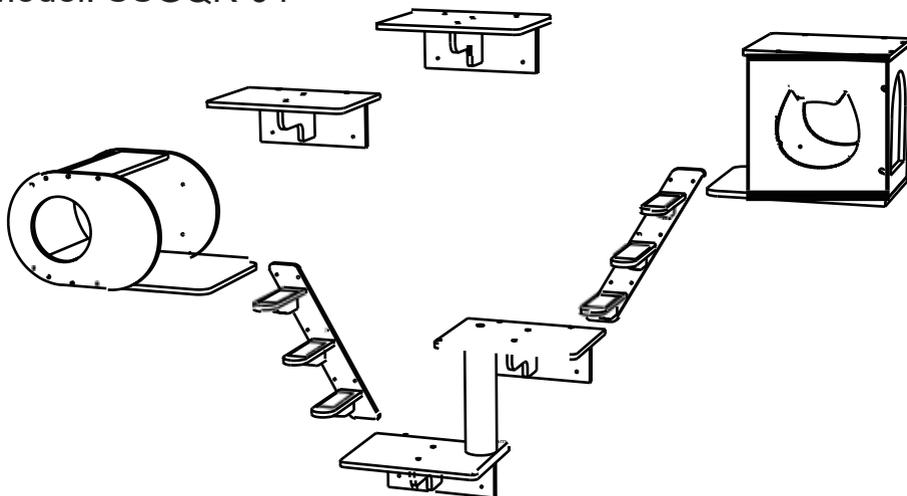






SPECIFICATIES

Model	SSGQK-04
Kleur	Natuur

COMPONENTEN

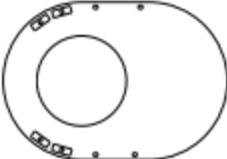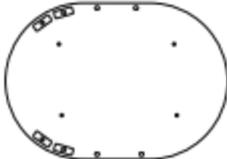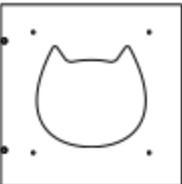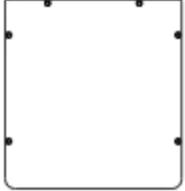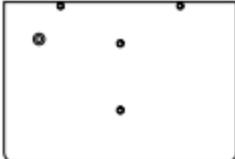 A x 1	 B x 1	 C x 1
 D x 1	 E x 4	 F x 1
 G x 1	 H x 1	 I x 1
 J x 1	 K x 2	 L x 1
<p>* each set of products is equipped with screwdrivers and wrenches</p>		

COMPONENTS

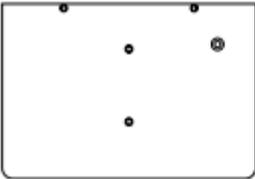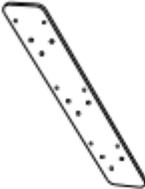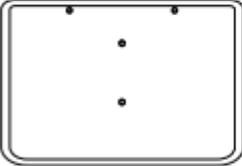 <p>M x 1</p>	 <p>N x 4</p>	 <p>O x 4</p>
<p>(A symmetrical pair)</p>  <p>P x 2</p>	 <p>Q x 6</p>	 <p>R x 1</p>
<p>(Loop-pile mat)</p>  <p>S x 4</p>	<p>(Loop-pile mat)</p>  <p>T x 1</p>	<p>(Loop-pile mat)</p>  <p>U x 1</p>
 <p>V x 36</p>	<p>(M6*40) (M4*70)</p>   <p>W x 82 X x 36</p>	<p>(M8*35)</p>   <p>Y x 2 Z x 2</p>
<p>* each set of products is equipped with screwdrivers and wrenches</p>		

Assembly Instructions

TIPS:

1. The number of screws marked above is the actual number used during installation. When the product is shipped, 1~3 more screws of each type will be given as spares.
2. During the use of the product, children are prohibited from approaching without the company of adults.
3. The edge of the product is a bit sharp, and you need to wear gloves for installation; at the same time, it comes with sandpaper, so you can polish the edge again by yourself; without gloves, be careful when touching the running wheel.
4. Do not tighten the installation screws at once. Tighten the installation screws twice after all screws are aligned
5. It is recommended that two or more people install the device



6. Please use the following tools to install



Tape measure



Scissors



Marker pen



screwdriver



Electric drill

Please mark the position on the wall against the plate, reserve about 30cm distance between the jump platforms, drill the hole and bury the expansion tube
(A 6mm drill bit is used for solid walls and a yellow expansion tube is embedded; a 9mm drill bit is used for hollow walls and a butterfly expansion tube is embedded)


Expansion solenoid



Butterfly solenoid




M4*70

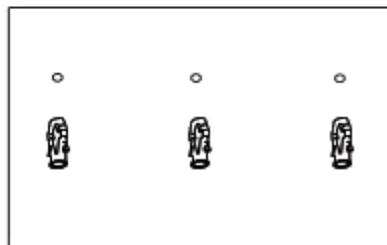


Assembly Instructions

STEP 1


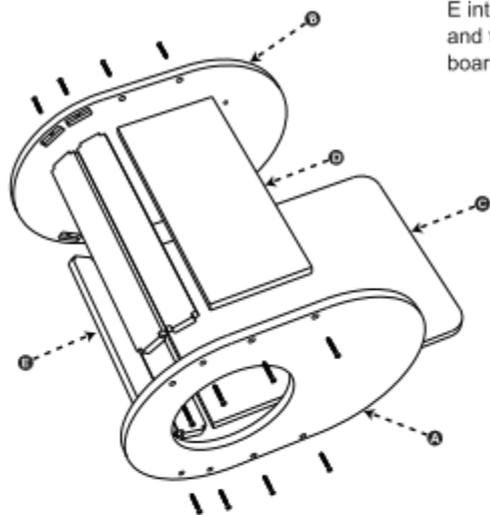


As shown in the figure, insert the wooden stick E into the wooden board A and fix it with screws, and then fix the wooden stick C and the wooden board D with screws on the wooden board A.

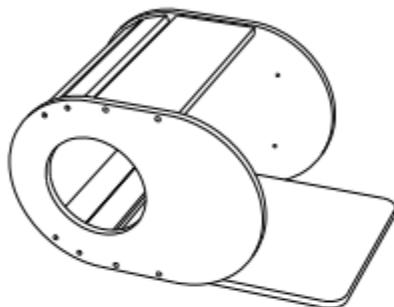

Finally, put the board B on and fix it with screws, and the individual components are installed.


STEP 2

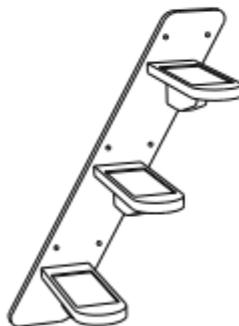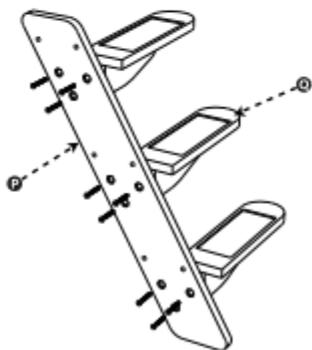


As shown, fix the plank P and part Q together with screws, and repeat this step to install another set of components.

Assembly Instructions

STEP 3

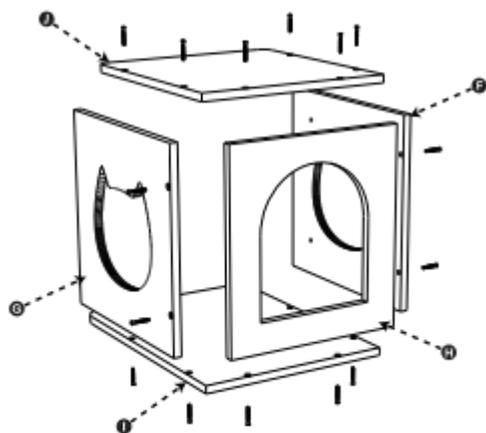


As shown in the figure, first board F, G, H are installed and fixed on board 1 with screws;

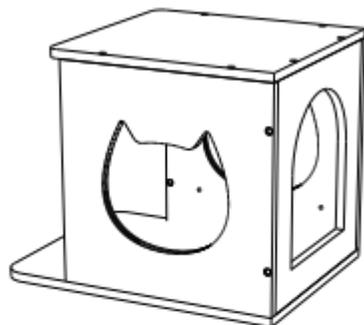


Then put the plank J on and fix it with screws, and the installation of a single component is completed.

STEP 4

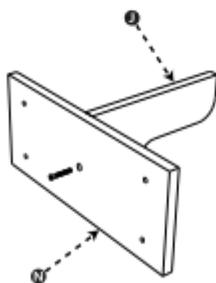


As shown in the figure, first assemble the plank J and plank N together, and then fix the plank K together with screws;

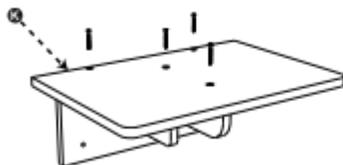

Then repeat this step to install another set of components.


Assembly Instructions

STEP 5

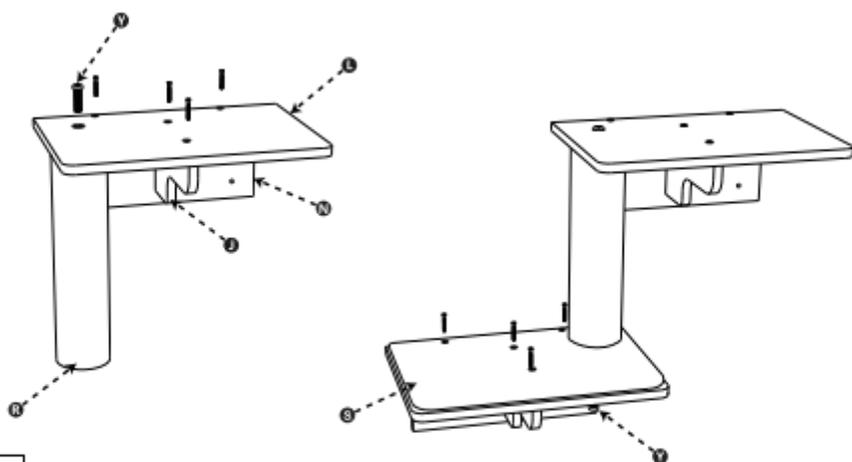

As shown in the figure, install the sisal column R and the corresponding component together with screw Y, then paste the adhesive Z on the other component, then paste the mat S, and finally fix it with screws.

STEP 6

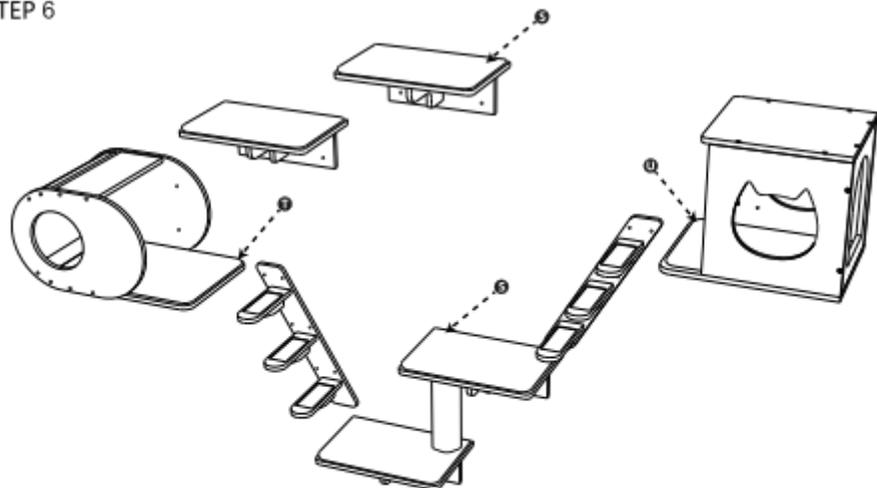

As shown in the figure, paste the corresponding mat with adhesive Z, and finally use screw X to fix it on the wall.

(The installation distance of each component should be within 30cm)

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd.Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730



E-CrossStu GmbH.

Mainzer Landstr.69, 60329 Frankfurt am Main.




YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX.

Monterad kathylla Installation Instruktioner

Mounted Cat Shelf







Modell: SSGQK-04

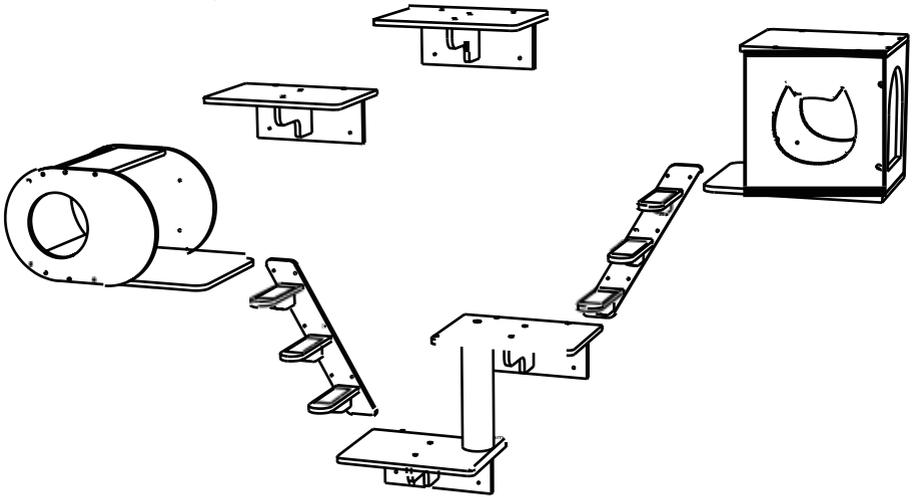







SPECIFIKATIONER

Modell	SSGQK-04
Färg	Natur

KOMPONENTER

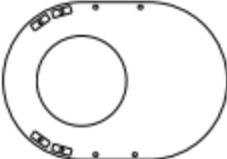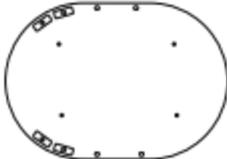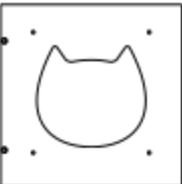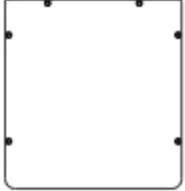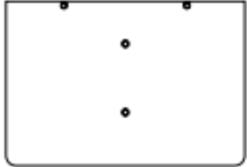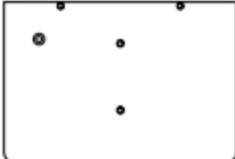 A x 1	 B x 1	 C x 1
 D x 1	 E x 4	 F x 1
 G x 1	 H x 1	 I x 1
 J x 1	 K x 2	 L x 1
<p>* each set of products is equipped with screwdrivers and wrenches</p>		

COMPONENTS

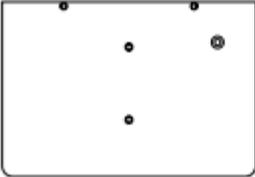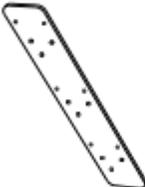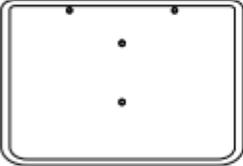 <p>M x 1</p>	 <p>N x 4</p>	 <p>O x 4</p>
<p>(A symmetrical pair)</p>  <p>P x 2</p>	 <p>Q x 6</p>	 <p>R x 1</p>
<p>(Loop-pile mat)</p>  <p>S x 4</p>	<p>(Loop-pile mat)</p>  <p>T x 1</p>	<p>(Loop-pile mat)</p>  <p>U x 1</p>
 <p>V x 36</p>	<p>(M6*40) (M4*70)</p>   <p>W x 82 X x 36</p>	<p>(M8*35)</p>   <p>Y x 2 Z x 2</p>
<p>* each set of products is equipped with screwdrivers and wrenches</p>		

Assembly Instructions

TIPS:

1. The number of screws marked above is the actual number used during installation. When the product is shipped, 1~3 more screws of each type will be given as spares.
2. During the use of the product, children are prohibited from approaching without the company of adults.
3. The edge of the product is a bit sharp, and you need to wear gloves for installation; at the same time, it comes with sandpaper, so you can polish the edge again by yourself; without gloves, be careful when touching the running wheel.
4. Do not tighten the installation screws at once. Tighten the installation screws twice after all screws are aligned
5. It is recommended that two or more people install the device



6. Please use the following tools to install



Tape measure



Scissors



Marker pen



screwdriver



Electric drill

Please mark the position on the wall against the plate, reserve about 30cm distance between the jump platforms, drill the hole and bury the expansion tube
(A 6mm drill bit is used for solid walls and a yellow expansion tube is embedded; a 9mm drill bit is used for hollow walls and a butterfly expansion tube is embedded)

Expansion solenoid



Butterfly solenoid




M4*70




Assembly Instructions

STEP 1


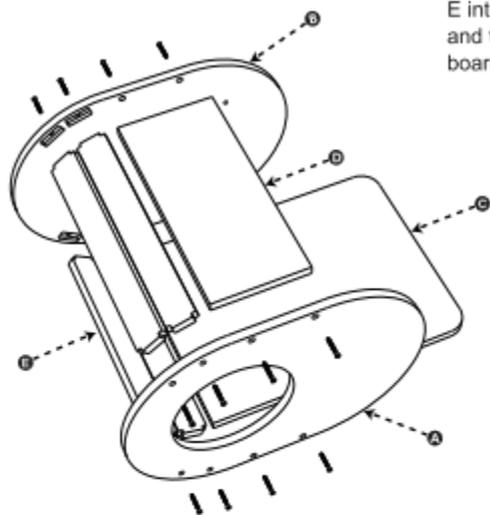


As shown in the figure, insert the wooden stick E into the wooden board A and fix it with screws, and then fix the wooden stick C and the wooden board D with screws on the wooden board A.

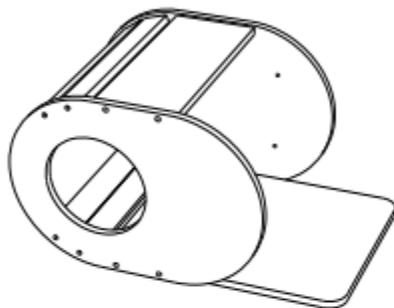

Finally, put the board B on and fix it with screws, and the individual components are installed.


STEP 2

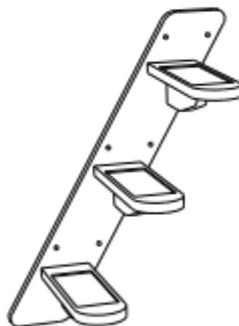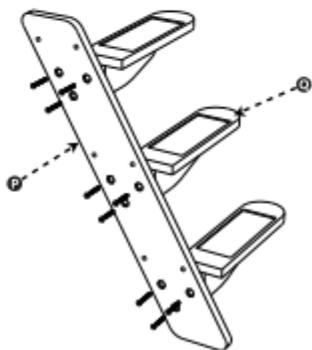


As shown, fix the plank P and part Q together with screws, and repeat this step to install another set of components.

Assembly Instructions

STEP 3

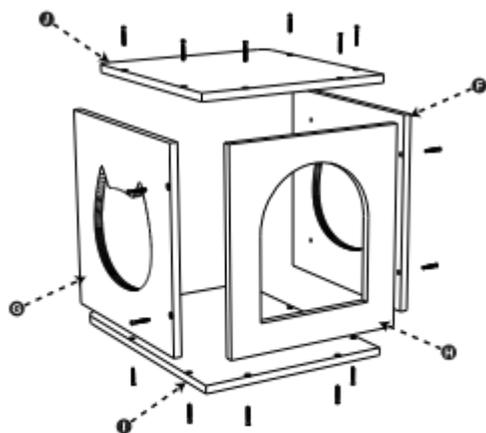


As shown in the figure, first board F, G, H are installed and fixed on board 1 with screws;

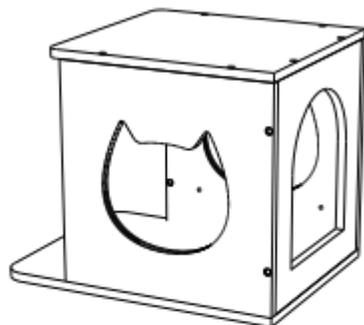


Then put the plank J on and fix it with screws, and the installation of a single component is completed.

STEP 4

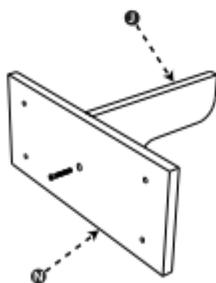


As shown in the figure, first assemble the plank J and plank N together, and then fix the plank K together with screws;

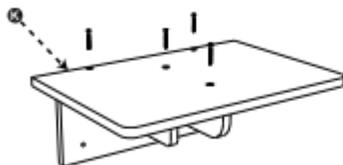

Then repeat this step to install another set of components.


Assembly Instructions

STEP 5

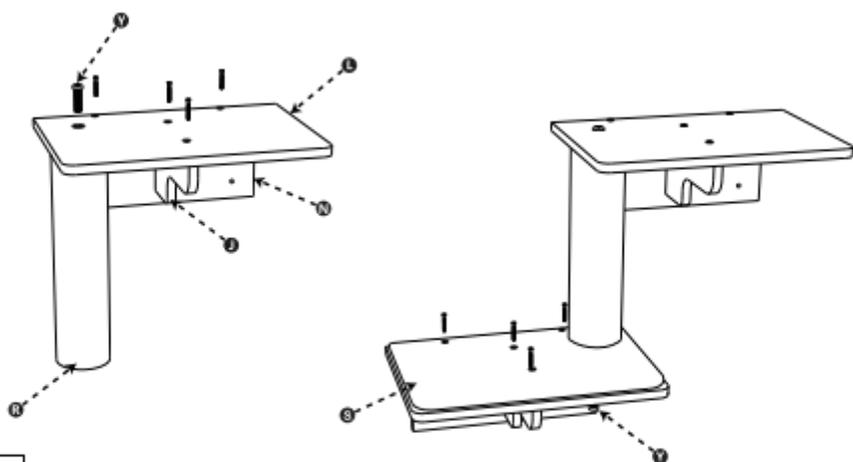

As shown in the figure, install the sisal column R and the corresponding component together with screw Y, then paste the adhesive Z on the other component, then paste the mat S, and finally fix it with screws.

STEP 6

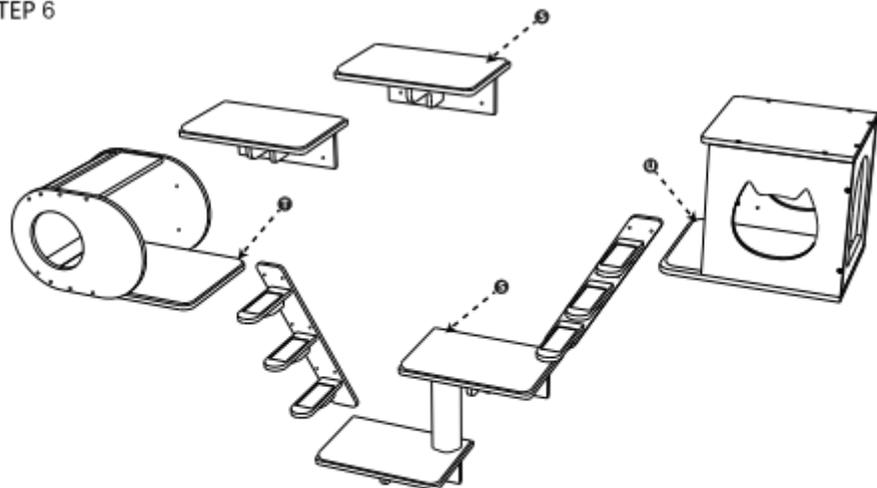

As shown in the figure, paste the corresponding mat with adhesive Z, and finally use screw X to fix it on the wall.

(The installation distance of each component should be within 30cm)

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd.Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730



E-CrossStu GmbH.

Mainzer Landstr.69, 60329 Frankfurt am Main.



YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX.

