
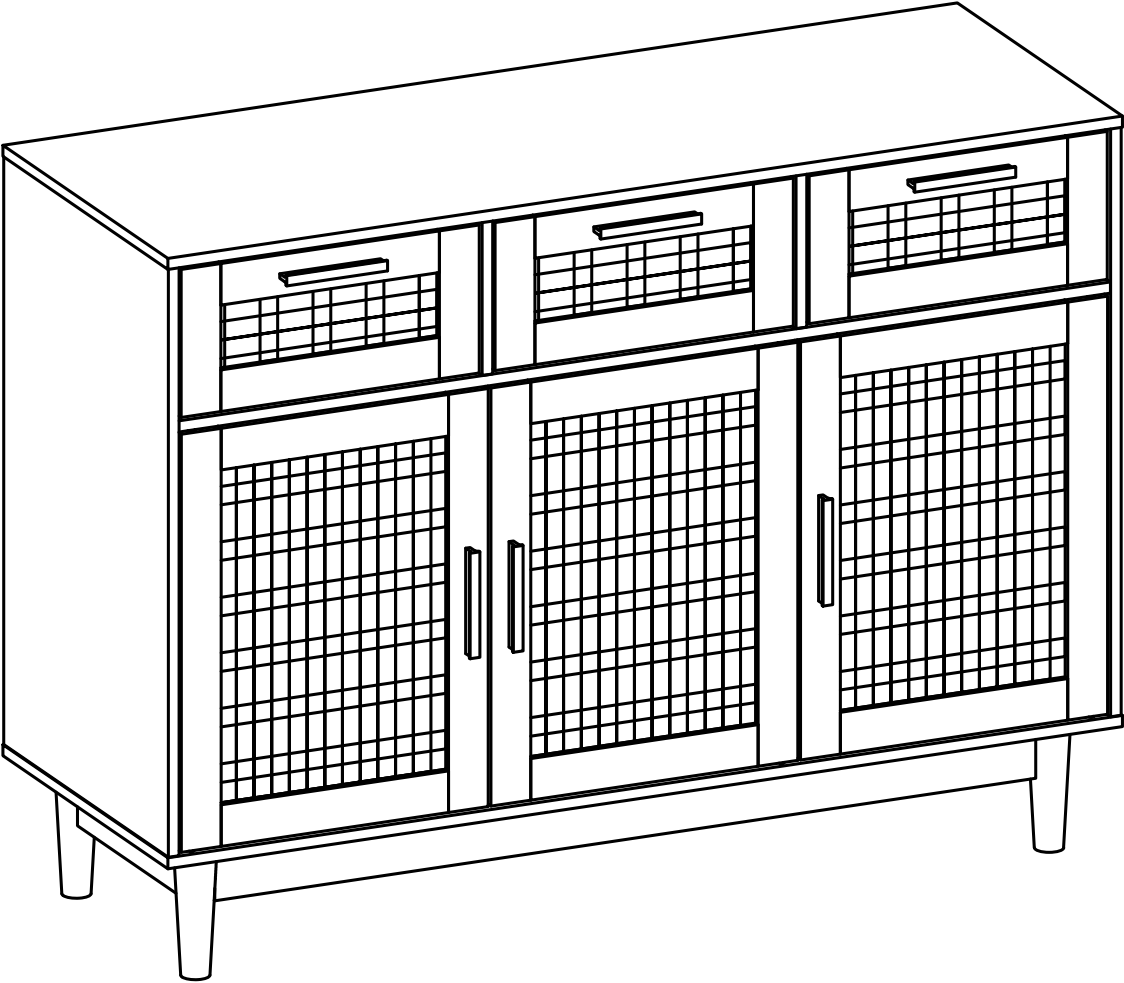
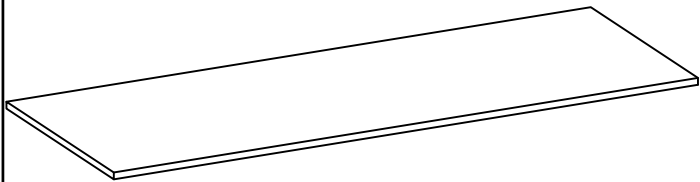
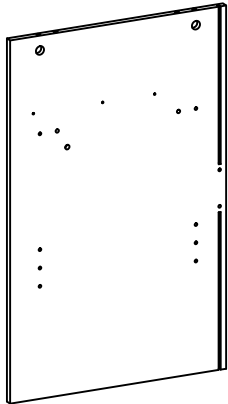
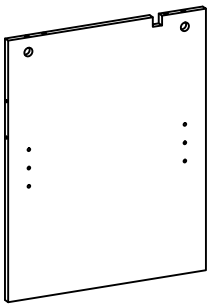
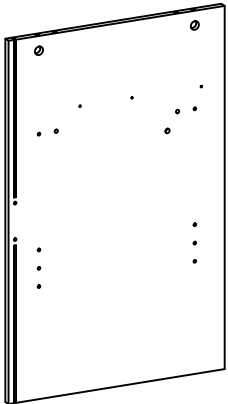
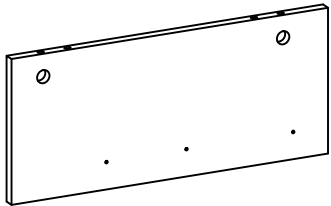


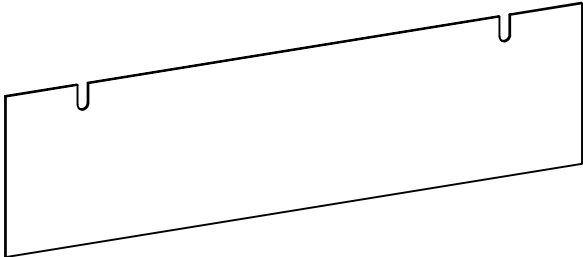
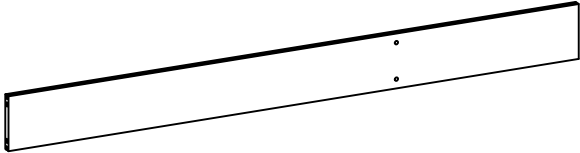
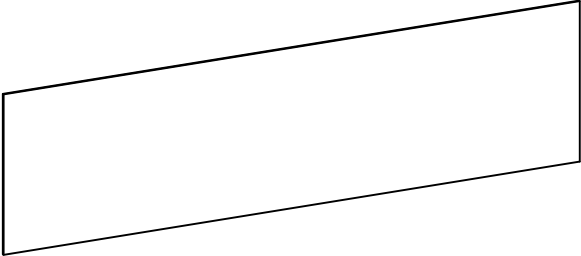

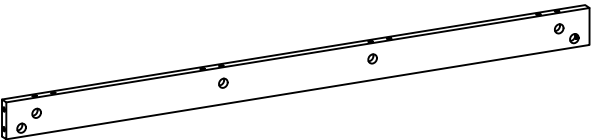
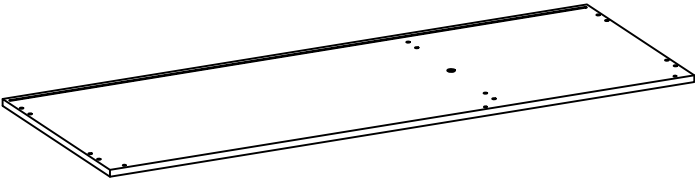


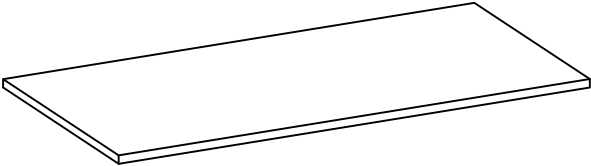








PART LIST

1  x1	2  x1
3  x1	4  x1
5  x2	6  x1
7  x1	8  x1



PART LIST

9 x1 	10 x2 
11 x2 	12 x4 
13 x1 	14 x2 
15 x1 	16 x1 


PART LIST

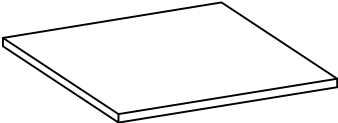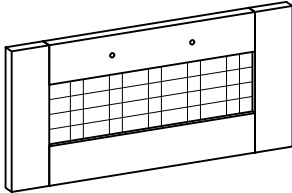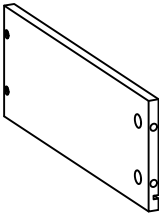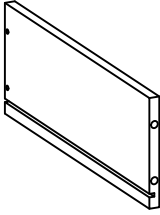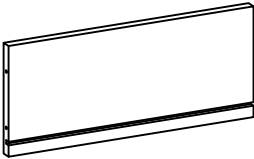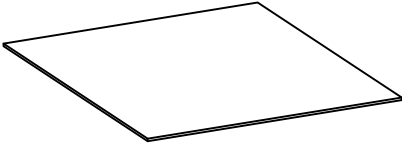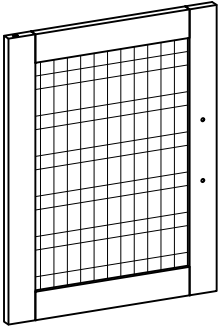17  x1	18  x3
19  x3	20  x3
21  x3	22  x3
23  x3	24  x1

ASSEMBLY INSTRUCTION














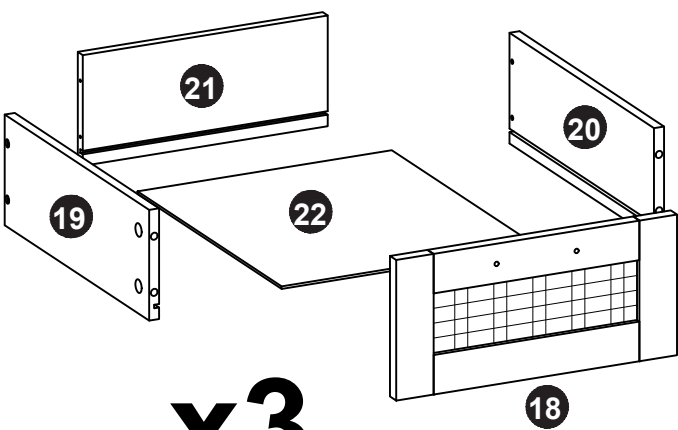
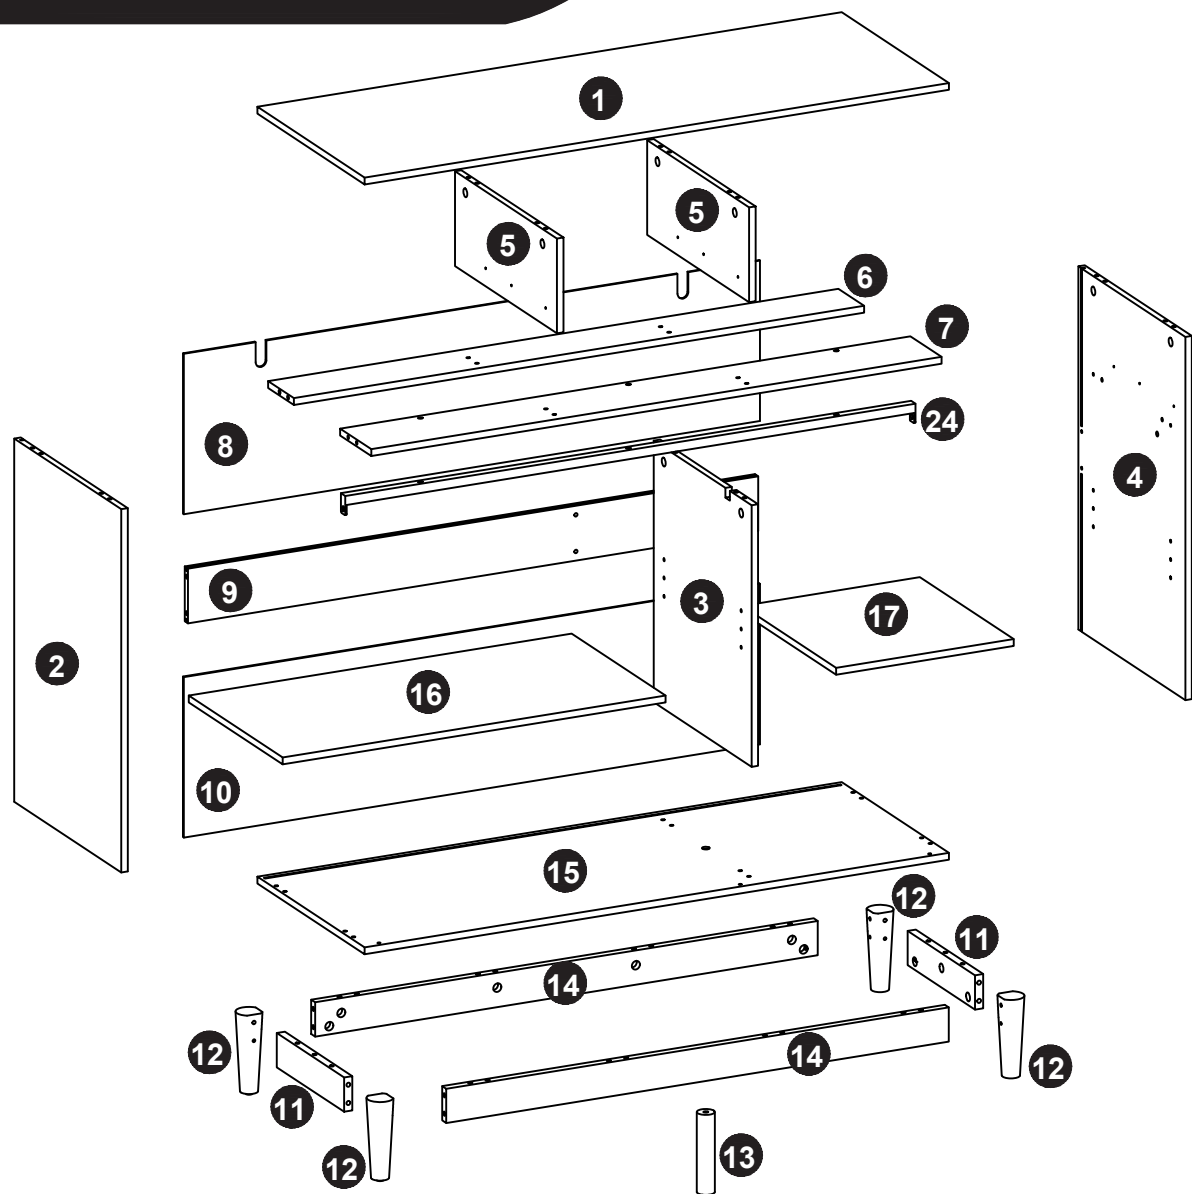


x3

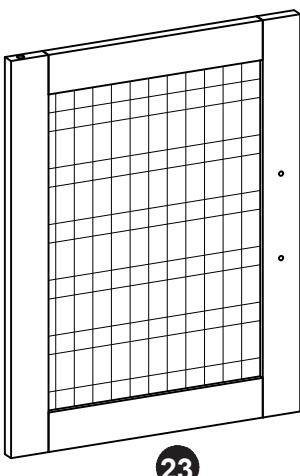



x3

PART LIST

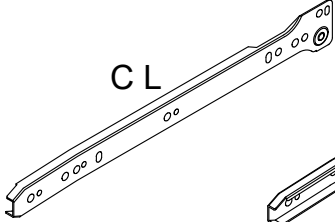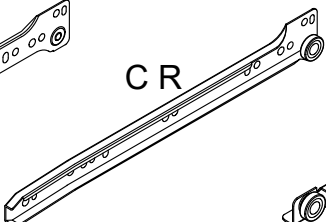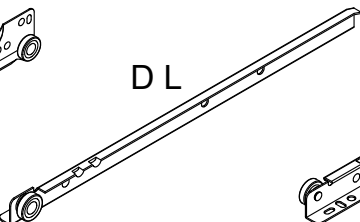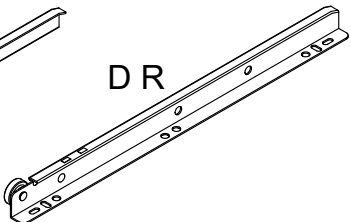
A  Ø6x33.5mm x48+4	B  Ø15x9mm x48+4	C  Ø6x30mm x44+4	D  Ø4x30mm x12+1	E  Ø3.5x12mm x36+3	F  Ø5x48mm x12+1
G  M6x25mm x4	H  M6x12mm x2	I  x6	J  M4x18mm x12+1	K  x12	L  Ø3x16mm x12
M  x48+4	N  x2	O  Ø8x40mm x2	P  Ø4x38mm x2	Q  Ø4x12mm x2	R  x1
S  x8+1	T  x3	U  x6	V  x3	W  Ø3.5x12mm x6+1	X  x6
Y CLCRDLDR x3 Note: The guide rails are stamped CL/CR/DL/DR.					

ASSEMBLY INSTRUCTION

1

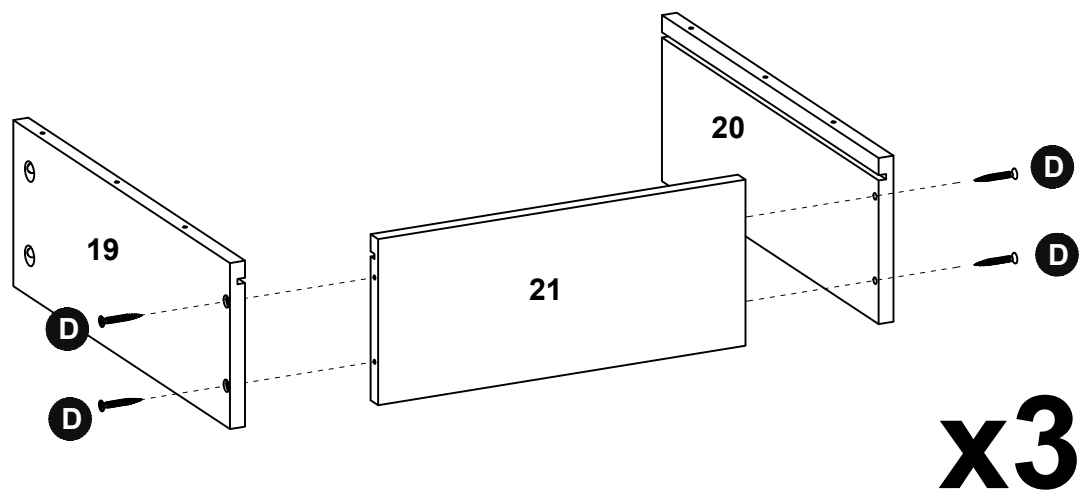


2

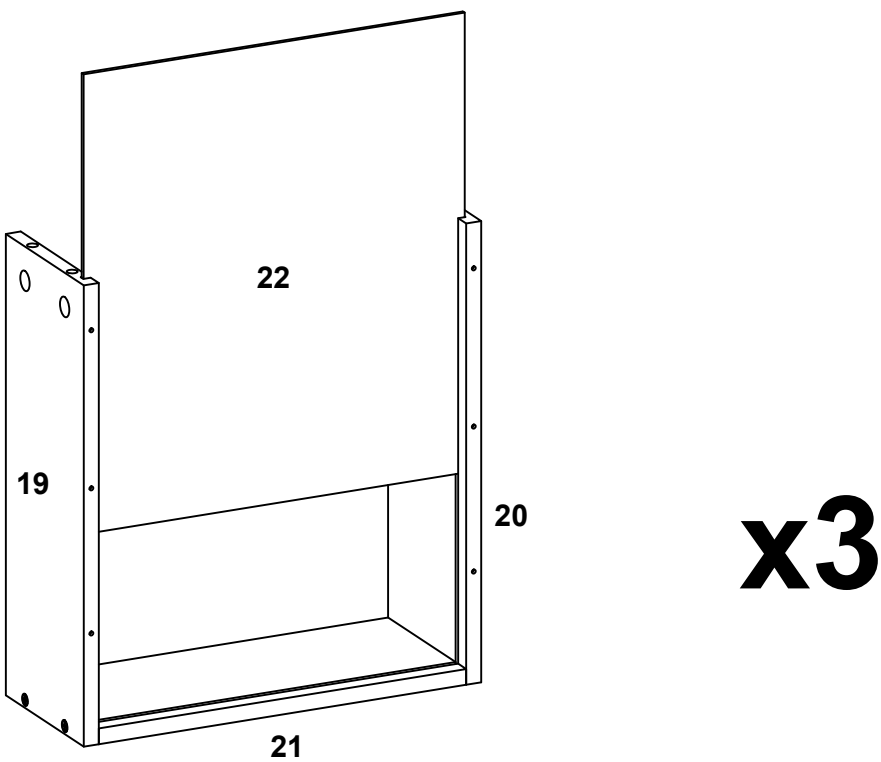

ASSEMBLY INSTRUCTION

3

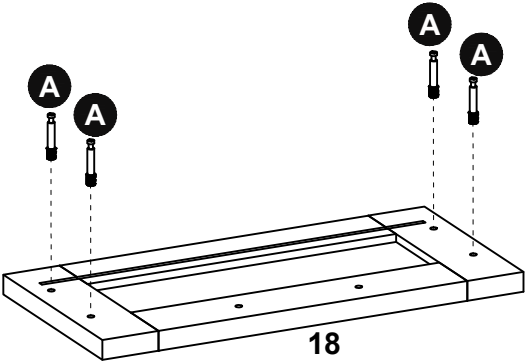


x3

A



x12

4

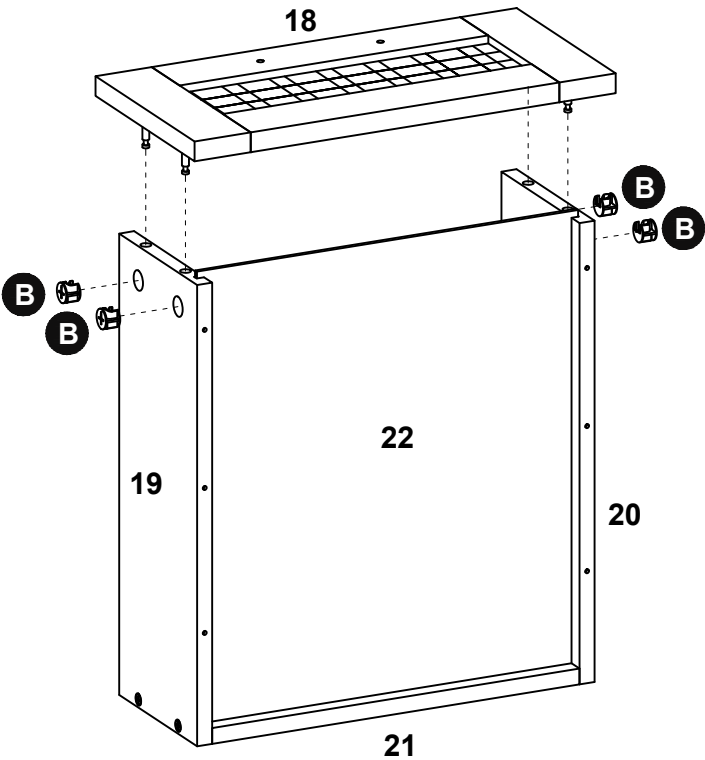

x3



B





x12

ASSEMBLY INSTRUCTION

5

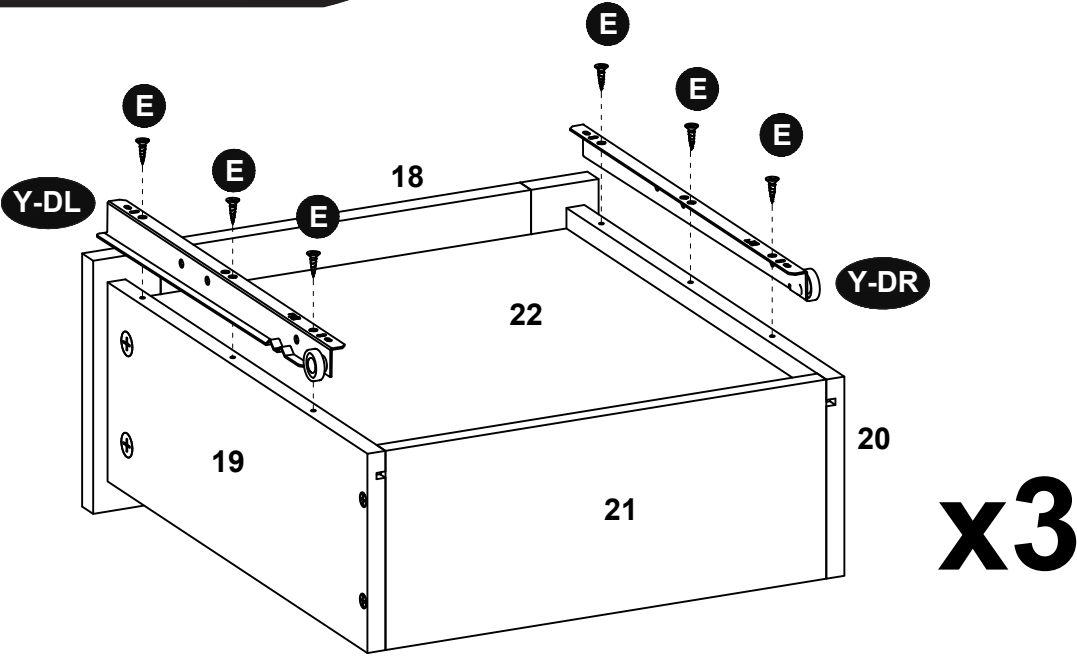


6

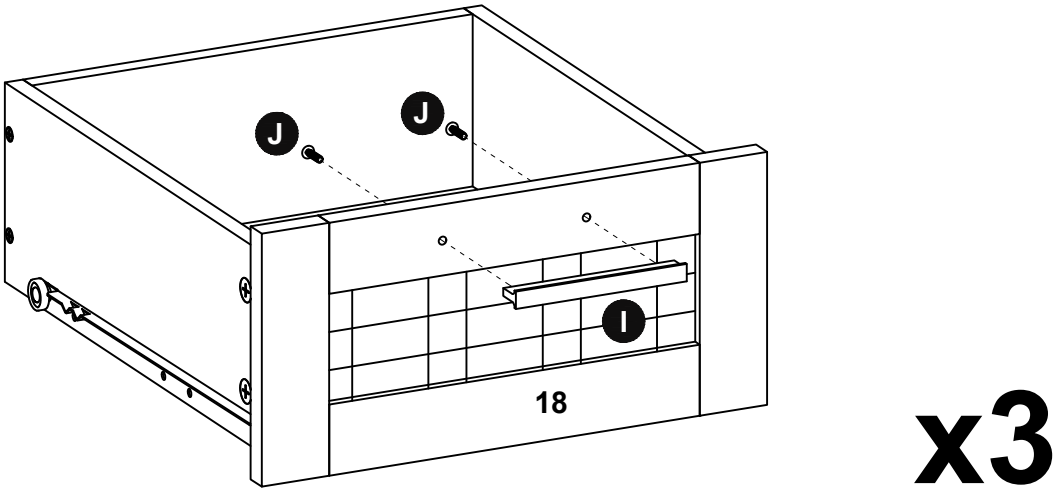


ASSEMBLY INSTRUCTION

7

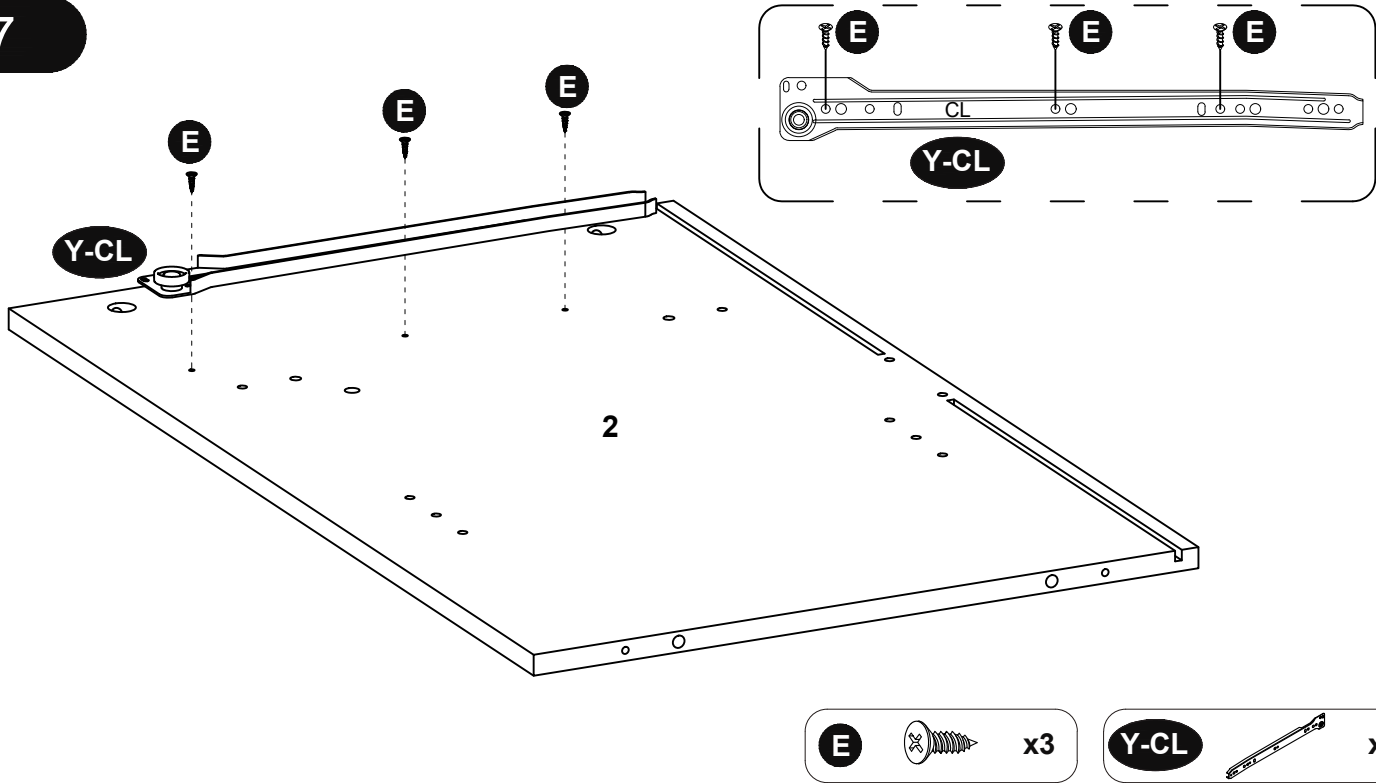


8

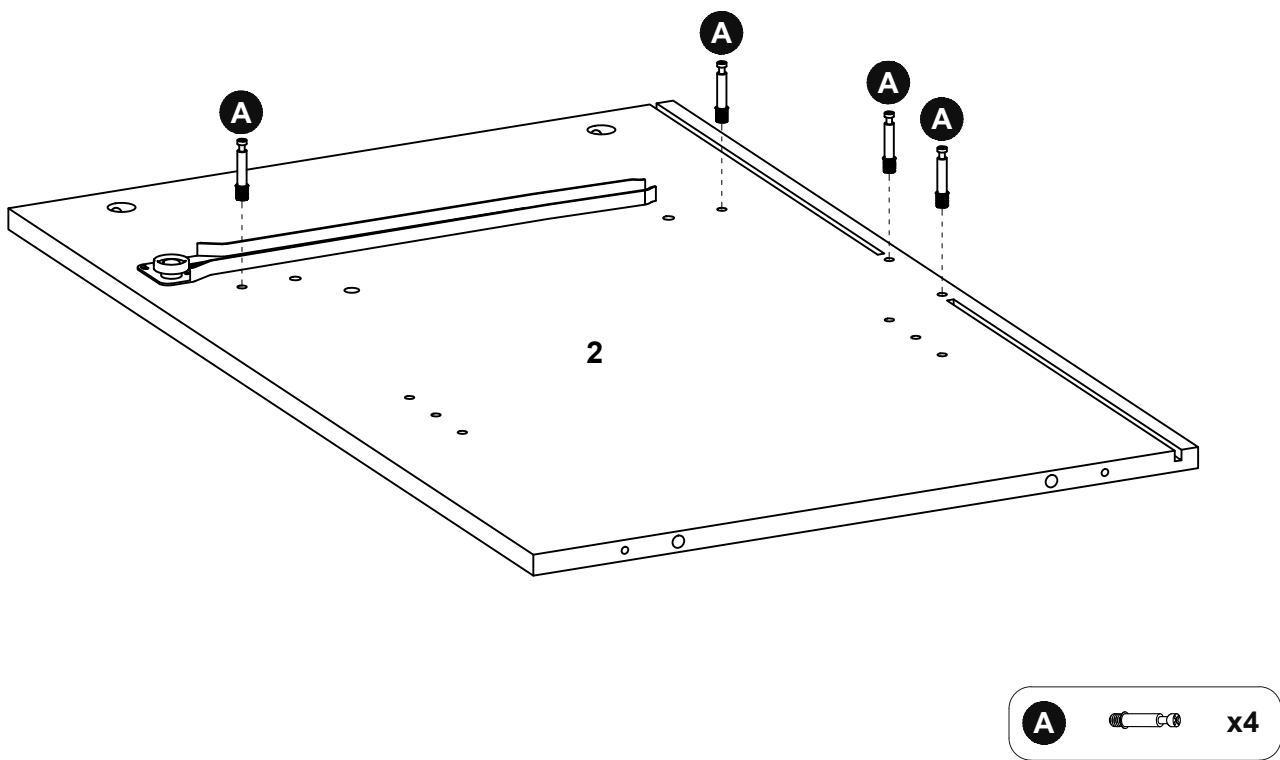


ASSEMBLY INSTRUCTION

9


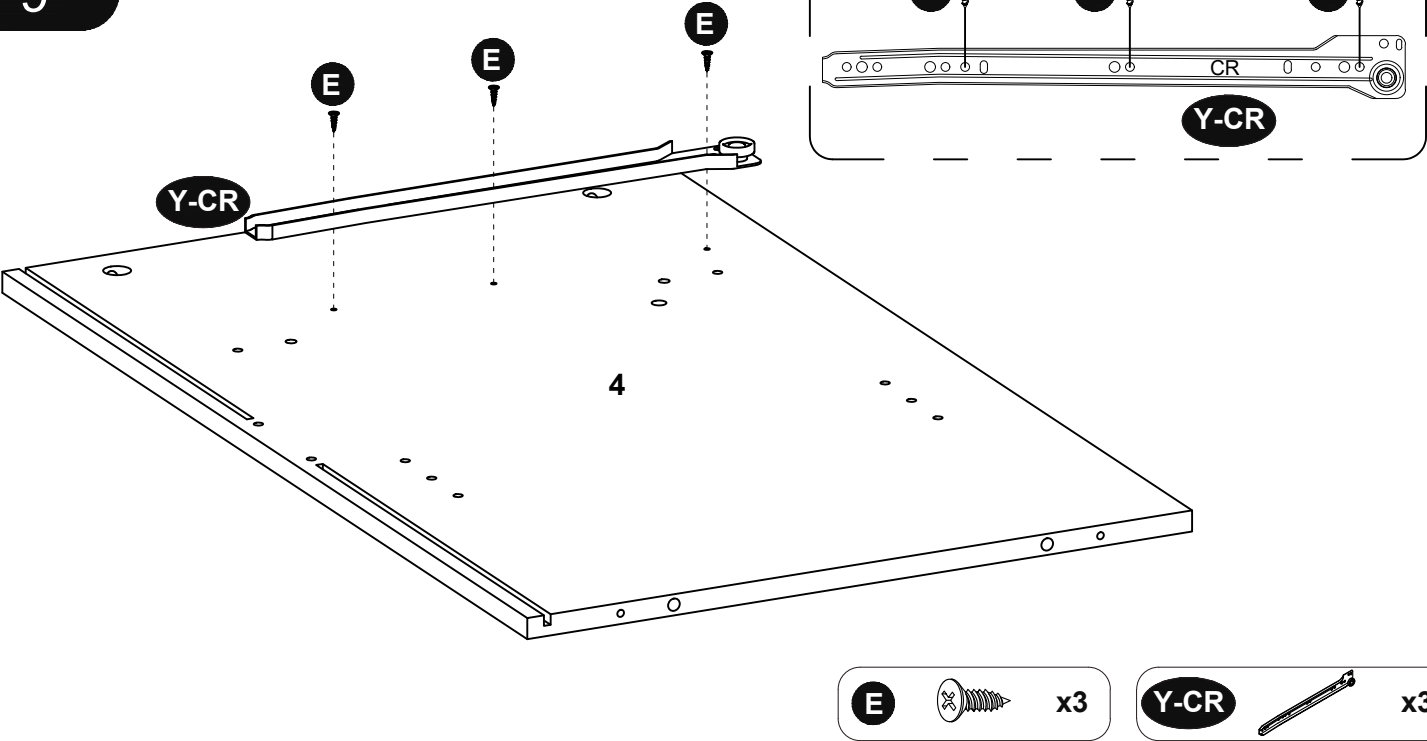


10

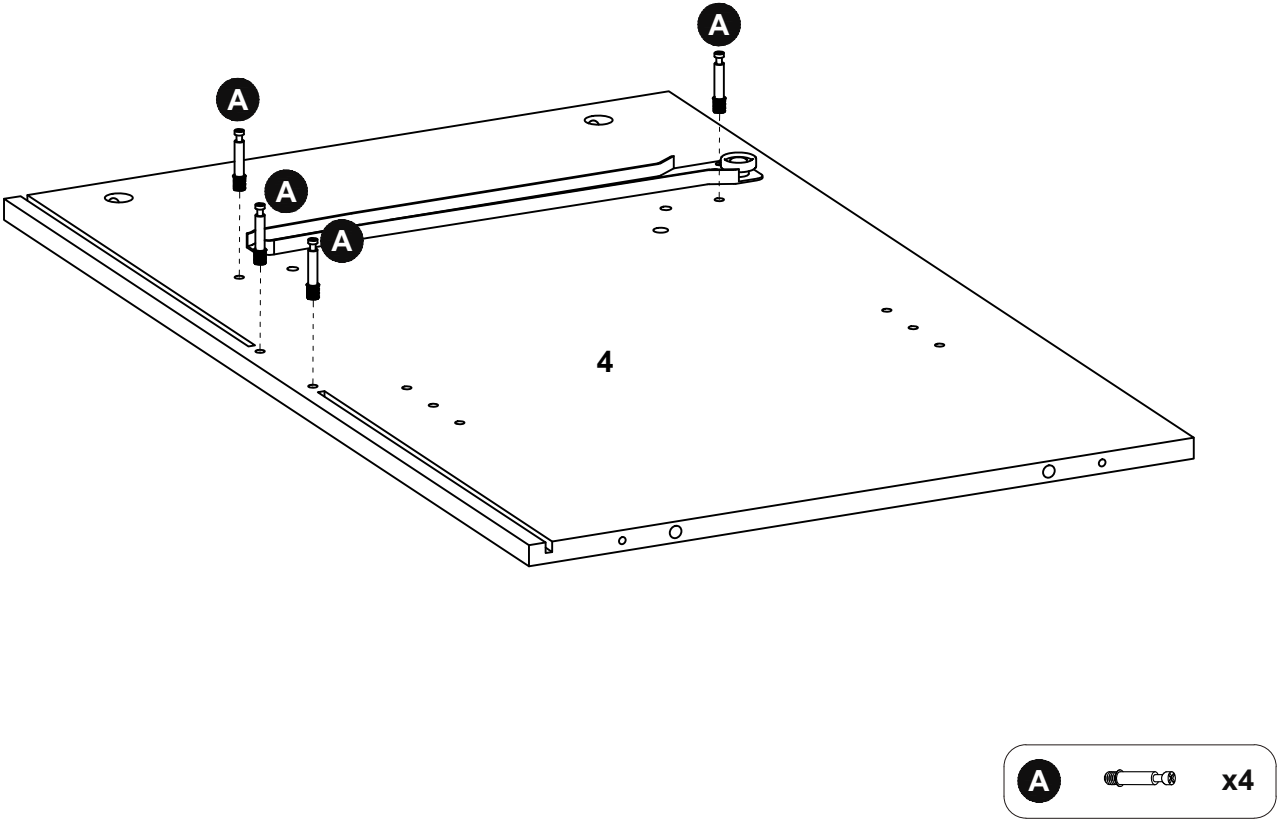


ASSEMBLY INSTRUCTION

11

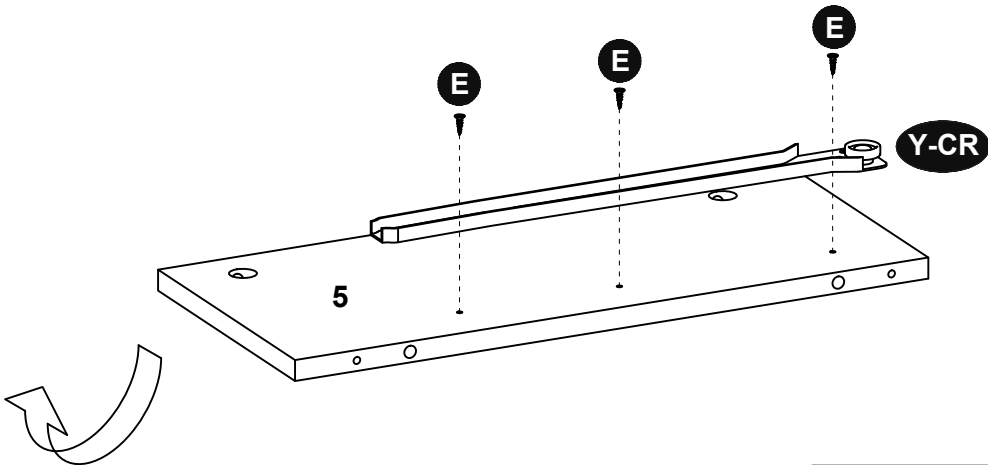
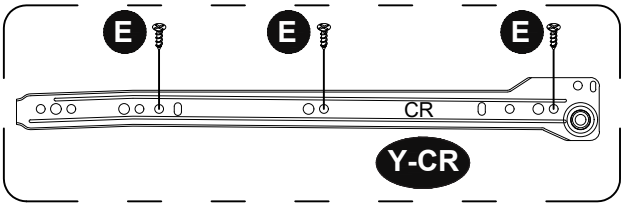


x2



180°



12

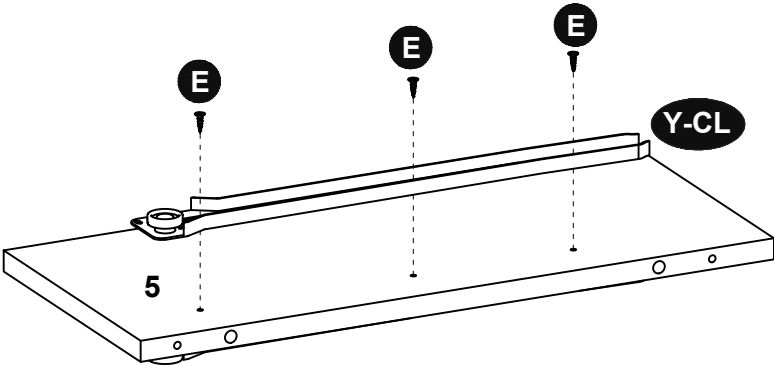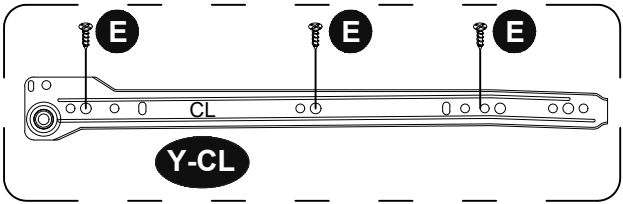


x2




ASSEMBLY INSTRUCTION

13

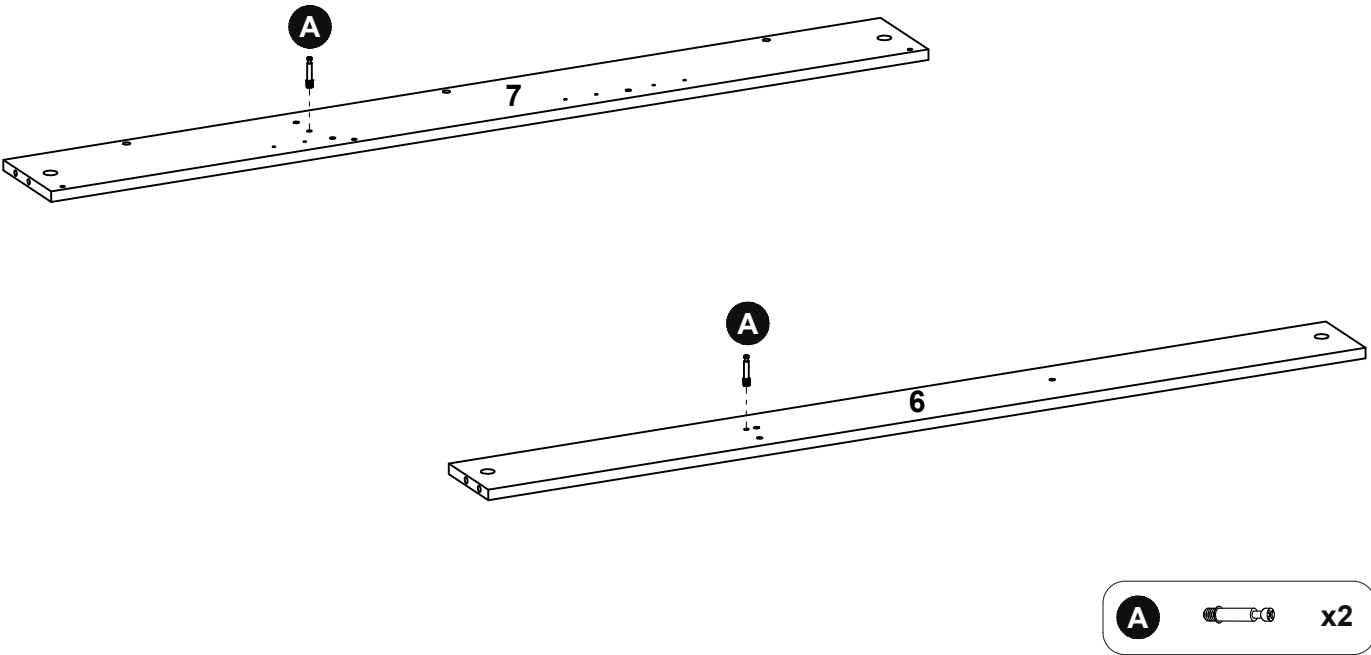


14

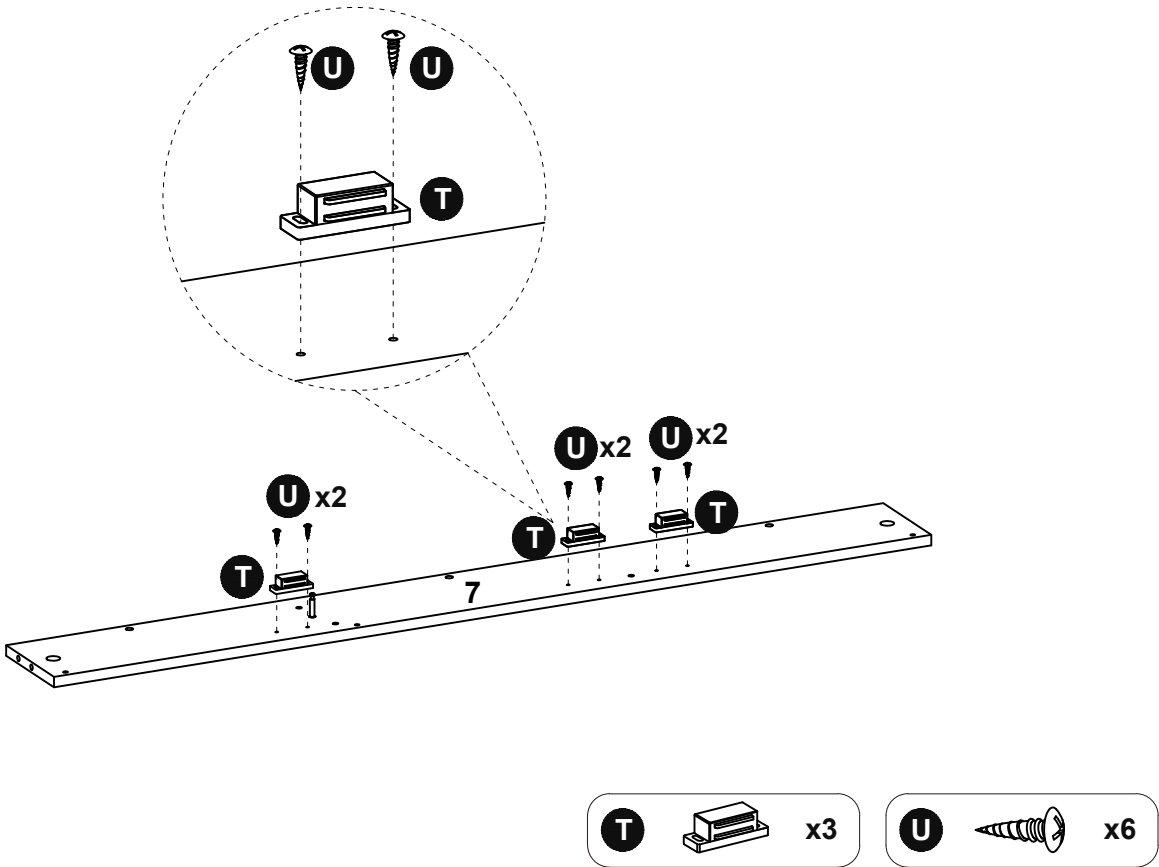


ASSEMBLY INSTRUCTION

15

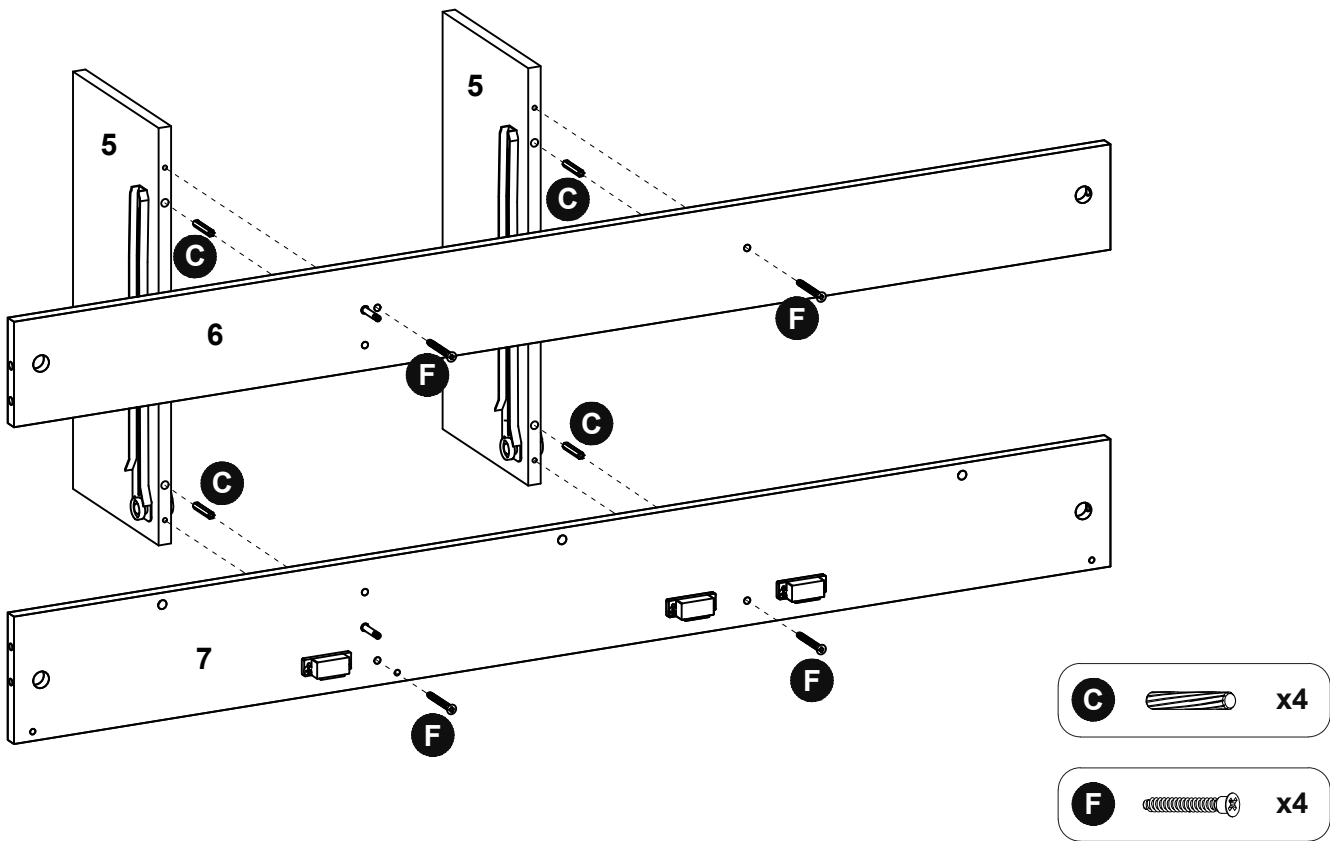


16

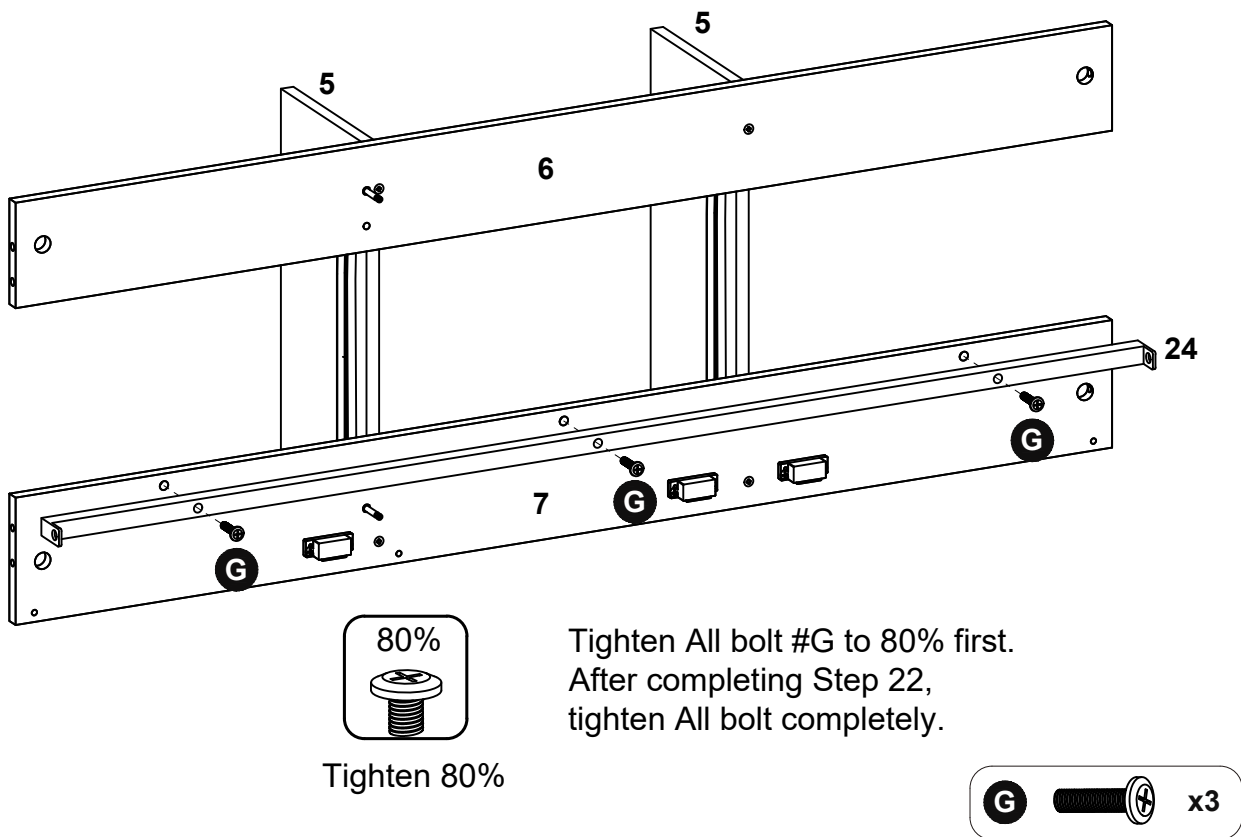


ASSEMBLY INSTRUCTION

17

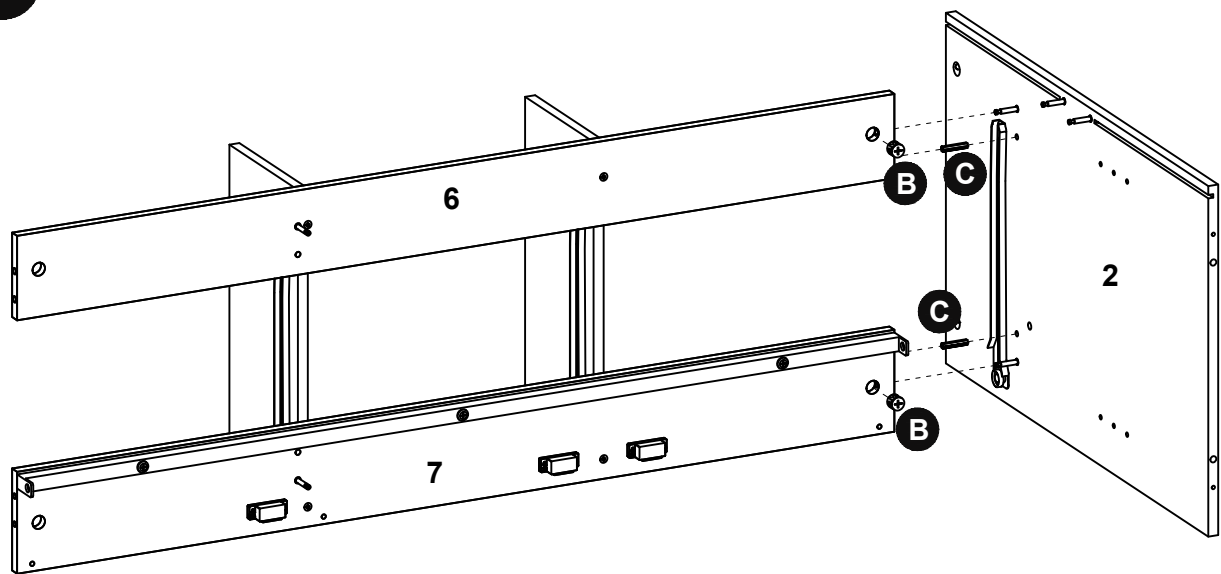


18

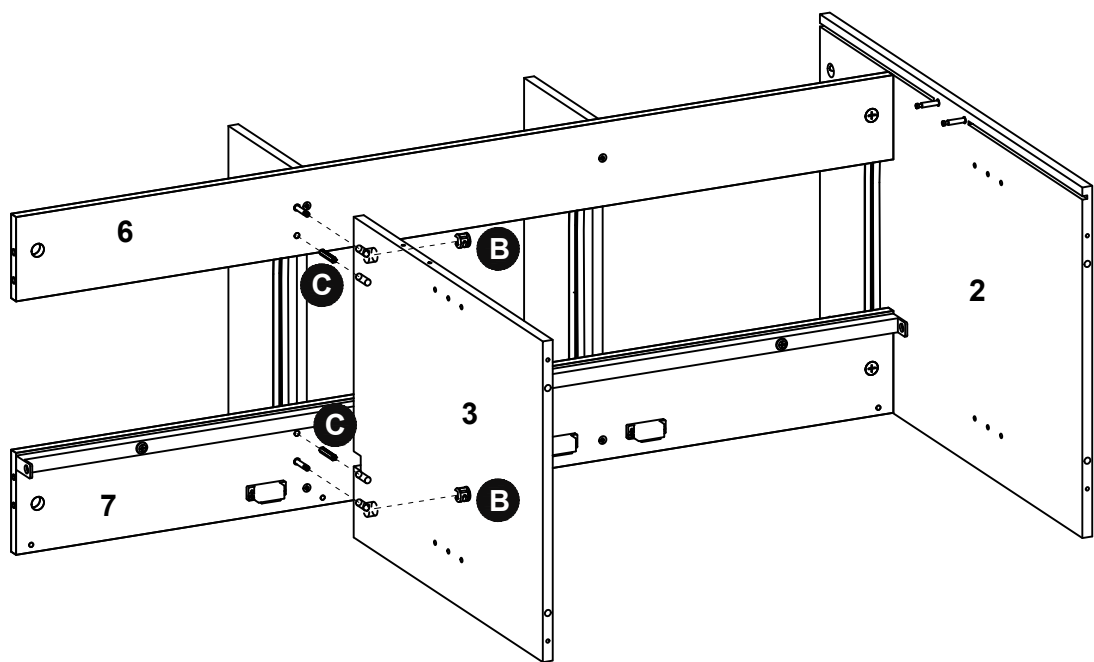


ASSEMBLY INSTRUCTION

19

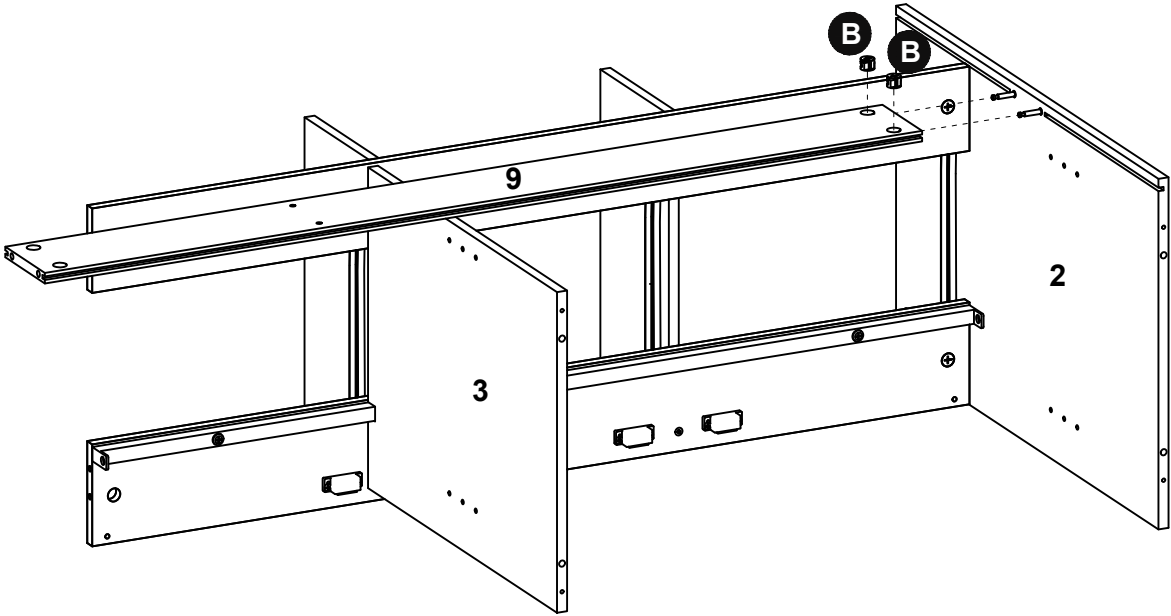

B  x2


20

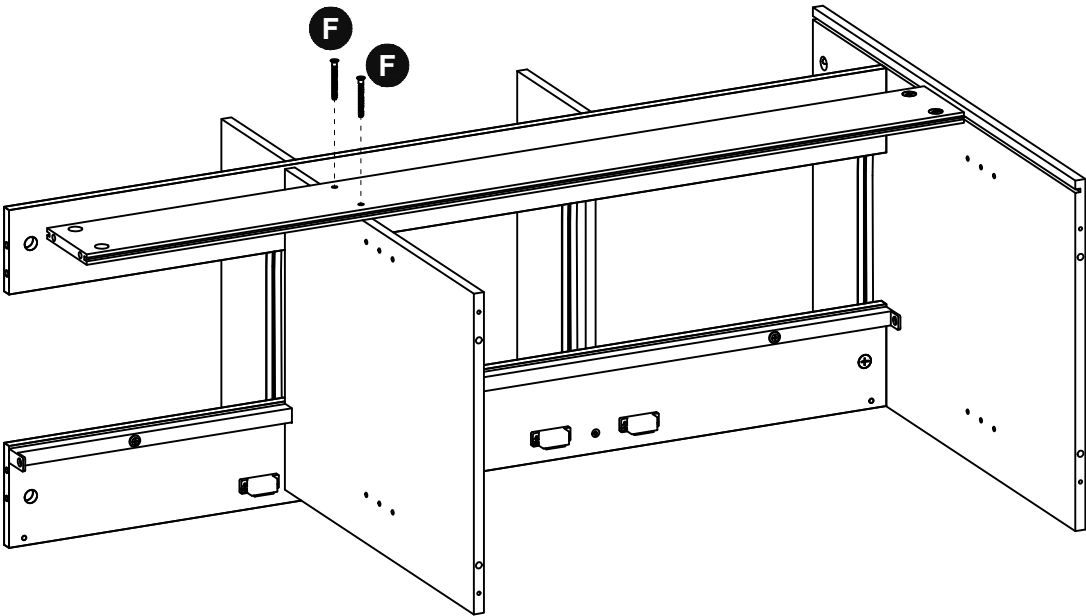

F  x2

ASSEMBLY INSTRUCTION


21

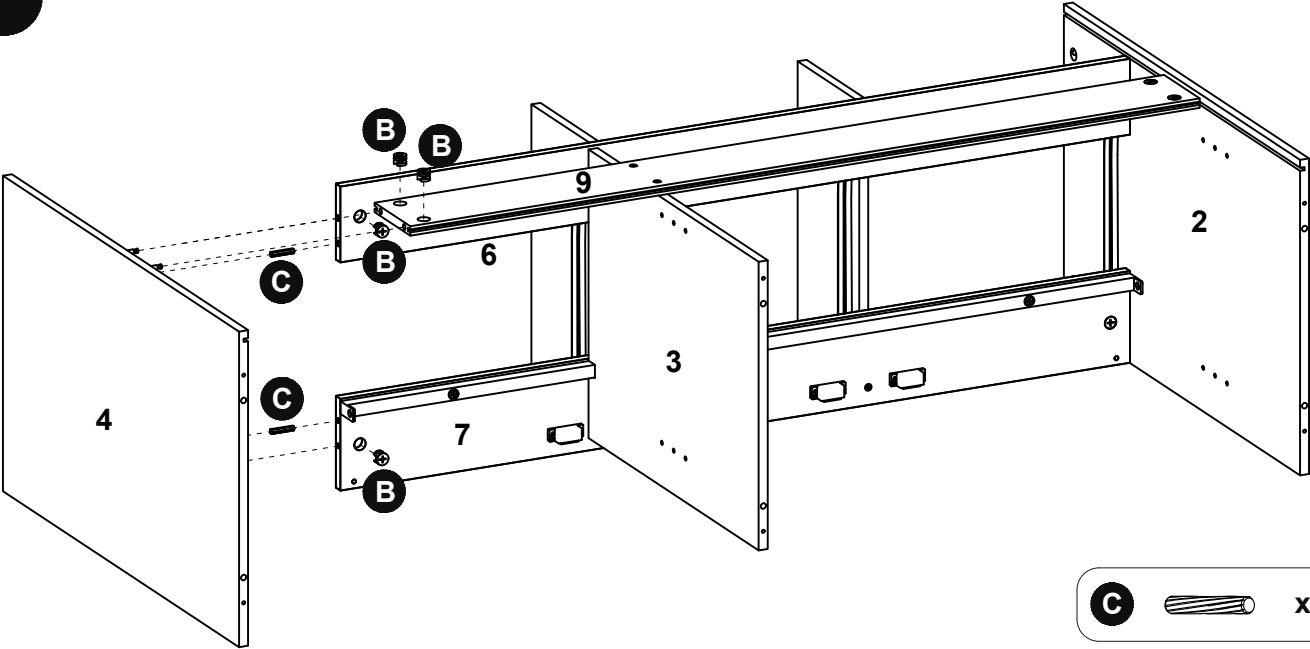

C  x2

B  x4

22

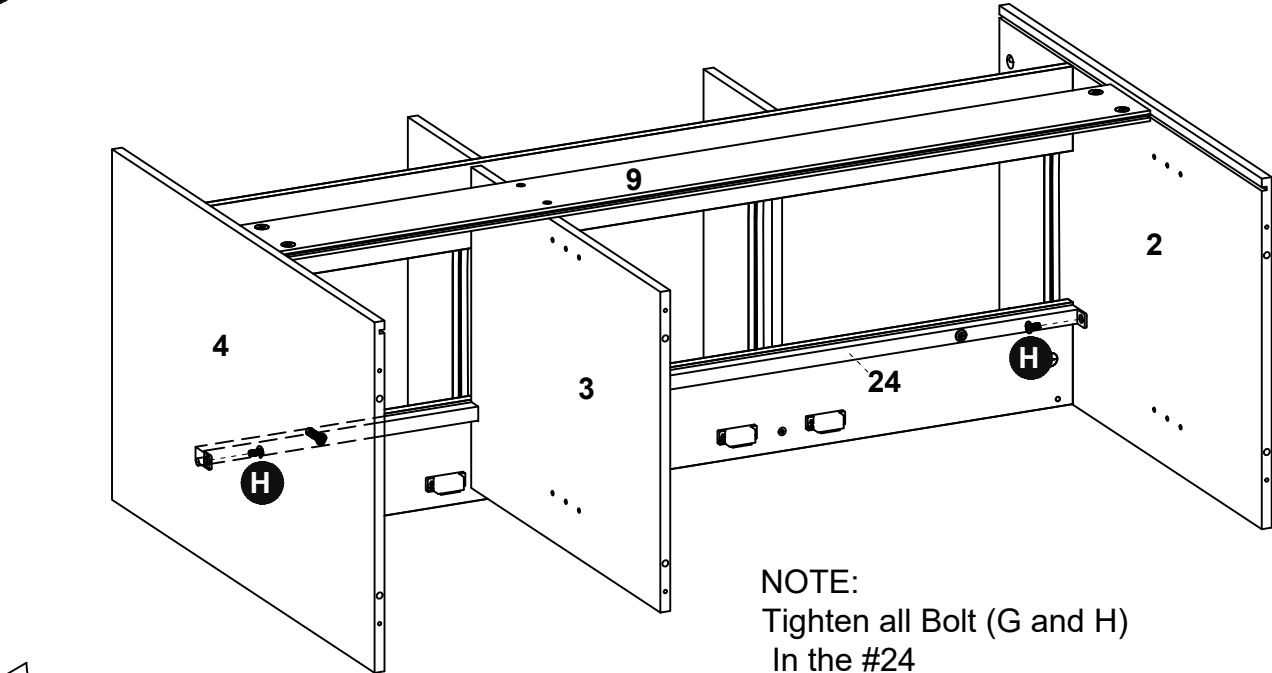


NOTE:
Tighten all Bolt (G and H)
In the #24


H  x2

ASSEMBLY INSTRUCTION

21

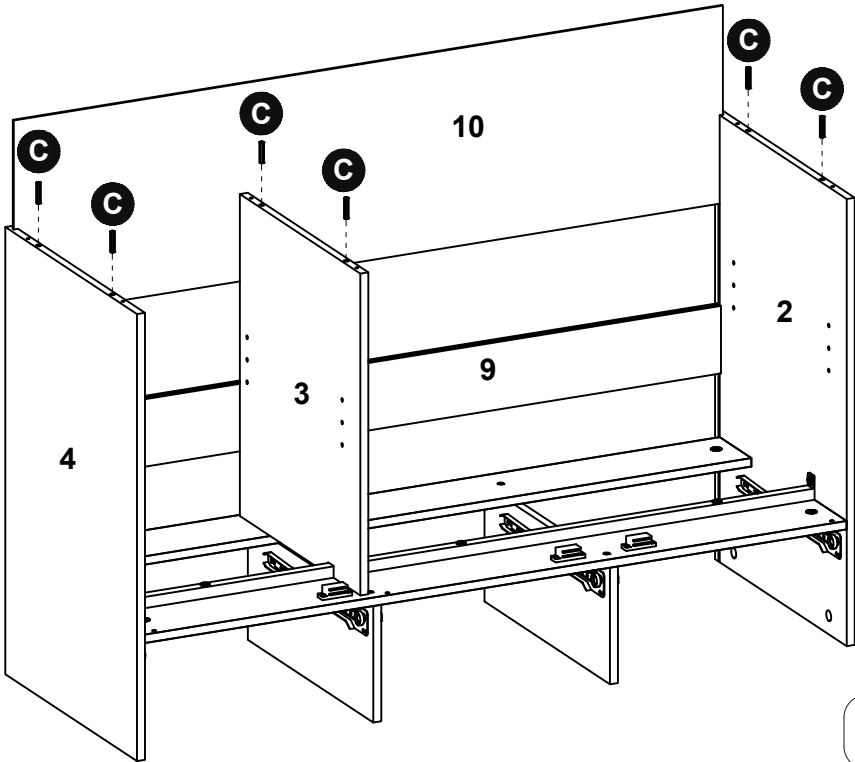


22

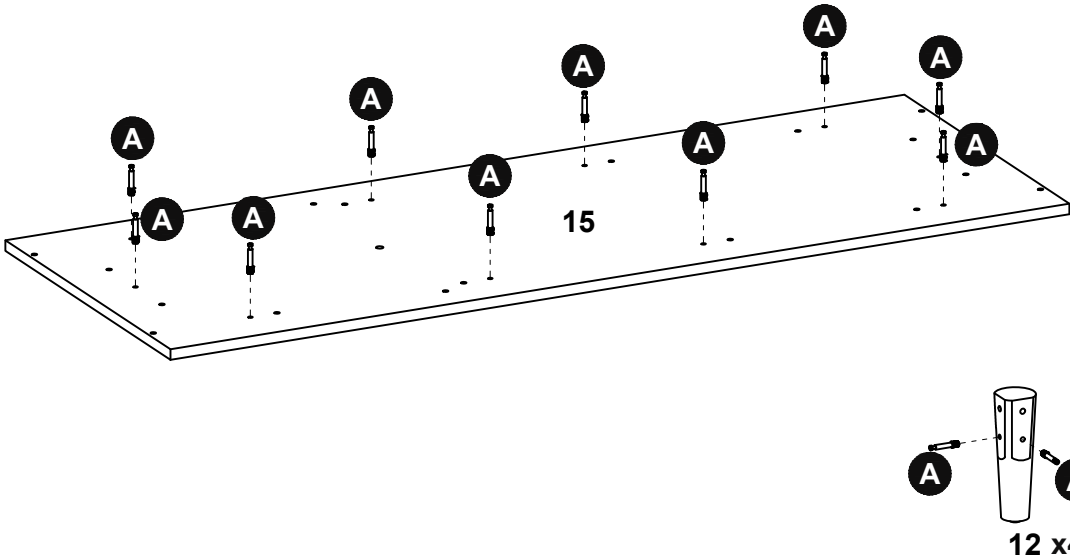


A x18

ASSEMBLY INSTRUCTION

23

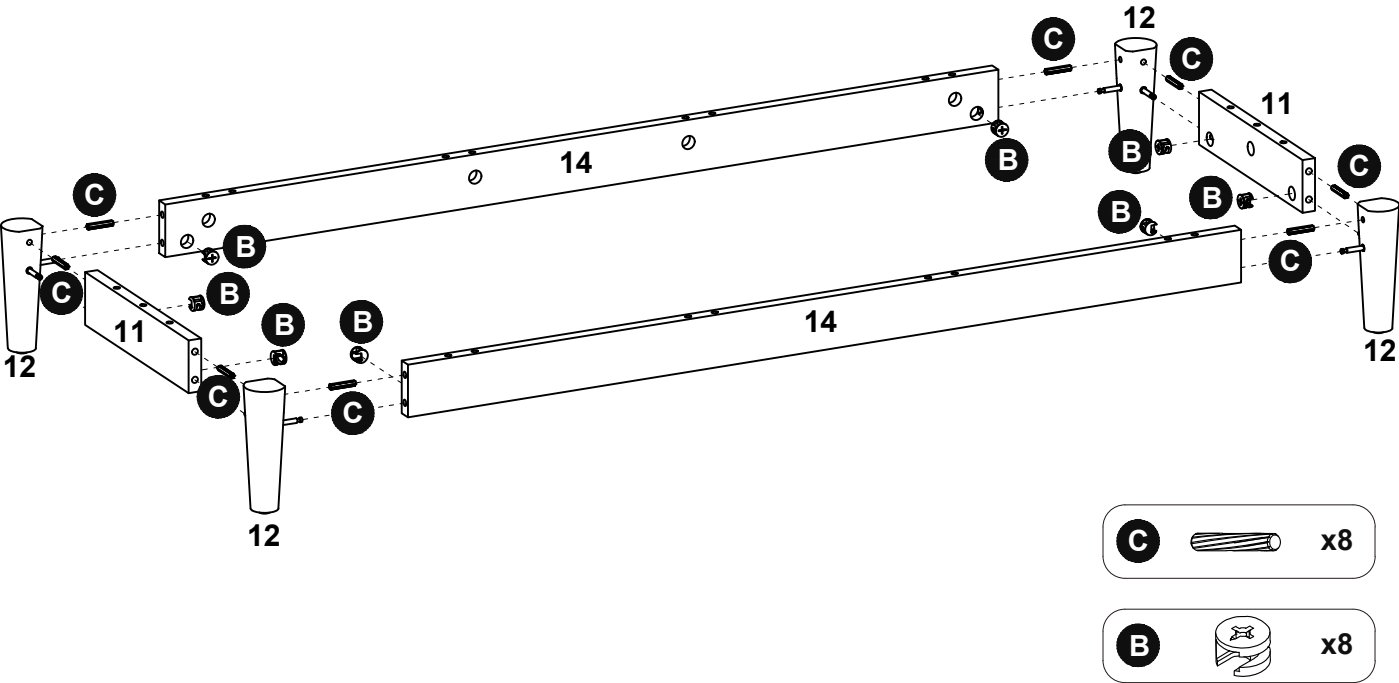


24

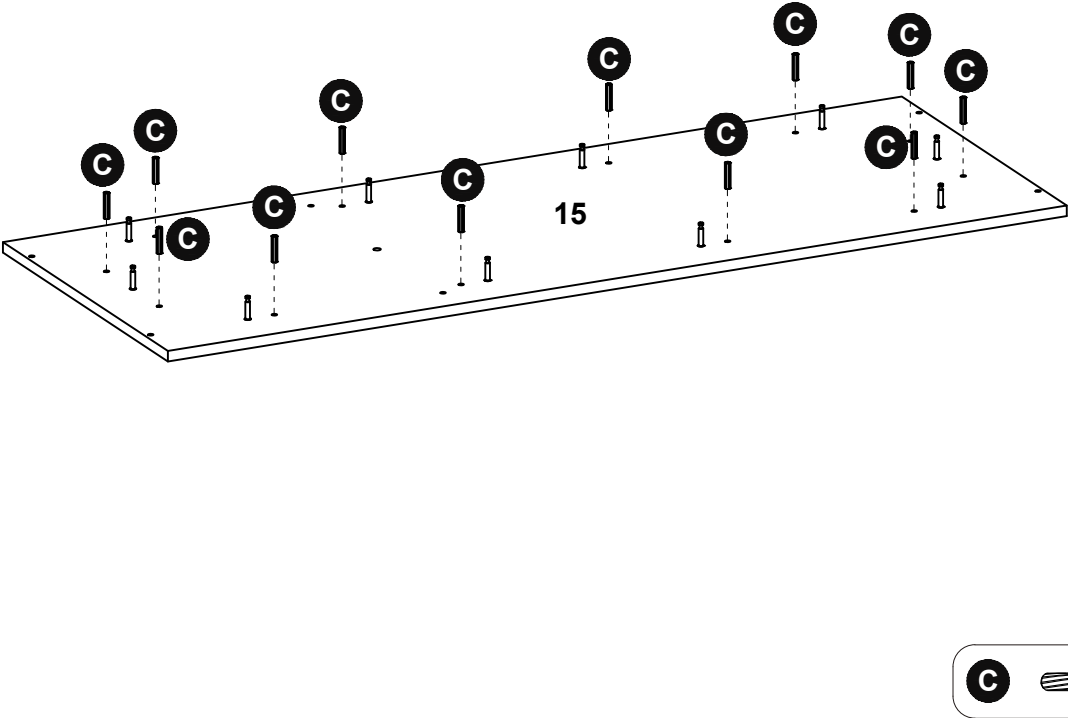


ASSEMBLY INSTRUCTION

25

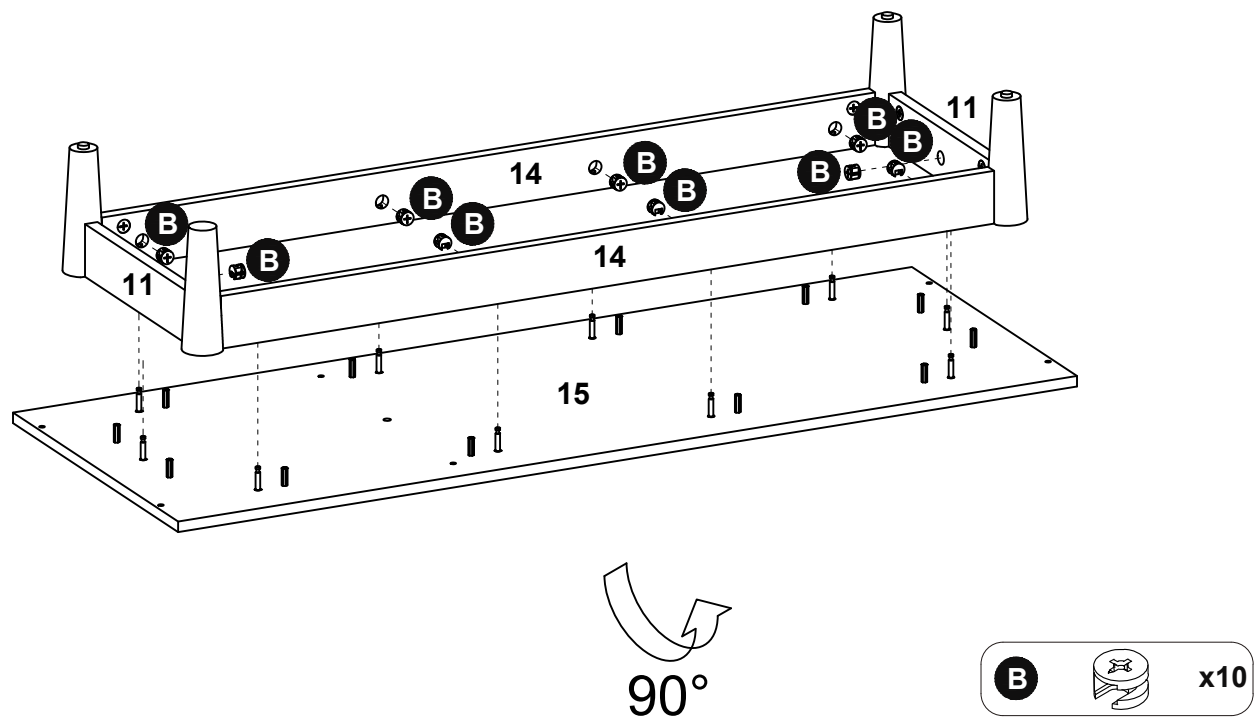


26

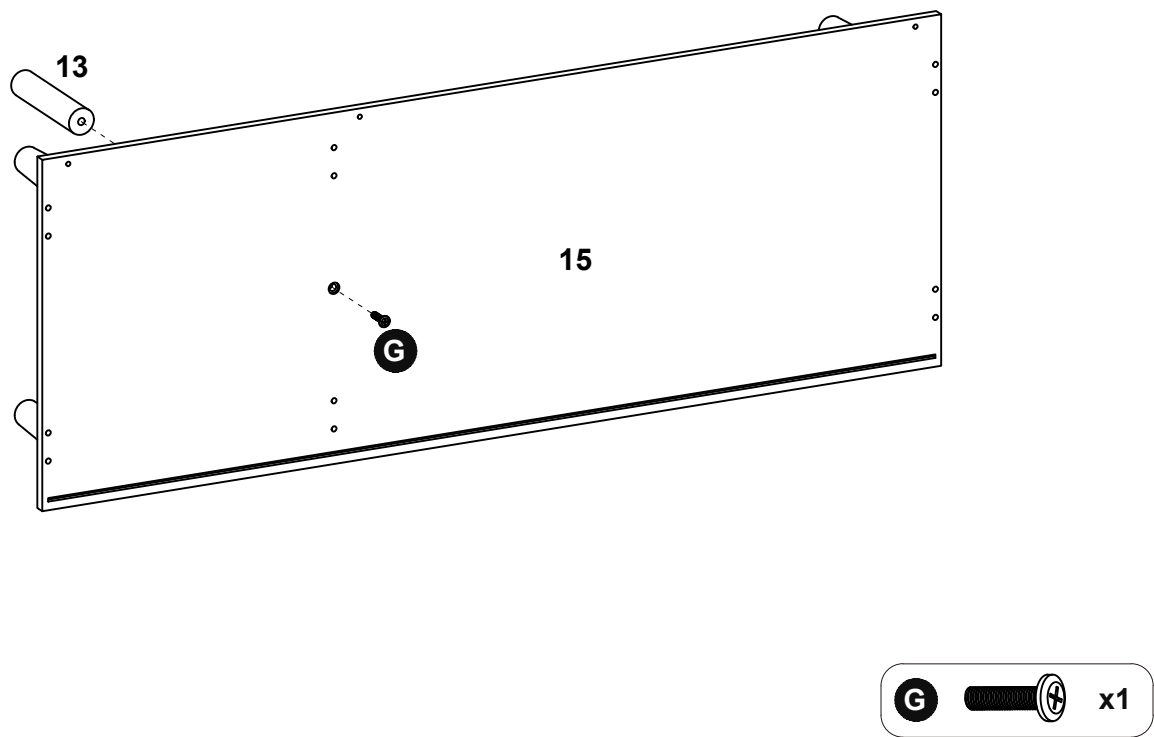


ASSEMBLY INSTRUCTION

27

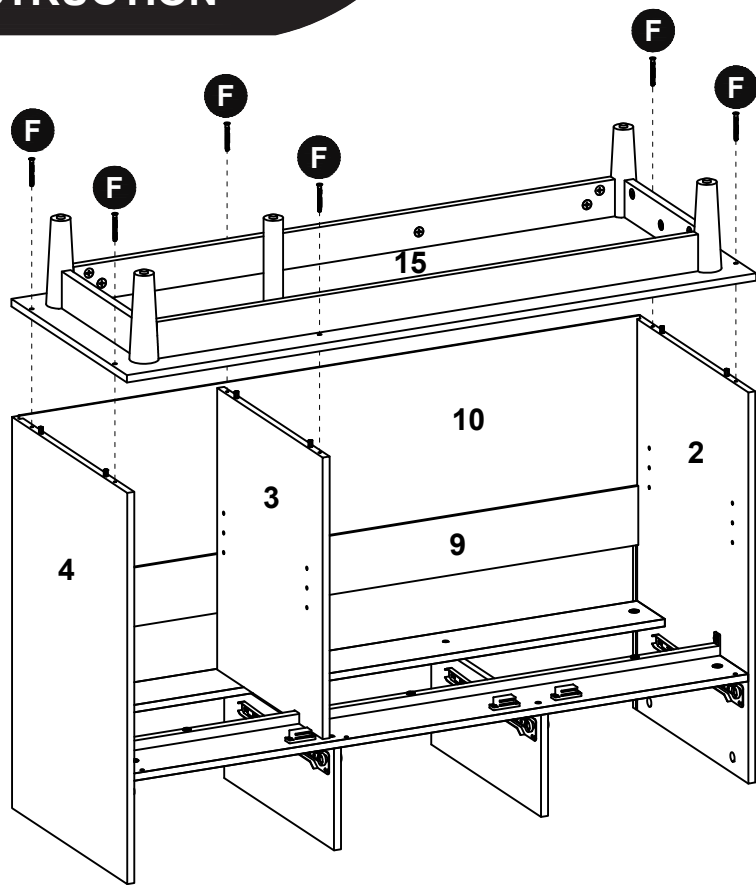

F  x6


28

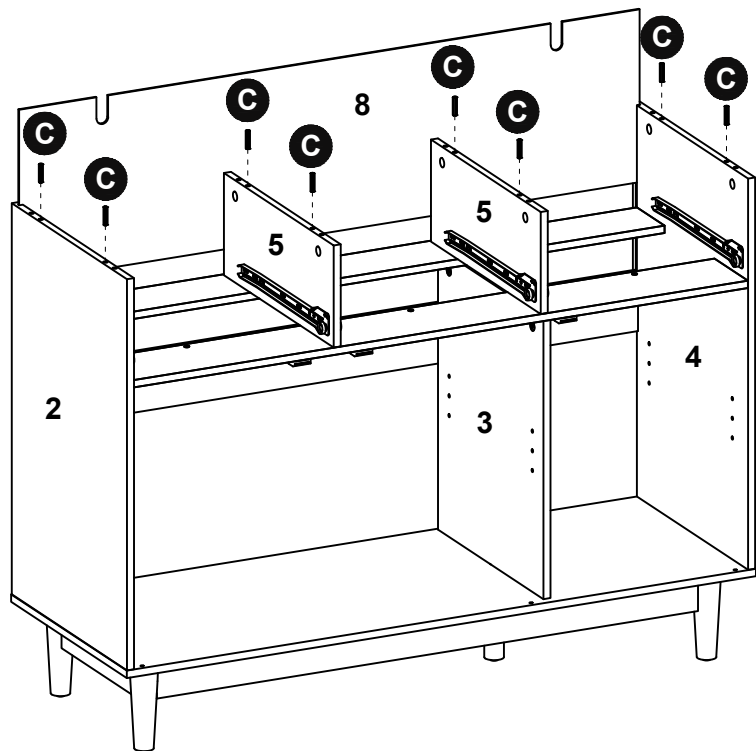

C  x8

ASSEMBLY INSTRUCTION

29

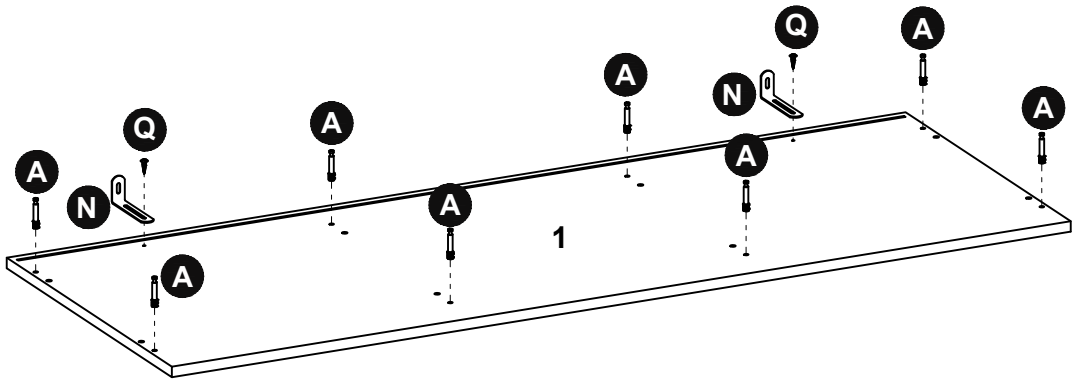


A  x8

N  x2

Q  x2





30

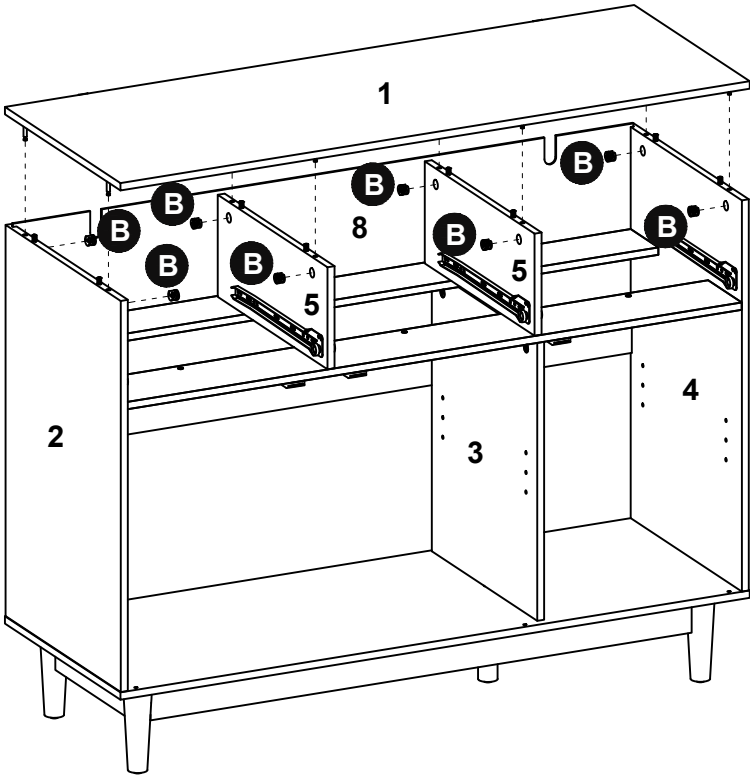


B  x8

ASSEMBLY INSTRUCTION



31

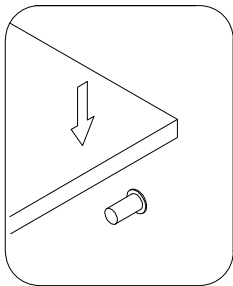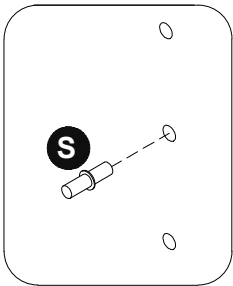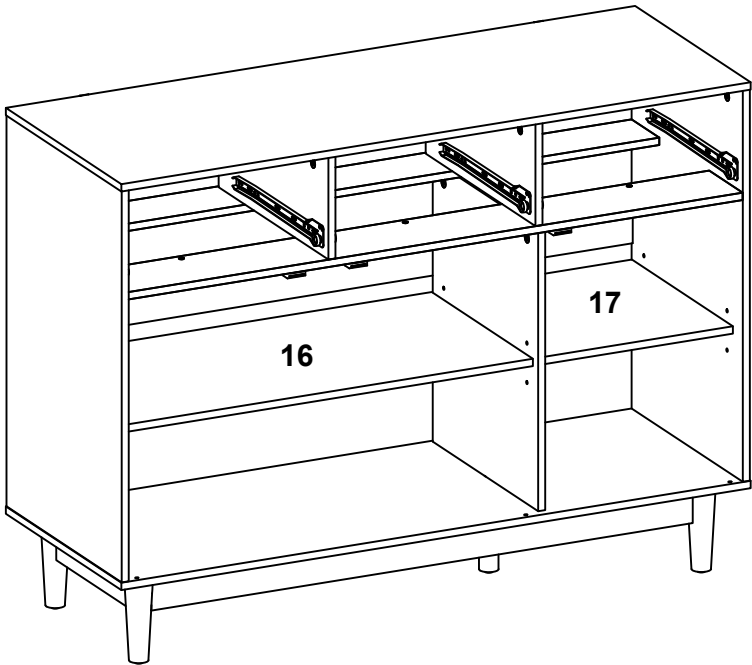

32


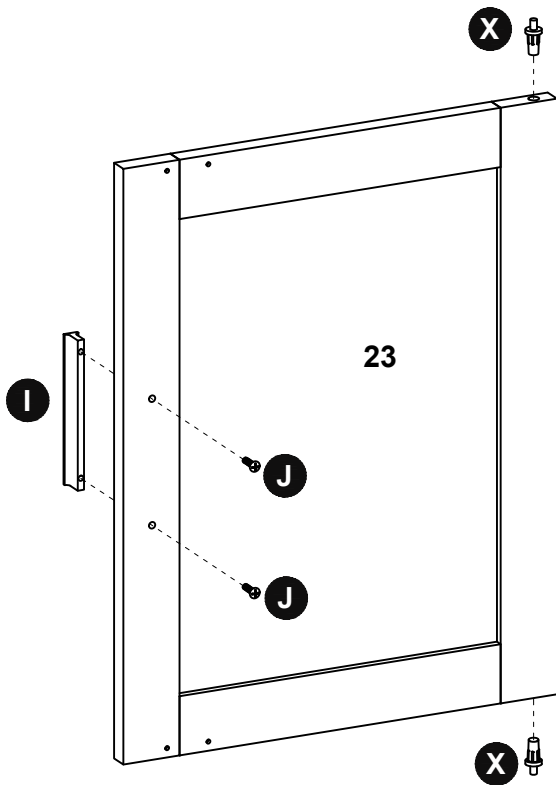


x3




ASSEMBLY INSTRUCTION


33

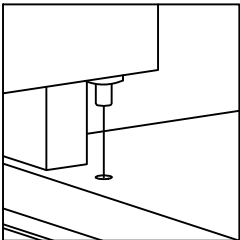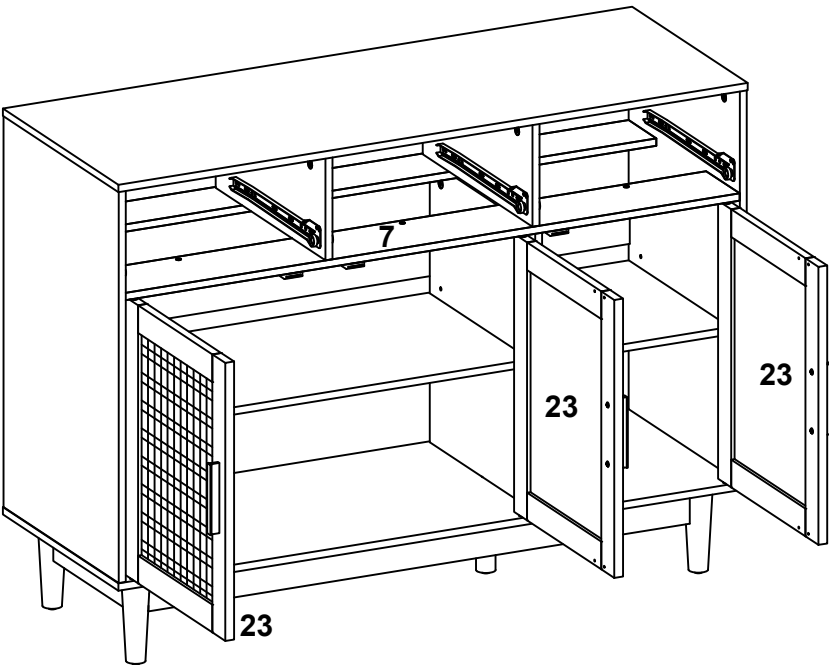





STEP1: Insert the lower pivot pin #X into the hole.


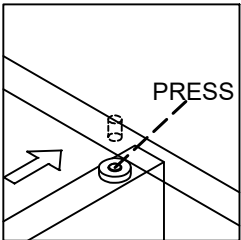




STEP2: Press and hold upper pivot pin #X, push the door under board #7, then slide the pin into the hole.

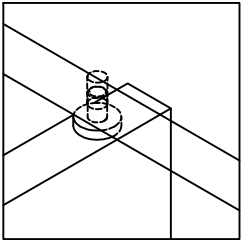


34

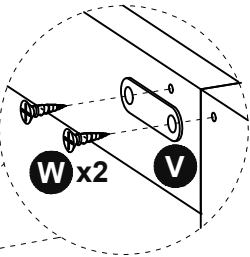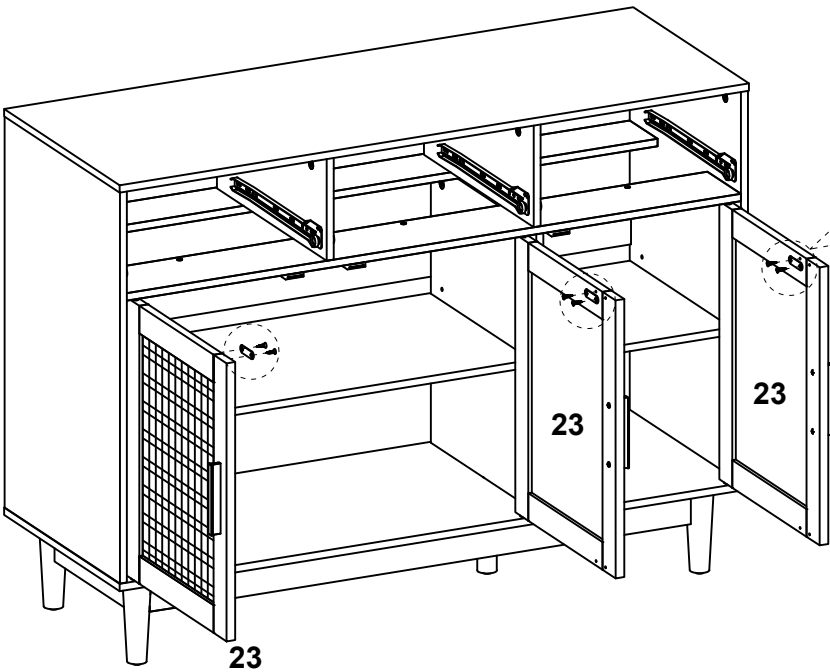

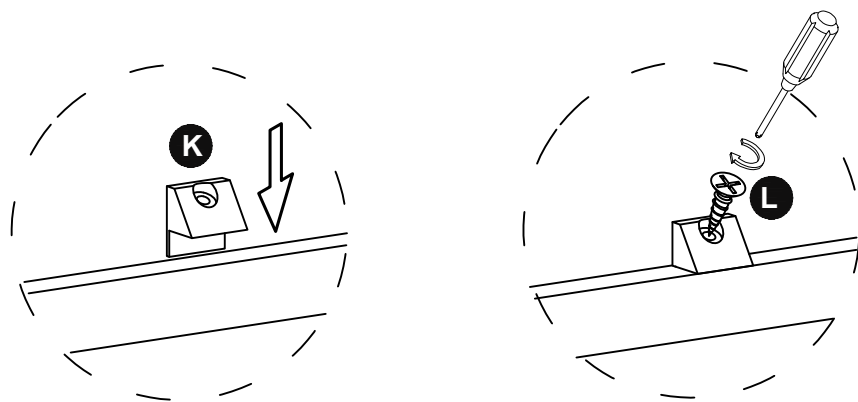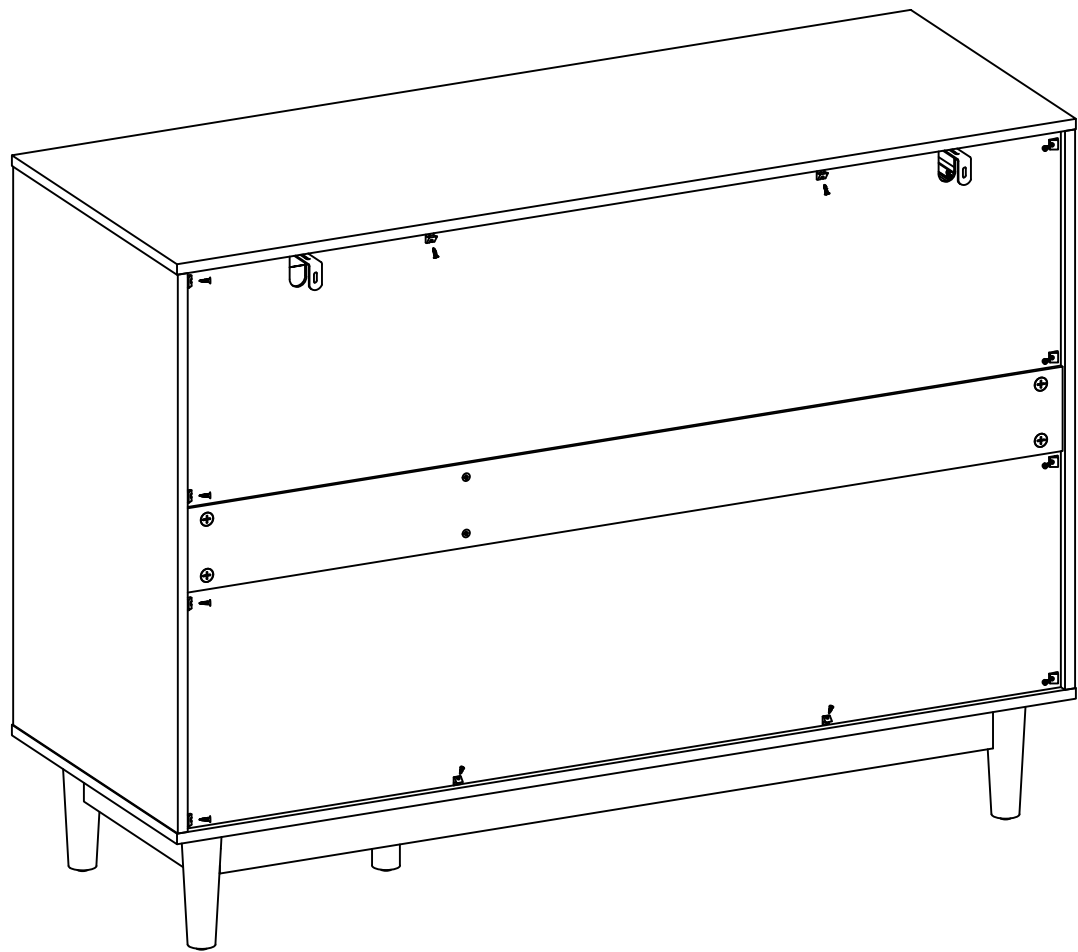

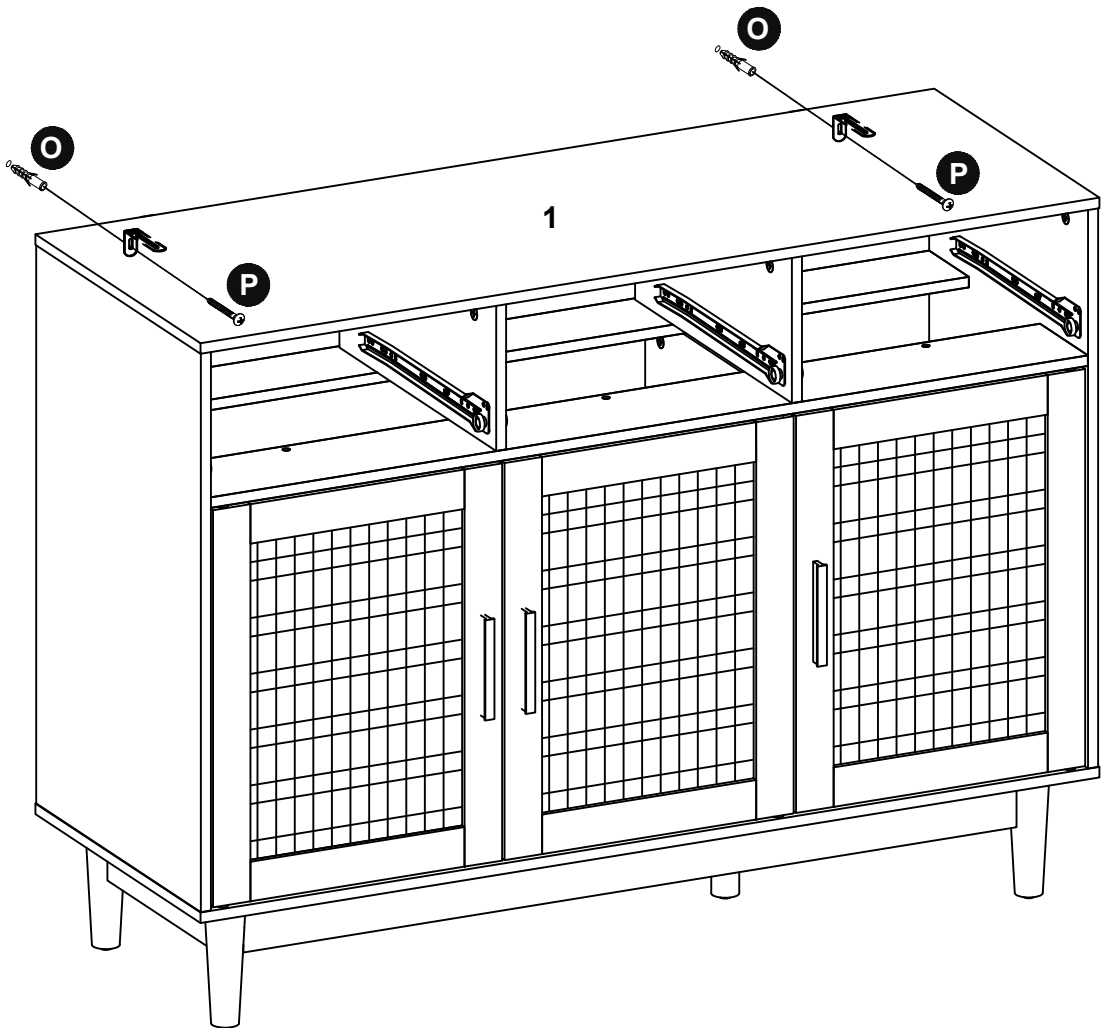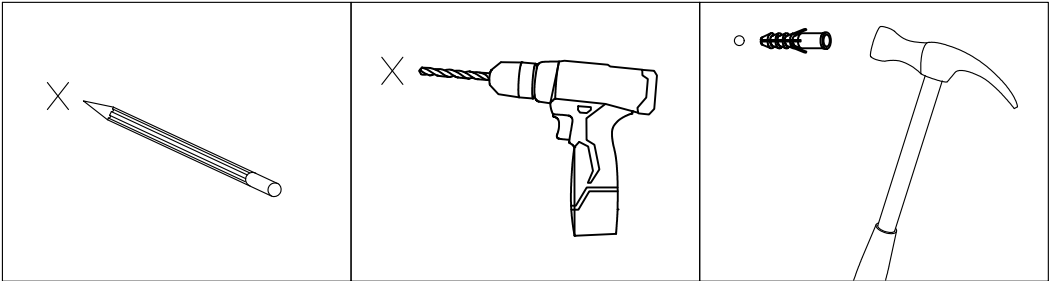

Note:
Please lift up the furniture by two
People when moving is needed.
Dragging may cause the legs failure.



37

