




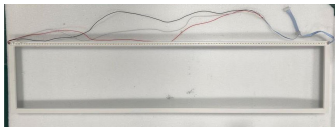


1	General information	Supplier's name or trade mark	INSPIRE
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS00001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	FPB1C30120S42WE
4		Light sources maker model	FPB1C30120S42WE

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
Step 1	Remove the drive: First press the female buckle to separate the male and female terminals and remove the driver		By hand.
Step 2	Remove the backplane: Use a $\phi 5$ Phillips screwdriver to turn the screw on the cable cover counterclockwise to remove the backplane.		$\phi 5$ Cross screwdriver
Step 3	Remove the backboard. The backboard is sharp. Please be careful not to cut your hand		By hand.
Step 4	Pick up the optical kit, including diffusion plate, light guide plate, and reflective paper		By hand.
Step 5	Cut the light source strips. Use a knife to cut the two light source strips. Be careful not to scratch your hands.		knife
Step 6	The light source bar is pasted on the front of the back plate as the module for testing photoelectricity		By hand.