

# AIRSTAGE

AIR CONDITIONER

Wall mounted type

# FUJITSU

REFRIGERANT **R32**  
INVERTER

## SERVICE MANUAL

---

---

INDOOR



ASEH07KNCA  
ASEH09KNCA  
ASEH12KNCA

---

OUTDOOR



AOEH07KNCA  
AOEH09KNCA  
AOEH12KNCA

---

FUJITSU GENERAL LIMITED

SR\_AS123ES\_04  
2024.03.14

**Notices:**

- Product specifications and design are subject to change without notice for future improvement.
- For further details, please check with our authorized dealer.

**Trademarks**

“AIRSTAGE Mobile” is a trademark of FUJITSU GENERAL LIMITED.

Android and Google Play are trademarks of Google LLC.

App Store is a service mark of Apple Inc., registered in the U.S. and other countries.

# CONTENTS

**1. GENERAL INFORMATION**

**2. TECHNICAL DATA AND PARTS LIST**

**3. TROUBLESHOOTING**

**4. CONTROL AND FUNCTIONS**

**5. FIELD WORKING**



## 1. GENERAL INFORMATION

# CONTENTS

## 1. GENERAL INFORMATION

<b>1. Specifications</b> .....	<b>01-1</b>
1-1. Indoor unit .....	01-1
1-2. Outdoor unit.....	01-3
<b>2. Dimensions</b> .....	<b>01-4</b>
2-1. Indoor unit .....	01-4
2-2. Outdoor unit.....	01-6

# 1. Specifications

## 1-1. Indoor unit

Type				Wall mounted			
				Inverter, Heat pump			
Model name				ASEH07KNCA	ASEH09KNCA	ASEH12KNCA	
Power supply				230 V~ 50 Hz			
Power supply intake				Outdoor unit			
Available voltage range				198—264 V			
Capacity	Cooling	Rated	kW	2.0	2.5	3.4	
			Btu/h	6,800	8,500	11,600	
		Min.—Max.	kW	0.9—2.9	0.9—3.1	0.9—3.8	
	Heating	Rated	Btu/h	3,100—9,900	3,100—10,600	3,100—13,000	
			kW	2.5	2.8	3.8	
		Min.—Max.	kW	0.9—3.4	0.9—4.0	0.9—4.8	
			Btu/h	3,100—11,600	3,100—13,600	3,100—16,400	
Input power	Cooling	Rated	kW	0.5	0.74	1.05	
				Min.—Max.	0.25—1.02	0.25—1.12	0.25—1.34
	Heating	Rated	kW	0.58	0.70	1.02	
				Min.—Max.	0.25—0.99	0.25—1.24	0.25—1.54
	Fan	HIGH	MED	W	18.0	22.0	23.0
					15.0	17.0	18.0
12.0					14.0		
8.0					5.0		
Current	Cooling	Rated	A	3.0	3.6	5.0	
	Heating			3.1	3.6	5.1	
Energy efficiency class	Cooling			A++			
	Heating (Average)			A*			
Pdesign	Cooling	kW		2.0	2.5	3.4	
	Heating (Average)		kW	2.3	2.4	2.5	
SEER	Cooling	kWh/kWh		7.8	7.4	7.0	
SCOP	Heating (Average)		kWh/kWh	4.4			
Annual energy consumption	QCE		kWh/a	90	118	170	
	QHE (Average)		kWh/a	731	763	795	
EER	Cooling	kW/kW		4.00	3.38	3.24	
COP	Heating		kW/kW	4.31	4.00	3.73	
Sensible capacity	Cooling	kW		1.64	2.11	2.65	
Power factor	Cooling	%		72	89	91	
	Heating	%		81	85	87	
Moisture removal			L/h (pints/h)	1.0 (1.8)		1.4 (2.5)	
Maximum operating current*1	Cooling	A		6.5			
	Heating	A		9.0			
Fan	Cooling	HIGH	m <sup>3</sup> /h	530	580	600	
				460	500	520	
				390		440	
				250			
	Heating	HIGH	m <sup>3</sup> /h	580	600		
				500	520		
				420	440		
				280			
	Type × Qty			Crossflow fan × 1			
	Motor output			W			
Sound pressure level*2	Cooling	HIGH	dB (A)	36	38	40	
				33	35	36	
				29		32	
				20			
	Heating	HIGH	dB (A)	38	39		
				33	35		
				30	31		
				22			
Sound power level	Cooling	HIGH	dB (A)	51	53	55	
	Heating			52		53	
Heat exchanger	Dimensions (H × W × D)		mm	Main 1: 210 × 600 × 26.6			
	Fin pitch			Main 2: 112 × 600 × 20			
	Rows × Stages			Main 1: 1.2			
	Pipe type			Main 2: 1.1			
	Fin type			Main 1: 2 × 10			
Enclosure	Material			Main 2: 2 × 7			
	Color			Copper tube			
Dimensions (H × W × D)	Net		mm	Aluminum			
	Gross			Polystyrene			
Weight	Net		kg	White			
	Gross			Approximate color of Munsell N9.25/			
Connection pipe	Size	Liquid	mm (in)	270 × 784 × 222			
		Gas		279 × 864 × 334			
Drain hose	Method			9.0			
	Material			12.0			
Operation range	Cooling	°C	mm (in)	Ø6.35 (Ø1/4)			
				Ø9.52 (Ø3/8)			
Remote controller	Heating	°C	mm (in)	Flare			
				Polypropylene + High-density polyethylene			
		Tip diameter	mm	Ø13.8 (I.D.), Ø15.0 to Ø16.8 (O.D.)			
		°C		18 to 32			
		%RH		80 or less			
		°C		16 to 30			
Remote controller				Wireless (Option: Mobile app*3 [AIRSTAGE Mobile])			

Type	Wall mounted		
	Inverter, Heat pump		
Model name	ASEH07KNCA	ASEH09KNCA	ASEH12KNCA
<p><b>NOTES:</b></p> <ul style="list-style-type: none"> <li>• Specifications are based on the following conditions: <ul style="list-style-type: none"> <li>– Cooling: Indoor temperature of 27°CDB/19°CWB, and outdoor temperature of 35°CDB/24°CWB.</li> <li>– Heating: Indoor temperature of 20°CDB/15°CWB, and outdoor temperature of 7°CDB/6°CWB.</li> <li>– Pipe length: 5.0 m, Height difference: 0 m. (Between outdoor unit and indoor unit.)</li> </ul> </li> <li>• Protective function might work when using it outside the operation range.</li> <li>• *1: Maximum operating current is the total current of the indoor unit and the outdoor unit.</li> <li>• *2: Sound pressure level: <ul style="list-style-type: none"> <li>– Measured values in manufacturer's anechoic chamber.</li> <li>– Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here.</li> </ul> </li> <li>• *3: Available on Google Play™ store or on App Store®.</li> <li>• This data is based on EN 14511 standard.</li> </ul>			

# 1-2. Outdoor unit

Type			Inverter, Heat pump		
Model name			AOEH07KNCA	AOEH09KNCA	AOEH12KNCA
Power supply			230 V~ 50 Hz		
Power supply intake			Outdoor unit		
Available voltage range			198—264 V		
Starting current			3.1	3.6	5.1
Fan	Airflow rate	Cooling	1,430		1,460
		Heating	1,390		1,360
	Type × Qty	Propeller fan × 1			
	Motor output	W	23		
Sound pressure level*	Cooling	dB (A)	43	44	49
	Heating		44	45	49
Sound power level	Cooling	dB (A)	53	56	60
	Heating		54	56	61
Heat exchanger type	Dimensions (H × W × D)	mm	504 × 650 × 18.2		504 × 630 × 36.4
	Fin pitch	FPI	1.3		
	Rows × Stages		1 × 24		2 × 24
	Pipe type		Copper tube		
	Fin type	Type (Material)	Aluminum		
		Surface treatment	Blue fin		
Compressor	Type		DC rotary		
	Motor output	W	538		615
Refrigerant	Type (Global warming potential)		R32 (675)		
	Charge	g	570		650
Refrigerant oil	Type		VG74		
	Amount	cm <sup>3</sup>	240		
Enclosure	Material		Steel sheet		
	Color		Beige Approximate color of Munsell 10YR 7.5/1.0		
Dimensions (H × W × D)	Net	mm	541 × 663 × 290		
	Gross		596 × 798 × 369		
Weight	Net	kg	22		24
	Gross		24		27
Connection pipe	Size	Liquid	Ø6.35 (Ø1/4)		
		Gas	Ø9.52 (Ø3/8)		
		Method	Flare		
	Pre-charge length	m	15		
	Max. length		20		
	Max. height difference		15		
Operation range	Cooling	°C	-10 to 50		
	Heating		-15 to 24		
Drain hose	Material		Polypropylene		
	Tip diameter	mm	φ13.0(I.D.), φ16.0 to φ16.8(O.D.)		

**NOTES:**


- Specifications are based on the following conditions:
  - Cooling: Indoor temperature of 27°CDB/19°CWB, and outdoor temperature of 35°CDB/24°CWB.
  - Heating: Indoor temperature of 20°CDB/ 15°CWB, and outdoor temperature of 7°CDB/6°CWB.
  - Pipe length: 5 m, Height difference: 0 m. (Between outdoor unit and indoor unit.)
- Protective function might work when using it outside the operation range.
- \*: Sound pressure level
  - Measured values in manufacturer's anechoic chamber.
  - Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here.

## 2. Dimensions

### 2-1. Indoor unit

#### ■ Models: ASEH07KNCA, ASEH09KNCA, and ASEH12KNCA



Unit: mm

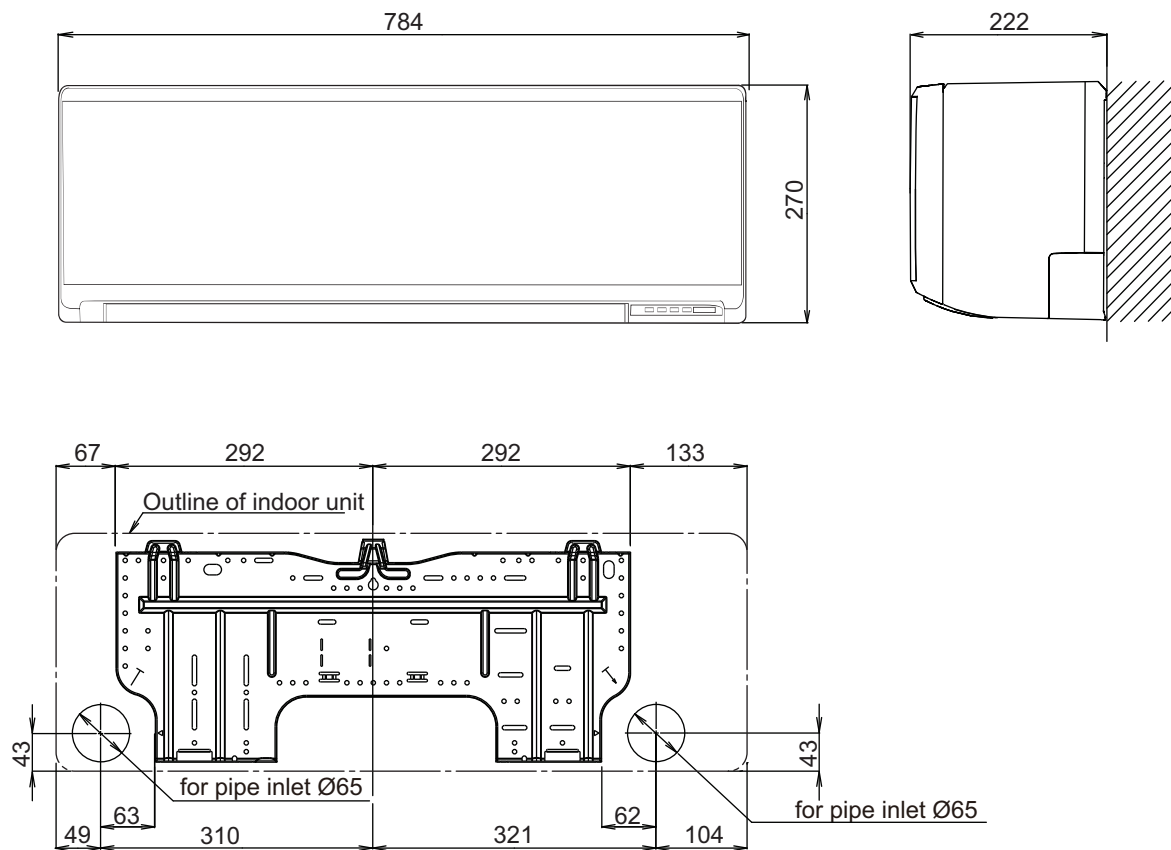

## ● Installation space requirement

Provide sufficient installation space for product safety.


Unit: mm

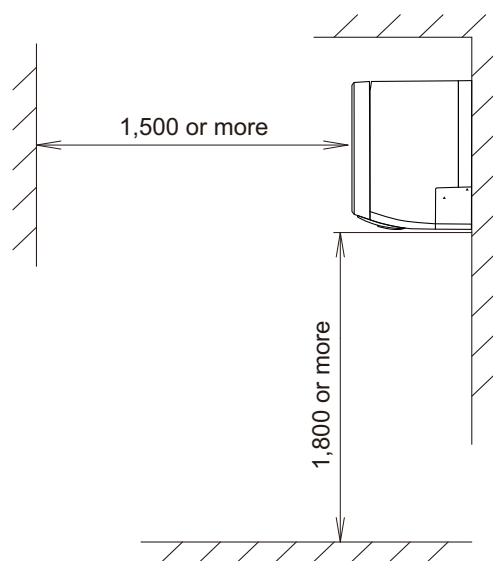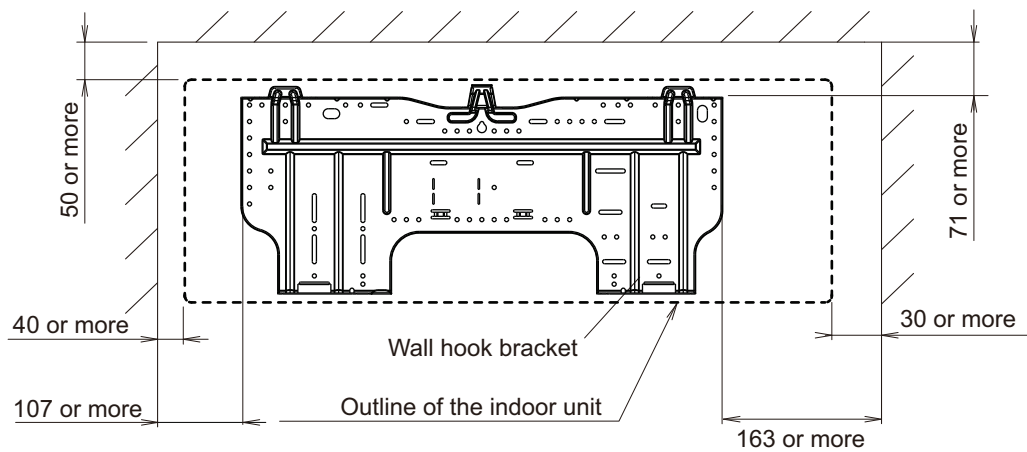


## 2-2. Outdoor unit

### ■ Models: AOEH07KNCA, AOEH09KNCA, and AOEH12KNCA


Unit: mm

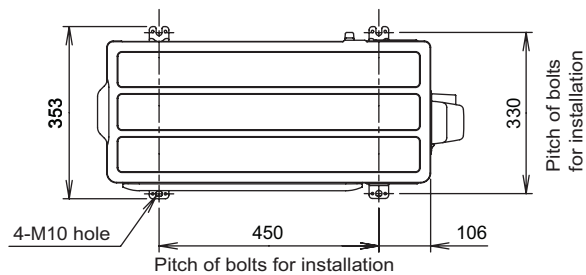


Top view

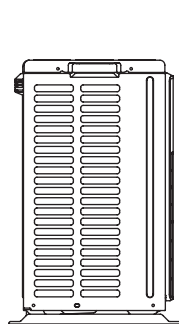


Side view

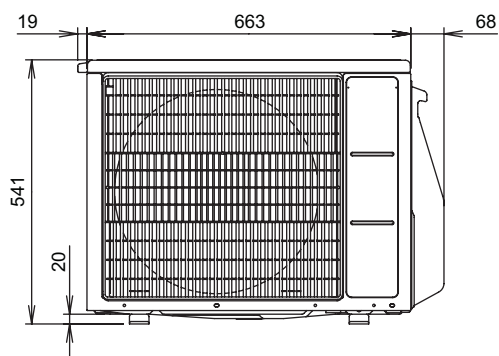


Front view

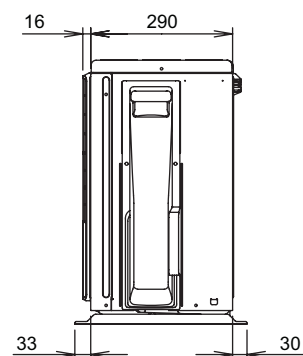

Side view

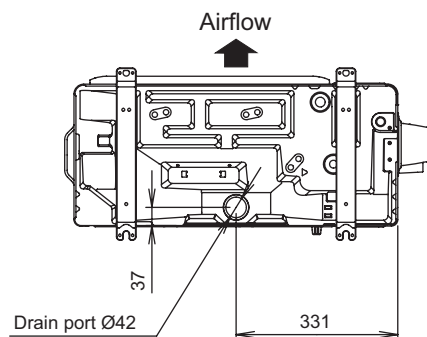

Bottom view

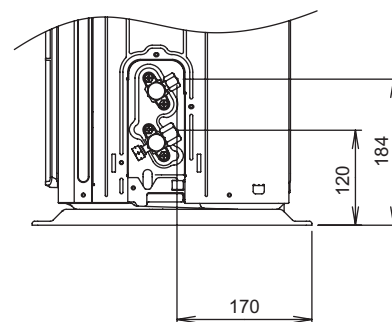

Side view (Valve part)

## **2. TECHNICAL DATA AND PARTS LIST**

# CONTENTS

## 2. TECHNICAL DATA AND PARTS LIST

<b>1. Precautions</b> .....	<b>02-1</b>
<b>2. Indoor unit parts list</b> .....	<b>02-2</b>
2-1. Models: ASEH07KNCA, ASEH09KNCA, and ASEH12KNCA.....	02-2
<b>3. Outdoor unit parts list</b> .....	<b>02-6</b>
3-1. Models: AOEH07KNCA, AOEH09KNCA, and AOEH12KNCA.....	02-6
<b>4. Accessories</b> .....	<b>02-10</b>
4-1. Indoor unit .....	02-10
4-2. Outdoor unit.....	02-10
<b>5. Optional parts</b> .....	<b>02-11</b>
5-1. Indoor unit .....	02-11
<b>6. Refrigerant system diagrams</b> .....	<b>02-12</b>
6-1. Models: AOEH07KNCA, AOEH09KNCA, and AOEH12KNCA.....	02-12
<b>7. Wiring diagrams</b> .....	<b>02-13</b>
7-1. Indoor unit .....	02-13
7-2. Outdoor unit.....	02-14
<b>8. PC board diagrams</b> .....	<b>02-15</b>
8-1. Models: ASEH07KNCA, ASEH09KNCA, and ASEH12KNCA.....	02-15
8-2. Models: AOEH07KNCA, AOEH09KNCA, and AOEH12KNCA.....	02-16

# 1. Precautions

When you start servicing, pay attention to the following points. For detailed precautions, refer to the installation manual of the products.


## ⚠ CAUTION

- 
- Service personnel
    - Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry recognized assessment specification.
    - Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.
    - Servicing shall be performed only as recommended by the manufacturer.
  - Work
    - Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized. When repairing the refrigerant system, refer to the precautions written in the installation manual of the products before you start servicing.
    - Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapor being present while the work is being performed.
    - All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out.
    - Work in confined spaces shall be avoided.
    - The area around the workspace shall be sectioned off.
    - Ensure that the conditions within the area have been made safe by control of flammable material.
    - Electric shock may occur. After turning off the power, always wait 5 minutes before touching electrical components.
    - Do not touch the fins of the heat exchanger. Touching the heat exchanger fins could result in damage to the fins or personal injury such as skin rupture.
    - Do not place any other electrical products or household belongings under the product.
    - Condensation dripping from the product might get them wet, and may cause damage or malfunction to the property.
  - Checking for presence of refrigerant
    - The area shall be checked with an appropriate refrigerant leak detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres.
    - Ensure that the leak detector being used is suitable for use with flammable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.
- 
- Service parts information and design are subject to change without notice for product improvement.
  - For the latest information of the service parts, refer to our Service Portal.  
<https://fujitsu-general.force.com/portal/>
  - Precise figure of the service parts listed in this manual may differ from the actual service parts.

## 2. Indoor unit parts list

### 2-1. Models: ASEH07KNCA, ASEH09KNCA, and ASEH12KNCA

#### ■ Exterior parts

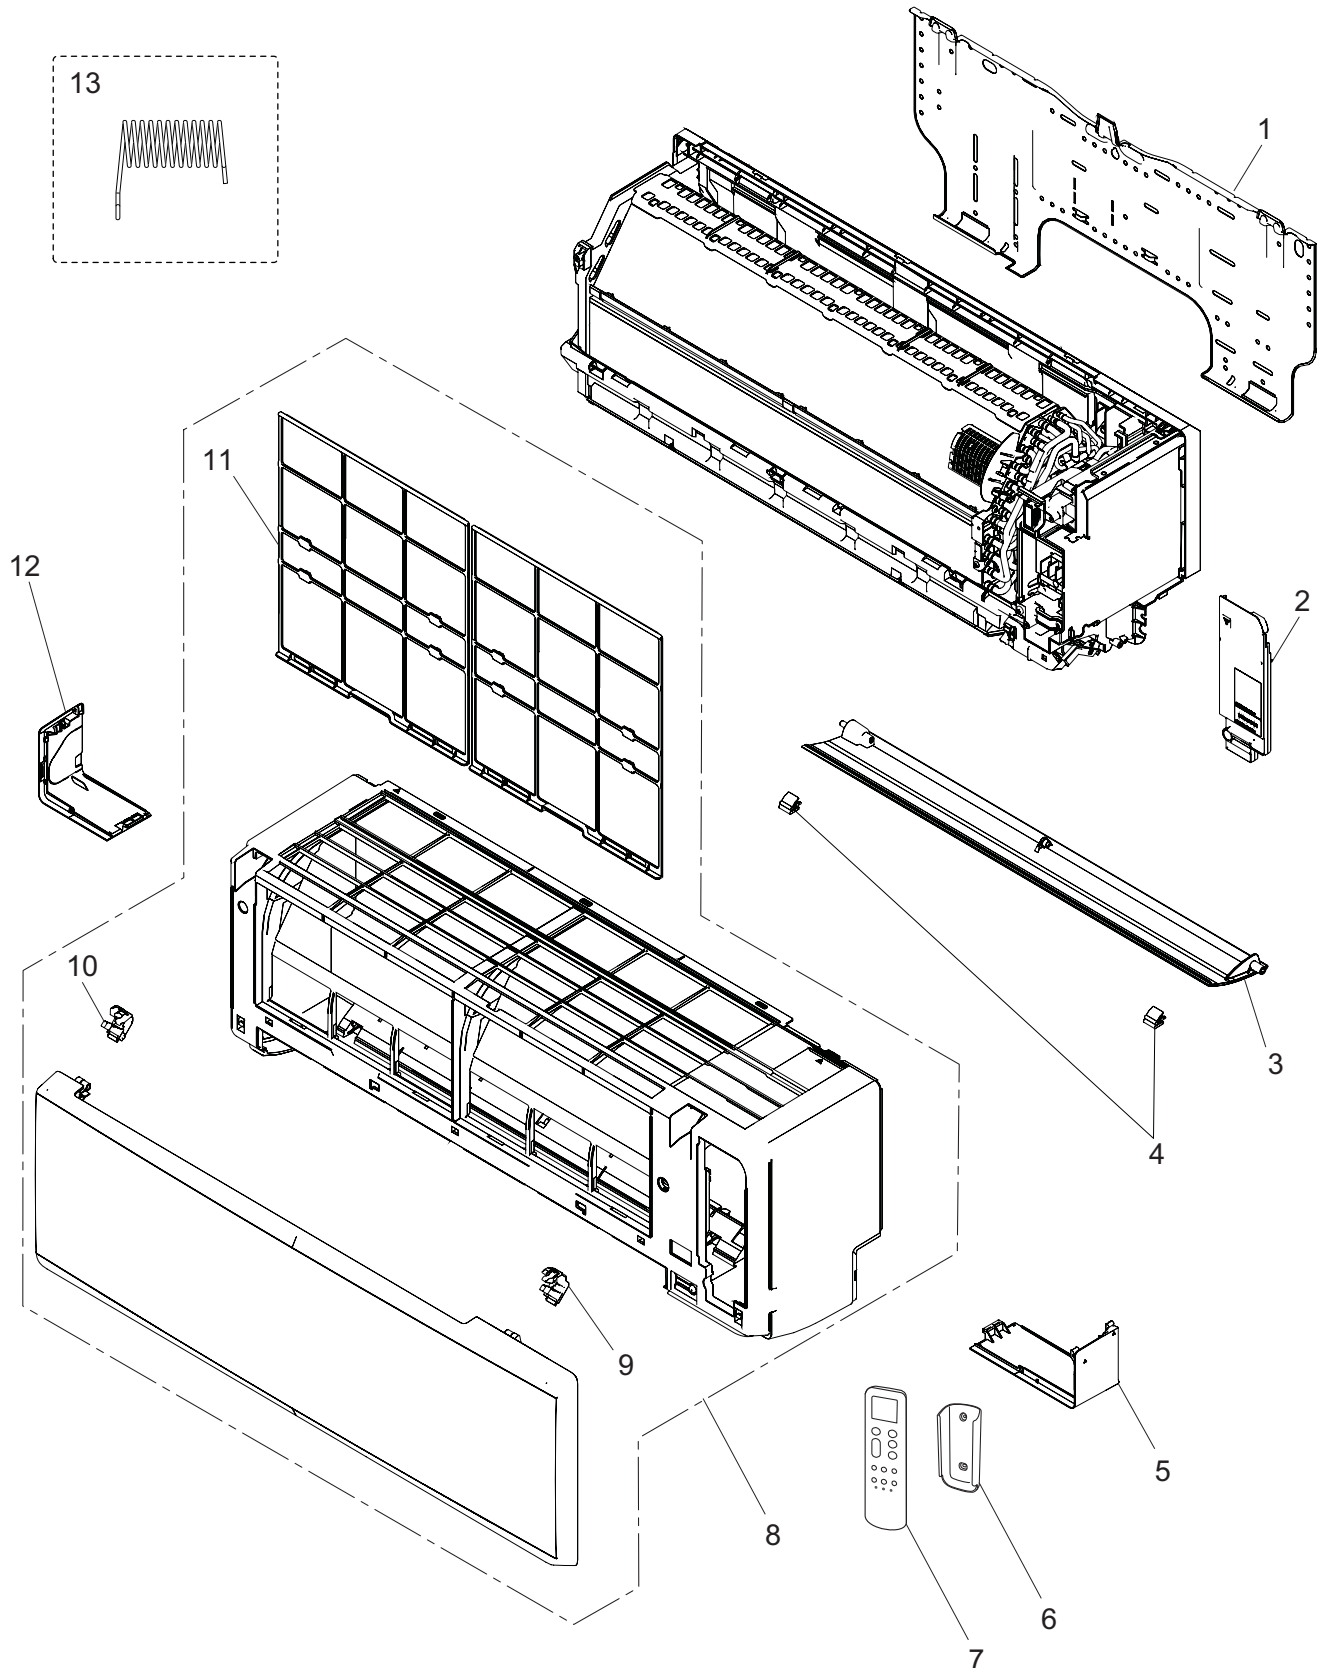

TECHNICAL DATA  
AND PARTS LIST


TECHNICAL DATA  
AND PARTS LIST

Item no.	Part no.	Part name	Service part
1	9388147024	Bracket panel	◆
2	—	Wire cover assy	Not available
3	9333888033	Louver assy (Up/Down)	◆
4	—	Screw cover	Not available
5	—	Under cover R	Not available
6	9334098004	Remote controller holder	◆
7	9358365069	Remote controller assy	◆
8	9333886169	Front panel total assy	◆
9	—	Grille clamber R	Not available
10	—	Grille clamber L	Not available
11	9333868004	Air filter	◆
12	—	Under cover L	Not available
13	9333951003	Louver spring	◆

# Chassis

TECHNICAL DATA  
AND PARTS LIST

TECHNICAL DATA  
AND PARTS LIST

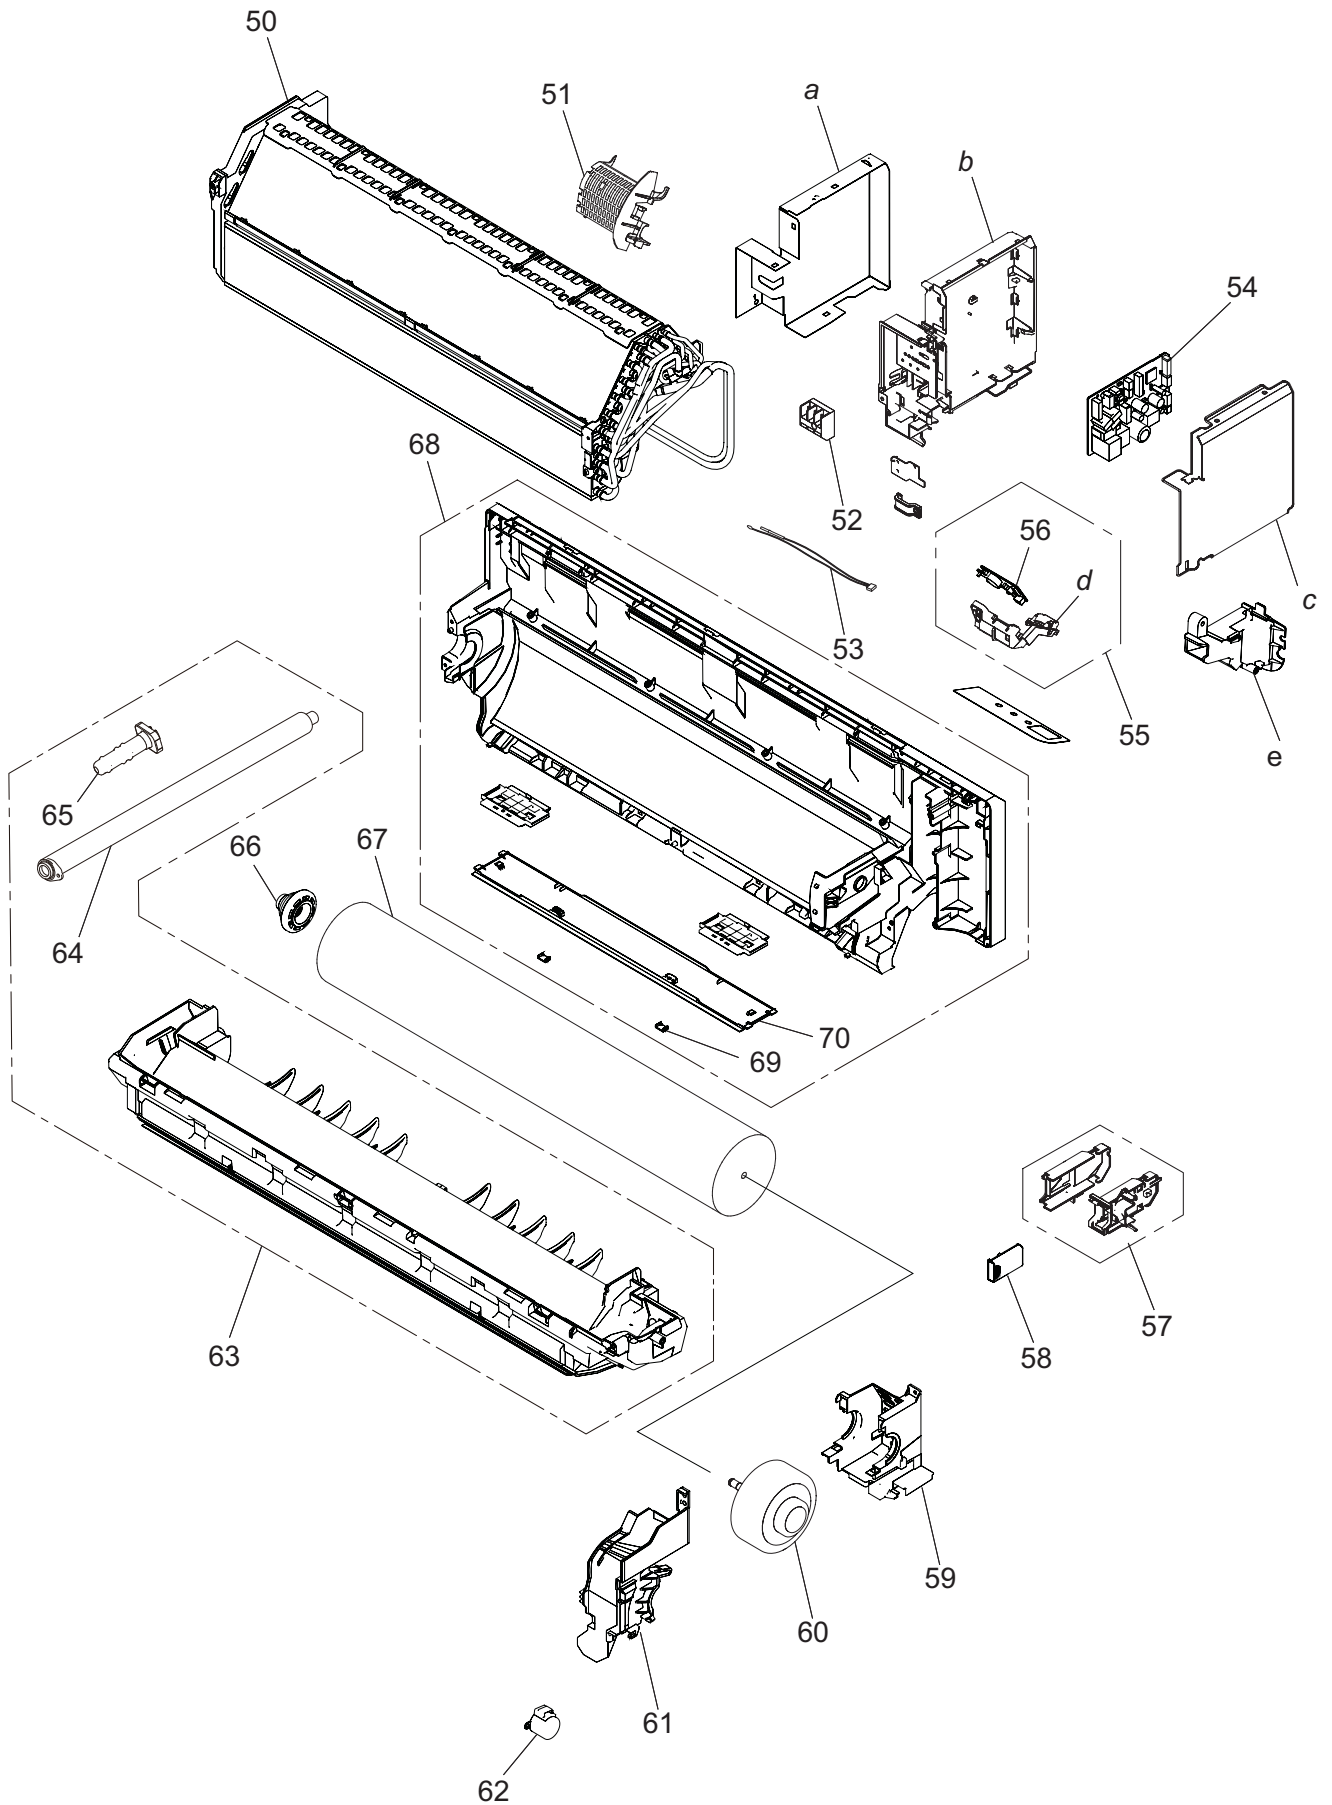


Item no.	Part no.	Part name	Service part
50	9387593518	Evaporator total assy	◆
51	9387467017	Room thermistor holder	◆
52	9901013010	Terminal block	◆
53	9901160042	Thermistor assy	◆
54	9712493094	Main PCB (for 05 model)	◆
	9712493001	Main PCB (for 07 model)	◆
	9712493018	Main PCB (for 09 model)	◆
	9712493025	Main PCB (for 12 model)	◆
55	9711146021	Display assy	◆
56	9711147028	Indicator PCB	◆
57	—	WLAN adapter holder assy	Not available
58	9300506007	WLAN adapter	◆
59	9387589047	Motor case assy	◆
60	9603688028	DC fan motor (for 05, 07, 09 models)	◆
	9603492021	DC fan motor (for 12 model)	◆
61	9387713022	Motor cover assy	◆
62	9901011139	Stepping motor	◆
63	9333911007	Drain pan total assy	◆
64	9316904002	Drain hose assy	◆
65	9316177017	Drain cap	◆
66	9333628004	Bearing D assy	◆
67	9333606026	Crossflow fan assy	◆
68	9333882048	Base assy	◆
69	—	Screw cover	Not available
70	—	Under cover C	Not available
—	9901010071	Wire with connector (CN75 on Main PCB—WLAN adapter)	◆
—	9701439225	Wire with terminal (E1 on Main PCB—Earth)	◆
<i>a</i>	—	Box shield	—
<i>b</i>	—	Control box	—
<i>c</i>	—	Control cover	—
<i>d</i>	—	Display case assy	—
<i>e</i>	—	Cable guide	—

### 3. Outdoor unit parts list

#### 3-1. Models: AOEH07KNCA, AOEH09KNCA, and AOEH12KNCA

##### ■ Exterior parts and chassis

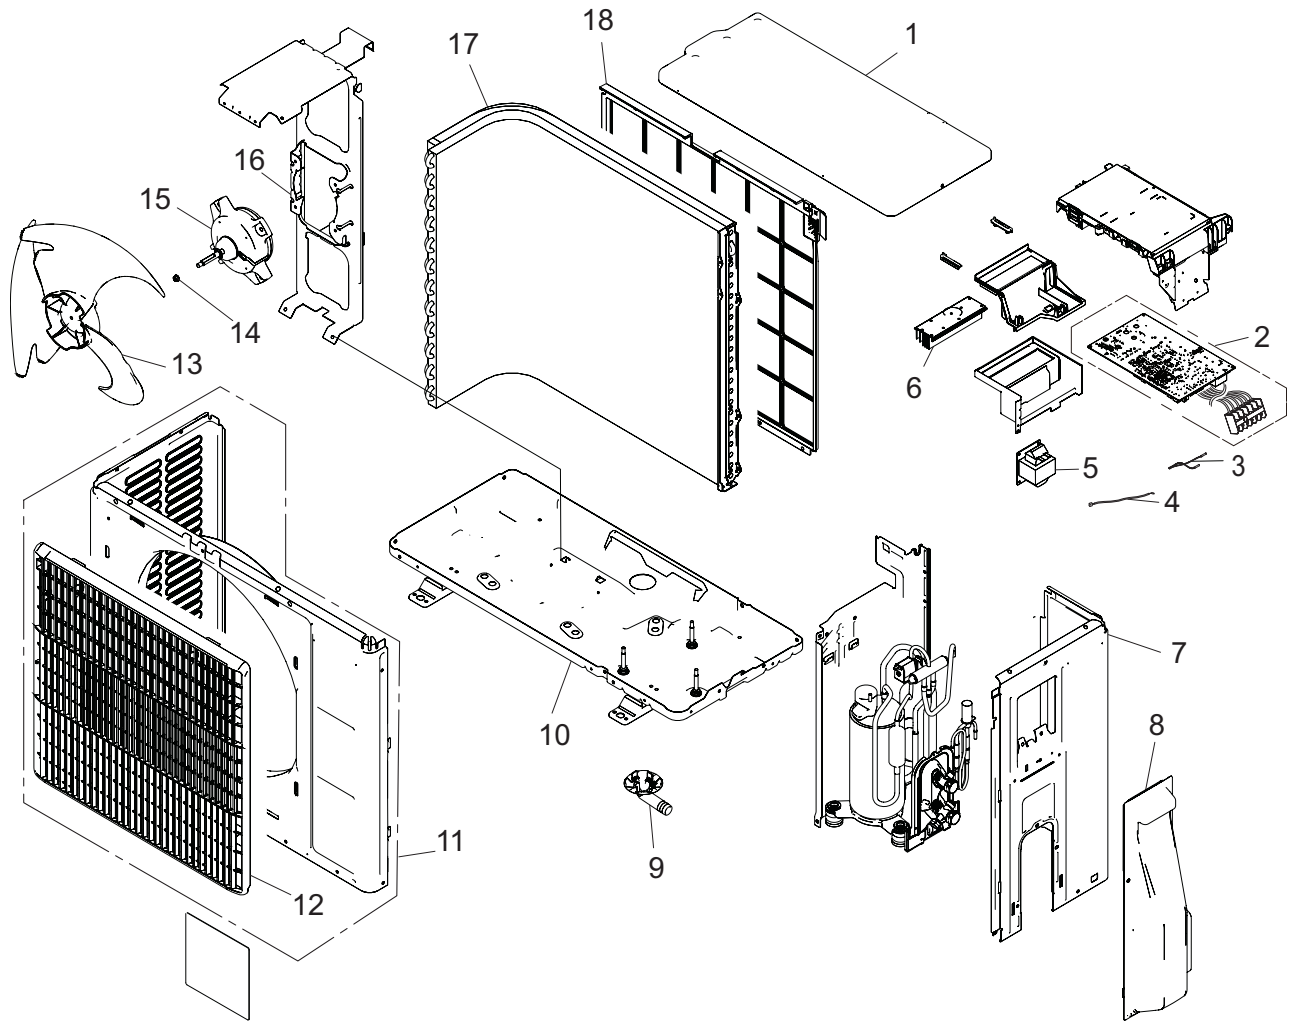


Item no.	Part no.	Part name	Service part
1	9322556165	Top panel assy	◆
2	9709689363	Main PCB (for 07 model)	◆
	9709689370	Main PCB (for 09 model)	◆
	9709689387	Main PCB (for 12 model)	◆
3	9900727062	Thermistor assy	◆
4	9900565053	Thermistor assy (outdoor temp)	◆
5	9900583019	Reactor assy	◆
6	9334196007	Heat sink	◆
7	9322552112	Cabinet right assy	◆
8	9322570000	Switch cover assy	◆
9	9322144003	Drain pipe	◆
10	9323501003	Base assy	◆
11	9322555397	Front panel assy	◆
12	9322135018	Blow grille	◆
13	9322136008	Propeller fan	◆
14	0700103070	Nut	◆
15	9603553005	DC fan motor	◆
16	9322553089	Motor bracket assy (for 07 and 09 model)	◆
	9322553096	Motor bracket assy (for 12 model)	◆
17	9322272027	Condenser total assy (for 07 and 09 model)	◆
	9322273017	Condenser total assy (for 12 model)	◆
18	9322811059	Protective net	◆
<i>a</i>	—	Inverter assy	—

# Compressor

TECHNICAL DATA  
AND PARTS LIST

TECHNICAL DATA  
AND PARTS LIST

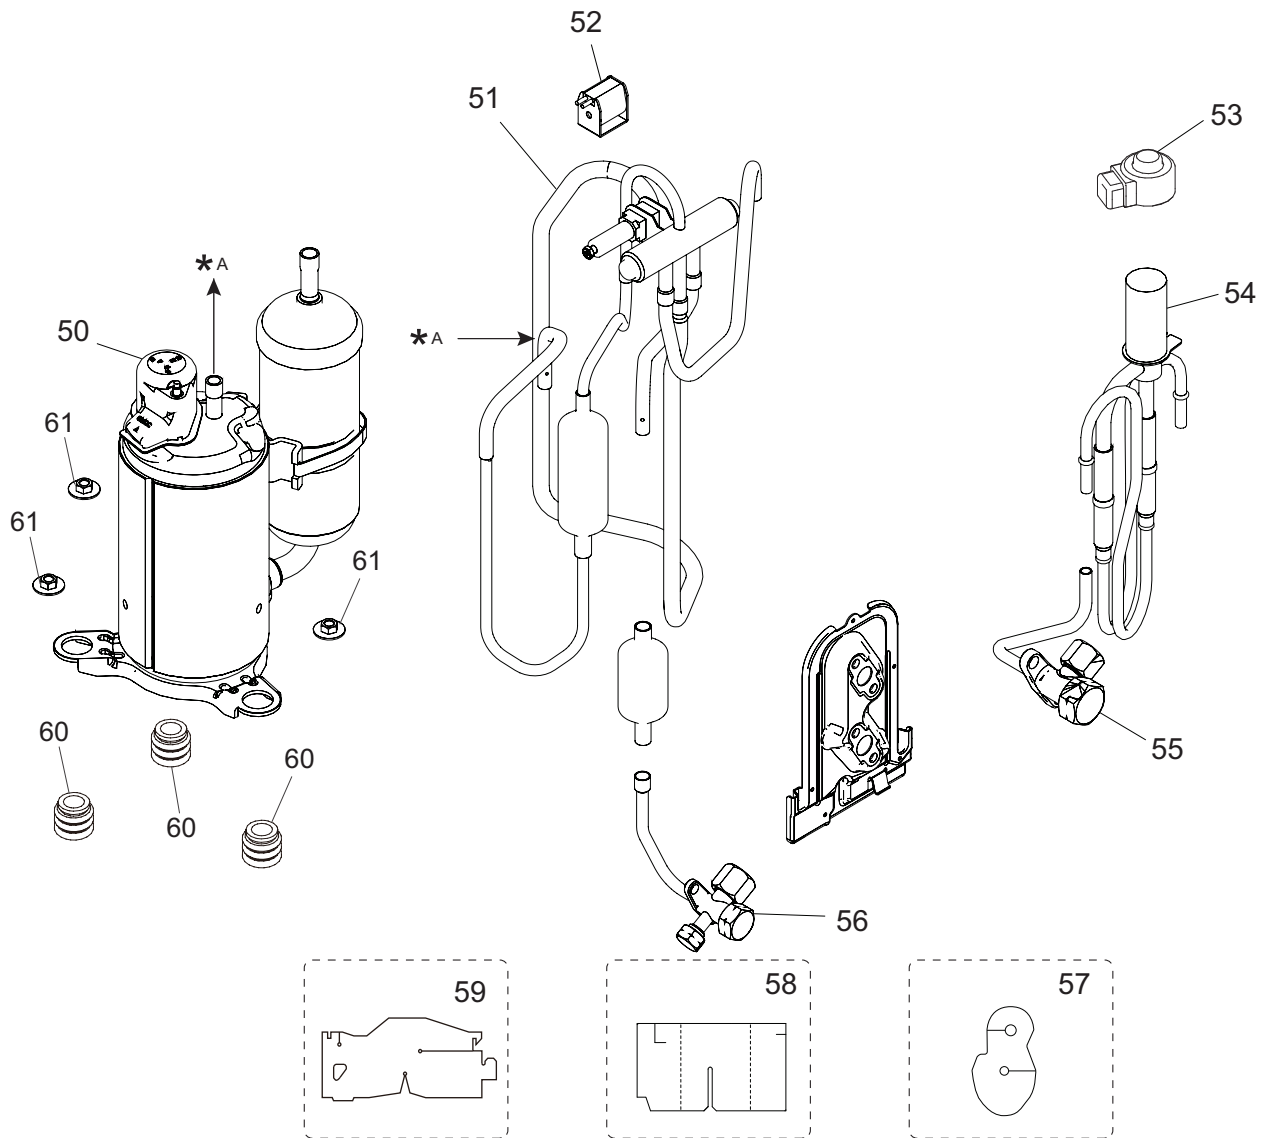
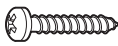











Item no.	Part no.	Part name	Service part
50	9334086001	Compressor assy (for 07 and 09 model)	◆
	9334088005	Compressor assy (for 12 model)	◆
51	9334089002	4-way valve assy	◆
52	9970110153	Solenoid	◆
53	9970222009	Expansion valve coil	◆
54	9322403001	Pulse motor valve	◆
55	9322472007	2-way valve assy	◆
56	9322473011	3-way valve assy	◆
57	9322389008	Sound insulator H	◆
58	9334109007	Sound insulator F	◆
59	9324412001	Sound insulator B	◆
60	9322386007	Cushion rubber	◆
61	9313437008	Special nut	◆

## 4. Accessories


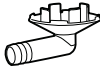
### 4-1. Indoor unit
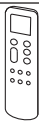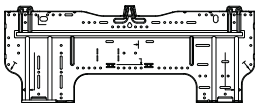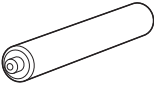
#### ■ Models: ASEH07KNCA, ASEH09KNCA, and ASEH12KNCA

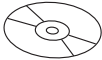Part name	Exterior	Qty	Part name	Exterior	Qty
Operation manual		1	Self-tapping screw (Large)		5
Installation manual		1	Self-tapping screw (Small)		2
Remote controller		1	Wall hook bracket		1
Battery		2	Remote controller holder		1
Installation spacer		1	Cloth tape		1
Operation manual (CD-ROM)		1			


### 4-2. Outdoor unit

#### ■ Models: AOEH07KNCA, AOEH09KNCA, and AOEH12KNCA

Part name	Exterior	Qty	Part name	Exterior	Qty
Installation manual		1	Drain pipe		1


## 5. Optional parts

### 5-1. Indoor unit

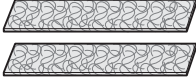Exterior	Part name	Model name	Summary
	Air Cleaning Filter	UTR-FA16-5	Air Cleaning Filter can be mounted to the indoor unit. (For antibacterial)

## 6. Refrigerant system diagrams

### 6-1. Models: AOEH07KNCA, AOEH09KNCA, and AOEH12KNCA

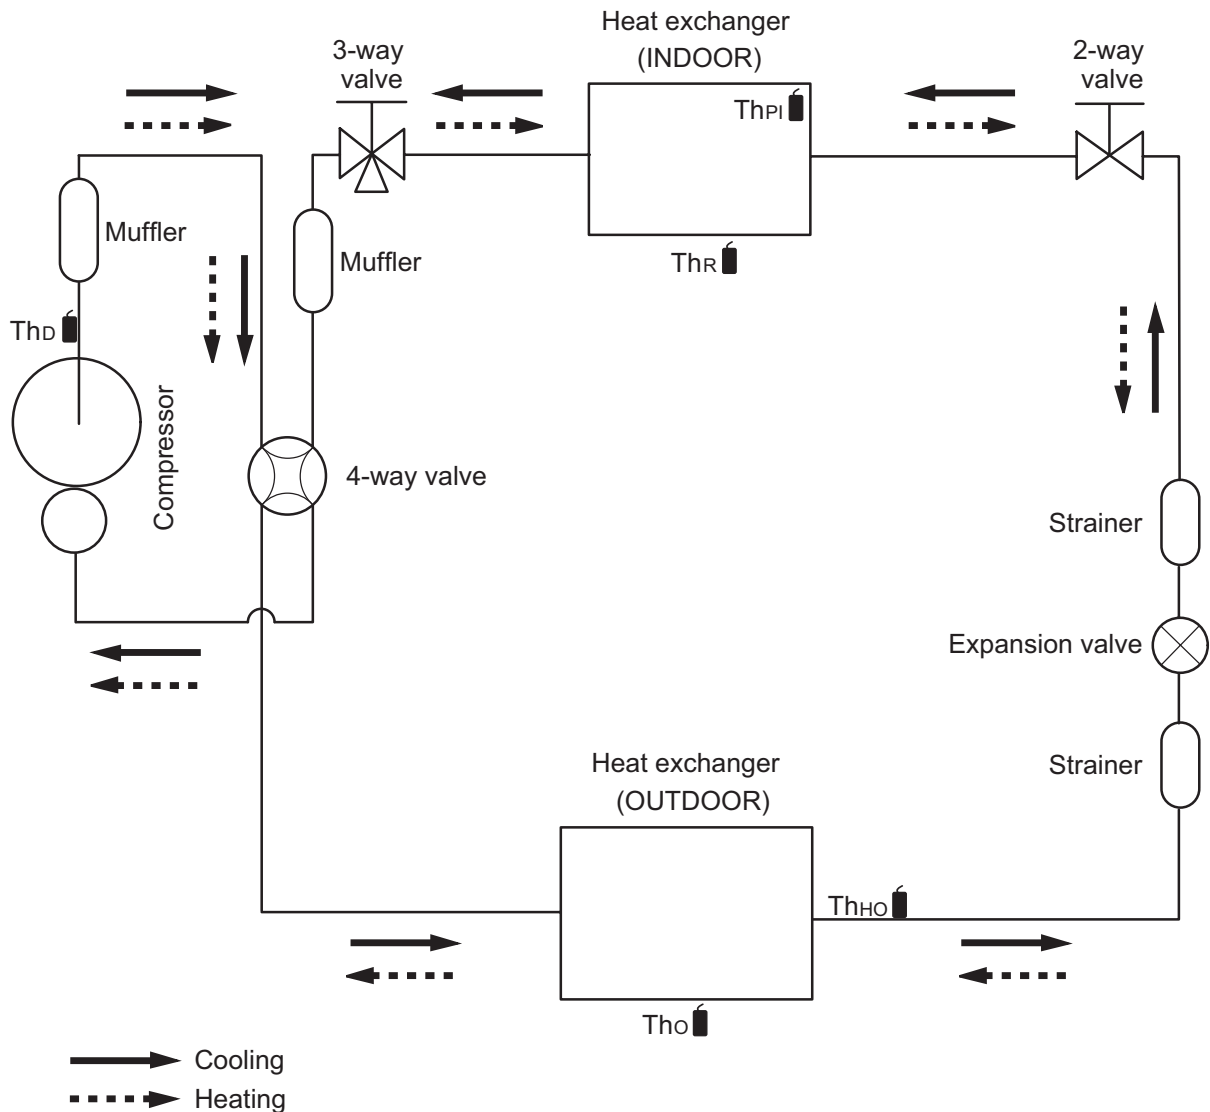

- Th<sub>D</sub> : Thermistor (Discharge temperature)
- Th<sub>O</sub> : Thermistor (Outdoor temperature)
- Th<sub>HO</sub> : Thermistor (Heat exchanger out temperature)
- Th<sub>PI</sub> : Thermistor (Pipe temperature)
- Th<sub>R</sub> : Thermistor (Room temperature)

TECHNICAL DATA  
AND PARTS LIST

TECHNICAL DATA  
AND PARTS LIST


# 7. Wiring diagrams

## 7-1. Indoor unit

### Models: ASEH07KNCA, ASEH09KNCA, and ASEH12KNCA

TECHNICAL DATA  
AND PARTS LIST

TECHNICAL DATA  
AND PARTS LIST

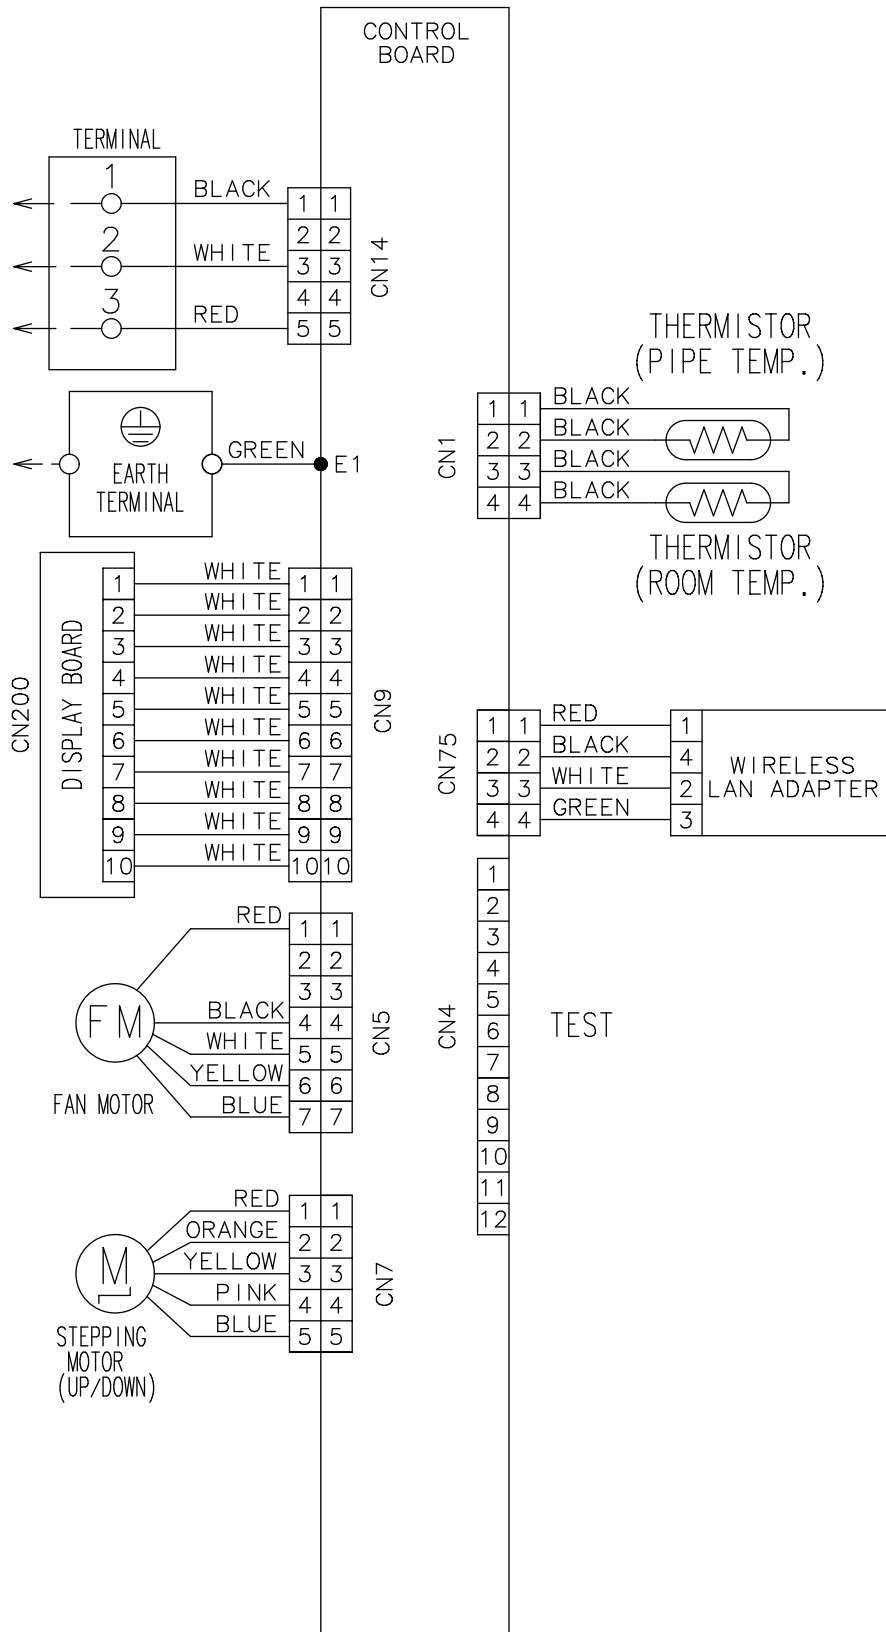


## 7-2. Outdoor unit

### Models: AOEH07KNCA, AOEH09KNCA, and AOEH12KNCA

TECHNICAL DATA  
AND PARTS LIST

TECHNICAL DATA  
AND PARTS LIST

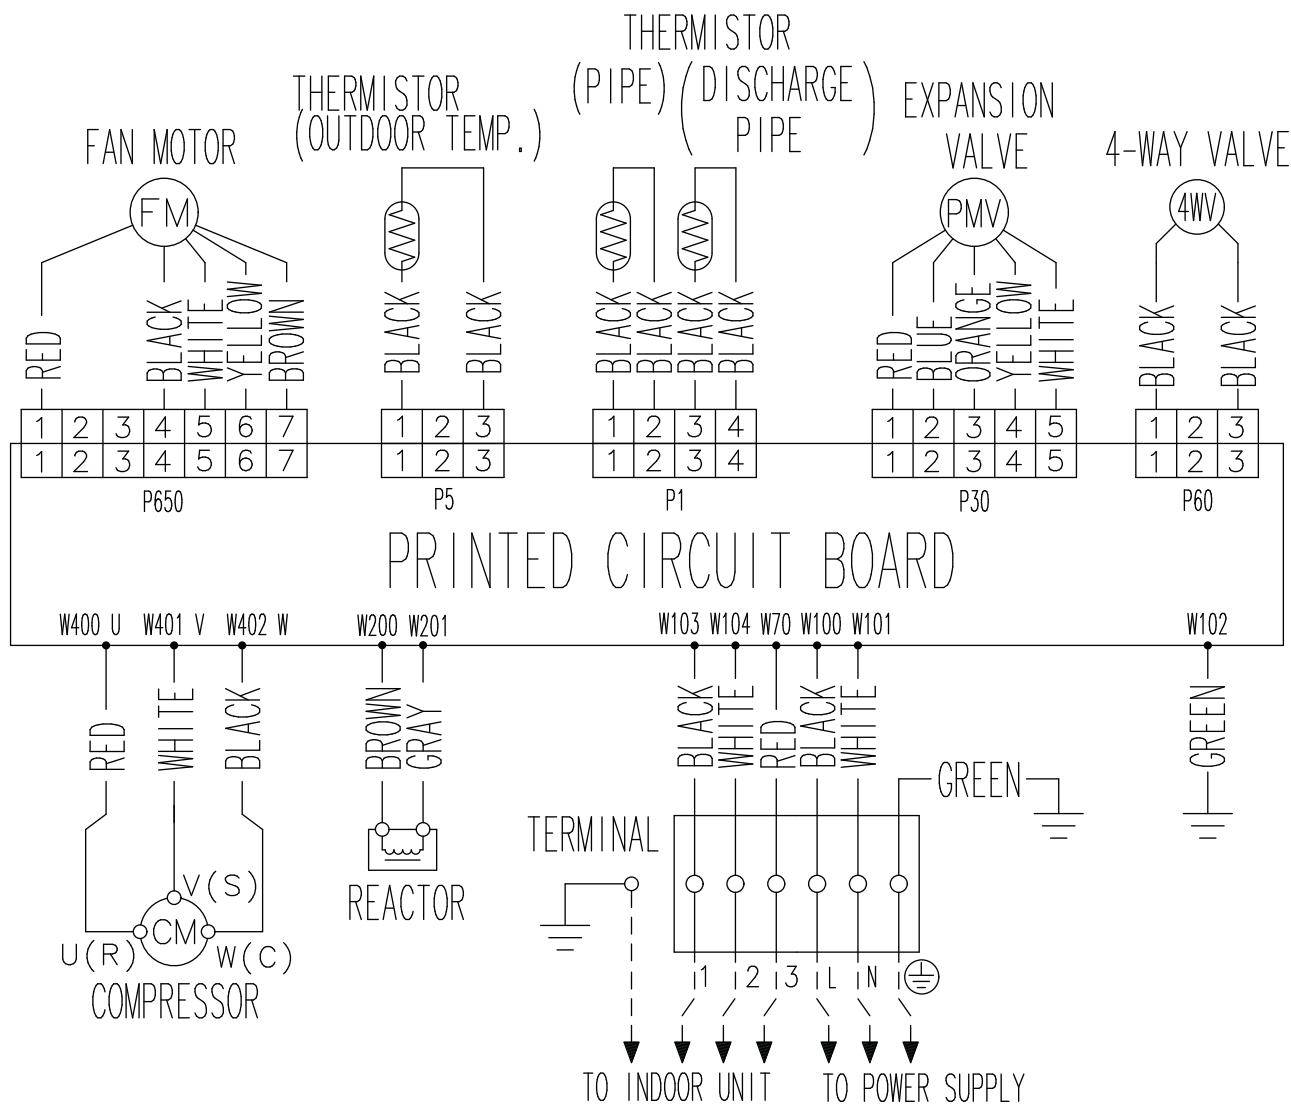


# 8. PC board diagrams

## 8-1. Models: ASEH07KNCA, ASEH09KNCA, and ASEH12KNCA

### CONTROL UNIT

- 05 model: EZ-0230MHSE
- 07 model: EZ-0230BHSE
- 09 model: EZ-0230CHSE
- 12 model: EZ-0230DHSE

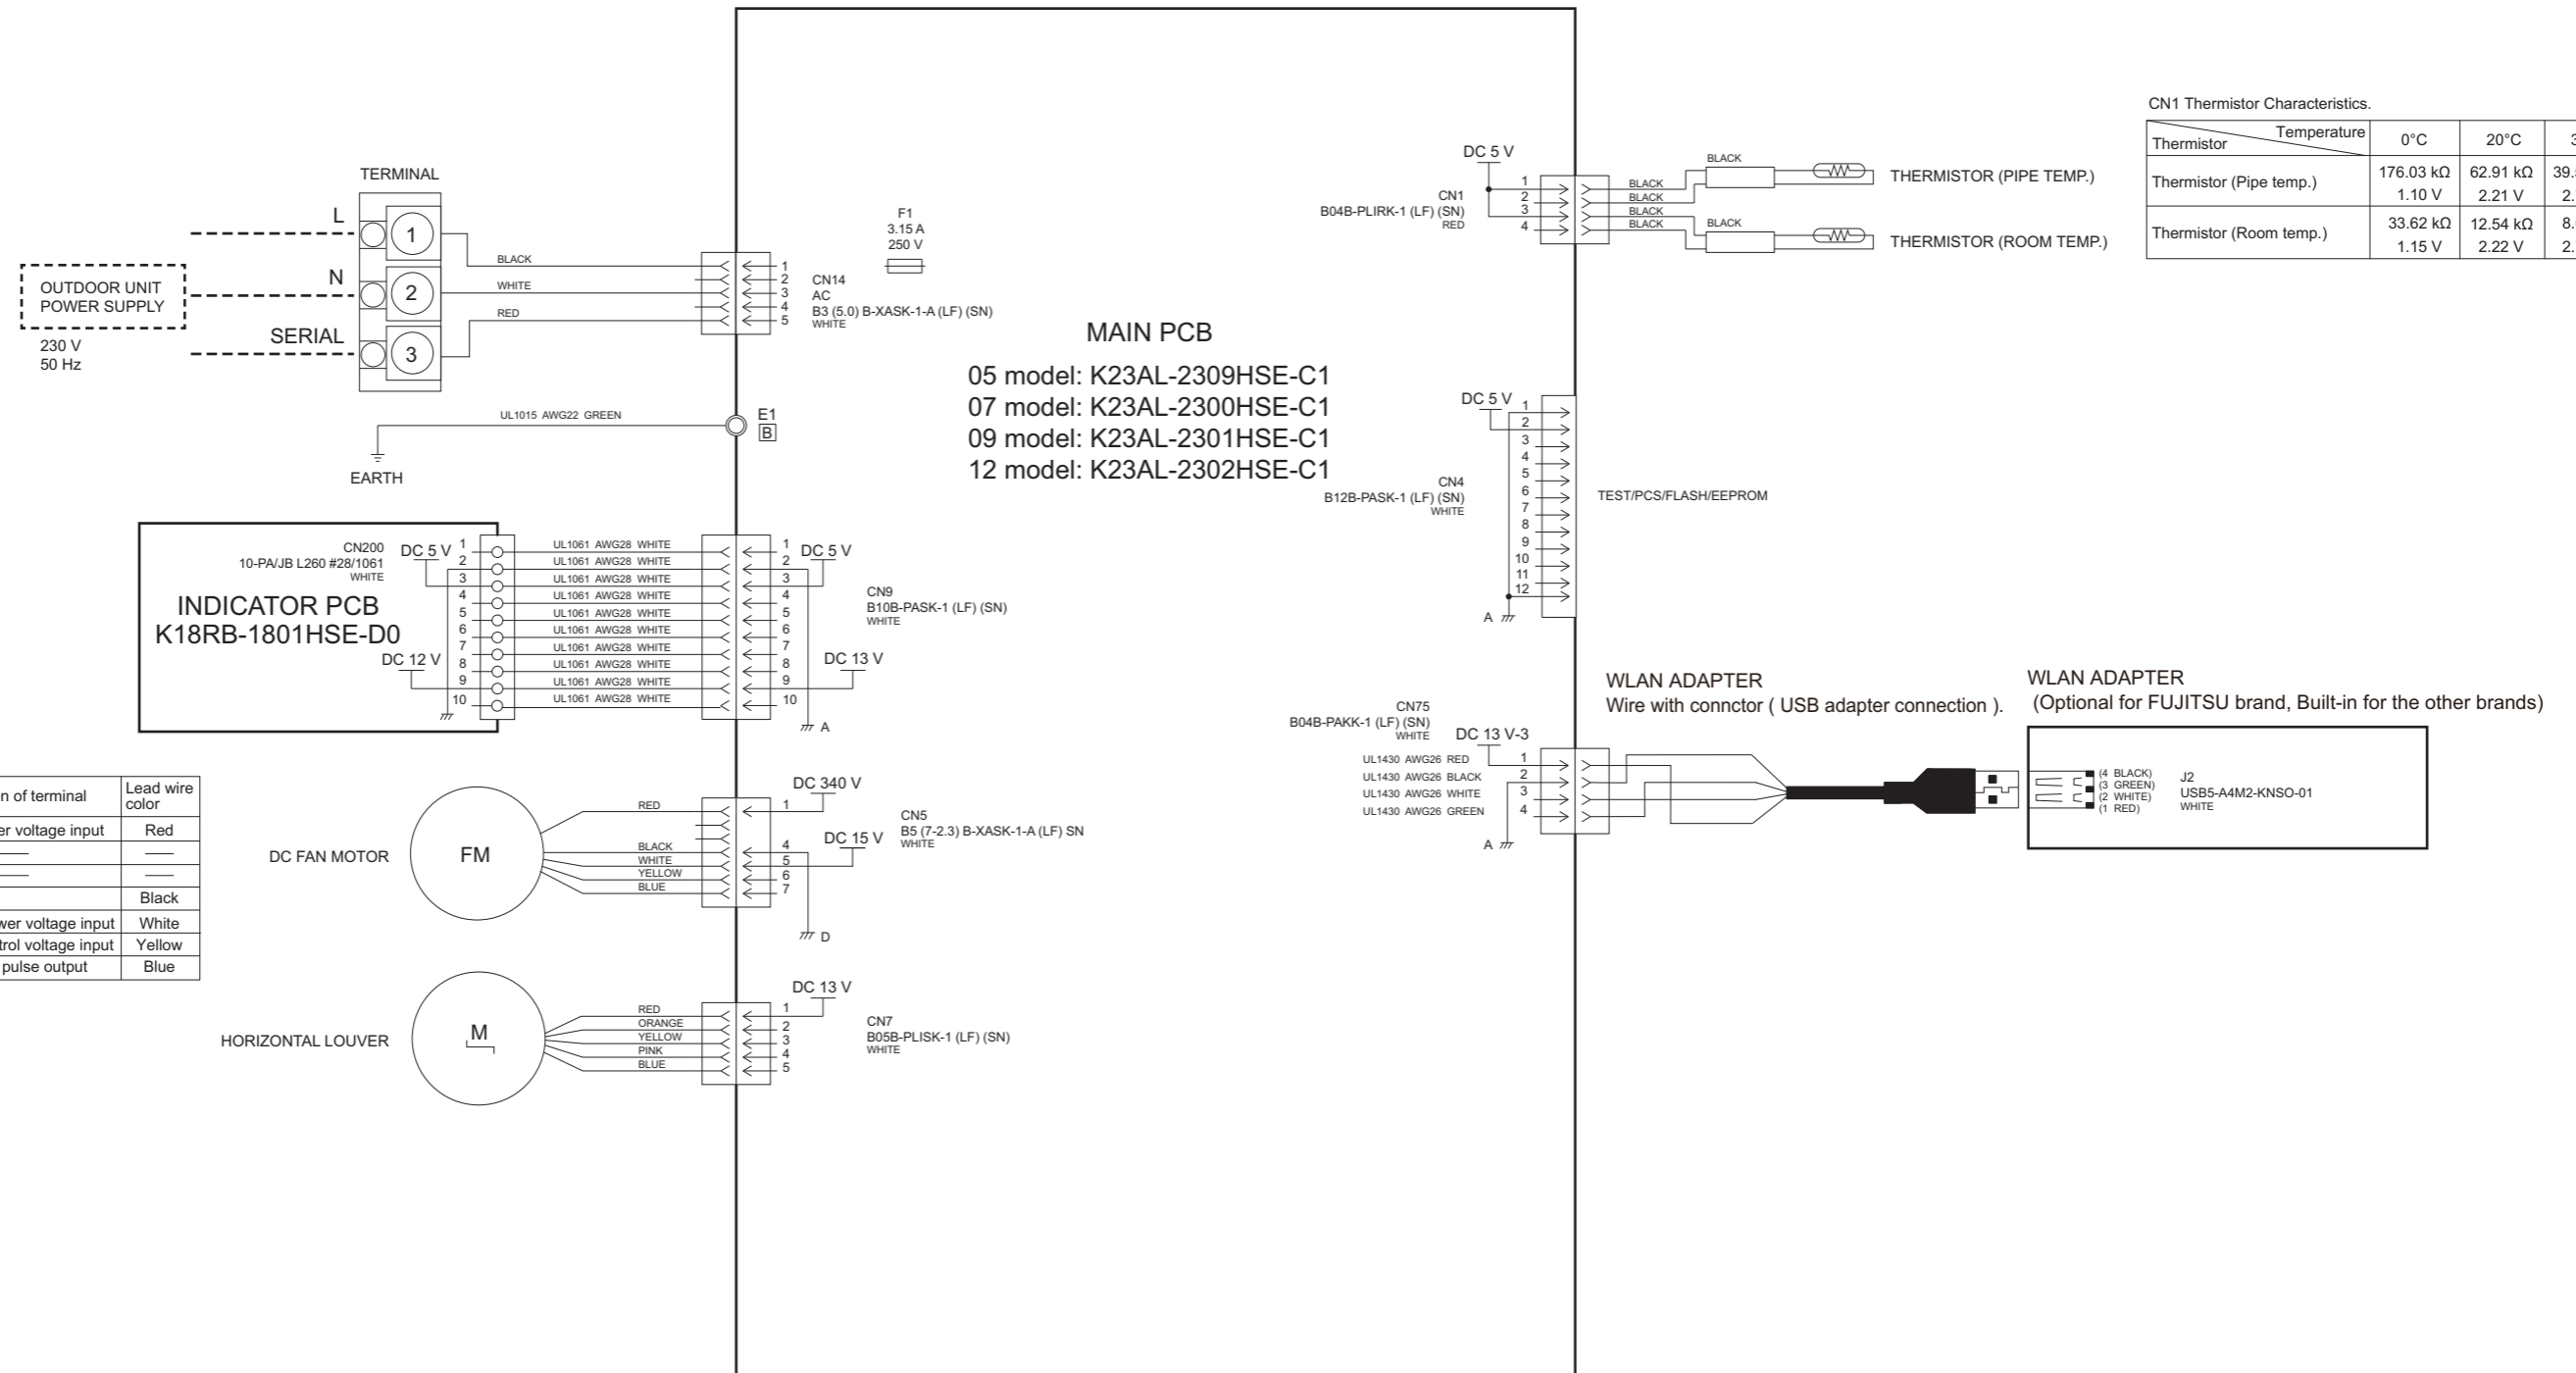

CN5 DC Fan motor

Pin No.	Terminal code	Function of terminal	Lead wire color
1	Vm	Motor power voltage input	Red
2			
3			
4	GND	GND	Black
5	Vcc	Control power voltage input	White
6	Vsp	Speed control voltage input	Yellow
7	FG	Revolution pulse output	Blue


TECHNICAL DATA AND PARTS LIST

TECHNICAL DATA AND PARTS LIST

# 8-2. Models: AOEH07KNCA, AOEH09KNCA, and AOEH12KNCA

TECHNICAL DATA AND PARTS LIST

TECHNICAL DATA AND PARTS LIST

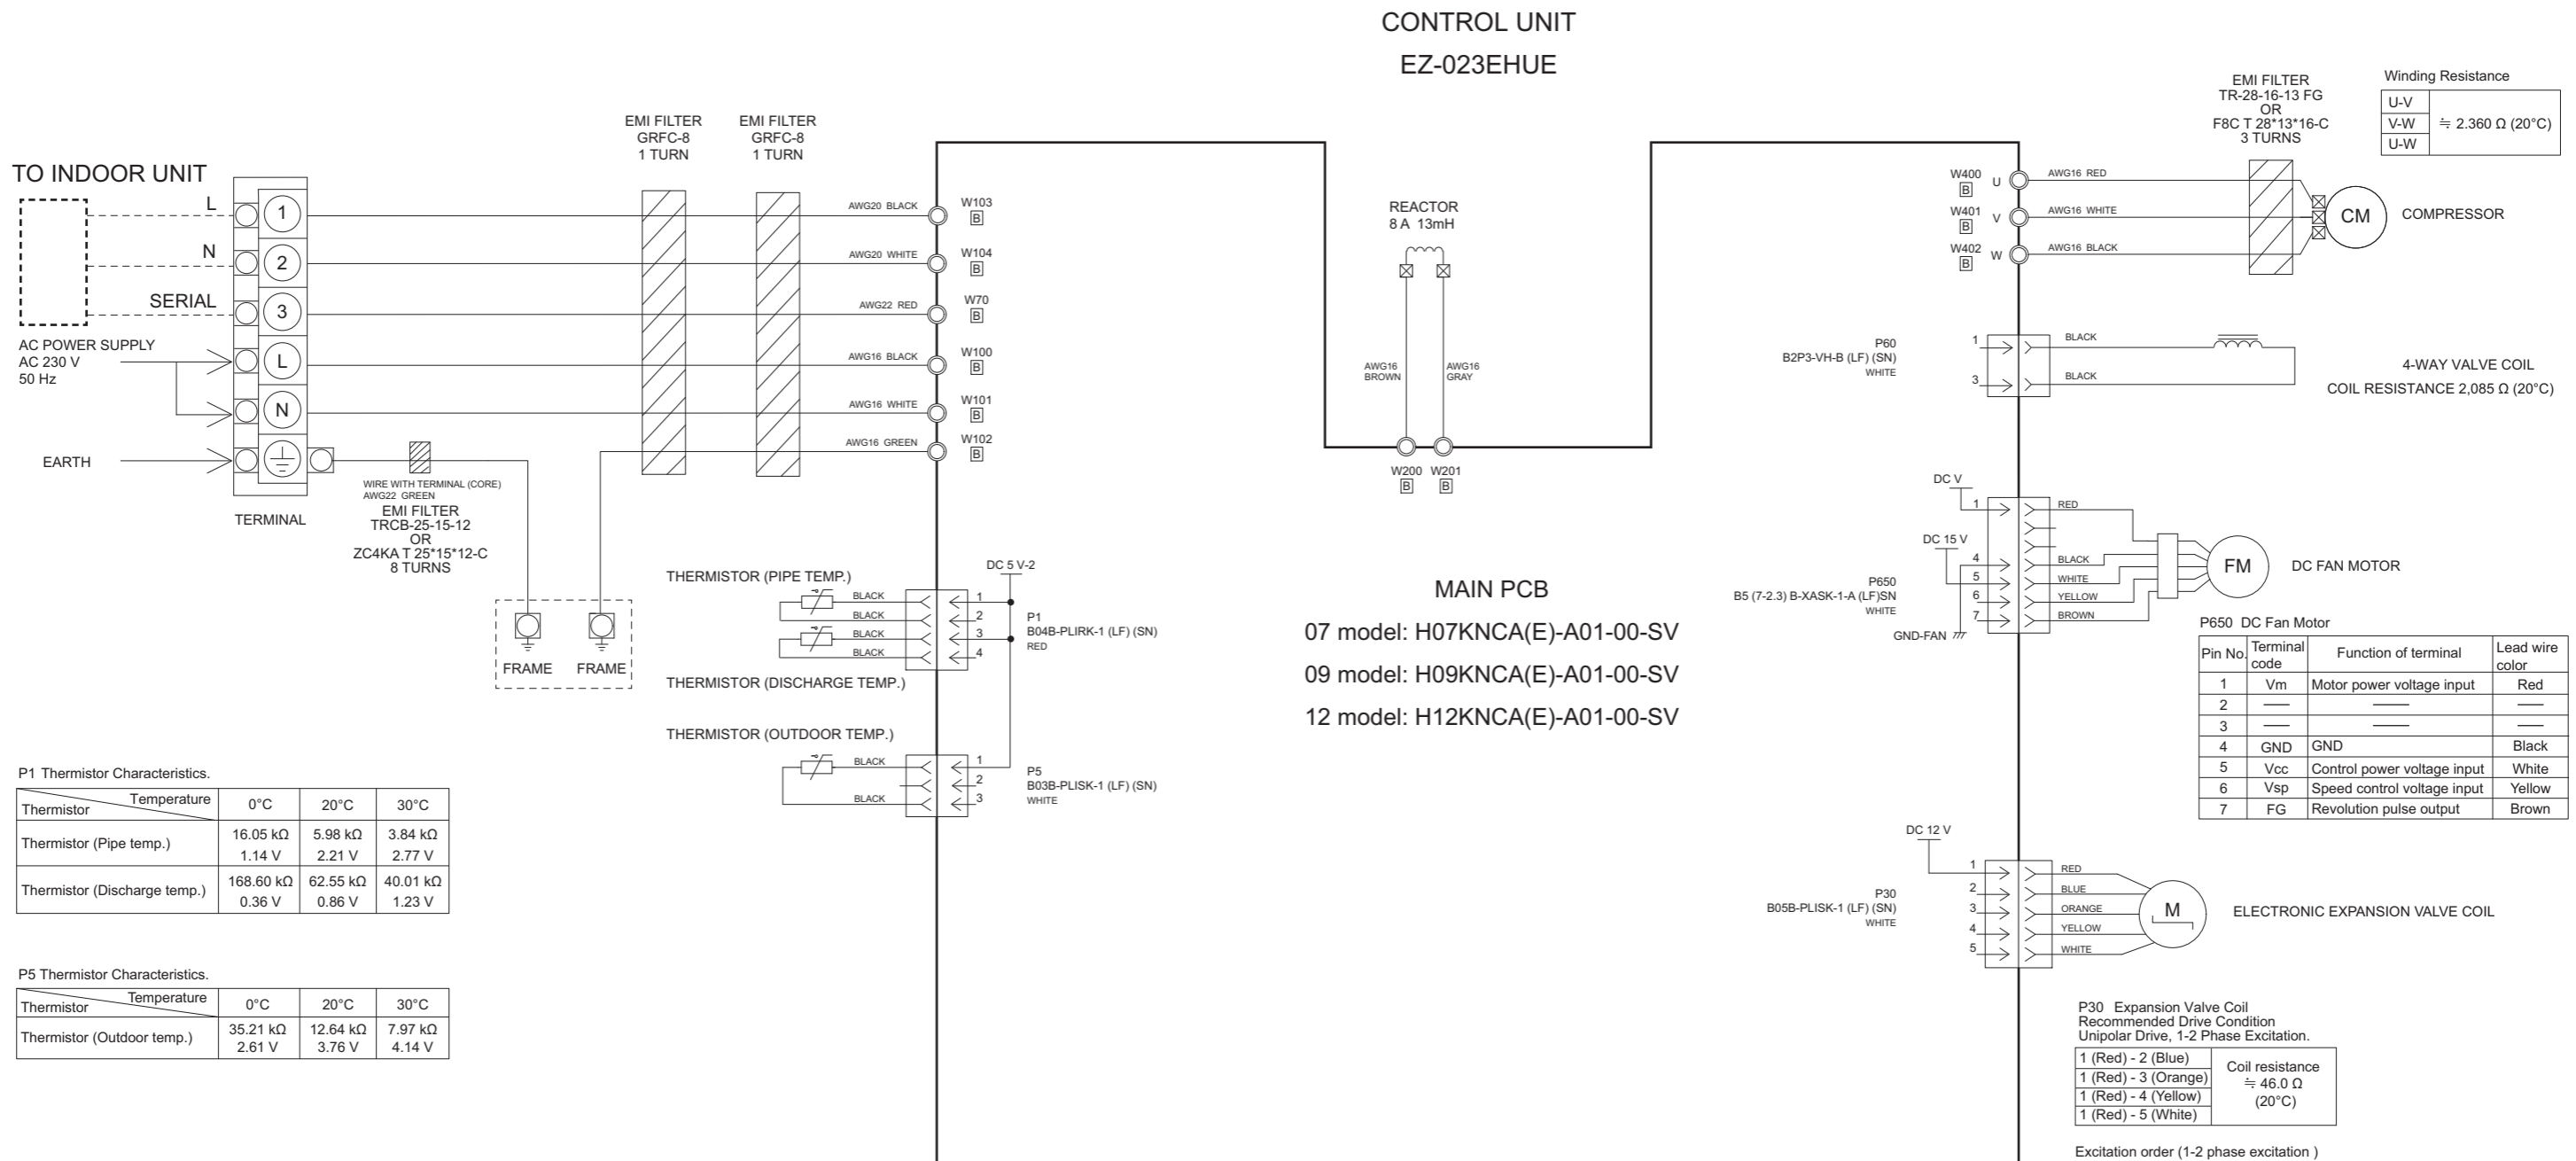

**P1 Thermistor Characteristics.**


Thermistor	Temperature	0°C	20°C	30°C
Thermistor (Pipe temp.)	Resistance	16.05 k $\Omega$	5.98 k $\Omega$	3.84 k $\Omega$
	Voltage	1.14 V	2.21 V	2.77 V
Thermistor (Discharge temp.)	Resistance	168.60 k $\Omega$	62.55 k $\Omega$	40.01 k $\Omega$
	Voltage	0.36 V	0.86 V	1.23 V

**P5 Thermistor Characteristics.**

Thermistor	Temperature	0°C	20°C	30°C
Thermistor (Outdoor temp.)	Resistance	35.21 k $\Omega$	12.64 k $\Omega$	7.97 k $\Omega$
	Voltage	2.61 V	3.76 V	4.14 V

**Excitation order (1-2 phase excitation)**

Connector terminal No.	Lead wire color	Phase	Excitation state								
			1	2	3	4	5	6	7	8	
5	White	A	On	On	Off	Off	Off	Off	Off	Off	Off
4	Yellow	B	Off	On	On	On	Off	Off	Off	Off	Off
3	Orange	A	Off	Off	Off	On	On	On	Off	Off	Off
2	Blue	B	Off	Off	Off	Off	Off	On	On	On	Off
1	Red	COM(+)	-	-	-	-	-	-	-	-	-

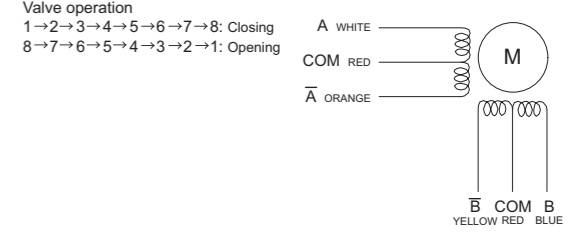

## 3. TROUBLESHOOTING

# CONTENTS

## 3. TROUBLESHOOTING

<b>1. Error code .....</b>	<b>03-1</b>
1-1. How to check the error memory.....	03-1
1-2. How to erase the error memory .....	03-1
1-3. Error code table (Indoor unit).....	03-2
1-4. Error code table (Wireless LAN indicator).....	03-3
1-5. How to check the error code on Mobile app .....	03-4
1-6. Error code table (Mobile app) .....	03-5
1-7. Error message for wireless LAN control (Mobile app).....	03-6
<b>2. Troubleshooting with error code .....</b>	<b>03-20</b>
2-1. E: 11. Serial communication error (Serial reverse transfer error) (Outdoor unit).....	03-20
2-2. E: 11. Serial communication error (Serial forward transfer error) (Indoor unit) .....	03-22
2-3. E: 32. Indoor unit main PCB error (Indoor unit) .....	03-24
2-4. E: 35. MANUAL AUTO button error (Indoor unit).....	03-25
2-5. E: 41. Room temperature sensor error (Indoor unit).....	03-26
2-6. E: 42. Indoor unit heat exchanger sensor error (Indoor unit) .....	03-27
2-7. E: 51. Indoor unit fan motor error (Indoor unit) .....	03-28
2-8. E: 62. Outdoor unit main PCB error (Outdoor unit).....	03-29
2-9. E: 64. PFC circuit error (Outdoor unit) .....	03-30
2-10. E: 65. IPM error (Outdoor unit) .....	03-31
2-11. E: 71. Discharge thermistor error (Outdoor unit).....	03-33
2-12. E: 73. Outdoor unit heat exchanger thermistor error (Outdoor unit).....	03-34
2-13. E: 74. Outdoor temperature thermistor error (Outdoor unit).....	03-35
2-14. E: 84. Current sensor error (Outdoor unit) .....	03-36
2-15. E: 94. Trip detection (Outdoor unit) .....	03-37
2-16. E: 95. Compressor motor control error (Outdoor unit) .....	03-38
2-17. E: 97. Outdoor unit fan motor error (Outdoor unit).....	03-39
2-18. E: 99. 4-way valve error (Outdoor unit).....	03-40
2-19. E: A1. Discharge temperature error (Outdoor unit).....	03-42
<b>3. Troubleshooting without error code.....</b>	<b>03-44</b>
3-1. Indoor unit—No power.....	03-44
3-2. Outdoor unit—No power .....	03-45
3-3. No operation (Power is on).....	03-46
3-4. No cooling/No heating .....	03-47
3-5. Abnormal noise.....	03-49
3-6. Water leaking.....	03-50
<b>4. Troubleshooting with error code (For wireless LAN adapter).....</b>	<b>03-51</b>
4-1. E: 18. External communication error between indoor unit and wireless LAN adapter...03-51	
4-2. Network communication error between wireless LAN router and wireless LAN adapter .....	03-52
4-3. E: 18. Communication error.....	03-54
4-4. E: 18. Wireless LAN adapter non-energized.....	03-56
4-5. Mobile app setting method.....	03-57

## CONTENTS (continued)

<b>5. Service parts information .....</b>	<b>03-59</b>
5-1. Compressor .....	03-59
5-2. Inverter compressor .....	03-60
5-3. Outdoor unit Electronic Expansion Valve (EEV) .....	03-61
5-4. Indoor unit fan motor .....	03-63
5-5. Outdoor unit fan motor .....	03-64
5-6. 4-way valve coil (solenoid coil)/4-way valve .....	03-65
<b>6. Thermistor resistance values .....</b>	<b>03-66</b>
6-1. Indoor unit .....	03-66
6-2. Outdoor unit .....	03-67



# 1. Error code

When a problem occurs in the system or the connected device, the error content is notified by displaying the code.

**NOTE:** This function is only available in a system with indoor or IR receiver units equipped with indicator lamps to show the error content.


Errors, once displayed, will be automatically stored in the PC board of the indoor unit. Even if the power is disconnected, the memory containing the error history will not be erased.

If another error occurs later, the stored error memory will be updated automatically and replaced with the new one. (Previous error will be erased.)

## 1-1. How to check the error memory

When an error occurs, the operation lamp (Green) and the timer lamp (Orange) indicate the error content by blinking. To check the error memory, follow the procedures below.

1. Stop the operation of the air conditioner, and then disconnect the power supply.
2. Reconnect the power supply.
3. In one of the following two methods, the memorized error is only displayed during the "3 minutes ST"\* state period.
  - Start the operation and then press the TEST RUN button on the remote controller.
  - Press the MANUAL AUTO button on the indoor unit for 10 seconds or more.

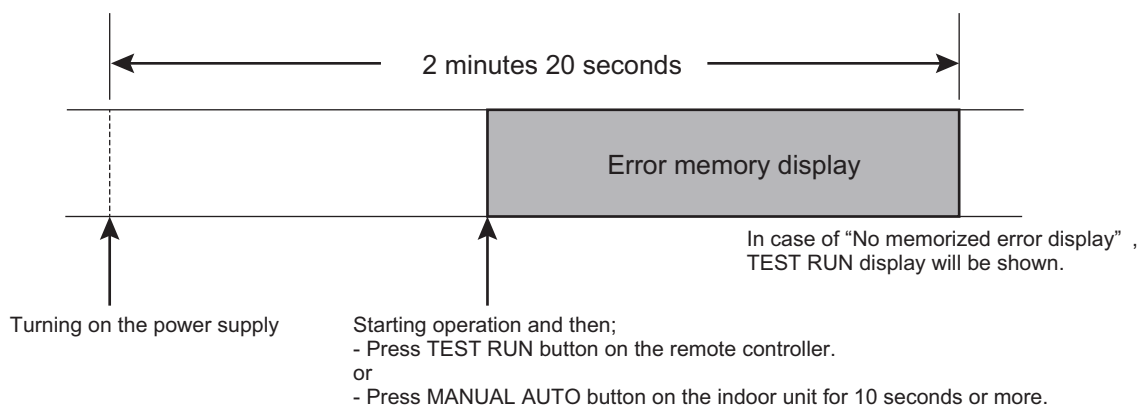

\*: The "3 minutes ST" period lasts 2 minutes and 20 seconds after turning on the power supply.

## 1-2. How to erase the error memory

The error memory can be erased in one of the following two methods.

- Manual erase: Pressing the MANUAL AUTO button on the indoor unit while the "Error memory display" is being shown. (Short beep emits for about 3 seconds.)
- Automatic erase: After continuing the normal operation of the air conditioner without error for 2 hours or longer after displaying the error memory as described in [How to check the error memory](#). (Except FAN operation mode.)

## 1-3. Error code table (Indoor unit)


The operation, timer, and economy indicators operate according to the error contents.

For confirmation of the error contents, refer the flashing pattern as follows.


Error contents	Indoor unit display		
	Operation [I] (Green)	Timer [⌚] (Orange)	Economy [⌚] (Green)
E: 11. Serial communication error (Serial reverse transfer error) (Outdoor unit)	1 times	1 times	Continuous
E: 11. Serial communication error (Serial forward transfer error) (Indoor unit)	1 times	1 times	Continuous
E: 18. External communication error between indoor unit and wireless LAN adapter	1 times	8 times	Continuous
E: 18. Communication error	1 times	8 times	Continuous
E: 18. Wireless LAN adapter non-energized	1 times	8 times	Continuous
E: 32. Indoor unit main PCB error (Indoor unit)	3 times	2 times	Continuous
E: 35. MANUAL AUTO button error (Indoor unit)	3 times	5 times	Continuous
E: 41. Room temperature sensor error (Indoor unit)	4 times	1 times	Continuous
E: 42. Indoor unit heat exchanger sensor error (Indoor unit)	4 times	2 times	Continuous
E: 51. Indoor unit fan motor error (Indoor unit)	5 times	1 times	Continuous
E: 62. Outdoor unit main PCB error (Outdoor unit)	6 times	2 times	Continuous
E: 64. PFC circuit error (Outdoor unit)	6 times	4 times	Continuous
E: 65. IPM error (Outdoor unit)	6 times	5 times	Continuous
E: 71. Discharge thermistor error (Outdoor unit)	7 times	1 times	Continuous
E: 73. Outdoor unit heat exchanger thermistor error (Outdoor unit)	7 times	3 times	Continuous
E: 74. Outdoor temperature thermistor error (Outdoor unit)	7 times	4 times	Continuous
E: 84. Current sensor error (Outdoor unit)	8 times	4 times	Continuous
E: 94. Trip detection (Outdoor unit)	9 times	4 times	Continuous
E: 95. Compressor motor control error (Outdoor unit)	9 times	5 times	Continuous
E: 97. Outdoor unit fan motor error (Outdoor unit)	9 times	7 times	Continuous
E: 99. 4-way valve error (Outdoor unit)	9 times	9 times	Continuous
E: A1. Discharge temperature error (Outdoor unit)	10 times	1 times	Continuous

# 1-4. Error code table (Wireless LAN indicator)

- Wireless LAN control system diagram example

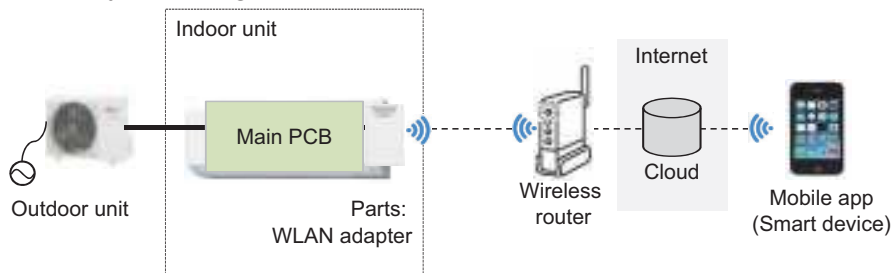

- Name of parts

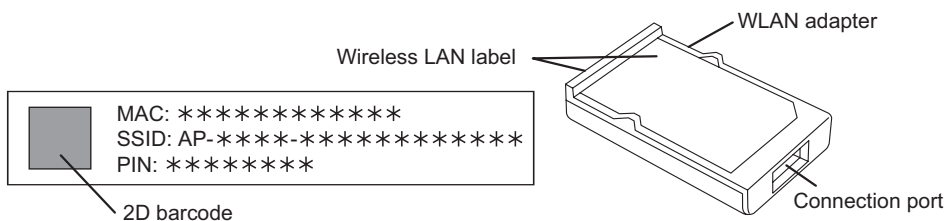

- Wireless LAN indicator lamps

For confirmation of the error contents, refer to the following flashing patterns.

Wireless LAN indicator lamp (orange) on the indoor unit operate according to the error contents.


Error contents	Wireless LAN indicator lamp (orange)	Error code
E: 18. External communication error between indoor unit and wireless LAN adapter	Flashing slowly	18
Network communication error between wireless LAN router and wireless LAN adapter	Flashing slowly	No error
E: 18. Communication error	Flashing slowly	18
E: 18. Wireless LAN adapter non-energized	Off	18


Flashing slowly: Repeating 7 seconds on/2 seconds off

TROUBLESHOOTING

TROUBLESHOOTING



# 1-5. How to check the error code on Mobile app

If there is an abnormality on the air conditioning, refer to  as follows.

When the  (error button) on the home screen is tapped, error code and error name is displayed.

TROUBLESHOOTING

TROUBLESHOOTING

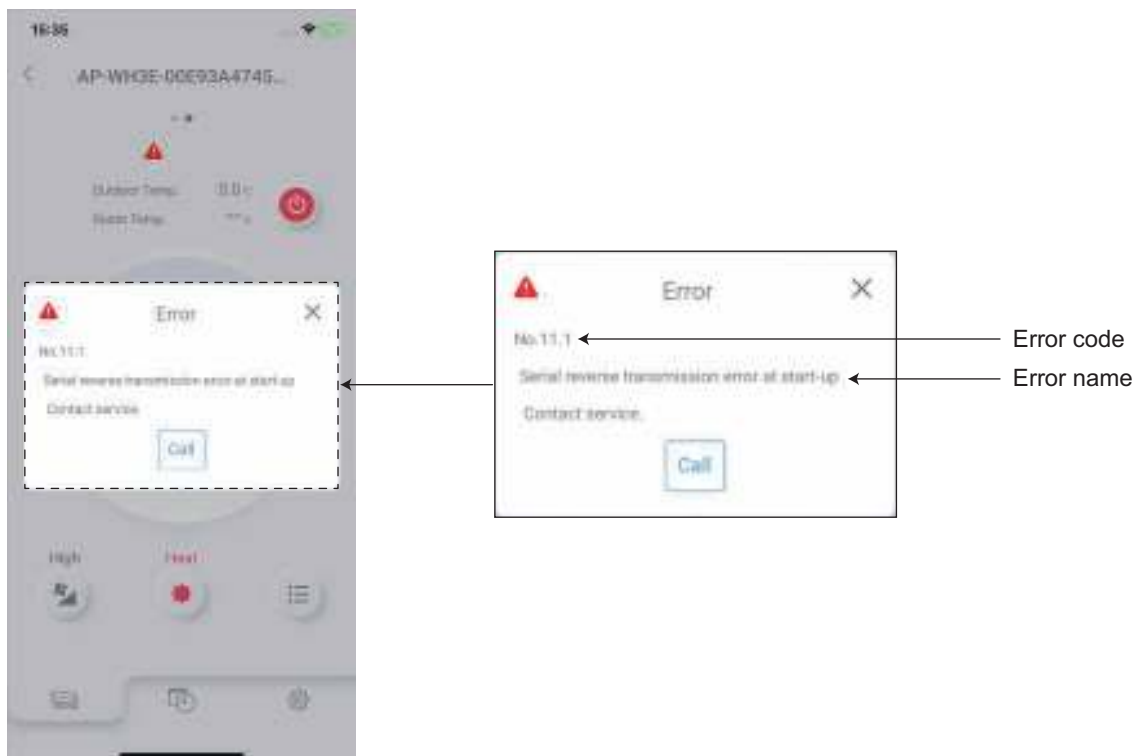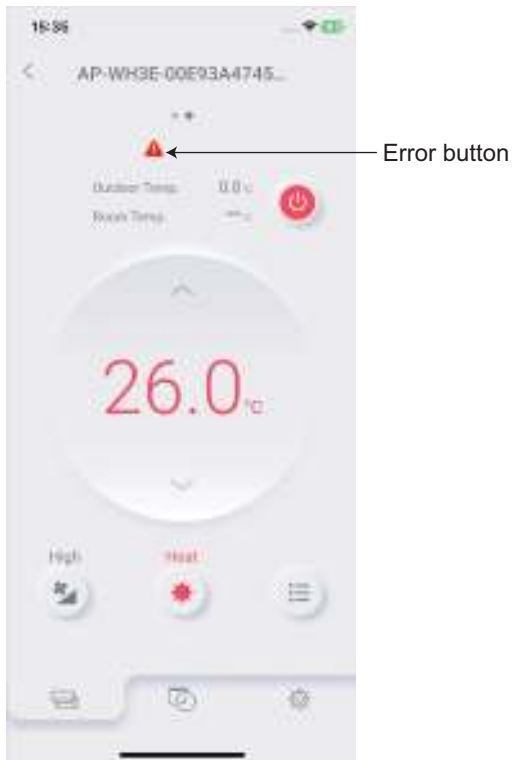


## 1-6. Error code table (Mobile app)

Error message	Error contents	Error code
Serial reverse transmission error at start-up	E: 11. Serial communication error (Serial reverse transfer error) (Outdoor unit)	11.1
Serial reverse transmission error during operation		11.2
Serial forward transmission error at start-up	E: 11. Serial communication error (Serial forward transfer error) (Indoor unit)	11.3
Serial forward transmission error during operation		11.4
External communication 1 error	E: 18. Communication error	18.1
Indoor unit PCB model information error	E: 32. Indoor unit main PCB error (Indoor unit)	32.1
Constant correction control error		32.6
Indoor unit manual auto switch error	E: 35. MANUAL AUTO button error (Indoor unit)	35.1
Indoor unit suction air temp. thermistor error	E: 41. Room temperature sensor error (Indoor unit)	41.1
Indoor unit heat ex. middle temp. thermistor error	E: 42. Indoor unit heat exchanger sensor error (Indoor unit)	42.2
Indoor unit fan motor 1 lock error	E: 51. Indoor unit fan motor error (Indoor unit)	51.1
Indoor unit fan motor 1 rotation speed error		51.2
Outdoor unit PCB model information error	E: 62. Outdoor unit main PCB error (Outdoor unit)	62.1
Outdoor unit PCB microcomputer communication error		62.2
Outdoor unit abnormal voltage error (permanent stop)	E: 64. PFC circuit error (Outdoor unit)	64.1
Outdoor unit abnormal voltage error (automatic restore)		64.3
Outdoor unit over current error (permanent stop)		64.4
Outdoor unit PFC hardware error		64.8
Outdoor unit trip terminal L error	E: 65. IPM error (Outdoor unit)	65.3
Outdoor unit discharge temp. thermistor 1 error	E: 71. Discharge thermistor error (Outdoor unit)	71.1
Outdoor unit heat ex. liquid temp. thermistor error	E: 73. Outdoor unit heat exchanger thermistor error (Outdoor unit)	73.3
Outside air temp. thermistor error	E: 74. Outdoor temperature thermistor error (Outdoor unit)	74.1
Outdoor unit current sensor 1 error (permanent stop)	E: 84. Current sensor error (Outdoor unit)	84.1
Outdoor unit trip detection	E: 94. Trip detection (Outdoor unit)	94.1
Outdoor unit compressor rotor position detection error (permanent stop)	E: 95. Compressor motor control error (Outdoor unit)	95.1
Outdoor unit fan motor 1 power source duty error	E: 97. Outdoor unit fan motor error (Outdoor unit)	97.3
Outdoor unit 4-way valve error	E: 99. 4-way valve error (Outdoor unit)	99.1
Outdoor unit discharge temperature 1 error (permanent stop)	E: A1. Discharge temperature error (Outdoor unit)	A1.1

## 1-7. Error message for wireless LAN control (Mobile app)

### ■ Error display

If there is an abnormality on the wireless control system, refer to error messages as follows.

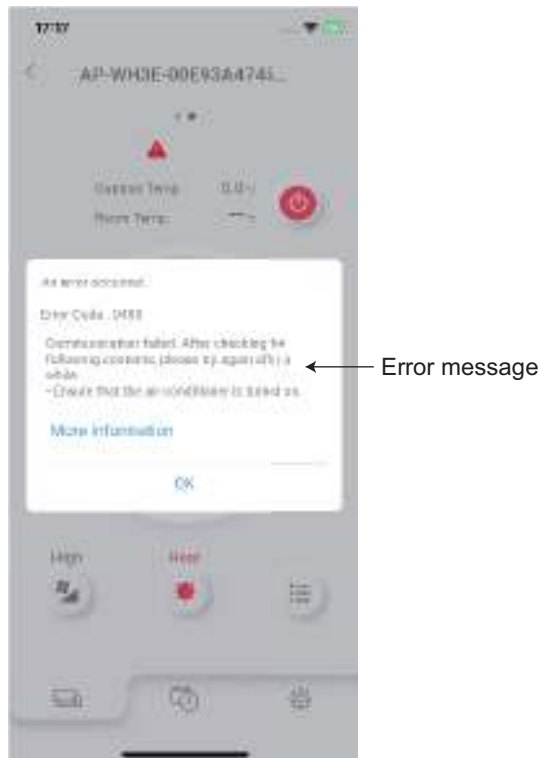

## ■ Error message list

- Registration error

Error code	Error message	Cause
		Solution
2400	<p>Communication failed. After checking the following contents, please try again after a while.</p> <ul style="list-style-type: none"> <li>• Ensure that the air conditioner is turned on.</li> </ul>	<p>Communication with the air conditioner failed.</p> <p>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</p> <ul style="list-style-type: none"> <li>• <b>When not lighting</b> <ul style="list-style-type: none"> <li>– Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>– Check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li>• <b>When lighting</b> <p>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</p> </li> <li>• <b>When blinking</b> <p>Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on.</p> </li> </ul>
		<p>Failed because the smartphone could not connect to the air conditioner.</p> <p>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</p> <ul style="list-style-type: none"> <li>• <b>When not lighting</b> <ol style="list-style-type: none"> <li>1. Check that the 2D barcode is for the air conditioner to be registered.</li> <li>2. Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>3. Check that the power plug of the air conditioner main unit is plugged in.</li> <li>4. Retry the connection step procedure for the air conditioner registration displayed in the application to set the lamp to the blinking state.</li> </ol> </li> <li>• <b>When lighting or blinking</b> <ol style="list-style-type: none"> <li>1. Check that the 2D barcode is for the air conditioner to be registered.</li> <li>2. Check that the wireless LAN setting of smartphone is set to ON.</li> </ol> </li> </ul>
2930	<p>Cannot connect to your air conditioner. Check if the WiFi setting of the mobile device is turned on.</p> <p>When problems are not resolved, there may be other causes. Tap the link below to check other solutions.</p>	<p>Failed because the smartphone could not connect to the air conditioner.</p> <p>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</p> <ul style="list-style-type: none"> <li>• <b>When not lighting</b> <ol style="list-style-type: none"> <li>1. Check that the 2D barcode is for the air conditioner to be registered.</li> <li>2. Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>3. Check that the power plug of the air conditioner main unit is plugged in.</li> <li>4. Retry the connection step procedure for the air conditioner registration displayed in the application to set the lamp to the blinking state.</li> </ol> </li> <li>• <b>When lighting or blinking</b> <ol style="list-style-type: none"> <li>1. Check that the 2D barcode is for the air conditioner to be registered.</li> <li>2. Check that the wireless LAN setting of smartphone is set to ON.</li> </ol> </li> </ul>
		<p>Failed because the smartphone could not connect to the air conditioner.</p> <p>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</p> <ul style="list-style-type: none"> <li>• <b>When not lighting</b> <ol style="list-style-type: none"> <li>1. Check that the 2D barcode is for the air conditioner to be registered.</li> <li>2. Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>3. Check that the power plug of the air conditioner main unit is plugged in.</li> <li>4. Retry the connection step procedure for the air conditioner registration displayed in the application to set the lamp to the blinking state.</li> </ol> </li> <li>• <b>When lighting or blinking</b> <ol style="list-style-type: none"> <li>1. Check that the 2D barcode is for the air conditioner to be registered.</li> <li>2. Check that the wireless LAN setting of smartphone is set to ON.</li> </ol> </li> </ul>

Error code	Error message	Cause
		Solution
2931	WLAN adapter password is wrong. Enter it again. When problems are not resolved, there may be other causes. Tap the link below to check other solutions.	Failed because the smartphone could not connect to the air conditioner. Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.
		<ul style="list-style-type: none"> <li>• <b>When not lighting</b> <ol style="list-style-type: none"> <li>1. Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>2. Check that the power plug of the air conditioner main unit is plugged in.</li> <li>3. Retry the connection step procedure for the air conditioner registration displayed in the application to set the lamp to the blinking state.</li> </ol> </li> <li>• <b>When lighting or blinking</b> <ol style="list-style-type: none"> <li>1. Check that the entered SSID and PIN numbers of WLAN Adapter are correct.</li> <li>2. Check that the wireless LAN setting of smartphone is set to ON.</li> </ol> </li> </ul>
2932 2933	Failed to connect to wireless router. Check if the WiFi setting of the mobile device is turned on. When problems are not resolved, there may be other causes. Tap the link below to check other solutions.	<ul style="list-style-type: none"> <li>• Registration failed because the smartphone cannot connect to the network.</li> <li>• Connection to the WLAN Adapter was disconnected during processing.</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check that the wireless LAN setting of smartphone is set to ON.</li> <li>2. Check that the smartphone is connected to the Internet.</li> </ol>
2934	Wi-Fi router password is wrong. Tap “From the beginning” to enter it again. When problems are not resolved, there may be other causes. Tap the link below to check other solutions.	<ul style="list-style-type: none"> <li>• The wireless router password is not correct.</li> <li>• The air conditioner is not connected to the same wireless router as the smartphone.</li> </ul>
		Check the following contents and operate again. <ol style="list-style-type: none"> <li>1. Check that the wireless router password is correct.</li> <li>2. Check that the smartphone and the air conditioner are connected to the same wireless router.</li> <li>3. The wireless router encryption method WPA3 is not supported. Check if SSID other than WPA3 is selected.</li> <li>4. Check that the local network setting of the smartphone is “Enabled”. (Only for smartphones with iOS14 or later)</li> </ol>
2935 2937 2939 2941	Failed to register the air conditioner. Make sure the wireless router is connected to the Internet, and then tap “Re-register” to perform the registration process again. When problems are not resolved, there may be other causes. Tap the link below to check other solutions.	Registration failed because the air conditioner cannot connect to the Internet.
		Check the following contents and operate again. <ol style="list-style-type: none"> <li>1. Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet.</li> <li>2. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</li> <li>3. Check that the MAC address filter and privacy separator settings are not “enabled” on the wireless router.</li> </ol>

Error code	Error message	Cause
		Solution
2936 2940	Air conditioner registration failed. Tap "Re-register" and conduct the registration processing again. If not successful after multiple attempts, tap "From the beginning" and then initialize the WLAN and start over from the beginning.	<ul style="list-style-type: none"> <li>The air conditioner you are trying to register is already registered to another account.</li> <li>Registration failed because the air conditioner cannot connect to the Internet.</li> <li>Immediately after turning on the power of the air conditioner, wait for about 5 minutes before registering it.</li> </ul> <p>Check the following contents and operate again.</p> <ol style="list-style-type: none"> <li>Tap "Re-register" and conduct the registration processing again.</li> <li>Delete from another account or initialize the WLAN Adapter.</li> <li>Check that the wireless router is turned on.</li> <li>Check that wireless router is connected to the Internet. If not connected, reboot the wireless router. When rebooting does not solve the problem, contact the manufacturer of the wireless router.</li> <li>Check that the MAC address filter and privacy separator settings are not "enabled" on the wireless router.</li> </ol>
2938	Registration failed because the air conditioner could not connect to the Internet. Perform the WPS connection procedure again and confirm that the WLAN lamp on the indoor unit or LED2 on the WLAN adapter is lit before registering. When problems are not resolved, there may be other causes. Tap the link below to check other solutions.	<ul style="list-style-type: none"> <li>Registration failed because the air conditioner cannot connect to the Internet.</li> <li>Registration failed because the air conditioner is not connected to the same wireless router as the smartphone.</li> </ul> <p>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</p> <ul style="list-style-type: none"> <li><b>When not lighting</b> <ol style="list-style-type: none"> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> <li>Check that the wireless router is turned on.</li> <li>Retry the connection step procedure for the air conditioner registration displayed in the application and complete WPS connection with wireless router to set the lamp to the blinking state.</li> </ol> </li> <li><b>When lighting</b> <ol style="list-style-type: none"> <li>Check that the air conditioner and the smartphone are connected to the same wireless router.</li> <li>Check that the local network setting of the smartphone is "Enabled". (Only for smartphones with iOS14 or later)</li> </ol> </li> </ul>
2942	Your mobile device is not connected to WiFi. Connect to the target wireless router through the OS WiFi setting and restart the procedure. <ol style="list-style-type: none"> <li>Open the Wi-Fi setting screen of your device.</li> <li>Connect your mobile device to the {ssid}.</li> <li>Return to the application screen and tap "Re-register".</li> </ol> <p>When problems are not resolved, there may be other causes. Tap the link below to check other solutions.</p>	<p>Registration failed because the air conditioner cannot connect to the Internet.</p> <p>Check the following contents and operate again.</p> <ol style="list-style-type: none"> <li>Check that the wireless LAN setting of smartphone is set to ON.</li> <li>Check that the smartphone is connected to the Internet.</li> <li>Set the connection setting with the wireless router to Auto Connection in the smartphone settings.</li> <li>Check that the wireless router is turned on.</li> </ol>

Error code	Error message	Cause
		Solution
2944	Communication failed.	Registration may have failed because a problem occurred in communication with the server (cloud). Wait for a while and then operate again.
2946	The connected air conditioner cannot use the Direct control.	Your air conditioner does not support Direct Control. Operate the air conditioner with Cloud Control.
2947	Already reached the max number of air conditioners per user.	The number of air conditioners that can be registered on AIRSTAGE Mobile has reached the maximum limit. Check the number of air conditioners registered on AIRSTAGE Mobile. (Maximum number of registered units: 50 units for Cloud Control, 50 units for Direct Control) Delete the unused air conditioners on the "Air conditioner editing" screen before registration.
2949	The number of air conditioners registered by the entered user has reached the upper limit, so registration is not possible.	The number of sub users that can be registered has reached the maximum limit. Check the number of registered sub users. (Maximum number of registered sub users: 4 sub users) Delete the unused sub users on the "Sub User Registration" screen.
2953	The specified air conditioner is already registered. To Reregister, delete the air conditioner information on the air conditioner edit screen and initialize the wireless LAN adapter with the remote control.	The specified air conditioner was already registered.  Check that the specified air conditioner is displayed on the air conditioner list screen. To register again, delete the air conditioner on the air conditioner editing screen.
2954	The wireless router to which the mobile device and the wireless LAN adapter are connected must be the same. Follow the steps below. 1. Please open the Wi-Fi setting screen of the mobile device. 2. Connect your mobile device to the wireless router that you pressed the automatic connection button. 3. Return to the app screen and tap "OK".	The air conditioner and the smartphone are not connected to the same wireless router network.  Check the following contents and operate again. 1. Check that the wireless LAN setting of smartphone is set to ON. 2. Check that the smartphone is connected to the Internet. 3. Check that the wireless router is turned on. 4. Check that the air conditioner and the smartphone are connected to the same wireless router.

## • Sign in error

Error code	Error message	Cause
		Solution
4010 4410 4610 4810 4910	Communication failed. After checking the following contents, please try again after a while. • Ensure that your mobile device is connected to the internet.	Various settings could not be completed because communication with the server (cloud) failed.
		Check the following contents and operate again. 1. Check that the wireless LAN setting of smartphone is set to ON. 2. Check that the smartphone is connected to the Internet. 3. Check that the wireless router is turned on.
4100	The account you are currently signed in to may have been deleted. If necessary, please create the account again.	Token has been disabled because the signed-in account has been deleted or certain amount of time has elapsed.
		Restart the application and check that you can sign in. If you cannot sign in, create the account again.
4101	The session has expired. Please sign in again to continue.	Token has been disabled because the signed-in account has been deleted or certain amount of time has elapsed.
		Restart the application and check that you can sign in. If you cannot sign in, create the account again.
4102	Your session has expired. Please sign in again. *If you cannot sign in, your account may have been deleted. If necessary, please create an account again.	Token has been disabled because the signed-in account has been deleted or certain amount of time has elapsed.
		Restart the application and check that you can sign in. If you cannot sign in, create the account again.
4110	Failed to connect to the server. Some functions can be used with Direct Control. Do you want to switch to direct control?	• Communication with the server (cloud) failed at sign in. • Registration process of Account registration procedure verification email has not been completed.
		Check the following contents and sign in again. 1. Check that the wireless LAN setting of smartphone is set to ON. 2. Check that the smartphone is connected to the Internet. 3. Check that the wireless router is turned on. 4. Tap the link of Account registration procedure verification email and check that registration process has completed.
4111	Failed to read the device. Since some functions are available in Direct control, switch to Direct control.	Air conditioner information could not be obtained because communication with the server (cloud) failed after sign in.
		Check the following contents and sign in again. 1. Check that the wireless LAN setting of smartphone is set to ON. 2. Check that the smartphone is connected to the Internet. 3. Check that the wireless router is turned on.
4112	Failed to connect to the server. Some functions are limited.	• Communication with the server (cloud) failed at sign in. • Registration process of Account registration procedure verification email has not been completed.
		Check the following contents and sign in again. 1. Check that the wireless LAN setting of smartphone is set to ON. 2. Check that the smartphone is connected to the Internet. 3. Check that the wireless router is turned on. 4. Tap the link of Account registration procedure verification email and check that registration process has completed.
4113	Failed to connect to the server. Would you like to sign in again? Yes: Sign in again No: Return to the sign-in screen	Air conditioner information could not be obtained because communication with the server (cloud) failed after sign in.
		Check the following contents and sign in again. 1. Check that the wireless LAN setting of smartphone is set to ON. 2. Check that the smartphone is connected to the Internet. 3. Check that the wireless router is turned on.

Error code	Error message	Cause
		Solution
4420	Loading of user information failed. Check the following contents. <ul style="list-style-type: none"> <li>Check that your mobile device is connected to the internet.</li> </ul>	User information or temperature unit information could not be obtained because communication with the server (cloud) failed.
		Check the following contents and operate again. <ol style="list-style-type: none"> <li>Check that the wireless LAN setting of smartphone is set to ON.</li> <li>Check that the smartphone is connected to the Internet.</li> <li>Check that the wireless router is turned on.</li> </ol>
4530	Password update failed. Please check if the entered current password is correct.	Password update failed because the entered password was not correct.
		Check that the entered "Current password" is correct and operate again.
4920	Loading of time zone failed. Check the following contents. <ul style="list-style-type: none"> <li>Check that your mobile device is connected to the internet.</li> </ul>	Time zone information could not be obtained because communication with server (cloud) failed.
		Check the following contents and operate again. <ol style="list-style-type: none"> <li>Check that the wireless LAN setting of smartphone is set to ON.</li> <li>Check that the smartphone is connected to the Internet.</li> <li>Check that the wireless router is turned on.</li> </ol>

- General error

Error code	Error message	Cause
		Solution
0100 0200 0300 0400 0500 0501 0600 0601 0800 0900 1000 1200 1400 1500 3200 5500 5700 5900 6200	Communication failed. After checking the following contents, please try again after a while. <ul style="list-style-type: none"> <li>• Ensure that the air conditioner is turned on.</li> </ul>	<p>Communication with the air conditioner failed.</p> <p>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</p> <ul style="list-style-type: none"> <li>• <b>When not lighting</b> <ul style="list-style-type: none"> <li>– Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>– Check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li>• <b>When lighting</b> <p>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</p> </li> </ul>
0810 0811 0812 1510 1511 1512 3010 5510 5520 5530 6001 6002 6003 6010 6011 6012 6013 6310	Communication failed. After checking the following contents, please try again after a while. <ul style="list-style-type: none"> <li>• Ensure that your mobile device is connected to the internet.</li> </ul>	<ul style="list-style-type: none"> <li>• Various settings could not be completed because communication with the server (cloud) failed.</li> <li>• Air conditioner information could not be obtained because communication with server (cloud) failed.</li> </ul> <p>Check the following contents and operate again.</p> <ol style="list-style-type: none"> <li>1. Check that the wireless LAN setting of smartphone is set to ON.</li> <li>2. Check that the smartphone is connected to the Internet.</li> <li>3. Check that the wireless router is turned on.</li> </ol>

Error code	Error message	Cause
		Solution
0820	<p>Loading of outdoor low noise timer failed. Check the following contents.</p> <ul style="list-style-type: none"> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	<p>The outdoor unit low noise timer information could not be obtained because communication with the server (cloud) failed.</p> <p>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</p> <ul style="list-style-type: none"> <li><b>When not lighting</b> <ul style="list-style-type: none"> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li><b>When lighting</b> <p>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</p> </li> <li><b>When blinking</b> <p>Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on.</p> </li> </ul>
1520	<p>Loading of weekly timer failed. Check the following contents.</p> <ul style="list-style-type: none"> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	<p>The weekly timer setting information could not be obtained because communication with the server (cloud) failed.</p> <p>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</p> <ul style="list-style-type: none"> <li><b>When not lighting</b> <ul style="list-style-type: none"> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li><b>When lighting</b> <p>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</p> </li> <li><b>When blinking</b> <p>Wait for a while until the lamp lights and then operate again. If the lamp is still blinking after waiting for a while, check that the wireless router is turned on.</p> </li> </ul>

Error code	Error message	Cause
		Solution
1720	<p>Loading of error history failed. Check the following contents.</p> <ul style="list-style-type: none"> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	<p>The error history information could not be obtained because communication with the server (cloud) failed.</p> <p>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</p> <ul style="list-style-type: none"> <li><b>When not lighting</b> <ul style="list-style-type: none"> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Or check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li><b>When lighting</b> <p>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</p> </li> <li><b>When blinking</b> <p>Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on.</p> </li> </ul>
		<p>Air conditioner group setting has not been completed because communication with air conditioner failed.</p> <p>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</p> <ul style="list-style-type: none"> <li><b>When not lighting</b> <ul style="list-style-type: none"> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li><b>When lighting</b> <p>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</p> </li> <li><b>When blinking</b> <p>Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on.</p> </li> </ul>
3110	<p>Communication failure prevented the group movement processing from being conducted. After checking the following contents, please try again after a while.</p> <ul style="list-style-type: none"> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	<p>Air conditioner group setting has not been completed because communication with air conditioner failed.</p> <p>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</p> <ul style="list-style-type: none"> <li><b>When not lighting</b> <ul style="list-style-type: none"> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li><b>When lighting</b> <p>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</p> </li> <li><b>When blinking</b> <p>Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on.</p> </li> </ul>

Error code	Error message	Cause
		Solution
3111	<p>Communication failure prevented the group creation processing from being conducted. After checking the following contents, please try again after a while.</p> <ul style="list-style-type: none"> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	<p>Air conditioner group setting has not been completed because communication with air conditioner failed.</p> <p>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</p> <ul style="list-style-type: none"> <li><b>When not lighting</b> <ul style="list-style-type: none"> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li><b>When lighting</b> <p>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</p> </li> <li><b>When blinking</b> <p>Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on.</p> </li> </ul>
3112	<p>Communication failure prevented the group name change processing from being conducted. After checking the following contents, please try again after a while.</p> <ul style="list-style-type: none"> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	<p>Air conditioner group setting has not been completed because communication with air conditioner failed.</p> <p>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</p> <ul style="list-style-type: none"> <li><b>When not lighting</b> <ul style="list-style-type: none"> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li><b>When lighting</b> <p>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</p> </li> <li><b>When blinking</b> <p>Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on.</p> </li> </ul>

Error code	Error message	Cause
		Solution
3113	<p>Communication failure prevented the group deletion processing from being conducted. After checking the following contents, please try again after a while.</p> <ul style="list-style-type: none"> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	<p>Air conditioner group setting has not been completed because communication with air conditioner failed.</p> <p>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</p> <ul style="list-style-type: none"> <li><b>When not lighting</b> <ul style="list-style-type: none"> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li><b>When lighting</b> <p>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</p> </li> <li><b>When blinking</b> <p>Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on.</p> </li> </ul>
3114	<p>The room temperature display indoor unit setting could not be made due to a communication failure. After checking the following contents, please try again after a while.</p> <ul style="list-style-type: none"> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	<p>Air conditioner group setting has not been completed because communication with air conditioner failed.</p> <p>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</p> <ul style="list-style-type: none"> <li><b>When not lighting</b> <ul style="list-style-type: none"> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li><b>When lighting</b> <p>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</p> </li> <li><b>When blinking</b> <p>Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on.</p> </li> </ul>

Error code	Error message	Cause
		Solution
3115	Some device group move processing could not be conducted due to communication failure. After checking the following contents, please try again after a while. <ul style="list-style-type: none"> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	Air conditioner group setting has not been completed because communication with air conditioner failed.
		Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again. <ul style="list-style-type: none"> <li><b>When not lighting</b> <ul style="list-style-type: none"> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li><b>When lighting</b> <p>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</p> </li> <li><b>When blinking</b> <p>Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on.</p> </li> </ul>
5320	Loading of air conditioner information failed. Check the following contents. <ul style="list-style-type: none"> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	Air conditioner information could not be obtained because communication with server (cloud) failed.
		<ol style="list-style-type: none"> <li>Check that the wireless LAN setting of smartphone is set to ON.</li> <li>Check that the smartphone is connected to the Internet.</li> <li>Check that the wireless router is turned on.</li> </ol>
5531 5540	New firmware update failed.	Firmware update failed.
		Check the following contents and operate again. <ol style="list-style-type: none"> <li>Check that the wireless LAN setting of smartphone is set to ON.</li> <li>Check that the smartphone is connected to the Internet.</li> <li>Check that the wireless router is turned on.</li> <li>Refer to the operation manual of air conditioner and check the indicator lamp state of air conditioner indoor unit.</li> </ol>
5601	Failed to get the air conditioner information.	Failed to obtain air conditioner information by Direct Control.
		Sign in again.
5602	Failed to add the air conditioner.	Failed to add air conditioner by Direct Control.
		Check the following contents and operate again. <ol style="list-style-type: none"> <li>When 2D barcode label is used, scan 2D barcode label again.</li> <li>When 2D barcode label is not used, check that the entered SSID or PIN code is correct.</li> </ol>
5630	Device disconnection failed. After checking the following contents, please try again after a while. <ul style="list-style-type: none"> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	Failed to disconnect the connection with air conditioner by Direct Control.
		Check the following contents and operate again. <ol style="list-style-type: none"> <li>Check that the smartphone is connected with the air conditioner.</li> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ol>

Error code	Error message	Cause
		Solution
6201	Failed to update the screen. After checking the following contents, please try again after a while. <ul style="list-style-type: none"> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	Various settings could not be completed because communication with the server (cloud) failed.
		Check the following contents and operate again. <ol style="list-style-type: none"> <li>Check that the wireless LAN setting of smartphone is set to ON.</li> <li>Check that the smartphone is connected to the Internet.</li> <li>Check that the wireless router is turned on.</li> </ol>
7610	Communication failed. Check the following contents. <ul style="list-style-type: none"> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	Various settings could not be completed because communication with the server (cloud) failed.
		Check the following contents and operate again. <ol style="list-style-type: none"> <li>Check that the wireless LAN setting of smartphone is set to ON.</li> <li>Check that the smartphone is connected to the Internet.</li> <li>Check that the wireless router is turned on.</li> </ol>

## 2. Troubleshooting with error code

### 2-1. E: 11. Serial communication error (Serial reverse transfer error) (Outdoor unit)

Indicator	Indoor unit	Operation indicator	1 time flash
		Timer indicator	1 time flash
		Economy indicator	Continuous flash
		Error code	E: 11
Detective actuator	Outdoor unit	Main PCB	When the indoor unit cannot receive the serial signal from outdoor unit more than 2 minutes after power on, or the indoor unit cannot receive the serial signal more than 15 seconds during normal operation.
		Fan motor	
Forecast of cause		Connection failure	
		External cause	
		Main PCB failure	
		Outdoor unit fan motor failure	

Check point 1. Reset the power and operate

Does error indication show again?

→ If no, go to "Check point 1-2".



Check point 2. Check connection

Check any loose or removed connection line of indoor unit and outdoor unit.

Check connection condition is control unit. (If there is loose connector, open cable or mis-wiring.)


→ If there is an abnormal condition, correct it by referring to the installation manual or the "DESIGN & TECHNICAL MANUAL".



Check point 3. Check the voltage of power supply


Check the voltage of power supply

Check if AC 198 V (AC 220 V -10%) to AC 264 V (AC 240 V +10%) appears at outdoor unit terminal L—N.

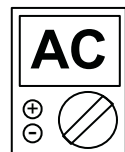

## Check point 4. Check serial signal (Reverse transfer signal)

Check serial signal (Reverse transfer signal)

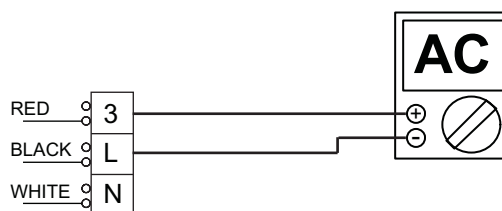

- Check if indicated value swings between AC 90 V and AC 270 V at the outdoor unit terminal 1—3.
- If it is abnormal, check the parts below.
  - Outdoor unit fan motor
- If outdoor fan motor is abnormal, replace outdoor unit fan motor and main PCB.
- If the checked parts are normal, replace the main PCB.



**End**

## Check point 1-2. Check external cause such as noise

- Check the complete insulation of the grounding.
- Check if there is any equipment that causes harmonic wave near the power cable (Neon light bulb or any electronic equipment which causes harmonic wave).



**End**

## 2-2. E: 11. Serial communication error (Serial forward transfer error) (Indoor unit)

Indicator	Indoor unit	Operation indicator	1 time flash
		Timer indicator	1 time flash
		Economy indicator	Continuous flash
		Error code	E: 11
Detective actuator	Indoor unit	Main PCB	When the outdoor unit cannot properly receive the serial signal from indoor unit for 10 seconds or more.
		Fan motor	
	Outdoor unit	Main PCB	
Forecast of cause			Connection failure
			External cause
			Main PCB failure

### Check point 1. Reset the power and operate

Does error indication show again?  
→ If no, go to "Check point 1-2".




### Check point 2. Check connection

Check any loose or removed connection line of indoor unit and outdoor unit.  
→ If there is an abnormal condition, correct it by referring to the installation manual or the "DESIGN & TECHNICAL MANUAL".  
Check connection condition is control unit. (If there is loose connector, open cable or mis-wiring.)




### Check point 3. Check the voltage of power supply

Check the voltage of power supply  
Check if AC 198 V (AC 220 V -10%) to AC 264 V (AC 240 V +10%) appears at outdoor unit terminal L—N.

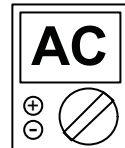

## Check point 4. Check serial signal (Forward transfer signal)

Check serial signal (Forward transfer signal)

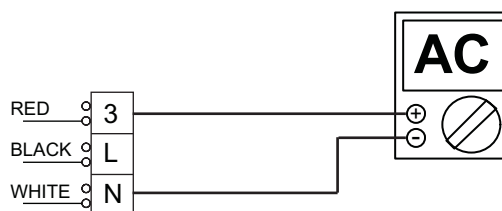

- Check if indicated value swings between AC 30 V and AC 130 V at outdoor unit terminal 2—3.
- If it is abnormal, replace main PCB.



**End**

## Check point 1-2. Check external cause such as noise

- Check if the ground connection is proper.
- Check if there is any equipment that causes harmonic wave near the power cable (Neon light bulb or any electronic equipment which causes harmonic wave).



**End**

## 2-3. E: 32. Indoor unit main PCB error (Indoor unit)

Indicator	Indoor unit	Operation indicator	3 time flash
		Timer indicator	2 time flash
		Economy indicator	Continuous flash
		Error code	E: 32
Detective actuator	Indoor unit	Main PCB	When power is on and there is some below case. 1. When model information of EEPROM is incorrect. 2. When the access to EEPROM failed.
Forecast of cause			External cause
			Defective connection of electrical components
			Main PCB failure

Check point 1. Reset power supply and operate

Does error indication show again?

→ If no, go to "Check point 1-2".



Check point 2. Check Indoor unit electrical components

- Check all connectors. (loose connector or incorrect wiring)
- Check any shortage or corrosion on PCB.



Check point 3. Replace the main PCB

Replace the main PCB.



**End**

Check point 1-2. Check external cause such as noise

- Check if the ground connection is proper.
- Check if there is any equipment that causes harmonic wave near the power cable (Neon light bulb or any electronic equipment which causes harmonic wave).



**End**

### NOTE: EEPROM

EEPROM (Electrically Erasable and Programmable Read Only Memory) is a non-volatile memory which keeps memorized information even if the power is turned off. It can change the contents electronically. To change the contents, it uses higher voltage than normal, and it cannot change a partial contents. (Rewriting shall be done upon erasing the all contents.) There is a limit in a number of rewriting.

## 2-4. E: 35. MANUAL AUTO button error (Indoor unit)

Indicator	Indoor unit	Operation indicator	3 time flash
		Timer indicator	5 time flash
		Economy indicator	Continuous flash
		Error code	E: 35
Detective actuator	Indoor unit controller PCB	When the MANUAL AUTO button becomes on for consecutive 60 or more seconds.	
	Indicator PCB		
	Manual auto switch		
Forecast of cause		MANUAL AUTO button failure	
		Controller PCB and indicator PCB failure	

Check point 1. Check the MANUAL AUTO button

- Check if MANUAL AUTO button is kept pressed.
- Check ON/OFF switching operation by using a meter.



If MANUAL AUTO button is disabled (ON/OFF switching), replace it.



Check point 2. Replace the main PCB and indicator PCB

If Check Point 1 does not improve the symptom, replace the main PCB and indicator PCB.



**End**

## 2-5. E: 41. Room temperature sensor error (Indoor unit)

Indicator	Indoor unit	Operation indicator	4 time flash
		Timer indicator	1 time flash
		Economy indicator	Continuous flash
		Error code	E: 41
Detective actuator	Indoor unit main PCB	Room temperature thermistor is open or short is detected always.	
	Room temperature thermistor		
Forecast of cause		Connector failure	
		Thermistor failure	
		Main PCB failure	

### Check point 1. Check connection of connector


- Check if connector is loose or removed.
- Check erroneous connection.
- Check if thermistor cable is open

-> Reset power when reinstalling due to removed connector or incorrect wiring.



### Check point 2. Remove connector and check thermistor resistance value

- For the room thermistor resistance value, refer to "[Thermistor resistance values](#)" on page 03-66.
- If thermistor is either open or shorted, replace it and reset the power.

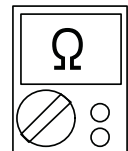


### Check point 3. Check voltage of main PCB

Make sure circuit diagram of each indoor unit and check terminal voltage at thermistor (DC 5.0 V).

**NOTE:** For details of thermistor connector, refer to "[Wiring diagrams](#)" in Chapter 2. TECHNICAL DATA AND PARTS LIST on page 02-13.

(CN1)

If the voltage does not appear, replace main PCB.

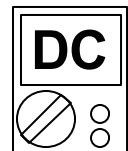

**End**

## 2-6. E: 42. Indoor unit heat exchanger sensor error (Indoor unit)

Indicator	Indoor unit	Operation indicator	4 time flash
		Timer indicator	2 time flash
		Economy indicator	Continuous flash
		Error code	E: 42
Detective actuator	Indoor unit main PCB	When heat exchanger temperature thermistor open or short circuit is detected.	
	Heat exchanger temperature thermistor		
Forecast of cause		Connector connection failure	
		Thermistor failure	
		Main PCB failure	

### Check point 1. Check connection of connector


- Check if connector is loose or removed.
- Check erroneous connection.
- Check if thermistor cable is open

-> Reset power when reinstalling due to removed connector or incorrect wiring.



### Check point 2. Remove connector and check thermistor resistance value

- For the heat exchanger thermistor resistance value, refer to "[Thermistor resistance values](#)" on page 03-66.
- If thermistor is either open or shorted, replace it and reset the power.

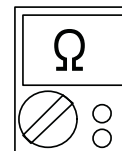

### Check point 3. Check voltage of main PCB

Make sure circuit diagram of each indoor unit and check terminal voltage at thermistor (DC 5.0 V).

**NOTE:** For details of thermistor connector, refer to "[Wiring diagrams](#)" in Chapter 2. TECHNICAL DATA AND PARTS LIST on page 02-13.

(CN1)

If the voltage does not appear, replace main PCB.



End

## 2-7. E: 51. Indoor unit fan motor error (Indoor unit)

Indicator	Indoor unit	Operation indicator	5 time flash
		Timer indicator	1 time flash
		Economy indicator	Continuous flash
		Error code	E: 51
Detective actuator	Indoor unit	Main PCB	When the actual rotation number of the indoor unit fan motor is below 1/3 of the target rotation number continuously for more than 56 seconds.
		Fan motor	
Forecast of cause		Fan rotation failure	
		Fan motor winding open	
		Motor protection by surrounding temperature rise	
		Control PCB failure	
		Indoor unit fan motor failure	

### Check point 1. Check rotation of fan

Rotate the fan by hand when operation is off. (Check if fan is caught, dropped off or locked motor)  
→ If fan or bearing is abnormal, replace it.



### Check point 2. Check ambient temperature around motor

Check excessively high temperature around the motor. (If there is any surrounding equipment that causes heat)  
→ Upon the temperature coming down, restart operation.



### Check point 3. Check indoor unit fan motor

Check Indoor unit fan motor. (Refer to indoor unit fan motor in "[Service parts information](#)" on page 03-59.)  
→ If Indoor unit fan motor is abnormal, replace Indoor unit fan motor.



### Check point 4. Replace the main PCB

If Check Point 1 to 3 do not improve the symptom, replace the main PCB.



**End**

## 2-8. E: 62. Outdoor unit main PCB error (Outdoor unit)

Indicator	Indoor unit	Operation indicator	6 time flash
		Timer indicator	2 time flash
		Economy indicator	Continuous flash
		Error code	E: 62
Detective actuator	Outdoor unit	Main PCB	Access to EEPROM failed due to some cause after outdoor unit started.
Forecast of cause			External cause (Noise, temporary open, voltage drop)
			Main PCB failure

Check point 1. Reset power supply and operate

Does error indication show again?

If no, go to "[Check point 1-2](#)".



Check point 2. Replace the main PCB

Replace the main PCB.



**End**

Check point 1-2. Check external cause

- Check if temporary voltage drop was not generated.
- Check if momentary open was not generated.
- Check if ground is connection correctly or there are no related cables near the power line.



**End**

## 2-9. E: 64. PFC circuit error (Outdoor unit)

Indicator	Indoor unit	Operation indicator	6 time flash
		Timer indicator	4 time flash
		Economy indicator	Continuous flash
		Error code	E: 64
Detective actuator	Outdoor unit	Main PCB	<ul style="list-style-type: none"> <li>When inverter input DC voltage is higher than 415 V for over 3 seconds, the compressor stops.</li> <li>If the same operation is repeated 5 times, the compressor stops permanently.</li> </ul>
Forecast of cause			External cause
			Connector connection failure
			Main PCB failure

### Check point 1. Check external cause at indoor and outdoor (Voltage drop or Noise)

- Instant drop: Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure: Check if there is a defective contact or leak current in the power supply circuit.
- Noise: Check if there is any equipment causing harmonic wave near electric line. (Neon bulb or electric equipment that may cause harmonic wave)  
Check the complete insulation of grounding.



### Check point 2. Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if cable is open.

→ Upon correcting the removed connector or mis-wiring, reset the power.



### Check point 3. Replace the main PCB

If check point 1 to 2 do not improve the symptom, replace the main PCB.



**End**

## 2-10. E: 65. IPM error (Outdoor unit)

Indicator	Indoor unit	Operation indicator	6 time flash
		Timer indicator	5 time flash
		Economy indicator	Continuous flash
		Error code	E: 65
Detective actuator	Outdoor unit	Main PCB	<ol style="list-style-type: none"> <li>1. When more than normal operating current to IPM in main PCB flows, the compressor stops.</li> <li>2. After the compressor restarts, if the same operation is repeated within 40 seconds, the compressor stops again.</li> <li>3. If 1. and 2. repeats 5 times, the compressor stops permanently.</li> </ol>
		Compressor	
Forecast of cause		<ul style="list-style-type: none"> <li>Defective connection of electrical components</li> <li>Outdoor fan operation failure</li> <li>Outdoor heat exchanger clogged</li> <li>Compressor failure</li> <li>Main PCB failure</li> </ul>	

### Check point 1. Check connections of outdoor unit electrical components

- Check if the terminal connection is loose.
- Check if connector is removed.
- Check erroneous connection.
- Check if cable is open.

→ Upon correcting the removed connector or mis-wiring, reset the power.



### Check point 2. Check outdoor fan and heat exchanger

- Is there anything obstructing the air distribution circuit?
- Is there any clogging of outdoor heat exchanger?
- Is the fan rotating by hand when operation is off?

→ If the fan motor is locked, replace it.



### Check point 3. Check outdoor fan

Check outdoor fan motor. (Refer to "[E: 97. Outdoor unit fan motor error \(Outdoor unit\)](#)" on page 03-39.)

→ If the fan motor is failure, replace it.



Check point 4. Check compressor

Check compressor. (Refer to inverter compressor in "[Service parts information](#)".)



Check point 5. Replace main PCB

If Check point 1 to 4 do not improve the symptom, change main PCB.



**End**

## 2-11. E: 71. Discharge thermistor error (Outdoor unit)

Indicator	Indoor unit	Operation indicator	7 time flash
		Timer indicator	1 time flash
		Economy indicator	Continuous flash
		Error code	E: 71
Detective actuator	Outdoor unit main PCB	When discharge pipe temperature thermistor open or short circuit is detected at power on or while running the compressor	
	Discharge pipe temperature thermistor		
Forecast of cause		Connector failure	
		Thermistor failure	
		Main PCB failure	

### Check point 1. Check connection of connector


- Check if connector is loose or removed.
- Check erroneous connection.
- Check if thermistor cable is open

→ Reset power when reinstalling due to removed connector or incorrect wiring.



### Check point 2. Remove connector and check thermistor resistance value

- For the discharge temperature thermistor resistance value, refer to "[Thermistor resistance values](#)" on page 03-66.
- If thermistor is either open or shorted, replace it and reset the power.

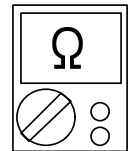


### Check point 3. Check voltage of main PCB

Make sure circuit diagram of outdoor unit and check terminal voltage at thermistor (DC 5.0 V).

**NOTE:** For details of thermistor connector, refer to "[Wiring diagrams](#)" in Chapter 2. TECHNICAL DATA AND PARTS LIST on page 02-13.

(P1)

If the voltage does not appear, replace main PCB.

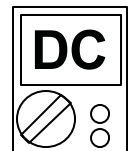

**End**

## 2-12. E: 73. Outdoor unit heat exchanger thermistor error (Outdoor unit)

Indicator	Indoor unit	Operation indicator	7 time flash
		Timer indicator	3 time flash
		Economy indicator	Continuous flash
		Error code	E: 73
Detective actuator	Outdoor unit main PCB	When heat exchanger temperature thermistor open or short circuit is detected at power on or while running the compressor	
	Heat exchanger temperature thermistor		
Forecast of cause			Connector failure
			Thermistor failure
			Main PCB failure

### Check point 1. Check connection of connector


- Check if connector is loose or removed.
- Check erroneous connection.
- Check if thermistor cable is open

→ Reset power when reinstalling due to removed connector or incorrect wiring.



### Check point 2. Remove connector and check thermistor resistance value

- For the outdoor unit heat exchanger thermistor resistance value, refer to "[Thermistor resistance values](#)" on page 03-66.
- If thermistor is either open or shorted, replace it and reset the power.

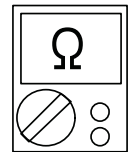

### Check point 3. Check voltage of main PCB

Make sure circuit diagram of outdoor unit and check terminal voltage at thermistor (DC 5.0 V).

**NOTE:** For details of thermistor connector, refer to "[Wiring diagrams](#)" in Chapter 2. TECHNICAL DATA AND PARTS LIST on page 02-13.

If the voltage does not appear, replace main PCB.



**End**

## 2-13. E: 74. Outdoor temperature thermistor error (Outdoor unit)

Indicator	Indoor unit	Operation indicator	7 time flash
		Timer indicator	4 time flash
		Economy indicator	Continuous flash
		Error code	E: 74
Detective actuator	Outdoor unit main PCB	When outdoor temperature thermistor open or short circuit is detected at power on or while running the compressor	
	Outdoor temperature thermistor		
Forecast of cause		Connector failure	
		Thermistor failure	
		Main PCB failure	

### Check point 1. Check connection of connector


- Check if connector is loose or removed.
- Check erroneous connection.
- Check if thermistor cable is open

-> Reset power when reinstalling due to removed connector or incorrect wiring.



### Check point 2. Remove connector and check thermistor resistance value

- For the outdoor temperature thermistor resistance value, refer to "[Thermistor resistance values](#)" on page 03-66.
- If thermistor is either open or shorted, replace it and reset the power.

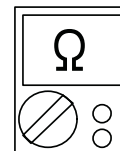

### Check point 3. Check voltage of main PCB

Make sure circuit diagram of outdoor unit and check terminal voltage at thermistor (DC 5.0 V).

**NOTE:** For details of thermistor connector, refer to "[Wiring diagrams](#)" in Chapter 2. TECHNICAL DATA AND PARTS LIST on page 02-13.

(P5)

If the voltage does not appear, replace main PCB.



**End**

## 2-14. E: 84. Current sensor error (Outdoor unit)

Indicator	Indoor unit	Operation indicator	8 time flash
		Timer indicator	4 time flash
		Economy indicator	Continuous flash
		Error code	E: 84
Detective actuator	Outdoor unit	Main PCB	When input current sensor has detected 0 A, while inverter compressor is operating at higher than 56 rps, after 1 minute upon starting the compressor. (Except during the defrost operation)
Forecast of cause			Defective connection of electrical components
			External cause
			Main PCB failure

Check point 1. Reset power supply and operate

Does error indication show again?

If no, go to "Check point 1-2".



Check point 2. Check connections of outdoor unit electrical components

- Check if the terminal connection is loose.
- Check if connector is removed.
- Check erroneous connection.
- Check if cable is open.

Upon correcting the removed connector or miswiring, reset the power.



Check point 3. Replace the main PCB

If Check point 1, 2 do not improve the symptom, replace the main PCB.



**End**

Check point 1-2. Check external cause at Indoor and Outdoor (Voltage drop or Noise)

- Instant drop: Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure: Check if there is a defective contact or leak current in the power supply circuit.
- Noise: Check if there is any equipment causing harmonic wave near electric line. (Neon bulb or electric equipment that may cause harmonic wave)  
Check the complete insulation of grounding.



**End**

## 2-15. E: 94. Trip detection (Outdoor unit)

Indicator	Indoor unit	Operation indicator	9 time flash
		Timer indicator	4 time flash
		Economy indicator	Continuous flash
		Error code	E: 94
Detective actuator	Outdoor unit	Main PCB	Protection stop by over-current generation after inverter compressor start processing completed generated consecutively 10 times. <b>NOTE:</b> The number of generations is reset when the compressor starts up.
		Compressor	
Forecast of cause			Outdoor unit fan operation defective, foreign matter on heat-exchanger, excessive rise of ambient temperature
			Main PCB failure
			Inverter compressor failure (lock, winding short)

Check point 1. Check the outdoor unit fan operation, heat-exchanger, ambient temperature

- No obstructions in air passages?
- Heat exchange fins clogged
- Outdoor unit fan motor check
- Ambient temperature not raised by the effect of other heat sources?
- Discharged air not sucked in?



Check point 2. Replace the main PCB

If Check point 1 do not improve the symptom, replace the main PCB.



Check point 3. Replace compressor

If Check point 2 do not improve the symptom, change compressor.



**End**

## 2-16. E: 95. Compressor motor control error (Outdoor unit)

Indicator	Indoor unit	Operation indicator	9 time flash
		Timer indicator	5 time flash
		Economy indicator	Continuous flash
		Error code	E: 95
Detective actuator	Outdoor unit	Main PCB	<ol style="list-style-type: none"> <li>1. When running the compressor, if the detected rotor location is out of phase with actual rotor location more than 90°, the compressor stops.</li> <li>2. After the compressor restarts, if the same operation is repeated within 40 seconds, the compressor stops again.</li> <li>3. If 1. and 2. repeats 5 times, the compressor stops permanently.</li> </ol>
		Compressor	
Forecast of cause		Defective connection of electrical components	
		Main PCB failure	
		Compressor failure	

### Check point 1. Check Noise from Compressor

Turn on Power and check operation noise.  
→ If an abnormal noise show, replace compressor.



### Check point 2. Check connection of around the compressor components

For compressor terminal, main PCB

- Check if connector is removed.
- Check erroneous connection.
- Check if cable is open. (Refer to inverter compressor in "[Service parts information](#)" on page 03-59.)

→ Upon correcting the removed connector or mis-wiring, reset the power.



### Check point 3. Replace the main PCB

If Check point 1, 2 do not improve the symptom, replace the main PCB.



### Check point 4. Replace compressor

If Check point 3 do not improve the symptom, change compressor.



**End**

## 2-17. E: 97. Outdoor unit fan motor error (Outdoor unit)

Indicator	Indoor unit	Operation indicator	9 time flash
		Timer indicator	7 time flash
		Economy indicator	Continuous flash
		Error code	E: 97
Detective actuator	Outdoor unit	Main PCB	<ol style="list-style-type: none"> <li>When outdoor fan rotation speed is less than 100 rpm in 20 seconds after fan motor starts, fan motor stops.</li> <li>After fan motor restarts, if the same operation within 60 seconds is repeated 3 times in a row, compressor and fan motor stops.</li> <li>If 1. and 2. repeats 5 times in a row, compressor and fan motor stops permanently.</li> </ol>
		Fan motor	
Forecast of cause		Fan rotation failure	
		Motor protection by surrounding temperature rise	
		Main PCB failure	
		Outdoor unit fan motor	

### Check point 1. Check rotation of fan

Rotate the fan by hand when operation is off. (Check if fan is caught, dropped off or locked motor)  
→ If fan or bearing is abnormal, replace it.



### Check point 2. Check ambient temperature around motor

Check excessively high temperature around the motor. (If there is any surrounding equipment that causes heat)  
→ Upon the temperature coming down, restart operation.



### Check point 3. Check outdoor unit fan motor

Check outdoor unit fan motor. (Refer to outdoor unit fan motor in "[Service parts information](#)" on page 03-59.)  
→ If outdoor unit fan motor is abnormal, replace outdoor unit fan motor and main PCB.



### Check point 4. Check output voltage of main PCB

Check outdoor unit circuit diagram and the voltage. (Measure at main PCB side connector)

**NOTE:** For details of wiring diagram, refer to "[Wiring diagrams](#)" in Chapter 2. TECHNICAL DATA AND PARTS LIST on page 02-13.



Read wire	DC voltage
Red—Black	DC 280 V ±10%
White—Black	15±1.5 V

-> If the voltage is not correct, replace Main PCB.



**End**

## 2-18. E: 99. 4-way valve error (Outdoor unit)

Indicator	Indoor unit	Operation indicator	9 time flash
		Timer indicator	9 time flash
		Economy indicator	Continuous flash
		Error code	E: 99
Detective actuator	Indoor unit	main PCB	When the indoor heat exchanger temperature is compared with the room temperature, and either following condition is detected continuously two times, the compressor stops. Indoor heat exchanger temp. - Room temp. > 10°C (Cooling or Dry operation) Indoor heat exchanger temp. - Room temp. < -10°C (Heating operation) If the same operation is repeated 5 times, the compressor stops permanently.
	Heat exchanger temperature thermistor		
	Room temperature thermistor		
	4-way valve		
Forecast of cause			Connector connection failure
			Thermistor failure
			Coil failure
			4-way valve failure
			Main PCB failure

### Check point 1. Check connection of connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

→ Upon correcting the removed connector or mis-wiring, reset the power.



### Check point 2. Check each thermistor

- Isn't it fallen off the holder?
- Is there a cable pinched?

Check characteristics of room thermistor and indoor unit heat exchanger thermistor.

For the thermistor resistance value, refer to "[Thermistor resistance values](#)" on page 03-66.

→ If defective, replace the thermistor.



**Check point 3. Check the solenoid coil and 4-way valve**

- **Solenoid coil**  
Remove CN30 from PCB and check the resistance value of coil. Resistance value is about 2.085 k $\Omega$  (at 20°C).  
→ If it is open or abnormal resistance value, replace solenoid coil.
- **4-way valve**  
Check each piping temperature, and the location of the valve by the temperature difference.  
If the value location is not proper, replace 4-way valve.

**Check point 4. Replace the main PCB**

If Check Point 1 to 3 do not improve the symptom, replace the main PCB.



**End**

## 2-19. E: A1. Discharge temperature error (Outdoor unit)

Indicator	Indoor unit	Operation indicator	10 time flash
		Timer indicator	1 time flash
		Economy indicator	Continuous flash
		Error code	E: A1
Detective actuator	Outdoor unit main PCB	Protection stop by discharge temperature $\geq 110^{\circ}\text{C}$ during compressor operation generated 2 times within 24 hours.	
	Discharge temperature thermistor		
Forecast of cause	3-way valve not opened		
	EEV or capillary tube defective, strainer clogged		
	Outdoor unit operation failure, foreign matter on heat exchanger		
	Discharge temperature thermistor failure		
	Insufficient refrigerant		
	Main PCB failure		

Check point 1. Check if 3-way valve is open

If the 3-way valve is closed, open the 3-way valve and check operation.

**NOTE:** For cooling operation, check gas side of the 3-way valve.  
For heating operation, check liquid side of the 3-way valve.



Check point 2. Check any of the electronic expansion valve (EEV), capillary tube, or strainer, or all

- Check if EEV open or there is a capillary tube defect.  
Refer to outdoor unit Electronic Expansion Valve (EEV) or Capillary tube in "[Service parts information](#)" on page 03-59.
- Check the strainer clogging.



Check point 3. Check the outdoor unit fan and heat exchanger

- Check for foreign object at heat exchanger
- Check if fan can be rotated by hand.
- Check the motor. (Refer to outdoor unit fan motor in "[Service parts information](#)" on page 03-59.)



Check point 4. Check the discharge thermistor

The discharge temperature thermistor characteristics check. (Check by disconnecting thermistor from PCB.)

**NOTE:** For the characteristics of the thermistor, refer to "[Thermistor resistance values](#)" on page 03-66.



Check point 5. Check the refrigerant amount

Check the refrigerant leakage.



Check point 6. Replace the main PCB

If check point 1 to 5 do not improve the symptom, replace the main PCB.



**End**

## 3. Troubleshooting without error code

### 3-1. Indoor unit—No power

Forecast of cause	Power supply failure
	External cause
	Electrical components defective

#### Check point 1. Check installation condition

- Isn't the breaker down?
- Check loose or removed connection cable.

-> If abnormal condition is found, correct it by referring to the installation manual or the "DESIGN & TECHNICAL MANUAL".



#### Check point 2. Check external cause at indoor and outdoor (voltage drop or noise)

- Instant drop: Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure: Check if there is a defective contact or leak current in the power supply circuit.
- Noise: Check if there is any equipment causing harmonic wave near electric line. (Neon bulb or electric equipment that may cause harmonic wave)  
Check the complete insulation of grounding.




#### Check point 3. Check electrical components

Check the voltage of power supply.

Check if AC 198 to 264 V appears at outdoor unit terminal L—N.

-> If no, go to "[Check point 1](#)" and "[Check point 2](#)".

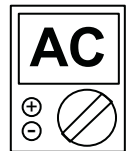

- Check fuse in filter PCB.  
If fuse is open, check if the wiring between terminal and filter PCB is loose, and replace fuse.
- Check varistor in filter PCB.  
If varistor is defective, there is a possibility of an abnormal power supply.  
Check the correct power supply and replace varistor.  
Upon checking the normal power supply, replace varistor.



**End**

## 3-2. Outdoor unit—No power

Forecast of cause	Power supply failure
	External cause
	Electrical components defective

### Check point 1. Check installation condition

- Is the circuit breaker on or off?
- Check loose or removed connection cable.

→ If abnormal condition is found, correct it by referring to the installation manual or the "DESIGN & TECHNICAL MANUAL".



### Check point 2. Check external cause at indoor and outdoor (voltage drop or noise)

- Instant drop: Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure: Check if there is a defective contact or leak current in the power supply circuit.
- Noise: Check if there is any equipment causing harmonic wave near electric line. (Neon bulb or electric equipment that may cause harmonic wave)  
Check the complete insulation of grounding.




### Check point 3. Check electrical components

Check the voltage of power supply.

Check if AC 198 to 264 V appears at outdoor unit terminal L—N

→ If no, go to "[Check point 1](#)" and "[Check point 2](#)".

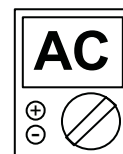

- Check fuse in main PCB.  
If fuse is open, check if the wiring between terminal and main PCB is loose, and replace fuse.



### Check point 4. Replace the main PCB

If check point 1 to 3 do not improve the symptom, replace the main PCB.



**End**

### 3-3. No operation (Power is on)

Forecast of cause	Setting/ Connection failure
	External cause
	Electrical components defective

#### Check point 1. Check indoor and outdoor installation condition

Are these indoor unit, outdoor unit, and remote controller suitable model names to connect?

-> If there is some abnormal condition, correct it by referring to the installation manual and "DESIGN & TECHNICAL MANUAL".



Turn off the power and check correct followings.

- Is there loose or removed communication line of indoor unit and outdoor unit?



#### Check point 2. Check external cause at indoor and outdoor (Voltage drop or Noise)

- Instant drop: Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure: Check if there is a defective contact or leak current in the power supply circuit.
- Noise: Check if there is any equipment causing harmonic wave near electric line. (Neon bulb or electric equipment that may cause harmonic wave)  
Check the complete insulation of grounding.



#### Check point 3. Replace main PCB

If check point 1 to 2 do not improve the symptom, change main PCB.



**End**

## 3-4. No cooling/No heating

Forecast of cause	Indoor unit error
	Outdoor unit error
	Effect by surrounding environment
	Connection pipe/Connection wire failure
	Refrigeration cycle failure

### Check point 1. Check Indoor unit

- Does Indoor unit fan run in the HIGH mode?
- Is air filter dirty?
- Is heat exchanger clogged?
- Check if energy save function is operated.



### Check point 2. Check outdoor unit operation

- Check if outdoor unit is operating.
- Check any objects that obstruct the air flow route.
- Check if heat exchanger is clogged.
- Is the valve open?



### Check point 3. Check site condition

- Is capacity of Indoor unit fitted to the room size?
- Any windows open or direct sunlight?



### Check point 4. Check indoor/outdoor installation condition


- Check connection pipe (specified pipe length and pipe diameter?)
- Check any loose or removed communication line.

→ If there is an abnormal condition, correct it by referring to the installation manual or the "DESIGN & TECHNICAL MANUAL".



### Check point 5. Check Refrigeration cycle

- Check if strainer is clogged (Refer to the figure below).
- Measure gas pressure, and if there is a leakage, correct it.
- Check if EEV open or there is a capillary tube defect.  
Refer to outdoor unit Electronic Expansion Valve (EEV) or Capillary tube in "[Service parts information](#)" on page 03-59.
- Check compressor.  
Refer to compressor in "[Service parts information](#)" on page 03-59.  
Refer to inverter compressor in "[Service parts information](#)" on page 03-59.

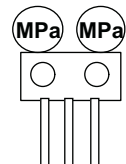


**NOTE:** When recharging the refrigerant, make sure to perform vacuuming, and recharge the specified amount.




**End**

**NOTES:**

- Strainer normally does not have temperature difference between inlet and outlet as shown below.

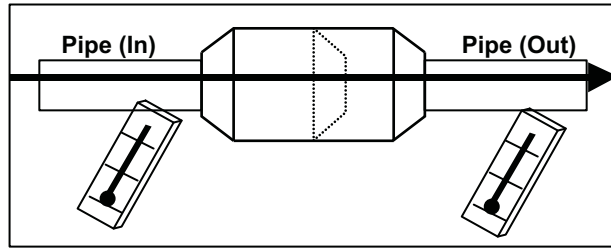

- If there is a difference like shown below, there is a possibility of inside clogged. In this case, replace the strainer.

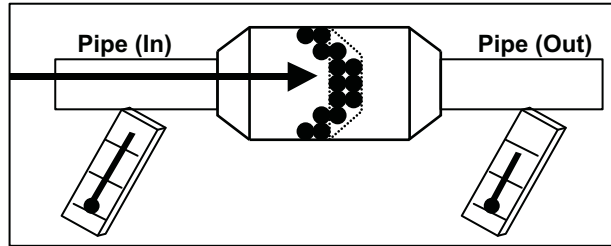

## 3-5. Abnormal noise

Forecast of cause	Abnormal installation (indoor unit/outdoor unit)
	Fan failure (indoor unit/outdoor unit)
	Compressor failure (outdoor)

### Diagnosis method when abnormal noise is occurred

Abnormal noise is coming from Indoor unit.  
(Check and correct followings)



- Is main unit installed in stable condition?
- Is the installation of air suction grille and front panel normal?



- Is fan broken or deformed?
- Is the screw of fan loose?
- Is there any object which obstruct the fan rotation?



**End**

Abnormal noise is coming from Outdoor unit.  
(Check and correct followings)



- Is main unit installed in stable condition?
- Is fan guard installed normally?



- Is fan broken or deformed?
- Is the screw of fan loose?
- Is there any object which obstruct the fan rotation?



Check if vibration noise by loose bolt or contact noise of piping is happening.



Is compressor locked?

- Check Compressor  
Refer to compressor and inverter compressor in "[Service parts information](#)" on page 03-59.



**End**

## 3-6. Water leaking

Forecast of cause	Erroneous installation
	Drain hose failure

### Diagnosis method when water leak occurs

- Is main unit installed in stable condition?
- Is main unit broken or deformed at the time of transportation or maintenance?



- Is drain hose connection loose?
- Is there a trap in drain hose?
- Is drain hose clogged?



Is fan rotating?




**End**

### Diagnosis method when water is spitting out

Is the filter clogged?




Check gas pressure and correct it if there was a gas leak.

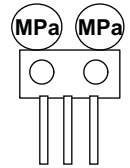

**End**

## 4. Troubleshooting with error code (For wireless LAN adapter)

### 4-1. E: 18. External communication error between indoor unit and wireless LAN adapter

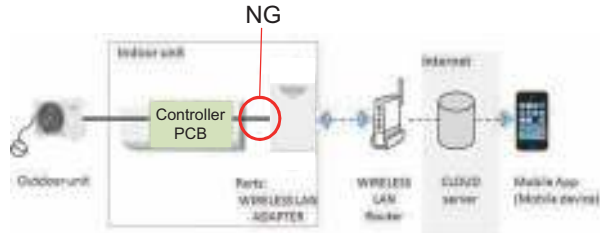Indicator	Indoor unit	Operation indicator	1 time flash
		Timer indicator	8 time flash
		Economy indicator	Continuous flash
		Wireless LAN indicator	Flashing slowly
		Error code	E: 18
	Mobile app		E: 18.1
Detective actuator	Wireless LAN adapter PCB	After receiving a signal from the wireless LAN adapter, the same signal has not been received for 15 seconds.	
	Controller PCB		
Forecast of cause	Connection between indoor unit and wireless LAN adapter failure		
	Wireless LAN adapter PCB failure		
	Controller PCB failure		

#### Check point 1. Check the connection

- Check any loose or removed connection of between the wireless LAN adapter PCB and controller PCB.  
-> If there is abnormal condition, correct it.
- Check the connection condition on the controller PCB.  
-> If there is loose connector, open cable or mis-wiring, correct it.



#### Check point 2. Replace wireless LAN adapter.

If check point 1 do not improve the symptom, replace the wireless LAN adapter and cancel the registration of air conditioner on the Mobile app.  
After replacing the adapter, perform the pairing on the Mobile app.

For the method of the Mobile app, refer to "[Mobile app setting method](#)" on page 03-57.



#### Check point 3. Replace controller PCB

If check point 1 to 2 do not improve the symptom, replace the controller PCB.



**End**

## 4-2. Network communication error between wireless LAN router and wireless LAN adapter

Indicator	Indoor unit	Operation indicator	No indication
		Timer indicator	No indication
		Economy indicator	No indication
		Wireless LAN indicator	Flashing slowly
		Error code	—
	Mobile app		No indication
Detective actuator	Wireless LAN router	When the not connection between wireless LAN adapter and wireless LAN router.	
	Wireless LAN adapter PCB		
Forecast of cause	Connection cable failure of wireless LAN router		
	Connection between wireless LAN adapter and wireless LAN router failure		
	Wireless LAN router failure		
	Wireless LAN adapter PCB failure		

### Check point 1. Check the connection cable

Check the connection cable on the wireless LAN router.

-> If there is loose connector, open cable or mis-wiring, correct it.



### Check point 2. Check the connection status.

Check the connection status to the Internet and wireless LAN router.

-> If the wireless LAN router is not connected to the Internet, check the transmission between wireless LAN products (ex. PC or game console, etc.) other than air conditioner and wireless LAN router.

If no, go to "[Check point 2-2](#)".



### Check point 3. Turn on the power again of air conditioner.

If check point 1 to 2 do not improve the symptom, turn on the power of the air conditioner again and wait for 60 seconds.



**Check point 4. Replace wireless LAN adapter.**

If check point 3 do not improve the symptom, replace the wireless LAN adapter and cancel the registration of air conditioner on the Mobile app.

After replacing the adapter, perform the pairing on the Mobile app.

For the method of the Mobile app, refer to "[Mobile app setting method](#)" on page 03-57.



**End**

**Check point 2-2. Check the transmission state**

Check the wireless transmission state of the wireless LAN router (indicator lamp status).

-> If the wireless transmission from the wireless LAN router has not been outgoing, inquire to the wireless LAN router maker.



**End**

## 4-3. E: 18. Communication error

Indicator	Indoor unit	Operation indicator	1 time flash
		Timer indicator	8 time flash
		Economy indicator	Continuous flash
		Wireless LAN indicator	Flashing slowly
		Error code	E: 18
Mobile app		E: 18.1	
Detective actuator	Wireless LAN router	<p>When the external communication error between indoor unit and wireless LAN adapter and network communication error between wireless LAN router and wireless LAN adapter has occurred simultaneously.</p>	
	Wireless LAN adapter PCB		
	Indoor unit controller PCB		
Forecast of cause	Connection cable failure of wireless LAN router		
	Wireless LAN router failure		
	Connection between indoor unit and wireless LAN adapter failure		
	Connection between wireless LAN adapter and wireless LAN router failure		
	Wireless LAN adapter PCB failure		
	Controller PCB failure		

### Check point 1. Check the connection

- Check any loose or removed connection of between the wireless LAN adapter PCB and controller PCB.  
-> If there is abnormal condition, correct it.
- Check the connection condition on the controller PCB.  
-> If there is loose connector, open cable or mis-wiring, correct it.



### Check point 2. Replace wireless LAN adapter.

If check point 1 do not improve the symptom, replace the wireless LAN adapter and cancel the registration of air conditioner on the Mobile app.  
After replacing the adapter, perform the pairing on the Mobile app.

For the method of the Mobile app, refer to ["Mobile app setting method"](#) on page 03-57.



### Check point 3. Replace controller PCB

If check point 1 to 2 do not improve the symptom, replace the controller PCB.



**Check point 4. Check the connection cable**

Check the connection cable on the wireless LAN router.  
-> If there is loose connector, open cable or mis-wiring, correct it.

**Check point 5. Check the connection status.**

Check the connection status to the Internet and wireless LAN router.  
-> If the wireless LAN router is not connected to the Internet, check the transmission between wireless LAN products (ex. PC or game console, etc.) other than air conditioner and wireless LAN router.

If no, go to "[Check point 5-2](#)".

**Check point 6. Turn on the power again of air conditioner.**

If check point 1 to 2 do not improve the symptom, turn on the power of the air conditioner again and wait for 60 seconds.

**Check point 7. Replace wireless LAN adapter.**

If check point 3 do not improve the symptom, replace the wireless LAN adapter and cancel the registration of air conditioner on the Mobile app.  
After replacing the adapter, perform the pairing on the Mobile app.

For the method of the Mobile app, refer to "[Mobile app setting method](#)" on page 03-57.



**End**

**Check point 5-2. Check the transmission state**

Check the wireless transmission state of the wireless LAN router (indicator lamp status).  
-> If the wireless transmission from the wireless LAN router has not been outgoing, inquire to the wireless LAN router maker.



**End**

## 4-4. E: 18. Wireless LAN adapter non-energized

Indicator	Indoor unit	Operation indicator	1 time flash
		Timer indicator	8 time flash
		Economy indicator	Continuous flash
		Wireless LAN indicator	No indication
		Error code	E: 18
	Mobile app		No indication
Detective actuator	Indoor unit controller PCB	When the voltage (DC 12 V) does not output from the controller PCB.	
	Wireless LAN adapter PCB		
Forecast of cause		Indoor unit controller PCB failure	
		Wireless LAN adapter PCB failure	
		Wiring connection failure	

### Check point 1. Check the connection.

- Check any loose or removed connection of between the wireless LAN adapter PCB and controller PCB.  
-> If there is abnormal condition, correct it.
- Check the connection condition on the controller PCB.  
-> If there is loose connector, open cable or mis-wiring, correct it.



### Check point 2. Check the wireless LAN adapter PCB and the controller PCB

Check voltage at CN13 (terminal 1—3) of main PCB.  
(Power supply to remote controller)

- If it is DC 0 V, controller PCB is failure.  
-> Replace controller PCB.
- If it is DC 12 V, wireless LAN adapter PCB is failure.  
-> Replace the wireless LAN adapter and cancel the registration of air conditioner on the Mobile app.  
After replacing the adapter, perform the pairing on the Mobile app.



For the method of the Mobile app, refer to "[Mobile app setting method](#)" on page 03-57.



**End**


## 4-5. Mobile app setting method

### ■ Air conditioner delete method

When the wireless LAN adapter is replaced, delete of all air conditioner is necessary on the mobile app.


1. Launch the mobile app.




2. Tap the  icon to display the Setting screen.



3. Tap the "Air conditioner editing".

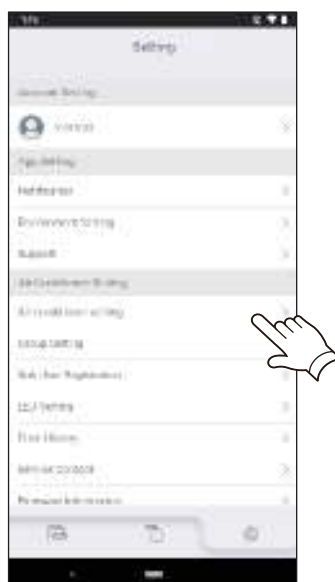

4. Tap the air conditioner to be deleted.

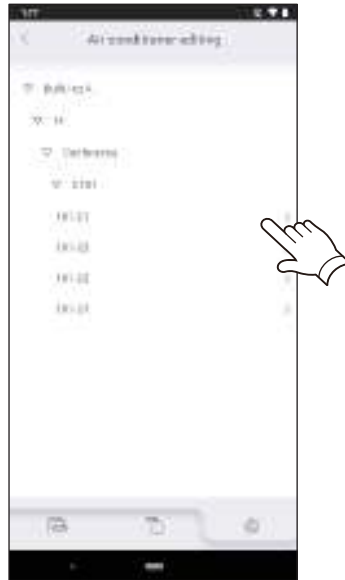

5. Tap the Delete button.



6. Tap the OK button.




7. Deletion of the air conditioner registered in the mobile app is completed.

## 5. Service parts information

### 5-1. Compressor

Diagnosis method of compressor (If outdoor unit LED displays error, refer to troubleshooting)

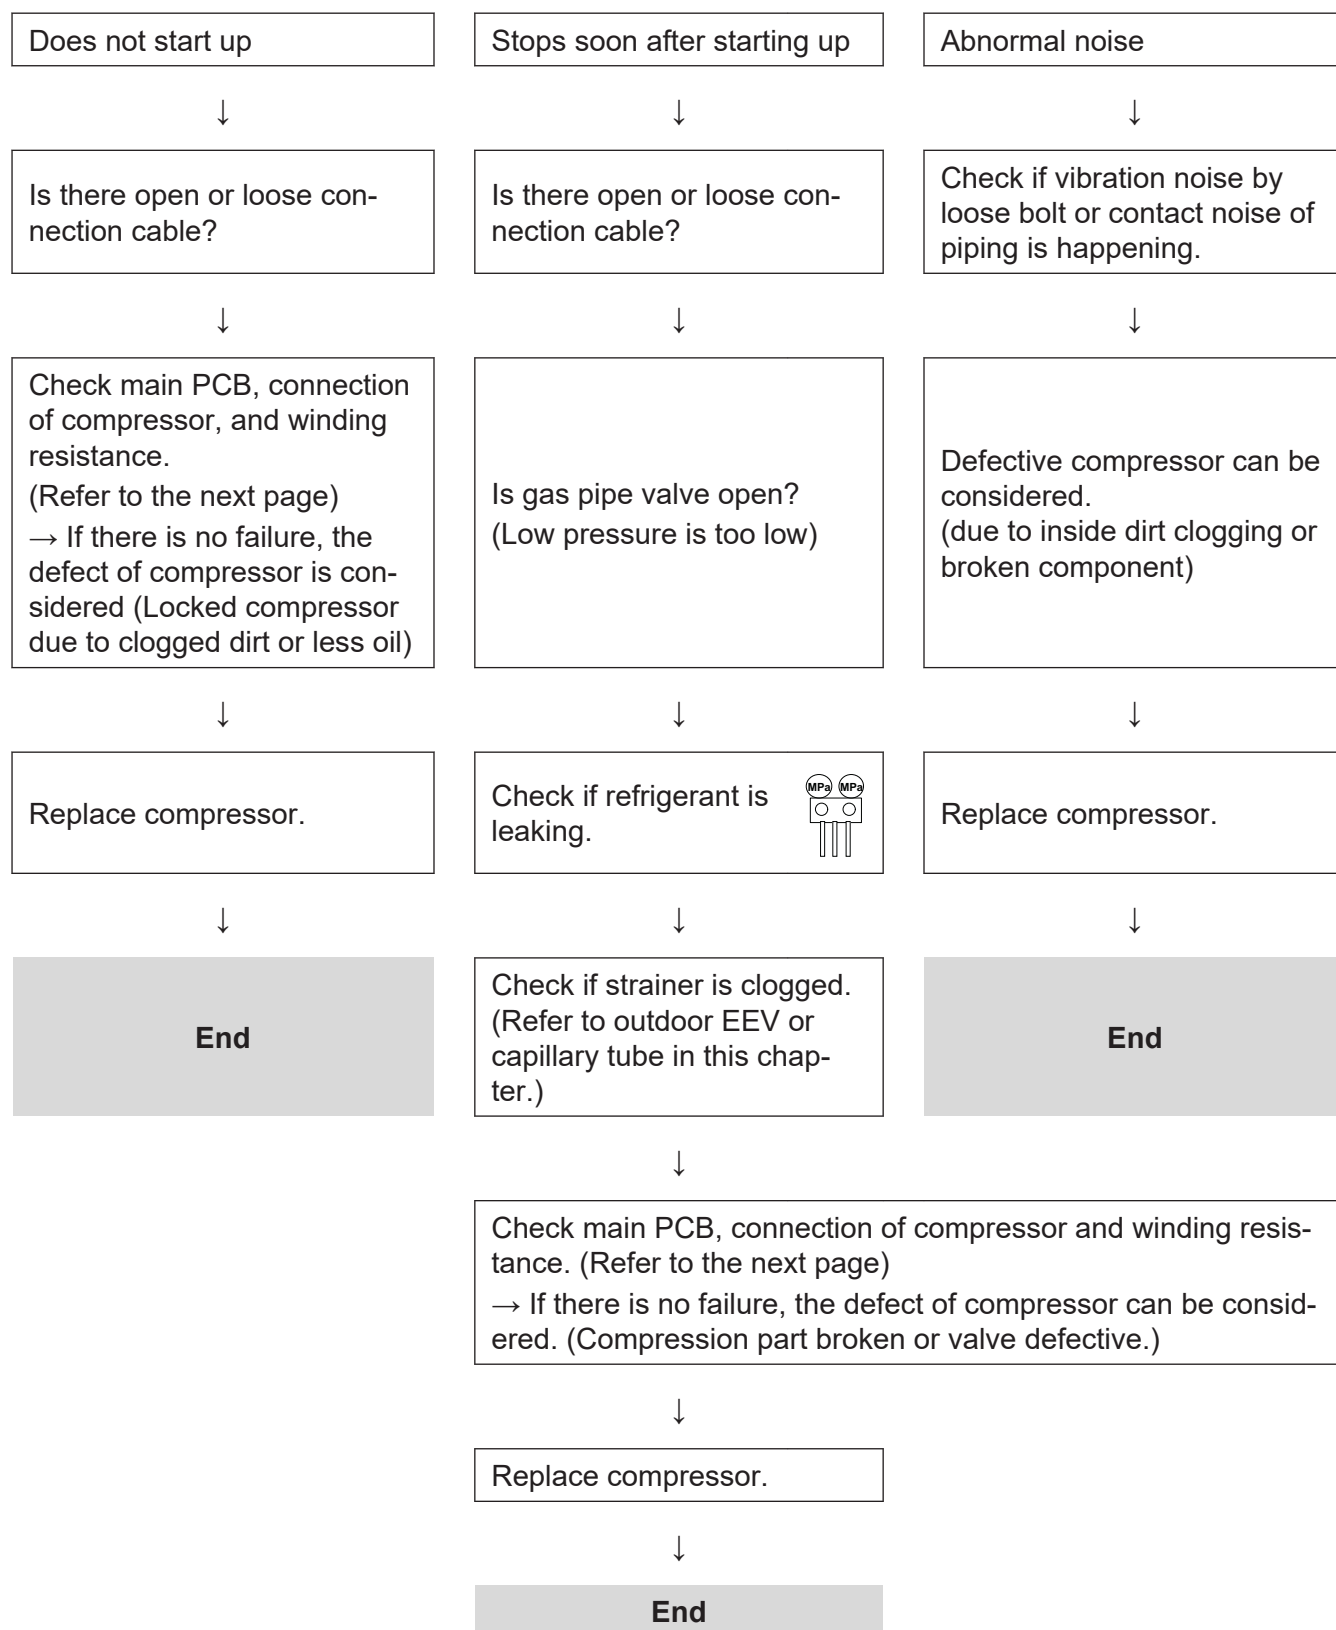

## 5-2. Inverter compressor


TROUBLESHOOTING

TROUBLESHOOTING

Check point 1. Check the terminal connection.


- Check the following terminal connections of the compressor. (Loosening or incorrect wiring.)

**R (U):** Red  
**S (V):** White  
**C (W):** Black

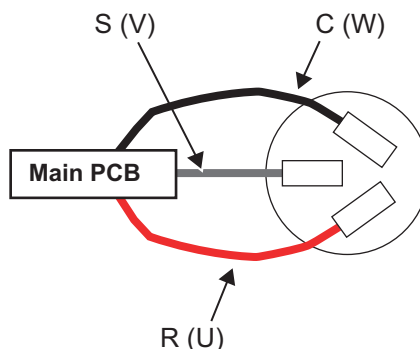

- Check the following terminal connections of the Main PCB. (Loosening or incorrect wiring.)



**(U):** Red  
**(V):** White  
**(W):** Black

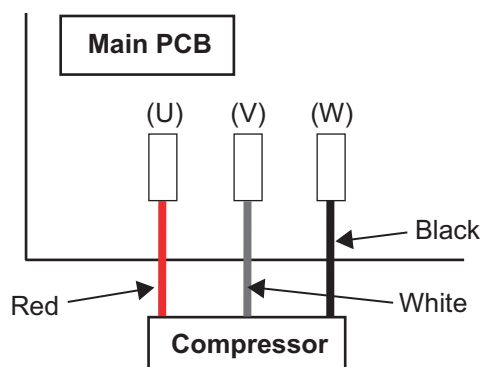

Check point 2. Check the winding resistance.

Check the winding resistance of each terminal.

Resistance value: 2.360  $\Omega$  at 20°C

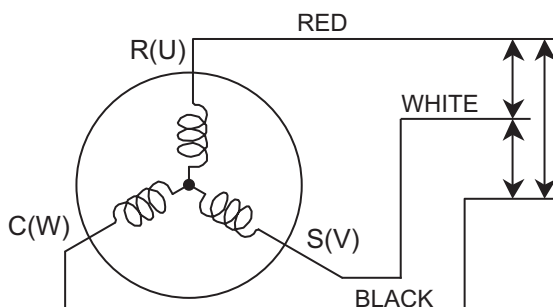

→ If the resistance value is 0  $\Omega$  or infinite, replace the compressor.



Check point 3. Replace the Inverter PCB.

If check point 1 to 2 do not improve the symptom, replace the Inverter PCB.

## 5-3. Outdoor unit Electronic Expansion Valve (EEV)


### Check point 1. Check connections

Check connection of connector. (Loose connector or open cable)

**NOTE:** For details of wiring diagram, refer to "Wiring diagrams" in Chapter 2. TECHNICAL DATA AND PARTS LIST on page 02-13.

### Check point 2. Check coil of EEV

Remove connector, check each winding resistance of coil.

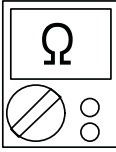Read wire	Resistance value
White - Red	$46 \Omega \pm 3.7 \Omega$ at 20°C 
Yellow - Red	
Orange - Red	
Blue - Red	

→ If Resistance value is abnormal, replace EEV.

### Check point 3. Check voltage from main PCB

Remove connector and check voltage (DC 12 V)

→ If it does not appear, replace main PCB.



### Check point 4. Check noise at start up

Turn on the power and check the operation noise.


→ If an abnormal noise does not show, replace main PCB.

### Check point 5. Check opening and closing operation of valve

When valve is closed, it has a temp. difference between inlet and outlet

**CLOSE**  
 Example : Hot Gas


Pipe (In)  
 Hi TEMP.

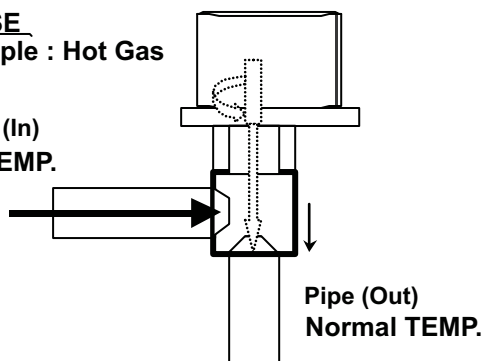

If it is open, it has no temp. difference between inlet and outlet


**OPEN**  
 Example : Hot Gas

Pipe (In)  
 Hi TEMP.

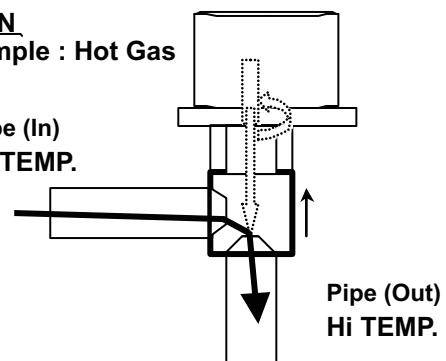


## Check point 6. Check strainer

- Strainer normally does not have temperature difference between inlet and outlet as shown below.

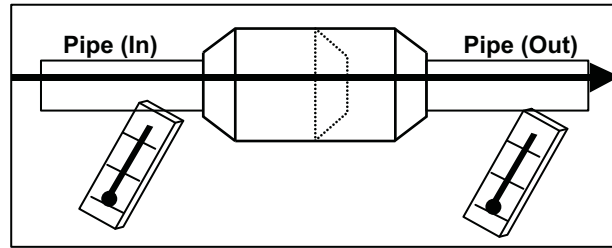

- If there is a difference like shown below, there is a possibility of inside clogged. In this case, replace the strainer.

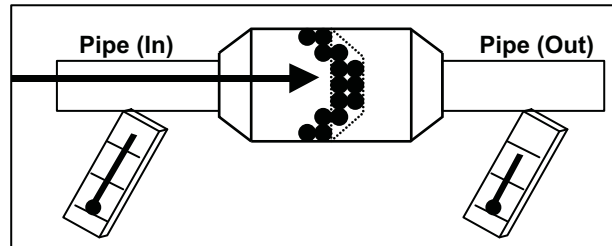

## 5-4. Indoor unit fan motor

### Check point 1. Check rotation of fan


Rotate the fan by hand when operation is off.  
 (Check if fan is caught, dropped off or locked motor)  
 → If fan or bearing is abnormal, replace it.

### Check point 2. Check resistance of indoor fan motor

Refer to below. Circuit-test “Vm” and “GND” terminal

**NOTE:** Vm: DC voltage, GND: Earth terminal

→ If they are short-circuited (below 300 kΩ), replace indoor fan motor and controller PCB.

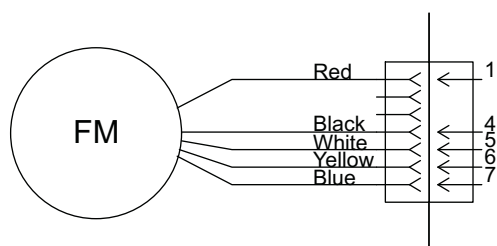

Pin number (wire color)	Terminal function (symbol)
1 (Red)	DC voltage (Vm)
2	No function
3	No function
4 (Black)	Earth terminal (GND)
5 (White)	Control voltage (Vcc)
6 (Yellow)	Speed command (Vsp)
7 (Blue)	Feed back (FG)

## 5-5. Outdoor unit fan motor

### Check point 1. Check rotation of fan

Rotate the fan by hand when operation is off.  
 (Check if fan is caught, dropped off or locked motor)  
 → If fan or bearing is abnormal, replace it.

### Check point 2. Check resistance of outdoor fan motor

Refer to below. Circuit-test “Vm” and “GND” terminal

**NOTE:** Vm: DC voltage, GND: Ground terminal


→ If they are short-circuited (below 300 kΩ), replace outdoor fan motor and controller PCB.

Pin number (wire color)	Terminal function (symbol)
1 (Red)	DC voltage (Vm)
2	No function
3	No function
4 (Black)	Earth terminal (GND)
5 (White)	Control voltage (Vcc)
6 (Yellow)	Speed command (Vsp)
7 (Brown)	Feed back (FG)

## 5-6. 4-way valve coil (solenoid coil)/4-way valve

### Check point 1. Check connection

- Check the connection of connector P60.

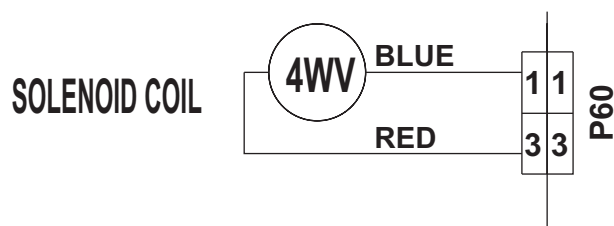


↓

### Check Point 2 : Check Solenoid Coil

Remove P60 from PCB and check the resistance value of coil.

Resistance Value  $\approx 2.085 \Omega$


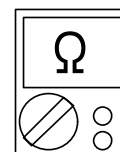


→ If it is Open or abnormal resistance value, replace Solenoid Coil.

↓

### Check Point 3: Check Operation of 4 Way Valve

Check each piping temperature, and confirm the location of the valve by the temperature difference

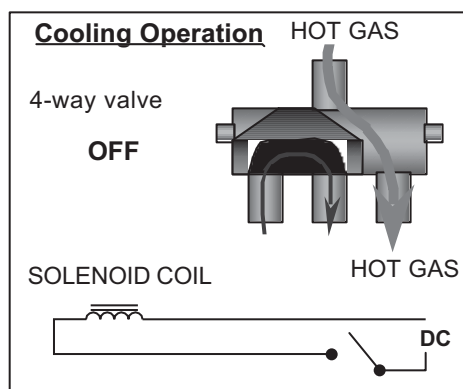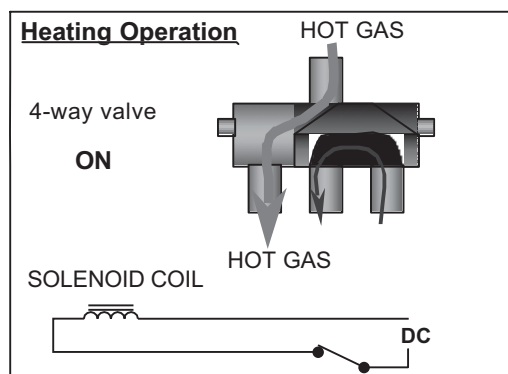

→ If the valve location is not proper, replace 4-way valve.

↓

### Check Point 4: Replace Main PCB

If none of Checks 1 to 3 apply, replace the Main PCB.

## 6. Thermistor resistance values

### 6-1. Indoor unit

#### ■ Room temperature thermistor

Temperature (°C)	Resistance (kΩ)	Voltage (V)
-10.0	58.25	0.73
-5.0	44.03	0.93
0.0	33.62	1.15
5.0	25.93	1.39
10.0	20.18	1.66
15.0	15.84	1.94
20.0	12.54	2.22
25.0	10.00	2.50
30.0	8.04	2.77
35.0	6.51	3.03
40.0	5.30	3.27
45.0	4.35	3.49

#### ■ Heat exchanger temperature thermistor

Temperature (°C)	Resistance (kΩ)	Voltage (V)
-30.0	1,131.91	0.21
-25.0	804.52	0.29
-20.0	579.59	0.40
-15.0	422.89	0.53
-10.0	312.27	0.69
-5.0	233.21	0.88
0.0	176.03	1.10
5.0	134.23	1.36
10.0	103.34	1.63
15.0	80.28	1.92
20.0	62.91	2.21
25.0	49.70	2.51
30.0	39.57	2.79
35.0	31.74	3.06
40.0	25.64	3.30
45.0	20.85	3.53
50.0	17.06	3.73
55.0	14.05	3.90
60.0	11.64	4.02
65.0	9.69	4.19

## 6-2. Outdoor unit

### ■ Discharge temperature thermistor

Temperature (°C)	Resistance (kΩ)	Voltage (V)
-30.0	1,013.11	0.06
-25.0	729.09	0.09
-20.0	531.56	0.12
-15.0	392.31	0.16
-10.0	292.91	0.21
-5.0	221.09	0.28
0.0	168.60	0.36
5.0	129.84	0.46
10.0	100.91	0.57
15.0	79.12	0.71
20.0	62.55	0.86
25.0	49.84	1.03
30.0	40.01	1.23
35.0	32.35	1.43
40.0	26.34	1.65
45.0	21.58	1.88
50.0	17.79	2.11
55.0	14.75	2.34
60.0	12.30	2.57
65.0	10.32	2.79
70.0	8.70	3.00
75.0	7.36	3.19
80.0	6.27	3.37
85.0	5.36	3.54
90.0	4.60	3.69
95.0	3.96	3.83
100.0	3.43	3.96
105.0	2.98	4.07
110.0	2.60	4.17
115.0	2.27	4.26
120.0	2.00	4.33

## ■ Heat exchanger temperature thermistor

Temperature (°C)	Resistance (kΩ)	Voltage (V)
-30.0	95.58	0.24
-25.0	68.90	0.32
-20.0	50.31	0.43
-15.0	37.19	0.57
-10.0	27.81	0.73
-5.0	21.02	0.92
0.0	16.05	1.14
5.0	12.38	1.39
10.0	9.63	1.65
15.0	7.56	1.93
20.0	5.98	2.21
25.0	4.77	2.49
30.0	3.84	2.77
35.0	3.11	3.02
40.0	2.53	3.26
45.0	2.08	3.48
50.0	1.71	3.68
55.0	1.42	3.85
60.0	1.19	4.00
65.0	1.00	4.13
70.0	0.84	4.25
75.0	0.71	4.35
80.0	0.61	4.43

## ■ Outdoor temperature thermistor

Temperature (°C)	Resistance (kΩ)	Voltage (V)
-30.0	224.33	0.73
-25.0	159.71	0.97
-20.0	115.24	1.25
-15.0	84.21	1.56
-10.0	62.28	1.90
-5.0	46.58	2.26
0.0	35.21	2.61
5.0	26.88	2.94
10.0	20.72	3.25
15.0	16.12	3.52
20.0	12.64	3.76
25.0	10.00	3.97
30.0	7.97	4.14
35.0	6.40	4.28
40.0	5.18	4.41
45.0	4.21	4.51
50.0	3.45	4.59
55.0	2.85	4.65

## 4. CONTROL AND FUNCTIONS

# CONTENTS

## 4. CONTROL AND FUNCTIONS

<b>1. Rotation number control of compressor.....</b>	<b>04-1</b>
1-1. Cooling operation .....	04-1
1-2. Heating operation .....	04-3
1-3. Dry operation .....	04-4
1-4. Rotation number of compressor at normal start-up .....	04-4
1-5. Limitation of compressor rotation number by outdoor temperature.....	04-5
<b>2. Auto changeover operation.....</b>	<b>04-7</b>
<b>3. Fan control.....</b>	<b>04-9</b>
3-1. Indoor fan control.....	04-9
3-2. Outdoor fan control .....	04-13
<b>4. Louver control .....</b>	<b>04-15</b>
4-1. Horizontal louver control .....	04-15
4-2. Vertical louver adjustment .....	04-15
4-3. Swing operation.....	04-16
<b>5. Timer operation control .....</b>	<b>04-17</b>
5-1. Wireless remote control .....	04-17
<b>6. Defrost operation control .....</b>	<b>04-19</b>
6-1. Defrost operation in heating operation stopped .....	04-20
<b>7. Various control.....</b>	<b>04-21</b>
7-1. Auto restart.....	04-21
7-2. MANUAL AUTO operation.....	04-21
7-3. Forced cooling operation .....	04-22
7-4. 10 °C HEAT operation .....	04-22
7-5. ECONOMY operation .....	04-22
7-6. POWERFUL operation .....	04-23
7-7. Fresh air control.....	04-23
7-8. Compressor preheating .....	04-23
7-9. External electrical heater control .....	04-24
7-10. Electronic expansion valve control .....	04-24
7-11. Prevention to restart for 3 minutes (3 minutes st) .....	04-24
7-12. 4-way valve control.....	04-24
<b>8. Various protections.....</b>	<b>04-25</b>
8-1. Discharge gas temperature over-rise prevention control .....	04-25
8-2. Anti-freezing control (cooling and dry mode) .....	04-25
8-3. Current release control .....	04-26
8-4. Cooling pressure over-rise protection .....	04-26
8-5. Low outdoor temperature protection.....	04-26
8-6. High temperature and high pressure release control .....	04-27

# 1. Rotation number control of compressor

## 1-1. Cooling operation

A sensor (room temperature thermistor) built in the indoor unit body will usually perceive difference or variation between a set temperature and present room temperature, and controls the operation rotation number of the compressor.


- If the room temperature is 6.0 °C higher than a set temperature, the operation rotation number of compressor will attain to maximum performance.
- If the room temperature is 1.0 °C lower than a set temperature, the compressor will be stopped.
- When the room temperature is within the range of +6.0°C to -1.0°C of the setting temperature, the rotation number of compressor is controlled within the range shown in the table below. However, the maximum rotation number is limited in the range shown in the figure below based on the indoor fan mode and the outdoor temperature.

- **Rotation number range of compressor**

Unit: rps

Model name	Minimum rotation number	Maximum rotation number
ASEH07KNCA	14	84
ASEH09KNCA	14	90
ASEH12KNCA	14	103

• Limit of maximum speed based on outdoor temperature

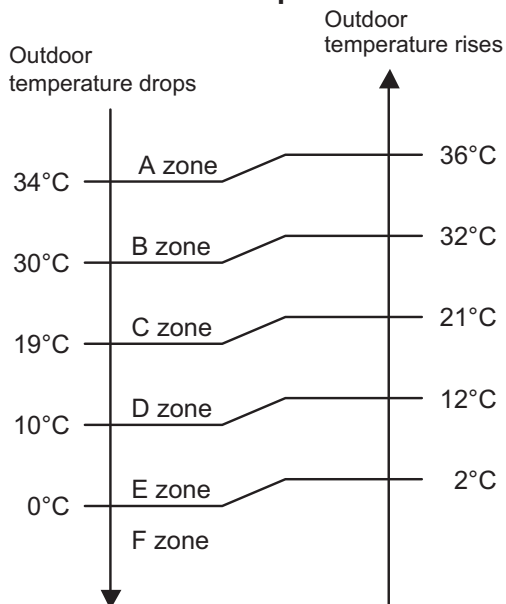

Unit: rps

Model name	Outdoor temperature zone	Indoor unit fan mode			
		HIGH	MED	LOW	QUIET
ASEH07KNCA	A zone	84	56	52	32
	B zone	84	56	52	32
	C zone	84	56	52	32
	D zone	60	56	52	32
	E zone	60	56	52	32
	F zone	60	56	52	32
ASEH09KNCA	A zone	90	64	52	32
	B zone	90	64	52	32
	C zone	90	64	52	32
	D zone	68	60	52	32
	E zone	68	60	52	32
	F zone	68	60	52	32
ASEH12KNCA	A zone	103	73	60	28
	B zone	103	68	56	28
	C zone	103	64	52	28
	D zone	68	56	46	22
	E zone	68	56	46	22
	F zone	68	56	46	22

CONTROL AND FUNCTIONS

CONTROL AND FUNCTIONS

## 1-2. Heating operation

A sensor (room temperature thermistor) built in indoor unit body will usually perceive difference or variation between setting temperature and present room temperature, and controls operation rotation number of compressor.

- If the room temperature is 6.0 °C lower than a set temperature, the operation rotation number of compressor will attain to maximum performance.
- If the room temperature is 1.0 °C higher than a set temperature, the compressor will be stopped.
- When the room temperature is within the range of +1.0°C to -6.0°C of the setting temperature, the rotation number of compressor is controlled within the range shown below.


- **Rotation number range of compressor**

Unit: rps

Model name	Minimum rotation number	Maximum rotation number
ASEH07KNCA ASEH09KNCA ASEH12KNCA	14	110

- **Limit of maximum speed based on outdoor temperature**

In heating operation, maximum rotation number is defined by outdoor temperature and fan mode.

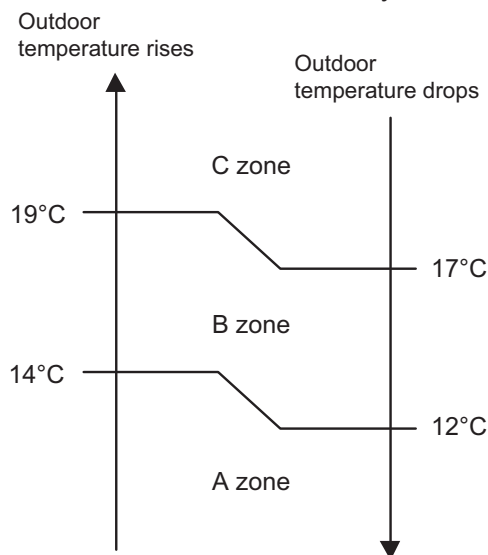

Unit: rps

Model name	Outdoor temperature zone	Indoor unit fan mode			
		HIGH	MED	LOW	QUIET
ASEH07KNCA ASEH09KNCA	A zone	110	110	110	90
	B zone	110	110	110	78
	C zone	103	103	84	52
ASEH12KNCA	A zone	110	110	96	68
	B zone	110	110	96	68
	C zone	103	103	84	52

### 1-3. Dry operation

The rotation number of compressor shall change according to the temperature, set temperature, and room temperature variation which the room temperature sensor of the indoor unit has detected as shown in the table below.


Zone is defined by set temperature and room temperature.

- **Rotation number range of compressor**

Unit: rps


Model name	Outdoor temperature zone	Operating rotation number
ASEH07KNCA ASEH09KNCA	X zone	32
	J zone	18
	Y zone	0
ASEH12KNCA	X zone	28
	J zone	18
	Y zone	0

- **Compressor control based on room temperature**

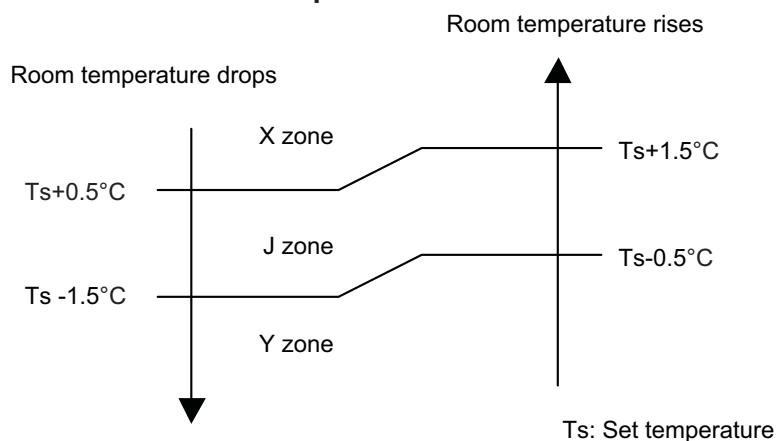

### 1-4. Rotation number of compressor at normal start-up

Rotation number of compressor soon after starting is controlled as below.

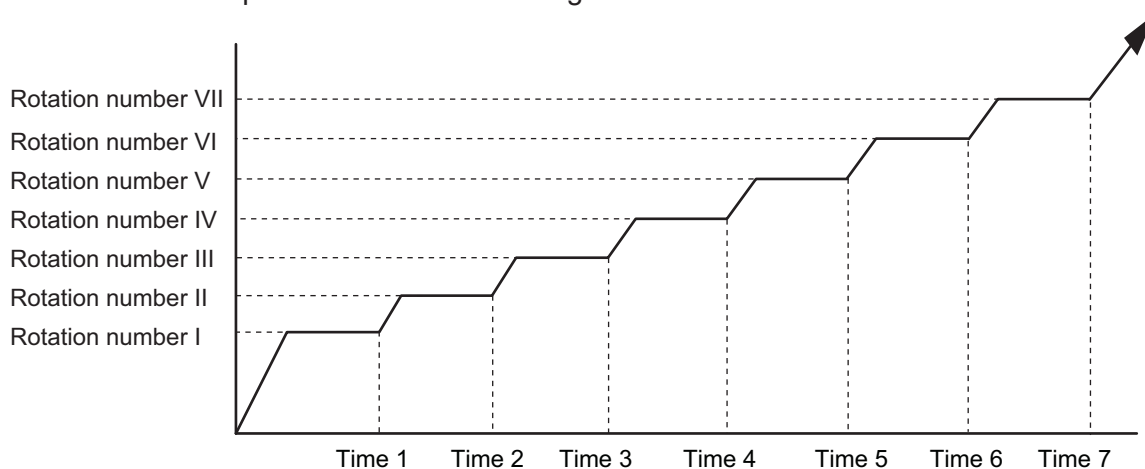


Rotation number (rps)	I	II	III	IV	V	VI	VII
	45	56	68	77	84	93	103
Time (sec)	1	2	3	4	5	6	7
	60	140	170	220	280	360	430

## 1-5. Limitation of compressor rotation number by outdoor temperature


The minimum rotation number of compressor is limited by outdoor temperature as below.

- **Cooling/Dry mode**

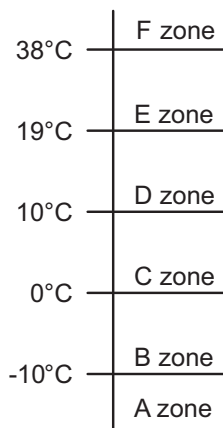

Model name	Outdoor temperature zone	Limitation of compressor rotation number
AOEH07KNCA AOEH09KNCA	A zone	44 rps
	B zone	44 rps
	C zone	44 rps
	D zone	32 rps
	E zone	16 rps
	F zone	24 rps
AOEH12KNCA	A zone	33 rps
	B zone	33 rps
	C zone	33 rps
	D zone	28 rps
	E zone	16 rps
	F zone	24 rps

- **Heating mode**

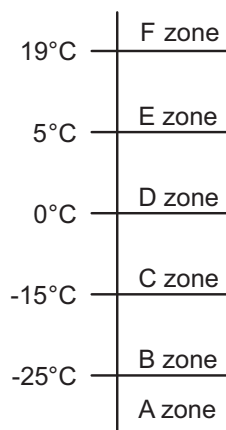

Model name	Outdoor temperature zone	Limitation of compressor rotation number
AOEH07KNCA AOEH09KNCA AOEH12KNCA	A zone	43 rps
	B zone	43 rps
	C zone	30 rps
	D zone	18 rps
	E zone	16 rps
	F zone	16 rps



## 2. Auto changeover operation

When the air conditioner is set to AUTO mode by remote controller, operation starts in the optimum mode from among heating, cooling, dry and monitoring modes. During operation, the optimum mode is automatically switched in accordance with temperature changes. The temperature can be set between 18°C and 30°C in 1.0°C steps.

- When operation starts, indoor fan and outdoor fan are operated for around 1 minute. Room temperature and outdoor temperature are sensed, and the operation mode is selected in accordance with the table below.

Room temperature	Operation mode
$Tr > Ts + 2^{\circ}\text{C}$	Cooling
$Ts + 2^{\circ}\text{C} \geq Tr \geq Ts - 2^{\circ}\text{C}$	Middle zone
$Tr < Ts - 2^{\circ}\text{C}$	Heating

Tr: Room temperature

Ts: Setting temperature

**NOTE:** When the operation mode is middle zone, indoor unit operation mode is selected as below.


- Same operation mode is selected as outdoor unit.  
If outdoor unit is operating in cooling and heating mode, indoor unit will be operated by the same operation mode.
- Selected by outdoor temperature.  
If outdoor unit is operating in other than cooling and heating mode, indoor unit will be operated according to the outdoor temperature as below.

Outdoor temp.	Operation mode
25°C or more	Cooling
Less than 25°C	Heating

- When the compressor was stopped for 6 consecutive minutes by temperature control function after the cooling or heating mode was selected as above, operation is switched to monitoring mode and the operation mode selection is done again.
- When the middle zone is selected on the predetermining of the operation mode, the operation mode before the changing to the monitoring mode is selected.

Operation flow chart

Ts: Setting temperature

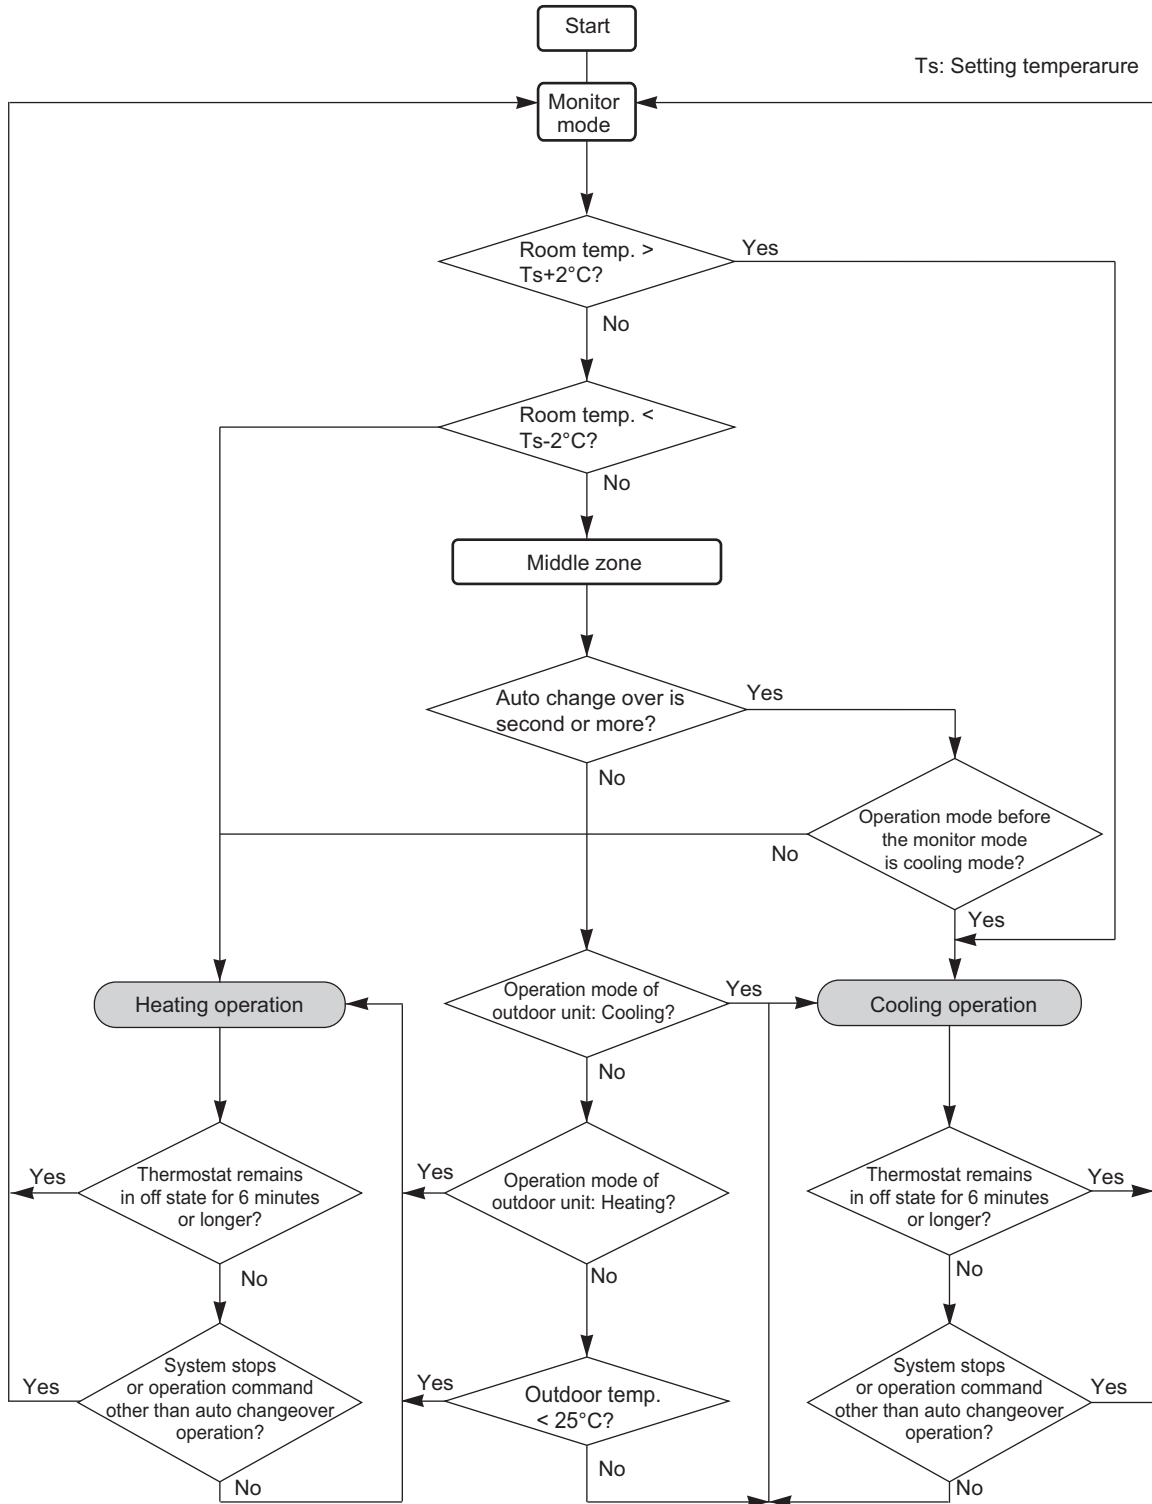

CONTROL AND FUNCTIONS

CONTROL AND FUNCTIONS

### 3. Fan control

Tr: Room temperature

Ts: Setting temperature

#### 3-1. Indoor fan control

##### ■ Fan speed

Indoor fan speed is defined as below.

Operation mode	Fan mode	Speed (rpm)		
		ASEH07KNCA	ASEH09KNCA	ASEH12KNCA
Heating	POWERFUL	1,130	1,130	1,210
	HIGH	1,030	1,030	1,070
	MED—HIGH	970	970	1,000
	MED	920	920	950
	MED—LOW	920	920	950
	LOW	810	810	830
	QUIET	610	610	610
	Cool air prevention	570	570	570
	S-LOW	420	420	420
Cooling/Fan	POWERFUL	1,060	1,130	1,210
	HIGH	970	1,030	1,070
	MED—HIGH	870	920	950
	MED	870	920	950
	MED—LOW	870	920	950
	LOW	770	770	830
	QUIET	570	570	570
	Soft quiet	500*1	500*1	500*1
	S-LOW	420*2	420*2	420*2
Dry		X zone: 570 J zone: 570	X zone: 570 J zone: 570	X zone: 570 J zone: 570

\*1: Fan mode only

\*2: Cooling mode only

##### ■ Fan operation


Airflow can be switched in 7 steps such as AUTO, QUIET, LOW, MED—LOW, MED, MED—HIGH, HIGH while indoor unit fan only runs.

When fan mode is set at AUTO, it operates on MED fan speed.

## ■ Cooling operation

Switch the airflow AUTO, and indoor fan motor will run according to room temperature, as below. On the other hand, if switched in HIGH—QUIET, indoor motor will run at a constant airflow of COOL operation modes QUIET, LOW, MED, HIGH as shown in “Fan speed” above.

Airflow change over (Cooling: Auto)

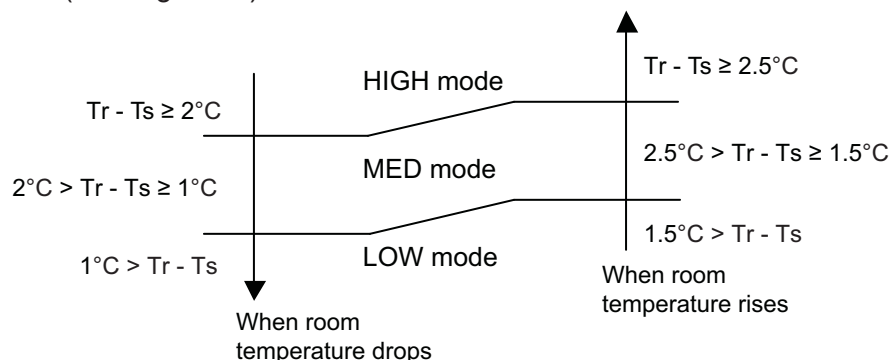

## ■ Dry operation


During dry operation, fan speed setting can not be changed as shown in “Fan speed” above.

## ■ Heating operation

Switch the airflow AUTO, and the indoor fan motor will run according to a room temperature, as below.

On the other hand, if switched in HIGH—QUIET, the indoor motor will run at a constant airflow of HEAT operation modes QUIET, LOW, MED, HIGH as shown in “Fan speed” above.


Airflow change over (Heating: Auto)

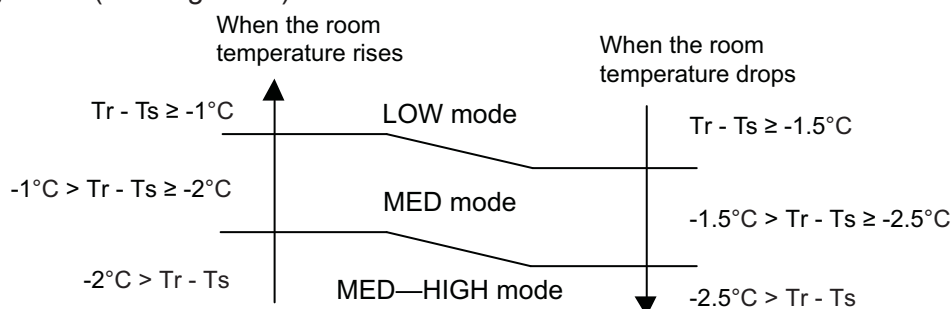


## ■ Cool air prevention control (heating mode)

The maximum value of the indoor fan speed is set as shown below, based on the detected temperature by the indoor heat exchanger sensor on heating mode.

- Normal operation

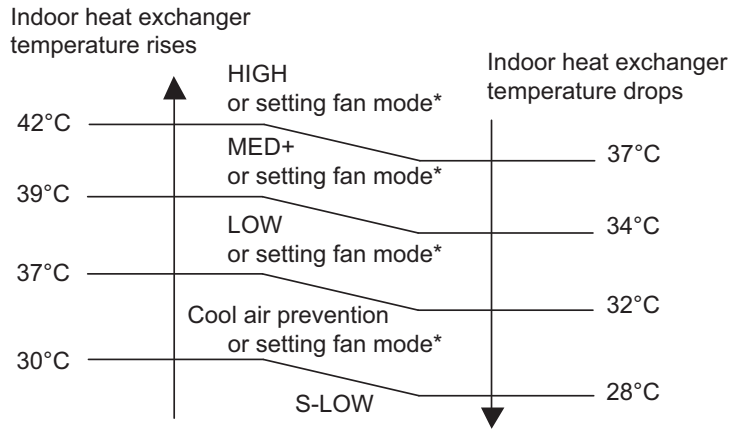


7 minutes later:

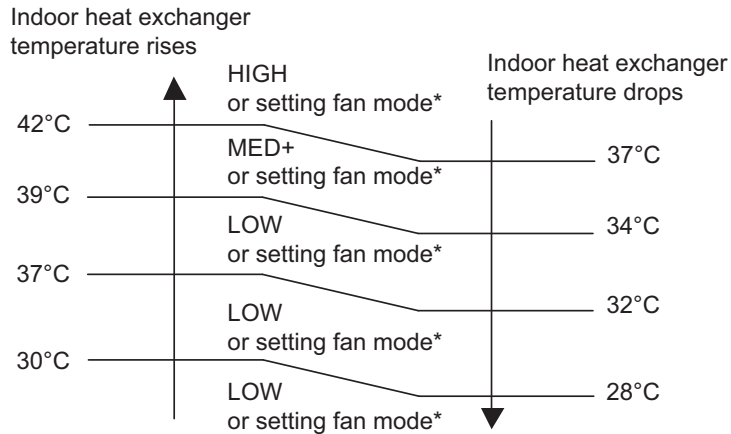


CONTROL AND FUNCTIONS

CONTROL AND FUNCTIONS


• **Powerful operation**

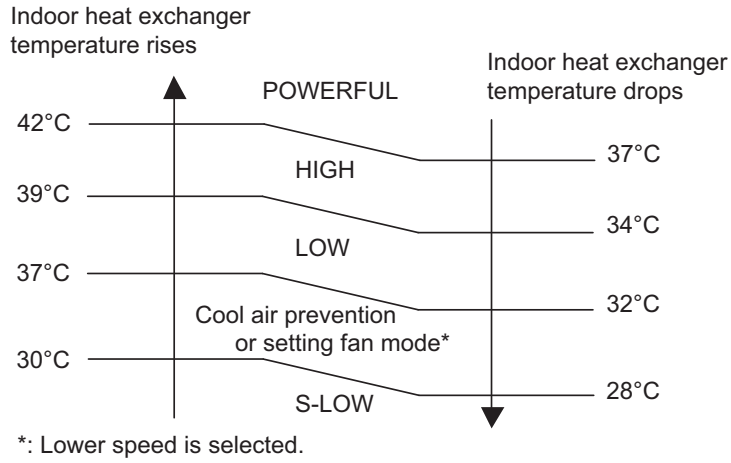

7 minutes later:

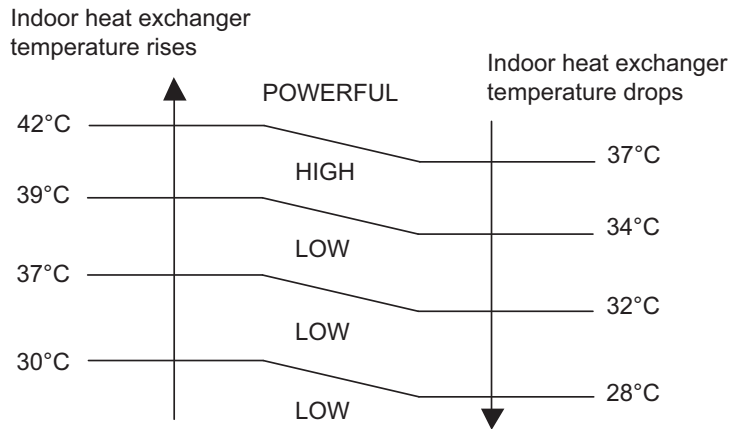


• **10 °C HEAT operation**

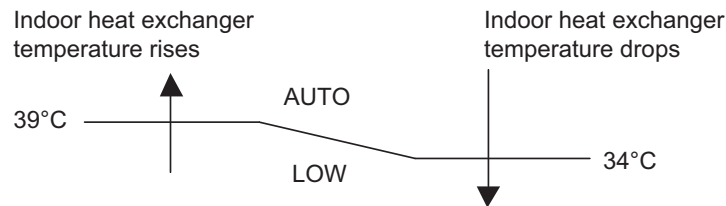

■ **Moisture return prevention control (cooling and dry mode)**

Switch the airflow AUTO at cooling mode, and the indoor fan motor will run as shown below.

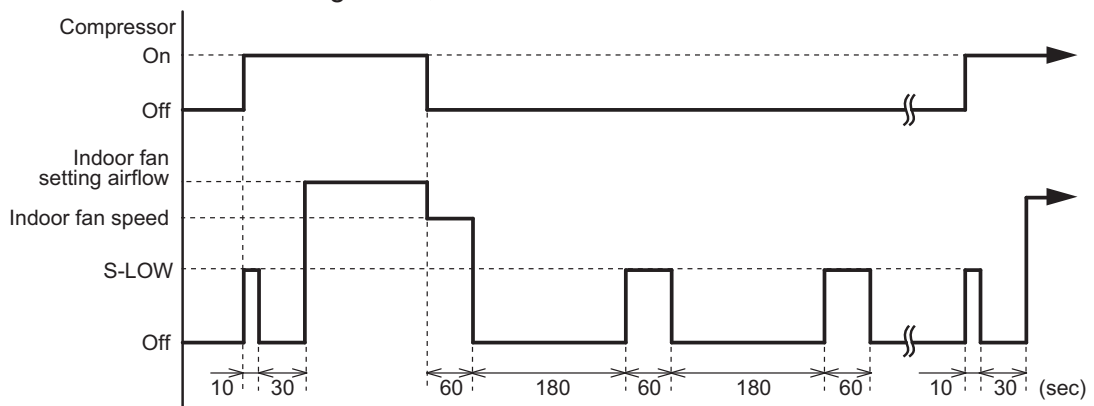

## 3-2. Outdoor fan control

### ■ Outdoor fan motor


This outdoor unit has a DC fan motor. (Control method is different between AC and DC motors.)

### ■ Fan speed

#### ● Models: AOEH07KNCA and AOEH09KNCA

Fan speed is defined by outdoor temperature and compressor frequency.

##### • Outside air temperature zone selection

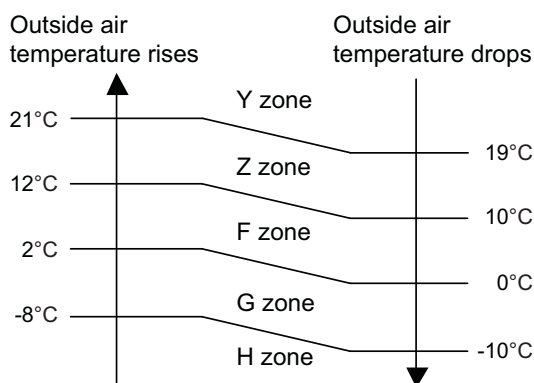

Unit: rpm

Fan step	Cooling	Heating	Dry	Cooling or dry at low outdoor temp.			
	Y zone		Y zone	Z zone	F zone	G zone	H zone
S-HIGH2	—	930	—	—	—	—	—
S-HIGH1	950	930	—	—	—	—	—
HIGH	950	930	—	—	—	—	—
10	—	690	—	—	—	—	—
9	950	690	950	280	240	190	190
8	800	690	800	280	240	190	190
7	800	690	800	280	240	190	190
6	800	690	800	280	240	190	190
5	710	690	710	250	210	170	170
4	710	550	710	220	210	170	170
3	680	510	680	220	210	170	170
2	610	480	610	220	210	170	170
1	580	480	580	220	210	170	170


**NOTE:** After defrost control on the heating mode, the fan speed is kept higher regardless of the compressor frequency.

Fan speed after defrost control: 930 rpm

## ● Model: AOEH12KNCA

Fan speed is defined by outdoor temperature and compressor frequency.

### • Outside air temperature zone selection

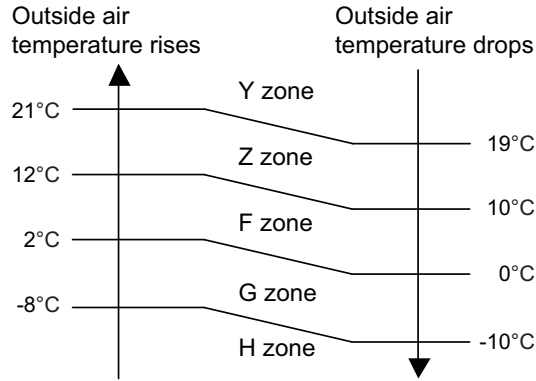

Unit: rpm

Fan step	Cooling	Heating	Dry	Cooling or dry at low outdoor temp.				
	Y zone		Y zone	Z zone	F zone	G zone	H zone	
S-HIGH2	—	1,020	—	—	—	—	—	—
S-HIGH1	950	1,020	—	—	—	—	—	—
HIGH	950	1,020	—	—	—	—	—	—
10	—	790	—	—	—	—	—	—
9	950	790	950	950	290	270	270	270
8	840	790	840	840	290	270	270	270
7	840	790	840	840	290	270	270	270
6	840	790	840	560	290	270	270	270
5	840	730	840	420	260	230	230	230
4	740	630	740	350	260	200	200	200
3	680	530	680	350	260	200	200	200
2	580	470	580	350	260	200	200	200
1	540	470	540	350	250	200	200	200


**NOTE:** After defrost control on the heating mode, the fan speed is kept higher regardless of the compressor frequency.

Fan speed after defrost control: 1,020 rpm

## 4. Louver control

### 4-1. Horizontal louver control

Each time the button is pressed, the airflow direction range will change as below:

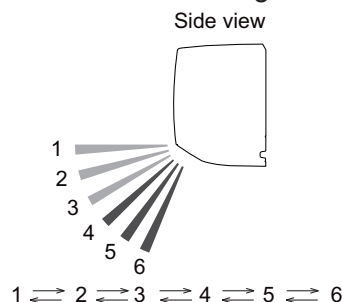

- Remote controller display is not changed.
- Up/down airflow direction is set automatically as shown, in accordance with the type of operation selected.


Cooling / Dry mode : Horizontal flow 1

Heating mode : Downward flow 6

- During AUTO operation, for the first a few minutes after beginning operation, airflow will be horizontal 1; the air direction cannot be adjusted during this period. The airflow direction setting will temporarily become 1 when the temperature of the airflow is low at the start of the Heating mode.
- After beginning of AUTO/HEAT mode operated and automatic defrosting operation, the airflow will be horizontal 1. However, the airflow direction cannot be adjusted at beginning AUTO operation mode.

### 4-2. Vertical louver adjustment

Move the vertical louvers to adjust airflow direction you prefer.

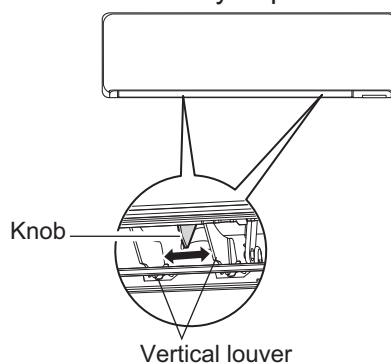

## 4-3. Swing operation

- To select up/down airflow swing operation  
When the swing signal is received, the horizontal louver starts to swing.
  - Swinging range
    - Cooling mode/dry mode/fan mode (1 to 3): 1 ↔ 4
    - Heating mode/fan mode (4 to 6): 3 ↔ 6
  - When the indoor fan is S-LOW or stop mode, the swing operation is interrupted and it stops at either upper end or bottom end.
  
- To select left/right airflow swing operation  
No function


## 5. Timer operation control

### 5-1. Wireless remote control


On/Off timer	Program timer	Sleep timer	Weekly timer
○	○	○	—

#### ■ On/Off timer

- Off timer: When the clock reaches the set timer, the air conditioner will be turned off.

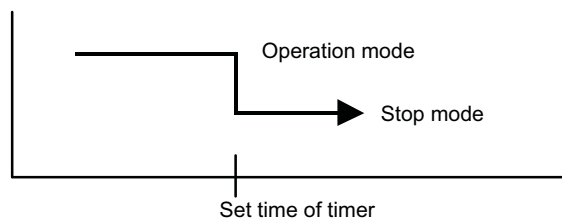


- On timer: When the clock reaches the set timer, the air conditioner will be turned on.

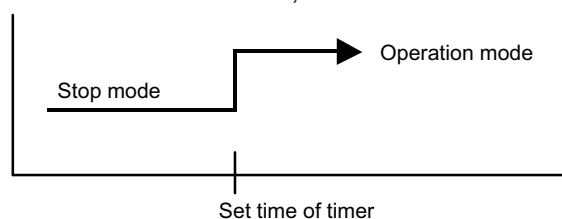

#### ■ Program timer

- The program timer allows the off timer and the on timer to be used in combination one time.

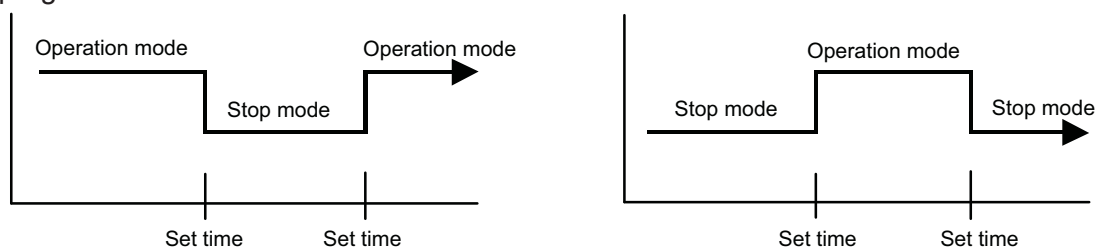


- Operation will start from the timer setting (either off timer and on timer) whichever is closest to the clock current timer setting. The order of operations is indicated by the allow in the remote controller screen.
- Sleep timer operation cannot be combined with on timer operation.

## ■ Sleep timer

If the sleep timer is set, the room temperature is monitored and the operation is stopped automatically. If the operation mode or the set temperature is change after the sleep timer is set, the operation is continued according to the changed setting of the sleep timer from that time on.


- In the cooling operation mode

When the sleep timer is set, the setting temperature is increased 1°C. It increases the setting temperature another 1°C after 1 hour. After that, the setting temperature is not changed and the operation is stopped at the setting time.

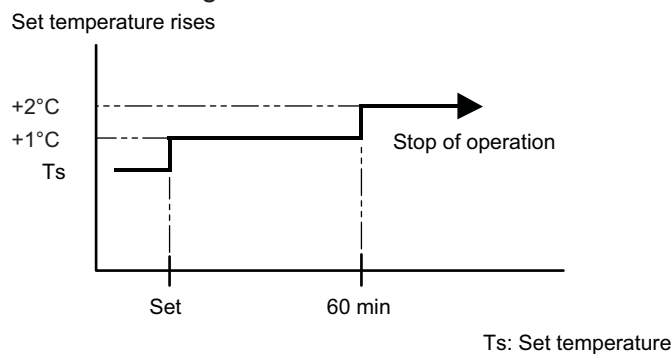

- In the heating operation mode

When the sleep timer is set, the setting temperature is decreased 1°C. It decreases the setting temperature another 1°C every 30 minutes. Upon lowering 4°C, the setting temperature is not changed and the operation is stopped at the setting time.

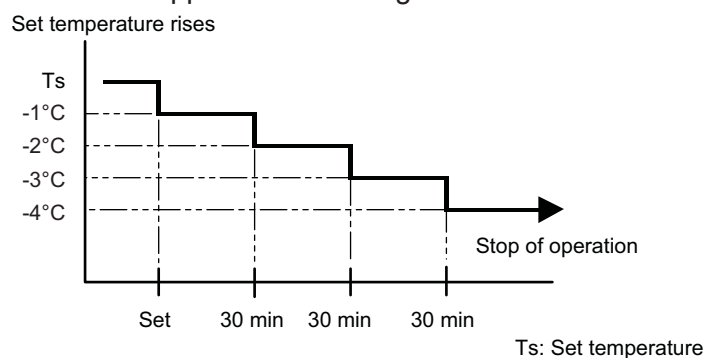

## 6. Defrost operation control

Tn: Outdoor unit heat exchanger temperature

Ta: Outdoor temperature

Tn10: Temperature at 10 minutes after compressor start

Tnb: Temperature before 5 minutes

### • Triggering condition

The defrost operation starts when outdoor unit heat exchanger temperature sensor detects the temperature lower than the values shown below.

#### – 1st time defrosting after starting operation

Compressor integrating operation time	Less than 17 min.	17 to 57 min.	More than 57 min.
Condition	Does not operate	$T_n \leq -9^\circ\text{C}$ and $T_n - T_a \geq 5$ deg	$T_n \leq -5^\circ\text{C}$

#### – 2nd time and after

Compressor integrating operation time	Less than 25 min.	More than 25 min.	
Condition	Does not operate	$T_n - T_{n10} < -5$ deg ( $T_n \leq -6^\circ\text{C}$ ) $T_n - T_{nb} < -2$ deg ( $T_n \leq -6^\circ\text{C}$ ) $T_n \leq -17^\circ\text{C}$ ( $T_a \geq -10^\circ\text{C}$ ) $T_n \leq T_a - 7^\circ\text{C}$ or $T_n \leq -20^\circ\text{C}$ ( $T_a < -10^\circ\text{C}$ )	

#### – Integrating defrost (Constant monitoring)

Compressor integrating operation time	More than 240 min. (For long continuous operation)	More than 215 min. (For long continuous operation)	Less than 10 min.* (For intermittent operation)
Condition	$T_n \leq -3^\circ\text{C}$	$T_n \leq -5^\circ\text{C}$	Count of the compressor off: 40 times

\*: If the compressor continuous operation time is less than 10 minutes, the number of the compressor off is counted. If any defrost operated, the compressor off count is cleared.

### • Release condition

The defrost operation is released when either one of the conditions below is satisfied.

Outdoor unit heat exchanger temperature (after 1 minute or later since compressor start)	16°C or more
Compressor operation time	15 minutes

## 6-1. Defrost operation in heating operation stopped

If the outdoor unit is frosted when stopping the heating operation, it stops after performing the automatic defrosting operation.

In this time, if the indoor unit operation lamp flashes slowly (6 sec on/2 sec off), the outdoor unit allow the heat exchanger to defrost, and then stop.

### • Triggering condition

When all of the following conditions are satisfied in heating operation

- Compressor operation integrating time: 30 minutes or more
- Compressor continuous operation time: 10 minutes or more
- Outdoor unit heat exchanger temperature: -4°C or less

### • Release condition

The defrost operation is released when either one of the conditions below is satisfied.

Outdoor unit heat exchanger temperature (after 1 minute or later since compressor start)	16°C or more
Compressor operation time	15 minutes

## 7. Various control

### 7-1. Auto restart

When the power was interrupted by a power failure etc. during operation, the operation contents at that time are memorized and when the power is recovered, operation is automatically started with the memorized operation contents.

Operation contents memorized when the power is interrupted
Operation mode
Setting temperature
Fan mode setting
Timer mode and set time (set by wireless remote controller)
Airflow direction setting
Swing
ECONOMY operation
10 °C HEAT operation
Remote control setting
WLAN LED setting

### 7-2. MANUAL AUTO operation

When the wireless remote controller is lost or battery power dissipated, this function will work without the remote controller.

When MANUAL AUTO button is pressed more than 3 seconds and less than 10 seconds, MANUAL AUTO operation starts as shown in the table below. To stop operation, press the MANUAL AUTO button for 3 seconds.

	Auto changeover
Operation mode	
Fan mode	AUTO
Timer mode	Continuous (no timer setting available)
Setting temperature	24°C
Horizontal louver setting	Standard
SWING	Off
ECONOMY	Off

## 7-3. Forced cooling operation

The outdoor unit may not operate depending on the room temperature.

When FORCED COOLING OPERATION button is pressed more than 10 seconds, forced cooling operation starts as shown in the table below.

Operation mode	Cooling
Fan mode	HIGH
Timer mode	Continuous (no timer setting available)
Setting temperature	24°C
Horizontal louver setting	Standard
Vertical louver setting	According to memory position
SWING	Off
ECONOMY	Off
Human sensor	Off

- During the forced cooling operation, it operates regardless of room temperature sensor.
- The operation indicator lamp and the timer indicator lamp blink simultaneously during the forced cooling operation.  
They blink for 1 second ON and 1 second OFF on both the operation indicator lamp and the timer indicator lamp (same as test operation).

By performing one of the following action, test operation will be canceled:

- Pressing the remote controller START/STOP button
- Pressing FORCED COOLING OPERATION button for 3 seconds
- 60 minutes passed after starting forced cooling operation

**NOTE:** When HEAT operation is selected on the remote controller during forced cooling operation, heating test run will begin in about 3 minutes.

## 7-4. 10 °C HEAT operation

10 °C HEAT operation performs as below setting when pressing 10 °C HEAT button.

Operation mode	Heating
Setting temperature	10°C
Fan mode	AUTO
LED display	Economy
Defrost operation	Operate as normal

## 7-5. ECONOMY operation

The ECONOMY operation starts by pressing ECONOMY button on the remote controller.

The ECONOMY operation is almost the same operation as below settings.

Mode	Cooling/Dry	Heating
Target temperature	Setting temperature +1°C	Setting temperature -1°C

## 7-6. POWERFUL operation

The POWERFUL operation starts by pressing POWERFUL button on the remote controller. The indoor unit and outdoor unit operate at maximum power as shown in the table below.


Rotation number of compressor		Maximum
Fan mode		POWERFUL
Vertical airflow direction louver setting	Cooling	3
	Dry	
	Heating	6

### Release condition:

- Cooling/Dry  
Room temperature  $\leq$  Setting temperature  $-0.5^{\circ}\text{C}$  or Operation time has passed 20 minutes.
- Heating  
Room temperature  $\geq$  Setting temperature  $+0.5^{\circ}\text{C}$  or Operation time has passed 20 minutes.

## 7-7. Fresh air control


The fan motor for Fresh Air is operated in synchronization with the indoor fan operation as below.

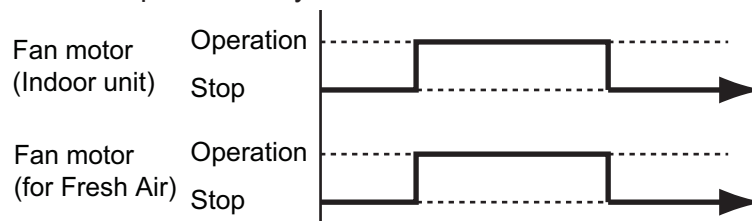


## 7-8. Compressor preheating

By preheating the compressor, warm airflow is quickly discharged when the operation is started.

- **Triggering condition**
  - 30 minutes after compressor stopped.
  - Outdoor unit heat exchanger temperature ( $T_n$ )

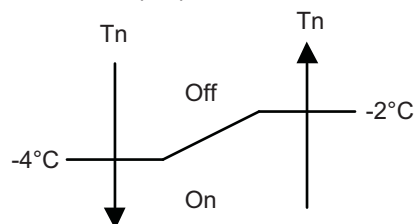


When the jumper wire (JM2) is disconnected:

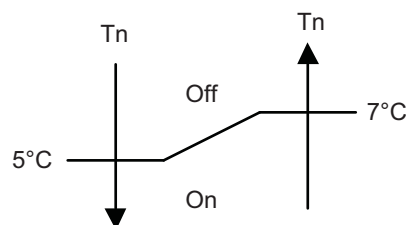

## 7-9. External electrical heater control

The external electrical heater is operated as below.

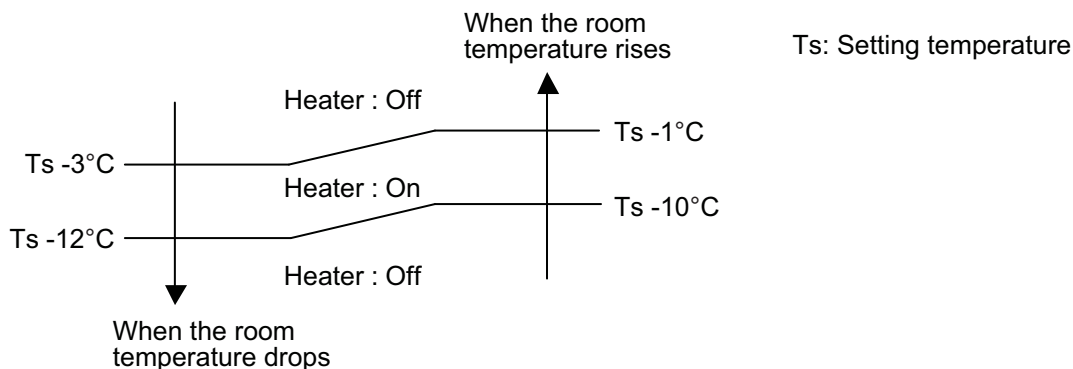

### NOTES:

- When the compressor stop, external electric heater is off.
- It operates only in heating mode and when the indoor fan operates. (However, S-LOW is excluded.)

## 7-10. Electronic expansion valve control

The most proper opening of the electronic expansion valve is calculated and controlled under the present operating condition based on the table below.

Operation mode	Pulse range
Cooling/dry mode	Between 52 and 480 pulses
Heating mode	

**NOTE:** At the time of supplying the power to the outdoor unit, the initialization of the electronic expansion valve is operated (528 pulses are input to the closing direction).

## 7-11. Prevention to restart for 3 minutes (3 minutes st)

When the compressor fails to start for the number of times below, it does not enter operation status for 3 minutes.

Retry number	10
Retry set number	10

When the compressor fails to start in the retry set number above, the compressor is stopped.

## 7-12. 4-way valve control

- If heating mode is selected at the compressor start, 4-way valve is energized for heating.
- When the air conditioner is switched between cooling and heating mode, compressor is stopped, and the 4-way valve is switched when the 140 seconds passes and the compressor is started.

## 8. Various protections

### 8-1. Discharge gas temperature over-rise prevention control

The discharge gas temperature sensor (discharge thermistor: outdoor unit side) detects the discharge gas temperature.

- When the discharge temperature becomes higher than the trigger condition, the rotation number of compressor is decreased as the table below, and it continues to decrease until the discharge temperature becomes lower than the trigger condition.
- When the discharge temperature becomes lower than the release condition, control of compressor rotation number is released.
- When the discharge temperature becomes higher than the compressor protection temperature, the compressor is stopped and the indoor unit indicator lamp starts blinking.

Trigger condition	104°C
Rotation number of compressor	-20 rps/120 seconds
Release condition	101°C
Compressor protection temperature	110°C

### 8-2. Anti-freezing control (cooling and dry mode)

The rotation number of compressor is decrease in cooling and dry mode when the indoor unit heat exchanger temperature sensor detects the temperature lower than the trigger condition.

When the indoor unit heat exchanger temperature reaches release condition, the anti-freezing control is stopped.

Trigger condition	4°C	
Release condition	Outdoor temp. $\geq 10^{\circ}\text{C}^{*1}$	7°C
	Outdoor temp. $\geq 12^{\circ}\text{C}^{*2}$	
	Outdoor temp. $< 10^{\circ}\text{C}^{*1}$	13°C
	Outdoor temp. $< 12^{\circ}\text{C}^{*2}$	

\*1: During the outdoor temperature dropping

\*2: During the outdoor temperature rising

## 8-3. Current release control

The rotation number of compressor is controlled so that the outdoor unit input current does not exceeds current limit value set according to the outdoor temperature.

The rotation number of compressor returns according to the operation mode, when the current becomes lower than the release value.

### ■ Model: AOEH07KNCA

Operation mode	Outdoor temp. (Ta)	Trigger condition	Release condition
Cooling	$50^{\circ}\text{C} \leq \text{Ta}$	4.0 A	3.5 A
	$46^{\circ}\text{C} \leq \text{Ta} < 50^{\circ}\text{C}$	4.0 A	3.5 A
	$40^{\circ}\text{C} \leq \text{Ta} < 46^{\circ}\text{C}$	5.0 A	4.5 A
	$12^{\circ}\text{C} \leq \text{Ta} < 40^{\circ}\text{C}$	6.0 A	5.5 A
	$2^{\circ}\text{C} \leq \text{Ta} < 12^{\circ}\text{C}$	6.0 A	5.5 A
	$\text{Ta} < 2^{\circ}\text{C}$	6.0 A	5.5 A
Heating	$17^{\circ}\text{C} \leq \text{Ta}$	4.5 A	4.0 A
	$12^{\circ}\text{C} \leq \text{Ta} < 17^{\circ}\text{C}$	4.5 A	4.0 A
	$5^{\circ}\text{C} \leq \text{Ta} < 12^{\circ}\text{C}$	4.5 A	4.0 A
	$\text{Ta} < 5^{\circ}\text{C}$	8.5 A	8.0 A

### ■ Models: AOEH09KNCA and AOEH12KNCA

Operation mode	Outdoor temp. (Ta)	Trigger condition	Release condition
Cooling	$50^{\circ}\text{C} \leq \text{Ta}$	4.0 A	3.5 A
	$46^{\circ}\text{C} \leq \text{Ta} < 50^{\circ}\text{C}$	4.0 A	3.5 A
	$40^{\circ}\text{C} \leq \text{Ta} < 46^{\circ}\text{C}$	5.0 A	4.5 A
	$12^{\circ}\text{C} \leq \text{Ta} < 40^{\circ}\text{C}$	6.0 A	5.5 A
	$2^{\circ}\text{C} \leq \text{Ta} < 12^{\circ}\text{C}$	6.0 A	5.5 A
	$\text{Ta} < 2^{\circ}\text{C}$	6.0 A	5.5 A
Heating	$17^{\circ}\text{C} \leq \text{Ta}$	5.5 A	5.0 A
	$12^{\circ}\text{C} \leq \text{Ta} < 17^{\circ}\text{C}$	7.0 A	6.5 A
	$5^{\circ}\text{C} \leq \text{Ta} < 12^{\circ}\text{C}$	7.5 A	7.0 A
	$\text{Ta} < 5^{\circ}\text{C}$	8.5 A	8.0 A

## 8-4. Cooling pressure over-rise protection

When the outdoor unit heat exchanger temperature reaches trigger condition below, the compressor is stopped and trouble display is performed.

Trigger condition	65°C
-------------------	------


## 8-5. Low outdoor temperature protection

When the outdoor temperature sensor detects lower than the trigger condition below, the compressor is stopped.

Operation mode	Cooling/Dry
Trigger condition	-15°C
Release condition	-10°C

## 8-6. High temperature and high pressure release control

The compressor is controlled as follows.

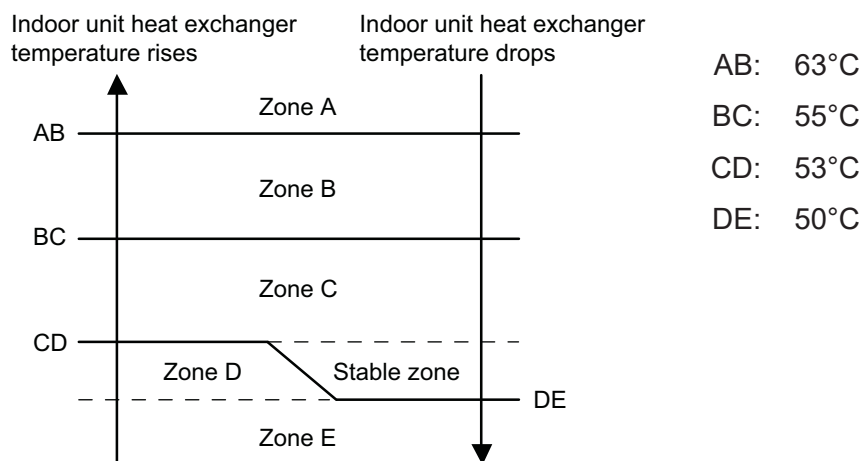

Zone	Operation	
Zone A	Compressor is stopped.	
Zone B	The rotation number of compressor is decreased.	-25 rps/120 sec.
Zone C		-3 rps/60 sec.
Zone D	The protection is released and the operation is returned to normal mode.	
Zone E		



## 5. FILED WORKING

# CONTENTS

## 5. FILED WORKING

<b>1. Function settings</b> .....	<b>05-1</b>
1-1. Function settings by using remote controller .....	05-1
1-2. Custom code setting for wireless remote controller .....	05-5

# 1. Function settings

To adjust the functions of this product according to the installation environment, various types of function settings are available.

**NOTE:** Incorrect settings can cause a product malfunction.

## 1-1. Function settings by using remote controller

Some function settings can be changed on the remote controller. After confirming the setting procedure and the content of each function setting, select appropriate functions for your installation environment.

### ■ Setting procedure by using wireless remote controller

The function number and the associated setting value are displayed on the LCD of the remote controller. Follow the instructions written in the local setup procedure supplied with the remote controller, and select appropriate setting according to the installation environment.

**Before connecting the power supply of the indoor unit, reconfirm following items:**

- Piping air tight test and vacuuming have been performed firmly.
- There is no wiring mistake.

**Then, connect the power supply of the indoor unit.**

**Entering function setting mode:**

While pressing the FAN SPEED button and TEMP./SELECT (^) button simultaneously, press the RESET button to enter the function setting mode.

#### STEP 1: Setting the remote controller custom code

Use the following steps to select the custom code of the remote controller. (The signal is correctly sent and received only when the custom codes of the air conditioner and the remote controller match.)

The custom codes that are set through this process are applicable only to the signal in the function setting.

For details on how to set the custom codes through the normal process, refer to "[Custom code setting for wireless remote controller](#)" on page 05-5.

1. Press the TEMP./SELECT (^) (v) buttons to change the custom code between  $\overline{A}$  →  $\overline{B}$  →  $\overline{C}$  →  $\overline{D}$ . Match the code on the display to the air conditioner custom code. (Initially set to  $\overline{A}$ .) If the custom code does not need to be selected, press the MODE button, and proceed to **STEP 2**.
2. Press the MODE button to accept the custom code, and proceed to **STEP 2**.




#### NOTES:

- The air conditioner custom code is set to  $\overline{A}$  prior to shipment.
- The remote controller resets to custom code  $\overline{A}$  when the batteries on the remote controller are replaced. If you use a custom code other than code  $\overline{A}$ , reset the custom code after replacing the batteries.
- If you do not know the air conditioner custom code setting, try each of the custom codes ( $\overline{A}$  →  $\overline{B}$  →  $\overline{C}$  →  $\overline{D}$ ) until you find the code that operates the air conditioner.

**STEP 2: Selecting the function number and setting value**

1. Press the TEMP./SELECT (^) (v) buttons to select the function number. To switch between the left and right digits, press the MODE button.
2. Press the FAN SPEED button to proceed the setting value. To return the function number selection, press the FAN SPEED button again.
3. Press the TEMP./SELECT (^) (v) buttons to select the setting value. To switch between the left and right digits, press the MODE button.
4. Press the TIMER button, and  $\phi$ /I (START/STOP) button, in the order listed to confirm the settings.
5. Press the RESET button to cancel the function setting mode.
6. After completing the function setting, be sure to disconnect the power supply and then reconnect it.

Function number

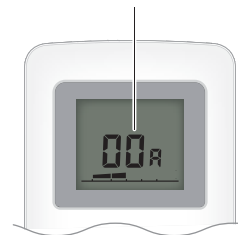

Setting value

**⚠ CAUTION**

After disconnecting the power supply, wait 30 seconds or more before reconnecting it. The function setting will not become active unless the power supply is disconnected and then reconnected.

## ■ Contents of function setting

Each function setting listed in this section is adjustable in accordance with the installation environment.

**NOTE:** Setting will not be changed if invalid numbers or setting values are selected.

### ● Function setting list

	Function no.	Functions
1)	11	Filter sign
2)	30/31	Room temperature control for indoor unit sensor
3)	40	Auto restart
4)	44	Remote controller custom code
5)	49	Indoor unit fan control for energy saving for cooling

#### 1) Filter sign

Select appropriate intervals for displaying the filter sign on the indoor unit according to the estimated amount of dust in the air of the room.

If the indication is not required, select "No indication" (03).

Function number	Setting value	Setting description	Factory setting
11	00	Standard (400 hours)	
	01	Long interval (1,000 hours)	
	02	Short interval (200 hours)	
	03	No indication	◆

## 2) Room temperature control for indoor unit sensor

Depending on the installed environment, correction of the room temperature sensor may be required. Select the appropriate control setting according to the installed environment.

The temperature of the room temperature sensor is corrected as follows:

Corrected temp. = Temp. of the room temp. sensor - Correction temp. value

Example of correction:

When the temperature of the room temp. sensor is 26°C and the setting value is "03" (-1.0°C), corrected temp. will be 27°C (26°C - [-1.0°C]).

The temperature correction values show the difference from the Standard setting "00" (manufacturer's recommended value).

Function number		Setting value	Setting description	Factory setting	
30 (For cooling)	31 (For heating)	00	Standard setting	◆	
		01	No correction 0.0°C		
		02	-0.5°C	More cooling Less heating	
		03	-1.0°C		
		04	-1.5°C		
		05	-2.0°C		
		06	-2.5°C		
		07	-3.0°C		
		08	-3.5°C		
		09	-4.0°C		
		10	+0.5°C	Less cooling More heating	
		11	+1.0°C		
		12	+1.5°C		
		13	+2.0°C		
		14	+2.5°C		
		15	+3.0°C		
		16	+3.5°C		
17	+4.0°C				

## 3) Auto restart

Enables or disables automatic restart after a power interruption.

Function number	Setting value	Setting description	Factory setting
40	00	Enable	◆
	01	Disable	

**NOTE:** Auto restart is an emergency function such as for power outage etc. Do not attempt to use this function in normal operation. Be sure to operate the unit by remote controller or external device.

## 4) Remote controller custom code

(Only for wireless remote controller)

The indoor unit custom code can be changed. Select the appropriate custom code.

Function number	Setting value	Setting description	Factory setting
44	00	A	◆
	01	B	
	02	C	
	03	D	

## 5) Indoor unit fan control for energy saving for cooling

Enables or disables the power-saving function by controlling the indoor unit fan rotation when the outdoor unit is stopped during cooling operation.

Function number	Setting value	Setting description	Factory setting
49	00	Disable	
	01	Enable	
	02	Remote controller	◆

00: When the outdoor unit is stopped, the indoor unit fan operates continuously following the setting on the remote controller.

01: When the outdoor unit is stopped, the indoor unit fan operates intermittently at a very low speed.

02: Enable or disable this function by remote controller setting.

**NOTE:** Set to "00" or "01" when connecting a remote controller that cannot set the Fan control for energy saving function or connecting a network converter. To confirm if the remote controller has this setting, refer to the operating manual of each remote controller.

## 1-2. Custom code setting for wireless remote controller

To interconnect the air conditioner and the wireless remote controller, assignment of the custom code for the wireless remote controller is required.

**NOTE:** Air conditioner cannot receive a signal if the air conditioner has not been set for the custom code.

When 2 or more air conditioners are installed in a room, and the remote controller is operating an air conditioner other than the one you wish to set, change the custom code of the remote controller to operate only the air conditioner you wish to set. (4 selections possible.)

Confirm the setting of the remote controller custom code and the function setting. If these do not match, the remote controller cannot be used to operate for the air conditioner.

1. Press the  $\odot/1$  (START/STOP) button until the indicators on the remote controller turn off.
2. Press the MODE button for at least 5 seconds to display the current custom code. (Initially set to  $\text{A}$ .)
3. Press the TEMP./SELECT ( $\wedge$ ) ( $\vee$ ) buttons to change the custom code between  $\text{A} \rightarrow \text{b} \rightarrow \text{c} \rightarrow \text{d}$ . Match the code on the display to the air conditioner custom code. (Initially set to  $\text{A}$ .)
4. Press the MODE button again to return to the original display. The custom code will be changed.



### NOTES:

- If no button is pressed within 30 seconds after the custom code is displayed, the system returns to the original display. In this case, start again from step 1.
- The air conditioner custom code is set to  $\text{A}$  prior to shipment. To change the custom code, contact your retailer.
- If you do not know the assigned code for the air conditioner, try each of the custom code ( $\text{A} \rightarrow \text{b} \rightarrow \text{c} \rightarrow \text{d}$ ) until you find the code which operates the air conditioner.